


Your **HTC** Desire 200

User guide

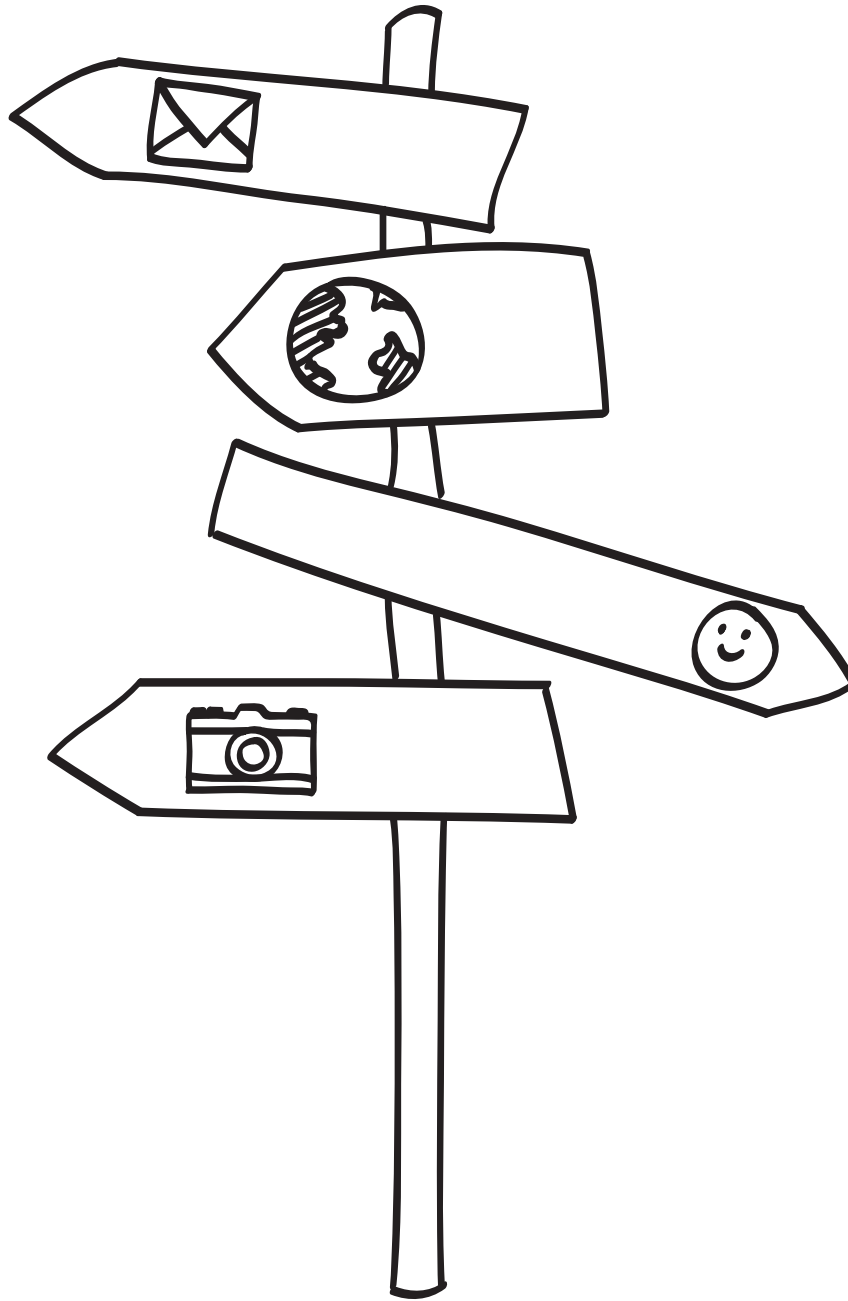

htc

Contents

Unboxing

HTC Desire 200	8
Back cover	9
SIM card	10
Storage card	11
Battery	12
Switching the power on or off	14
Setting up HTC Desire 200 for the first time	15
Want some quick guidance on using your phone?	15

Your first week with your new phone

Features you'll enjoy on HTC Desire 200	16
Home screen	17
Finger gestures	17
Sleep mode	18
Getting contacts into HTC Desire 200	19
Making your first call	20
Sending your first text message	20
Getting photos, videos, and music on or off HTC Desire 200	20
Copying and sharing text	21
Capturing the HTC Desire 200 screen	22
Switching between recently opened apps	22
Notifications	22
Getting to know your settings	23
Getting the battery to last longer	24
Updating the HTC Desire 200 software	25

Personalizing

Making HTC Desire 200 truly yours	27
Personalizing HTC Desire 200 with scenes	27
Changing your wallpaper	28
Applying a new skin	28
Personalizing your Home screen with widgets	29
Adding apps and other shortcuts on your Home screen	30
Rearranging or removing widgets and icons on your Home screen	30
Personalizing the launch bar	31
Grouping apps into a folder	31
Personalizing with sound sets	32
Rearranging application tabs	33

Phone calls

Making a call with Smart dial	34
Using Speed dial	34
Calling a phone number in a text message	35
Calling a phone number in an email	35
Calling a phone number in a Calendar event	35
Making an emergency call	35
Receiving calls	36
What can I do during a call?	37
Setting up a conference call	38
Internet calls	38
Call history	39
Home dialing	40
Call services	40

Messages

About the Messages app	41
Sending a text message (SMS)	41
Sending a multimedia message (MMS)	41
Resuming a draft message	43
Checking your messages	43
Replying to a message	44
Forwarding a message	44
WAP push messages	45
Managing message conversations	45
Backing up your text messages	46
Setting message options	47

Search and web browser

Searching HTC Desire 200 and the Web	48
Browsing the Web	48
Private browsing	50
Adding and managing your bookmarks	50
Saving web content for later	51
Viewing your browsing history	52
Downloading apps from the web	52
Setting browser options	53

Camera

Camera basics	54
Taking a photo	55
Recording video	55
Camera scenes	55
Improving portrait shots	55
Shooting in low light	56
Changing camera and video settings	56

Photos, videos, and music

Gallery	57
Music	63

Accounts and sync

Adding your social networks, email accounts, and more	67
Adding one or more Google Accounts	67
Managing your online accounts	68

People

About the People app	69
Your contacts list	69
Setting up your profile	70
Adding a new contact	70
Importing or copying contacts	71
Merging contact information	72
Contact information and conversations	72
Contact groups	73
Adding People widgets	75
Sending contact information	75
Backing up your contacts to the storage card	76

Social

Facebook for HTC Sense	77
Twitter for HTC Sense	77
About Friend Stream	77
Updating your status in Friend Stream	78
Enjoying Facebook in Friend Stream	78
Tweeting in Friend Stream	79

Email

Gmail	81
Mail	82

Calendar

About Calendar	89
Creating an event	89
Viewing the Calendar	89
Managing Calendar events	91
Accepting or declining a meeting invitation	92
Setting reminders for your events	92
Dismissing or snoozing event reminders	92
Showing or hiding calendars	93
Changing Calendar settings	93

Online storage and services

Dropbox	94
SkyDrive	98

Travel and maps

Location settings	101
Google Maps	101

Essential apps

Using the Clock	104
Checking Weather	106
Working on documents	107
Keeping track of your tasks	108

Google Play and other apps

Getting apps from Google Play	112
Watching videos on YouTube	113
Recording voice clips	114
Sharing games and apps	115

Your phone and computer

Where apps, data, and files are stored	116
Connecting HTC Desire 200 to a computer	116
Copying files to or from the phone storage or storage card	117
Sharing your mobile data connection by USB tethering	118
Connecting to the Internet through a computer	118

HTC Sync Manager

Syncing your media and data with HTC Sync Manager	119
Installing HTC Sync Manager on your computer	119
Transferring iPhone content to your HTC phone	120
Copying or removing media on your phone	121
Syncing data between your phone and your computer	121
Syncing music, photos, and videos from your phone to your computer	122
Syncing playlists between your phone and your computer	123
Syncing documents from your computer to your phone	123
Getting help	124

Internet connections

Data connection	125
Managing your data usage	126
Wi-Fi	127
Connecting to a virtual private network (VPN)	130
Using HTC Desire 200 as a wireless router	131

Bluetooth

Bluetooth basics	132
Connecting a Bluetooth headset	132
Disconnecting or unpairing from a Bluetooth device	134
Sending information using Bluetooth	134
Receiving files using Bluetooth	136

Settings and security

Turning Airplane mode on or off	137
Changing display settings	137
Changing sound settings	138

Changing the display language	139
More ways to extend battery life	140
Backing up settings to Google	140
Accessibility settings	140
Protecting your SIM card with a PIN	141
Protecting HTC Desire 200 with a screen lock	141
Encrypting data on HTC Desire 200	142
Checking your phone's HTC Sense version	143
Managing memory	143

Other essentials

Using the onscreen keyboard	145
Entering words with predictive text	146
Using the Trace keyboard	148
Restarting HTC Desire 200 (Soft reset)	148
Resetting HTC Desire 200 (Hard reset)	149

Trademarks and copyrights

Index

Conventions used in this guide

In this user guide, we use the following symbols to indicate useful and important information:



This is a note. A note often gives additional information, such as what happens when you choose to do or not to do a certain action. A note also provides information that may only be applicable to some situations.



This is a tip. A tip gives you an alternative way to do a particular step or procedure, or lets you know of an option that you may find helpful.




This indicates important information that you need in order to accomplish a certain task or to get a feature to work properly.



This provides safety precaution information, that is, information that you need to be careful about to prevent potential problems.

Unboxing

HTC Desire 200

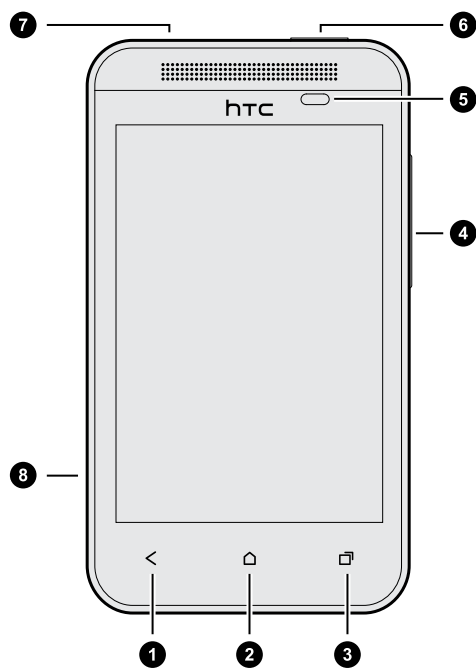

1. BACK
2. HOME
3. RECENT APPS
4. VOLUME
5. Proximity sensor
6. POWER
7. 3.5mm headset jack
8. USB connector




- If you want to use a screen protector, please don't cover and block the proximity sensor. You can purchase the dedicated screen protector for HTC Desire 200 that already has a small opening for the sensor.
- HTC Desire 200 gives you built-in phone storage so that you can immediately take photos and videos or copy files right out of the box. To maximize storage for more media and files, you need to purchase and insert a storage card.

Back cover

Removing the back cover

1. Securely hold HTC Desire 200.
2. Press on the center of the back cover, and then lift the cover open from the bottom corner.

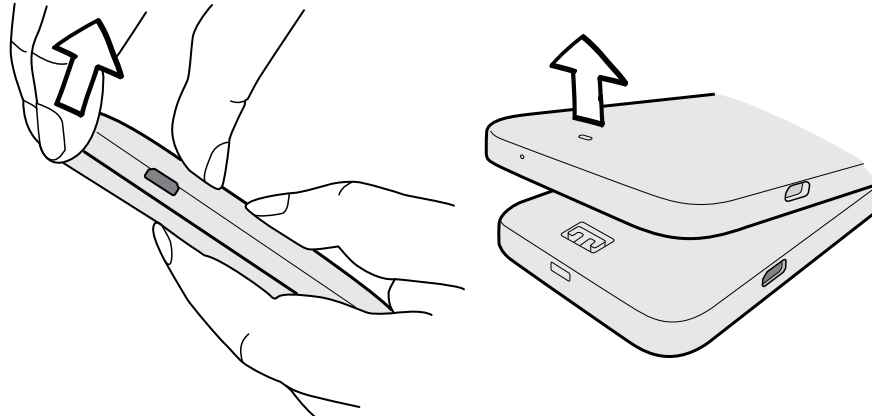


Replacing the back cover



Your phone's antennas are placed underneath the back cover. To get the best signal for calls, data connection, and GPS navigation, be sure to secure the back cover tightly to the phone.

1. Align the back cover onto the top part of HTC Desire 200.
2. Press the sides and the bottom part of the back cover against HTC Desire 200 to lock the cover into place.

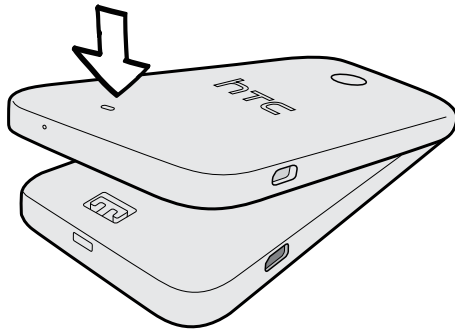

You will hear a click when the back cover is locked in place.


SIM card

The SIM card contains your phone number, service details, and memory for storing phonebook contacts and/or text messages.

Inserting the SIM card

P HTC Desire 200 uses a regular SIM (miniSIM). If you have a microSIM card, make sure you insert it with a SIM adapter. Do not directly insert your microSIM into HTC Desire 200.

1. Take the back cover off.
2. Remove the battery.
3. With the SIM card's gold contacts facing down and its cut-off corner facing out, insert the SIM card all the way into the SIM card slot.

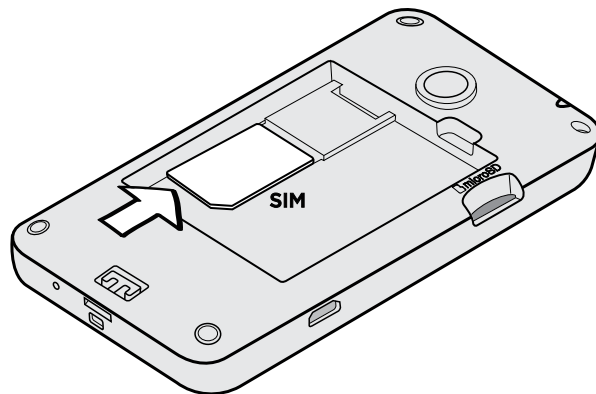


Removing the SIM card

P Make sure to switch off HTC Desire 200 before removing your SIM card.

1. Take the back cover off.
2. Remove the battery.

3. Press and hold the SIM card tab, then push the SIM card out from the opposite end.

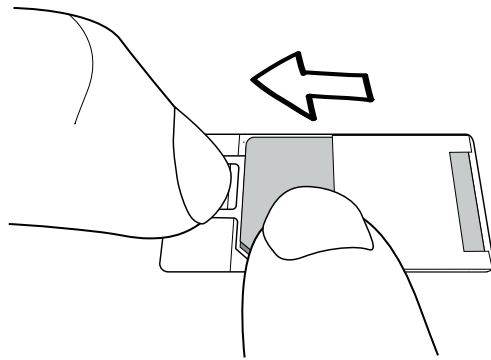


4. Slide the SIM card out from the SIM card slot.

Storage card

Use a storage card to store your photos, videos, and music.


Inserting the storage card

1. Take the back cover off.
2. Insert the microSD™ card into the storage card slot with its gold contacts facing down and push it into place.

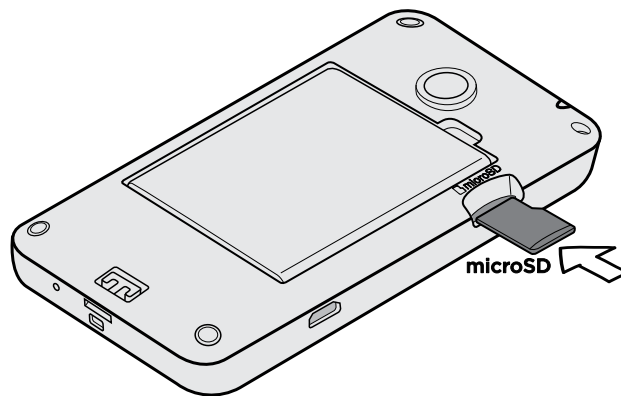


Unmounting the storage card

When you need to remove the storage card while HTC Desire 200 is on, unmount the storage card first to prevent corrupting or damaging the files in the storage card.

1. Slide the Notifications panel open, and then tap .
2. Tap **Storage > Unmount storage card**.

Removing the storage card


1. Take the back cover off.
2. Slide the storage card out from its slot.

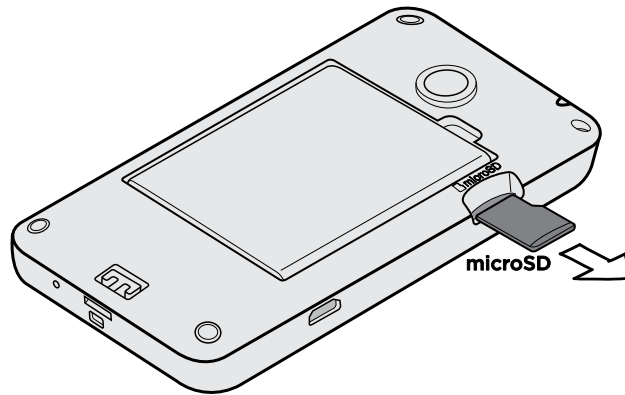

Battery

Removing the battery

1. Take the back cover off.
2. With your thumb or finger, lift the battery from the battery compartment.

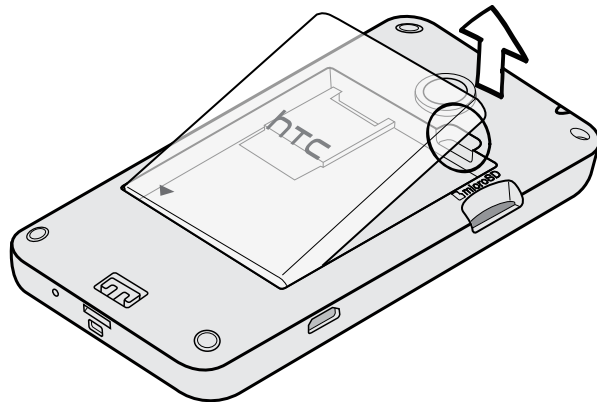


Inserting the battery



Please use only original batteries that came in the box or replacements that we recommend.

1. Take the back cover off.
2. Insert the battery (with its exposed copper contacts first) into the battery compartment.

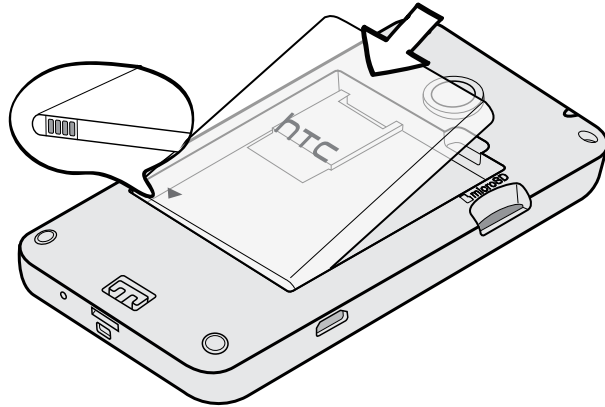


Charging the battery

Before you turn on and start using HTC Desire 200, it is recommended that you charge the battery.



- Use only the adapter and the USB cable that came with HTC Desire 200 to charge the battery.
- Do not remove the battery from HTC Desire 200 while you are charging it using the power or car adapter.

1. Insert the small end of the USB cable into the USB connector.

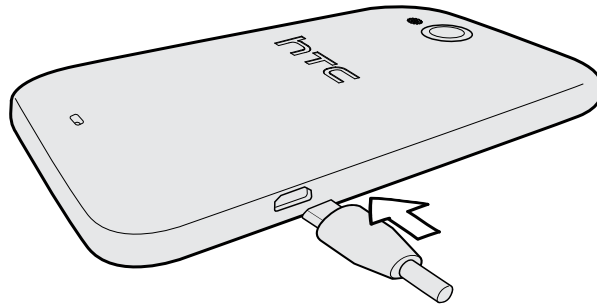

2. Insert the other end of the USB cable into the power adapter.
3. Plug in the power adapter to an electrical outlet to start charging the battery.



As a safety precaution, the battery stops charging if it overheats.

Switching the power on or off

Switching the power on

Press the POWER button.



When you turn on HTC Desire 200 for the first time, you'll need to set it up.

Switching the power off

1. If the display is off, press the POWER button to turn it back on, then unlock the screen.
2. Press and hold the POWER button for a few seconds.
3. Tap **Power off** on the options menu.

Setting up HTC Desire 200 for the first time

When you switch on HTC Desire 200 for the first time, you'll be asked to set it up. Just follow the onscreen instructions and you'll be up and running in no time.



Some features that need to connect to the Internet such as location-based services and auto-sync of your online accounts may incur extra data fees. Don't worry. You can enable or disable them in Settings later on.

When HTC Desire 200 has started, you'll see Quick Tips on some screens (such as the Home screen) that will guide you in using HTC Desire 200. The tips for a screen won't display again after you've closed them.

To view the Quick Tips again, slide the Notifications panel open, and then tap  > **About > Help > Show all quick tips.**

Want some quick guidance on using your phone?


Show Me helps you get the most out of HTC Desire 200 in seconds.

- Need to know how to do something right away? Just type in some keywords and get clear, up-to-date answers right on HTC Desire 200.
- Ever have the feeling that you're not getting the most out of your phone? Browse through the friendly walkthroughs on Show Me to learn how. The topics range from intro to advanced and the Show Me widget even recommends topics that you might like.


To open Show Me from the Home screen, tap  > **Show Me.**

If you haven't downloaded Show Me content yet, or if there's updated content available, just tap the download link to get it.



To change the sync settings of Show Me, tap  > **Update settings.**

Searching Show Me

1. In Show Me, tap , and then enter the words you want to search for.
2. Tap a search result to jump straight to that item.

Your first week with your new phone

Features you'll enjoy on HTC Desire 200

HTC Desire 200 gives you a fun camera, great sound experience, and more.

Shoot and share in seconds

Instantly upload photos to your favorite social network right after capturing. To find out more, see [Changing camera and video settings](#) on page 56.

You can also capture a photo from a previously recorded video. See [Taking a photo while watching a video](#) on page 58.

Beats By Dr. Dre Audio™

Beats Audio™ integration gives you a rich, authentic sound experience when you're listening to music. To find out more, see [Making your music sound better](#) on page 64.

Dropbox integration with HTC Sense

Always have access to your photos, videos, and documents anywhere by storing them in Dropbox. When you set up your Dropbox account from HTC Desire 200, you can even get an additional 23 GB of free Dropbox storage for two years. To find out how, see [Using Dropbox on HTC Desire 200](#) on page 94.

Rich and seamless browsing experience

Enjoy HTML5 and Flash® content on the go. And no more panning left and right. The web browser's text reflow automatically adjusts text to the width of your screen. To find out more about using the web browser, see [Browsing the Web](#) on page 48.

You can also keep a copy of what you're browsing so you can read it later even without an Internet connection. See [Saving web content for later](#) on page 51.

Smart dial

The phone dialer's Smart dial feature makes it quick and easy for you to place a call. Just enter the phone number or first few letters of the contact name. See [Making a call with Smart dial](#) on page 34.


Home screen

Your Home screen is where you make HTC Desire 200 your own. You can add your favorite applications, shortcuts, folders and widgets so they're always just a tap away. To find out how, see [Personalizing](#) on page 27.

Extended Home screen

As you start to do more things with HTC Desire 200, you might find that one Home screen is not enough. No problem.

Swipe your finger left or right on the screen and you'll discover more space for adding icons, widgets, and more.

Press  to return to the main Home screen.


Finger gestures

Tap	When you want to type using the keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply tap them with your finger.
Press and hold	To open the available options for an item (for example, a contact or link in a webpage), simply press and hold the item.
Swipe or slide	To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.
Drag	Press and hold your finger with some pressure before you start to drag. While dragging, do not release your finger until you have reached the target position.
Flick	Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quicker strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or message list.
Rotate	For most screens, you can automatically change the screen orientation from portrait to landscape by turning HTC Desire 200 sideways. When entering text, you can turn HTC Desire 200 sideways to bring up a bigger keyboard.
Pinch	In some apps, like Gallery or the web browser, you can “pinch” the screen using two fingers (for example, thumb and index finger) to zoom in or zoom out when viewing a picture or a webpage.
Two-finger scrolling	In some apps that have sorting, like Mail or People, you can use two fingers to scroll the screen. The screen displays the sorting order, and you can easily scroll to the information you want.

Sleep mode

Sleep mode saves battery power by putting HTC Desire 200 into a low power state while the display is off. It also stops accidental button presses when HTC Desire 200 is in your bag. You'll still receive messages and calls though, and missed calls and messages appear on the lock screen.



To prevent missed calls or messages from appearing on the lock screen, slide the Notifications panel open, and then tap  > **Privacy**.

Switching to Sleep mode

Briefly press the POWER button to turn off the display and switch to Sleep mode. HTC Desire 200 also automatically goes into Sleep mode when it's idle for a while.

Waking up from Sleep mode


To wake HTC Desire 200 up manually, press the POWER button. You'll need to unlock the screen.



HTC Desire 200 automatically wakes up when you have an incoming call.

Unlocking the screen

Pull the ring up to unlock the screen.

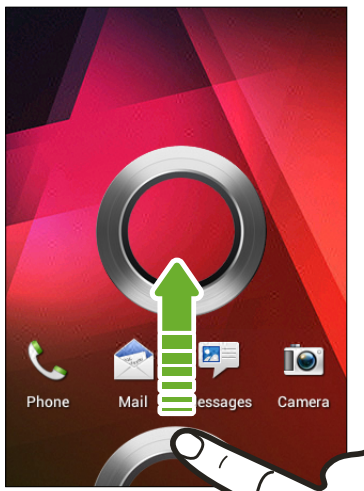

If you've set up a screen lock, you'll be asked to provide your credentials before HTC Desire 200 unlocks.

If you've set an event reminder or an alarm, you can drag  or  to the ring to snooze or dismiss the event or alarm.

Opening an app or folder from the lock screen

- On the lock screen, drag an app or folder icon to the ring to unlock the screen and directly go to the app or folder.



The shortcuts on the lock screen are the same ones on your Home screen's launch bar. To change the lock screen shortcuts, replace the apps or folders on the launch bar.

- When there's a notification or info shown on the lock screen such as a missed call or new message, you can drag it to the ring to directly go to its app.


Getting contacts into HTC Desire 200

There are several ways you can add contacts to HTC Desire 200.


Sync with your computer	Sync the contacts from your old phone to your computer, and then use HTC Sync Manager to sync HTC Desire 200 with your computer's Microsoft® Outlook®, Outlook Express or Windows® Contacts.
Gmail™	Google® contacts are imported to HTC Desire 200 after you sign in to your Google Account. You can also create more Google contacts right from HTC Desire 200.
Social network accounts	Log in to your favorite social networks to import contact information from them.
Phone contacts	You can create and store contacts directly in HTC Desire 200.
SIM card	Copy all your SIM contacts to HTC Desire 200.
Microsoft Exchange ActiveSync®	HTC Desire 200 syncs your work contacts from the Microsoft Exchange ActiveSync Server in your workplace.
Transfer	Use the Transfer app to transfer contacts and other data from your old phone to HTC Desire 200 through Bluetooth®.

Transferring contacts from your old phone





Easily transfer contacts from your old phone to HTC Desire 200 through Bluetooth. Depending on your old phone's model, you may also transfer other types of data such as calendar events and text messages to HTC Desire 200.

1. From the Home screen, tap  > **Transfer**.
2. Tap **Next** to begin.
3. Choose your old phone's name and model.
4. On your old phone, turn Bluetooth on, set it to discoverable mode, and then follow the instructions on the screen.

Making your first call

1. On the Home screen, tap .
2. Enter the phone number or first few letters of the contact's name.
3. From the list, tap a contact to call.
4. To hang up, tap **End Call**.

Sending your first text message

1. From the Home screen, tap  > **Messages**.
2. Tap .
3. Tap , and then select the contacts you want to send the message to.
4. Tap the box that says **Add text**, and then enter your message.
5. Tap  to insert a smiley or add quick text.
6. Tap **Send**.

Getting photos, videos, and music on or off HTC Desire 200

There are two ways you can transfer your media.


- Connect HTC Desire 200 to your computer, and select the **Disk drive** mode. Your computer will recognize it just like any removable USB drive, and you can copy your media between them.
- Download and use our HTC Sync Manager software. You can easily set it up to sync folders containing media and playlists on your computer with HTC Desire 200. HTC Sync Manager can also automatically get photos and videos off HTC Desire 200 to your computer.

Copying and sharing text

In apps such as the web browser and Mail, you can select and copy text, and then paste or share it.

Selecting text

1. Press and hold on a word.
2. Drag the start and end markers to highlight the surrounding text you want to select.

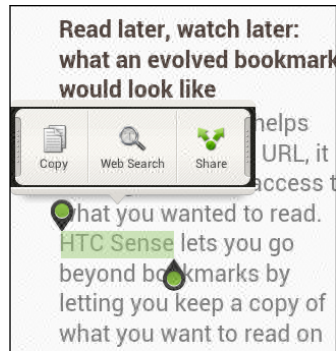

To copy the address of a linked webpage, press and hold the link, and then tap Copy link URL.

Copying and pasting text

1. After you have selected the text you want to copy, tap **Copy**.
The selected text is then copied to the clipboard.
2. In a text entry field (for example while composing an email), press and hold at the point where you want to paste the text.
3. Tap **Paste**.

Sharing text

1. After you have selected the text you want to share, tap **Share**.
2. Choose where to paste and share the selected text, such as in an email message or social network status update.


Capturing the HTC Desire 200 screen


Want to show off your high game score, write a blog post about HTC Desire 200 features, or post a status update about a song you're playing? It's easy to take a picture of the screen and share it from Gallery.

Press and hold POWER and then press . The screen is saved in the Camera shots album in Gallery.

Switching between recently opened apps

You can easily access apps you've just recently opened.

1. Press .
2. Slide your finger up or down to see recently-opened apps.

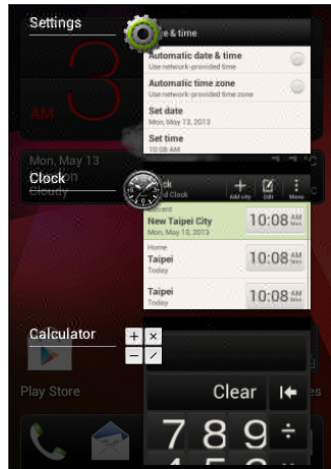

- To remove an app from the list, drag it left or right.
- To switch back to an app, just tap it.

Notifications

Notification icons


Notification icons on the status bar make it easy for you to keep on top of your messages, calendar events, and alarms.




Notifications panel

When you get a new notification, you can open the Notifications panel to see what event notification or new information you've received. The Notifications panel also lets you quickly access settings.

1. To open the Notifications panel, slide down from the top of the screen.

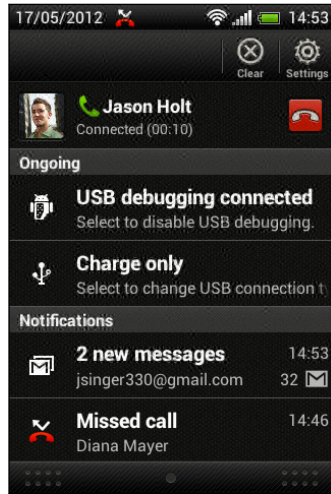

If you have several notifications, scroll down the screen to see them all.

2. On the Notifications panel:
 - Tap a notification to open the corresponding app.
 - To dismiss just one notification in the list, drag it left or right.
3. To close the Notifications panel, slide up from the bottom bar of the panel or press .

You can also tap  to dismiss all notifications and close the Notifications panel.

Getting to know your settings

Want to change the ringtone, set up a Wi-Fi® connection or make the screen brighter? Do this and more in Settings.

Slide the Notifications panel open, and then tap . Here are some of the basic settings you can change:

- Tap the **On/Off** switch next to an item such as Wi-Fi to turn it on or off. Tap the item itself to configure its settings.
- Tap **Sound** to set a ringtone, choose a sound profile, and configure incoming call sound settings.
- Tap **Display & gestures** (or **Display**) to change the screen brightness or set how long the screen is idle before going to sleep.
- Tap **Security** to secure HTC Desire 200, for example with a screen lock.

Getting the battery to last longer

How long the battery can last before it needs recharging depends on how you use HTC Desire 200. HTC Desire 200 power management helps to increase battery life.

In times when you need to extend the battery life more, try out some of these tips:

Check your battery usage

Monitoring your battery usage helps you identify what's using the most power so you can choose what to do about it. For details, see [Checking battery usage](#) on page 140.

Manage your connections

- Turn off wireless connections you're not using.
To turn on or off connections such as mobile network, Wi-Fi, or Bluetooth, go to Settings and tap their **On/Off** switches.
- Switch to 2G when you don't need a data connection.
More power is used when you're in low coverage areas. Temporarily turning off your data connection and switching to GSM network mode uses less battery power.
To switch to GSM mode, go to Settings and tap **Mobile network > Network mode > GSM only**.
- Turn GPS on only when a precise location is needed.
To prevent some apps from using GPS in the background, keep the **GPS satellites** setting off. Turn it on only when you need your precise location while using navigation or location-based apps. Go to Settings and tap **Location** to turn this setting on or off.

Manage your display

Lowering the brightness, letting the display sleep when not in use, and keeping it simple helps save battery power.


- Use automatic brightness (the default), or manually lower the brightness.
- Set the screen timeout to a shorter time.
- Set the web browser to auto dim the screen while webpages load. Open the Internet app, and then tap **⋮ > Settings > Accessibility > Dim screen during page loading**.



For more details, see [Changing display settings](#) on page 137 and [Personalizing](#) on page 27.

Limit background data and sync

Background data and sync can use a lot of battery power if you have many apps syncing data in the background. It's recommended not to let apps sync data too often. Determine which apps can be set with longer sync times, or sync manually.

- In Settings, tap **Accounts & sync** and check what types of data are being synced in your online accounts. When the battery is starting to run low, temporarily disable syncing some data.
- If you have many email accounts, consider prolonging the sync time of some accounts.

In the Mail app, select an account, tap  > **Settings** > **Sync, Send & Receive**, and then adjust the settings under Sync schedule.

- When you're not traveling from one place to another, sync weather updates of only your current location, rather than in all of your named cities. Open the Weather app, and then tap  > **Edit** to remove unneeded cities.
- Choose widgets wisely.
Some widgets constantly sync data. Consider removing the ones that are not important from your Home screen.
- In Play Store, tap  > **Settings**, and then clear **Auto-add widgets** to avoid automatically adding Home screen widgets whenever you've installed new apps. Also clear **Auto-update apps** if you're fine with updating apps from Play Store manually.

Other tips


To squeeze in a little bit more battery power, try these tips:

- Tone down the ringtone and media volume.
- Minimize the use of vibration or sound feedback. In Settings, tap **Sound** and choose which ones you don't need and can disable.
- Check your apps' settings as you may find more options to optimize the battery.


Updating the HTC Desire 200 software

HTC Desire 200 can check and notify you if there's a new update available. You can also manually check if there's an available update.



You might want to use Wi-Fi or your computer's Internet connection to download software updates to save on data usage. You can set this option in **Settings** > **About** > **Software updates** > .

Installing an update


When the Internet connection is on and there's a new update available, the system update dialog box appears and guides you through the process. If you don't see the dialog box, check for the update notification icon  in the status bar.

1. Slide open the Notifications panel, and then tap the update notification.
2. In the system update dialog box, choose what type of connection to use for downloading the update.

3. Follow the onscreen prompts to start the download.
4. After the download is complete, tap **Install now** and then tap **OK** in the Install system software update dialog box.

Wait for the update to finish. HTC Desire 200 will then restart automatically.

Checking for updates manually

1. Slide the Notifications panel open, and then tap .
2. Tap **About** > **Software updates** > **Check now**.

Personalizing

Making HTC Desire 200 truly yours

Make HTC Desire 200 look and sound just the way you want it. Personalize it with a different wallpaper, skin, ringtone, and notification sound for events such as incoming text, email, and calendar reminders.

Personalizing HTC Desire 200 with scenes



HTC Desire 200 becomes multiple phones in one when you use scenes. Scenes are personalized Home screen layouts that you can quickly apply. By switching between scenes, you instantly turn HTC Desire 200 into your perfect weekend phone, travel phone, work phone, or pure play phone.




Everytime you add or modify something on the Home screen, HTC Desire 200 automatically saves your changes to the current scene selected.

Creating a new scene



You'll start with an empty Home screen when you create a new scene.

1. Slide the Notifications panel open, and then tap  > **Personalize**.
2. On the Display tab, tap **Scene**.
3. Tap  > **New**.
4. Enter a new scene name, and then tap **Done**.
5. Personalize the scene by adding widgets and apps, changing the wallpaper, and more. All of your changes will be automatically saved to this scene.

Renaming a scene


1. Slide the Notifications panel open, and then tap  > **Personalize**.
2. On the Display tab, tap **Scene**.
3. Slide your finger on the screen from right to left to select the scene you want to rename.
4. Press and hold a scene thumbnail, and then tap **Rename**.
5. Enter a new scene name.
6. Tap **Done**.

Deleting scenes

1. Slide the Notifications panel open, and then tap  > **Personalize**.
2. On the Display tab, tap **Scene**.
3. Tap  > **Delete**.
4. Slide your finger on the screen from right to left to browse through scenes, then tap one or more scenes you want to delete.
5. Tap **Delete**.

Changing your wallpaper

Pick your favorite photo as your Home wallpaper. Choose from the available wallpapers, or use any photo you've taken with the camera.


1. Slide the Notifications panel open, and then tap  > **Personalize**.
2. On the Display tab, tap **Wallpaper**.
3. Tap one of the following:

HTC wallpapers	Choose a preset wallpaper, and then tap Preview .
Gallery	Choose an existing photo and crop it.

4. Tap **Save** or **Apply**.

Applying a new skin


Personalize beyond the Home screen by applying a new skin. Skins give a different look and feel to most onscreen buttons, application screens, option menus, and other items.

1. Slide the Notifications panel open, and then tap  > **Personalize**.
2. On the Display tab, tap **Skin**.
3. Slide your finger on the screen from right to left to select the skin you want.
4. Tap **Apply**.

Personalizing your Home screen with widgets

Widgets put at-a-glance important information and media content up front on your Home screen. Some widgets are already added to your Home screen for your convenience. You can add more from the available selections of widgets.

Adding a widget to your Home screen

1. Press and hold on an empty space on your Home screen.
2. On the Widgets tab, you can:
 - Slide left or right to browse through the complete set of widgets.
 - Tap  to search for specific widgets.
 - Tap **All Widgets** to choose from a selection menu.



Some widgets are available in different styles and sizes.

3. Drag a widget to a home screen thumbnail where you want to add it.

You can also add widgets that allow you to quickly switch on or off certain settings such as Wi-Fi and Bluetooth. Tap **All Widgets** > **Settings**, and then tap the widget that you want.

Changing the settings of a widget

You can modify basic settings of some widgets (for example, the People and Mail widgets) from the Home screen.

1. Press and hold a widget on your Home screen, and then drag it to .



The relevant screen where you can change some settings for this widget then opens.

2. Customize the widget settings.

Resizing a widget

Some widgets can be resized after you've added them to your Home screen.


1. Press and hold a widget on the Home screen, and then release your finger. If you see directional arrow buttons appear on the widget, that means the widget is resizable.
2. Drag an arrow button to enlarge or shrink the widget size.

Adding apps and other shortcuts on your Home screen

Place apps you often use on your Home screen. You can also add shortcuts to frequently used settings, bookmarked webpages, and more.

1. Press and hold on an empty space on your Home screen.
2. On the Apps or Shortcuts tab, choose whether to add an app or a shortcut.



To add an app, you can also tap , press and hold an app, and then drag it to an empty area on your Home screen.

Rearranging or removing widgets and icons on your Home screen

Moving a widget or icon


1. Press and hold the widget or icon you want to move.
2. Drag the widget or icon to a new location on the screen.



- You can pause at the left or right edge of the screen to drag the widget or icon onto another Home screen panel.
- When you drag a widget to a spot that's already occupied by another widget or icon, the occupant automatically moves away to give room.

3. When the widget or icon is where you want it, lift your finger.


Removing a widget or icon


1. Press and hold the widget or icon you want to remove, and then drag it to .
2. When the widget or icon turns red, lift your finger.

Personalizing the launch bar

The launch bar on your Home screen gives you one-touch access to commonly used apps. You can replace the apps on the launch bar with other apps you often use.

1. Press and hold the app you want to replace, and then drag it out of the launch bar.

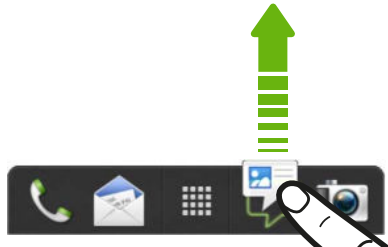

2. Tap  to go to the All apps screen.
3. Press and hold an app, and then drag it to the empty slot on the launch bar.




- You can also place shortcuts to settings or information on the launch bar. Add a shortcut first to the Home screen, and then drag it to the launch bar.
- The apps or shortcuts you see on the lock screen are the same as the ones on the launch bar.

Grouping apps into a folder

Use folders to group apps on the launch bar or your Home screen to free up space so you can add more apps.

1. Press and hold an app, and then drag it over to another app to automatically create a folder.



2. Tap the folder to open it.
3. Tap .
4. Select one or more apps that you want to add to the folder.
5. Tap **Add**.




You can also add shortcuts to settings or information. Add a shortcut first to the Home screen, and then drag it over to the folder.

Renaming a folder

1. Tap the folder to open it.
2. Tap the folder window's title bar.
3. Enter a new folder name.
4. Tap outside the folder to close it.

Removing items from a folder



1. Tap the folder to open it.
2. Press and hold an app or shortcut, and then drag it to the Home screen, or drag it out to  to remove. Repeat this process to remove more items from the folder.

If there's only one item left in the folder, the folder ungroups the last item and removes itself automatically.

Personalizing with sound sets


Each sound set gives you a different combination of sounds for your ringtone and notifications such as incoming messages, email, calendar event reminders, and more. By switching between sound sets, you can instantly make HTC Desire 200 ring or alert you with fun sounds when you're out with friends or change to subtle sounds while you're at work.

Creating a sound set

1. Slide the Notifications panel open, and then tap  > **Personalize**.
2. On the Sound tab, tap **Sound set**.
3. On the Sound sets screen, tap .
4. Enter a new sound set name, and then tap **Done**.

The newly created sound set is then added to the list of sound sets. You can assign different tones to the sound set to your preference.

Changing your ringtone, notifications, and sounds

1. Slide the Notifications panel open, and then tap  > **Personalize**.
2. On the Sound tab, tap **Sound set**.
3. Choose a sound set you want to customize, or create a new one, and then tap **Apply**.
4. Change the ringtone, notification sound, and alarm from the Personalize screen.

HTC Desire 200 automatically saves your choices to the current sound set.

Deleting sound sets



You can only delete sound sets you have created.

1. Slide the Notifications panel open, and then tap > **Personalize**.
2. On the Sound tab, tap **Sound set**.
3. Tap .
4. Select one or more sound sets you want to delete.
5. Tap **Delete**.

Rearranging application tabs


You can rearrange the tabs at the bottom of some apps to prioritize the types of information you frequently use. You can also add or remove tabs.

1. Open an app that has the usual tabs at the bottom of its screen.
2. Press and hold the current tab until the screen changes and shows a message about rearranging tabs.



If you don't see any tabs on the app, tap > **Edit tabs** or **Filters**.

3. You can:
 - Change the order of the tabs. Press and hold a tab, and then drag it to its new position.
 - Drag a tab into or out of the bottom row to add or remove it.

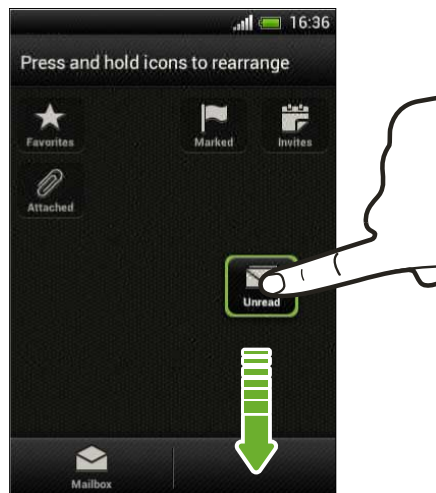


4. When you're done, press .


Phone calls

Making a call with Smart dial

You can either dial a number directly, or use Smart dial to quickly place a call. Smart dial searches and calls a stored/synced contact or a number from your call history.

1. On the Home screen, tap .
2. Enter the phone number or first few letters of the contact's name.
3. From the list, tap a contact to call.



To check other phone numbers associated with the contact, tap  beside the contact name.

4. To hang up, tap **End Call**.




Using Speed dial

Use Speed dial to call a phone number with a single tap. For example, if you assign a contact's number to the number 2 key, you can just press and hold 2 to dial the number.



The number 1 key is generally reserved for your voicemail. Press and hold this key to call voicemail and retrieve your voicemail messages.

Assigning a speed dial key

1. On the Home screen, tap .
2. Tap  > **Speed dial**.
3. Tap , and then select a contact from the list.
4. On the Speed dial screen, choose the phone number of the contact to use, and a speed dial key to assign.
5. Tap **Save**.

Calling a phone number in a text message

1. Tap the phone number within the message.
2. Tap **Call**.




To call the message sender, tap the received message, and then tap **Call** on the options menu.

Calling a phone number in an email

1. Tap the phone number in the email body.
2. Tap **Call**.

Calling a phone number in a Calendar event


1. Open an event in Calendar.
2. On the Event details screen, tap the phone number.
3. Tap **Call**.
4. When the call is received, tap  to see event details such as the conference call ID or meeting PIN code on the Phone dialer screen.

Making an emergency call

In some regions, you can make emergency calls from HTC Desire 200 even if you don't have a SIM card installed or your SIM card has been blocked.



If you don't have a network signal, you won't be able to make an emergency call.

1. On the Home screen, tap .
2. Dial the emergency number for your locale, and then tap **Call**.

Receiving calls


When you receive a phone call from a contact, the Incoming call screen appears.



HTC Desire 200 will automatically adjust the ringtone volume when you use the polite ringer and pocket mode features.


Answering a call

Do one of the following:

- If the display is locked when you get a call, drag  to the Lock screen ring.
- If the display is on when you get a call, tap **Answer**.

Rejecting a call

Do one of the following:

- If the display is locked when you get a call, drag  to the Lock screen ring. Then drag to the ring the **Reminder** icon to create a task or the **Send message** icon to send a text message to the caller.
- If the display is on when you get a call, tap **Decline**.
- Press the POWER button twice to reject a call.

Muting the ringing sound without rejecting the call

Do one of the following:

- Press the VOLUME DOWN or VOLUME UP button.
- Press the POWER button.
- Place HTC Desire 200 face down on a level surface.



If HTC Desire 200 is already facing down, it will still ring when there are subsequent incoming calls.

Look who's calling

Every time you make a call or your friend gives you a ring, you get to see your friend's latest social network status update right on the call screen. You'll also see a birthday reminder if your friend's birthday (stored on your phone or online account) will happen in a few days.

Viewing a task reminder while on a call

Did you promise to babysit for a friend this weekend? If you associate a task with a due date to a contact, you'll see a task reminder on the call screen when you're on a call with that friend.






If the contact has a recent status update, you won't be able to see the task reminder.

What can I do during a call?

When a call is in progress, you can turn the speakerphone on, place the call on hold, and more.

Putting a call on hold

To put the call on hold, tap  > **Hold**. The status bar then displays the hold call icon .

To resume the call, tap  > **Unhold**.

Switching between calls

If you're already in a call and you accept another call, you can switch between the two calls.


1. When you receive another call, tap **Answer** to accept the second call and put the first call on hold.
2. To switch between the calls, tap the person you want to talk to on the screen.

Turning the speakerphone on during a call




To decrease potential damage to your hearing, do not hold HTC Desire 200 to your ear when the speakerphone is on.



Do one of the following:

- Flip HTC Desire 200 over during a call (be sure that **Flip for speaker** is selected in **Sound** settings).
- On the call screen, tap .

The speakerphone icon  appears in the status bar when the speakerphone is on.


To turn the speakerphone off, just flip HTC Desire 200 over again, facing it up. Or tap  again.

Muting the microphone during a call

On the call screen, tap  to toggle between turning the microphone on or off. When the microphone is turned off, the mute icon  appears in the status bar.

Ending a call

Do one of the following to end the call:

- On the call screen, tap **End Call**.
- Slide the Notifications panel open, then tap .






If the phone number of the person who called is not in your contacts list, you can choose to save the number to your contacts list after you hang up.


Setting up a conference call

Conference calling with your friends, family, or co-workers is easy. Make the first call (or accept a call), and then simply dial each subsequent call to add it to the conference.



Make sure your SIM card is enabled with conference calling service. Contact your mobile operator for details.

1. Make a call to the first conference call participant.
2. When connected, tap  > **Add call**, and then dial the number of the second participant. The first participant is put on hold.
3. When connected to the second participant, tap .
4. To add another participant, tap , and then dial the number of the contact.
5. When connected, tap  to add the participant to the conference call.
6. To talk to a person in the conference call in private, tap  and then select **Private call**.

To end the call with a participant, tap  and then tap **Finish this call**.

To end the conference call, tap **End Call**.



Internet calls

When you're connected to a Wi-Fi network, you can make and receive calls through an Internet calling account.



Before you add an Internet calling account, make sure that you've registered with an Internet calling service that supports voice calls over Session Initiation Protocol (SIP). Internet calls to phone numbers may incur additional fees.


Adding an Internet calling account

1. Slide the Notifications panel open, and then tap  > **Call**.
2. Under Internet call settings, tap **Accounts**.
3. Tap **Add account**.
4. Enter your account details.
5. Tap  > **Save**.
6. To set HTC Desire 200 to receive Internet calls on your added account, select the **Receive incoming calls** option.

Making an Internet call

Make an Internet call to either your contact's Internet calling account or phone number.


Call any of the following:

Internet calling account	<ul style="list-style-type: none"> ▪ In People, tap a contact who has an Internet calling account, and then tap Internet call. ▪ In Call History, tap an Internet call log.
Phone number	First, enable Internet calling for your outgoing calls. Slide the Notifications panel open, and then tap  > Call . Tap Use Internet calling , and then select either For all calls when data network is available or Ask for each call .

Call history





Use Call History to check missed calls, your dialed numbers, and received calls.

Returning a missed call

You'll see the missed call icon  in the status bar when you miss a call.

1. Slide open the Notifications panel to check who the caller is.
2. To return the call, tap the missed call notification.
3. Tap the caller's name or number on the Call History screen.

Checking calls in the Call History


1. On the Home screen, tap .
2. Tap  > **Call History**.
3. On the Call History screen, you can:
 - Tap a name or number in the list to call.
 - Press and hold a name or number in the list to display the options menu.
 - Tap  to check the call history of a particular contact. If this is a stored/synced contact, you'll also see the most recent text and email messages with this contact.
 - Tap  > **View** to display just a particular type of call such as missed calls or outgoing calls.

Adding a new phone number to your contacts from Call History

1. On the Call History screen, press and hold the phone number, and then tap **Save to People**.
2. Choose whether to create a new contact or save the number to an existing contact.

Clearing the Call History list

On the Call History screen, do one of the following:

Remove one name or number	Press and hold the name or number, and then tap Delete from call history.
Clear the entire list	Tap  > Remove call history > Select all > Delete .

Home dialing


When you're on a trip abroad, it's easy to dial friends and family from home.

Your home country code is automatically added when you call your contacts while roaming. But when manually entering a phone number to call, you need to enter a plus (+) sign and country code before the number.




Using a roaming service may incur additional charges. Check with your mobile operator for rates before using a roaming service.

Changing the default country code for Home dialing

1. Slide the Notifications panel open, and then tap  > **Call**.
2. Tap **Home dialing settings**.
3. Select a country, and then tap **OK**.

Turning off Home dialing

If you prefer to manually enter complete phone numbers to call while roaming, you can turn off Home dialing.

1. Slide the Notifications panel open, and then tap  > **Call**.
2. Under **Other settings**, clear the **Home dialing** option.

Call services

You can change the settings of various phone services. Call services may include call forwarding, call waiting, voicemail, and more. Contact your mobile operator to find out about the availability of call services.



Slide the Notifications panel open, and then tap  > **Call**.

Messages


About the Messages app

Keep in touch with important people in your life. Use the Messages app to compose and send text and multimedia messages. On the All messages screen, your sent and received messages are neatly grouped into conversations, by contact name or phone number.


Sending a text message (SMS)

1. From the Home screen, tap  > Messages.
2. Tap .
3. Enter a contact name or mobile number in the To field.



Sending the message to a group of friends? Tap , and then select the contacts to whom you want to send the message.

4. Tap the box that says **Add text**, and then enter your message.

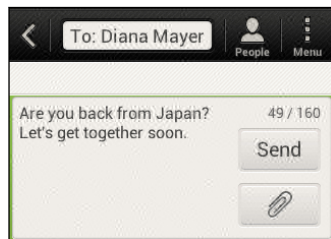



5. Tap **Send**, or press  to save the message as a draft.




- There is a limit on the number of characters for a single text message (displayed above the **Send** button). If you exceed the limit, your text message will be delivered as one but will be billed as more than one message.
- Your text message automatically becomes a multimedia message if you enter an email address as the recipient, add a message subject, attach an item, or compose a very long message.





Sending a multimedia message (MMS)

1. From the Home screen, tap  > Messages.
2. Tap .






3. Enter a contact name, mobile number, or email address in the **To** field.



Sending the message to a group of friends? Tap , and then select the contacts to whom you want to send the message.

4. To add a subject line, tap  > **Add subject**.
5. Tap the box that says **Add text**, and then enter your message.
6. Tap , and then choose an attachment type.
7. Select or browse for the item to attach.
8. After adding an attachment, tap  to see options for replacing, viewing or removing your attachment.
9. Tap **Send**, or press  to save the message as a draft.

Creating a slideshow



1. After you've added either a photo, video, or audio in the multimedia message you're composing, tap  > **Slide**.
2. Choose where you want to insert the next slide.
3. Right after adding a slide, do one of the following:
 - Tap , and then choose to add a photo or a video.
 - Tap  > **Audio** to add music or a voice recording to a slide.
 - Tap **Add text**, and then enter your caption.
 - Tap  to see options for replacing, viewing or removing your attachment.
4. Tap  > **Preview**. Tap once on the preview screen to see playback controls.




If you don't see **Preview**, scroll down the menu.


5. When finished, tap **Send**, or press  to save the message as a draft.

Can't find your contacts' email addresses in Messages?


1. If only phone numbers are showing up when you're entering a contact name, tap .
2. Tap  > **Show Email**.

To always show email addresses, tap  on the All messages screen, and then tap **Settings** > **General** > **Show email address**.

Resuming a draft message

1. On the All messages screen, tap  > **Drafts**.
2. Tap the message and then resume editing it.
3. Tap **Send**.

Checking your messages

Depending on your notification settings, HTC Desire 200 plays a sound, vibrates, or displays the message briefly in the status bar when you receive a new message. A new message icon  is also displayed in the status bar.


To open and read the message, you can:

- Open the Notifications panel, and then tap the new message notification.
- Go to the Messages app and open the message.

Viewing and saving an attachment from a multimedia message

- If there's a media attachment such as a photo or video in a received message, tap it to view the content.
- To save the attachment, tap the multimedia message, and then choose to save from the options menu.
- If the attachment is a contact (vCard), tap it to view the contact information, then tap **Save** to add to your contacts.
- If the attachment is an appointment or event (vCalendar), tap it to choose the calendar where to save it, and then tap **Import**.



If you are concerned about the size of your data downloads, you can choose to check the size and subject first before you download a multimedia message. On the All messages screen, tap  > **Settings** > **Multimedia messages (MMS)**. Clear the **Auto-retrieve** option.

Saving a text message in the Tasks app

Save a text message in your Tasks list so you can remind yourself when to reply.


1. On the All messages screen, tap a contact (or phone number) to display the exchange of messages with that contact.
2. Tap the message you want to save, and then tap **Save as task**.
3. Enter other details or change the task title.
4. Tap **Save**.

Replying to a message

1. On the All messages screen, tap a contact (or phone number) to display the exchange of messages with that contact.
2. Tap the box that says **Add text**, and then enter your message.
3. Tap **Send**.

Replying to another phone number of the contact

When a contact has multiple phone numbers stored on HTC Desire 200, you'll see the particular phone number used below the contact's name.

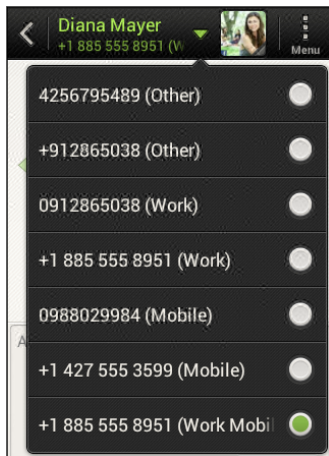

Keep in mind that your response will be sent to the phone number of the latest message you've received from this contact.


1. On the All messages screen, tap a contact (or phone number) to display the exchange of messages with that contact.
2. Tap ▼, and then select another phone number of this contact.
3. Tap the box that says **Add text**, then enter your reply message.
4. Tap **Send**.

Forwarding a message

1. On the All messages screen, tap a contact (or phone number) to view the exchange of messages with that contact.
2. Tap a message, and then tap **Forward**.
3. In the **To** field, fill in one or more recipients.
4. Tap **Send**.

WAP push messages



WAP push messages contain a web link. Often, the link will be to download a file that you have requested from a service provider. Open only links from sources that you trust.

When you receive a WAP push message, a notification icon  is displayed in the status bar.

Opening and reading a new WAP push message

1. Open the Notifications panel, and then tap the push message notification.
2. Tap **Visit website**.

Viewing all your WAP push messages

1. From the Home screen, tap  > **Messages**.
2. Tap  > **Push messages**.




You can only see this option if you've previously received WAP push messages.


Managing message conversations

Locking a message

You can lock a message so that it will not be deleted even if you delete the other messages in the conversation.

1. On the All messages screen, tap a contact (or phone number) to display the exchange of messages with that contact.
2. Tap the message that you want to lock.
3. Tap **Lock message** on the options menu. A lock icon  is displayed.

Copying a text message to your SIM card

 
1. On the All messages screen, tap a contact (or phone number) to display the exchange of messages with that contact.
2. Tap the message, and then tap **Copy to SIM**. A SIM card icon  is displayed.

Deleting a single message

1. On the All messages screen, tap a contact (or phone number) to display the exchange of messages with that contact.
2. Tap the message that you want to delete.

3. If the message is locked, tap **Unlock message** on the options menu, and then tap the message to display the options menu again.
4. Tap **Delete message**, and then tap **OK**.

Deleting several messages within a conversation

1. On the All messages screen, tap a contact (or phone number) to display the exchange of messages with that contact.
2. Tap  > **Delete**.
3. Tap **Delete by selection** or **Delete by phone number** (if the contact used multiple phone numbers throughout the conversation).



In the Messages settings, tap **General** > **Delete old messages** to auto delete old messages per conversation.


Deleting a conversation

1. On the All messages screen, press and hold a contact (or phone number) whose messages you want to delete, and then tap **Delete**.
2. Tap **OK** to delete the entire thread.



Any locked messages in the conversation thread will not be deleted unless you select the **Delete locked messages** option.

Deleting several conversations

1. On the All messages screen, tap  > **Delete**.
2. Select the conversation threads you want to delete.
3. Tap **Delete**. Any locked messages will not be deleted.

Backing up your text messages

1. From the Home screen, tap  > **Messages**.
2. Tap  > **Back up/Restore SMS** > **Back up SMS**.
3. Enter a name for your backup file, and then tap **OK**.

Backing up text messages by email



You need to set up your email account in the Mail app.

1. On the All messages screen, tap > **Back up/Restore SMS**.
2. Tap **Back up SMS via mail**.
The Mail app's compose screen opens, with the backup file attached.
3. Enter your email address.
4. Compose your email message, and then tap **Send**.

To restore your text messages on HTC Desire 200, open the email message with the backup file attachment from the Mail app. Tap the attachment to download it first, and then tap it again to open the backup file to import.

Restoring text messages

You can only restore text messages that were exported using the **Back up SMS** feature.

1. From the Home screen, tap > **Messages**.
2. Tap > **Back up/Restore SMS** > **Restore SMS**.
3. Tap the backup file to import.
4. Tap **OK**.

Setting message options

Access and change the settings of the Messages app. You can add a signature to your messages, edit messaging options, and more.

On the All messages screen, tap > **Settings**.

Search and web browser




Searching HTC Desire 200 and the Web

You can search for information on HTC Desire 200 and on the Web. Start your search by entering a keyword or by using Google Voice Search™.




Some apps, such as People or Mail, have their own search function, which you can use to search only within those apps.



Setting search options

1. From the Home screen, tap  Google.
2. Tap  > Settings.
3. Tap **Google Search**, and then customize your search settings.
4. When done, press .
5. Tap **Searchable items**, and then select the items you want included when doing a search.


Performing searches on the Web and HTC Desire 200

1. From the Home screen, tap  Google.
2. In the search box, enter the words you want to search for. As you type, matching items on HTC Desire 200 and suggestions from Google web search are shown as a list.
3. If what you're searching for is in the list of suggestions, tap the item to open it in its compatible app.



Tap  to enter it in the search box. New suggestions appear and you can enter more text or tap  beside a subsequent suggestion to quickly refine your search.

Browsing the Web

1. From the Home screen, tap  > **Internet**.
2. Tap the URL box on top of the screen.
3. Enter your search keywords or a webpage address.


4. On the webpage, you can:
 - Tap a link to open it, or press and hold a link to see more options.
 - Tap an email address to send a message to the email address.
5. Flick down the screen to quickly show the URL box and other options.

Switching to Read mode

 
Want to read an article or blog without distractions? Read mode removes menus, banners, and backgrounds from a webpage.

While viewing a webpage, tap  (when it's available) to switch to Read mode.



To turn Read mode off, tap .

Viewing the full version of a website

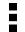
While viewing a webpage, tap  > View desktop site.

Opening or switching between browser tabs

Open multiple browser tabs to make it easier for you to switch from one website to another.

1. While viewing a webpage, tap **Tabs**.
2. Do one of the following:
 - To open a new tab, tap **New tab**.
 - To switch to another browser tab, slide your finger until the webpage you want to view appears. Tap a webpage to display it in full screen.



Tap  to close a webpage.

Private browsing

You can use incognito tabs to browse the Web with more privacy. Browser cookies are not shared and deleted when you close all incognito tabs. Pages you view in incognito also won't appear in your browser history except for files you download.


From the browser screen, tap **Tabs** > **New incognito tab**.

Adding and managing your bookmarks


Bookmarking a webpage



Bookmark a webpage in a normal browser screen (not when you're using an incognito tab).

1. While viewing a webpage, tap  > **Add to**.
2. Tap **Bookmarks**.
3. Edit the bookmark name if needed.
4. To save the bookmark to a new folder, tap **Bookmarks**.
5. On the Add to screen, tap  > **New folder**.
6. Tap **Done**.




Opening a bookmark

1. While viewing a webpage, tap  > **Bookmarks**.
2. On the Bookmarks tab, navigate to the bookmark you want to open, and then tap it.



If you have set up Google Chrome™ sync on your Google Account, tap **Local** on the Bookmarks screen, and then select the Google Account to view for your synced bookmarks.

Editing a bookmark


1. While viewing a webpage, tap  > **Bookmarks**.
2. On the Bookmarks tab, tap  > **Edit**.
3. Tap  at the right of the bookmark you want to edit.
4. Enter your changes, and then tap **Done**.

Syncing your bookmarks with Google Chrome

Create bookmarks from your computer's Google Chrome browser and sync them on HTC Desire 200. For more information about Google Chrome, visit <http://support.google.com/chrome>.



- Using your Google Chrome desktop browser, you need to sign in to your Google Account and set up Google Chrome sync.
- Be sure that you are logged in to your Google Account every time you save Google Chrome bookmarks on your computer.


1. Slide the Notifications panel open, and then tap  > **Accounts & sync**.
2. Tap your Google Account.
3. Select the **Sync Internet** option.

Saving web content for later



Save webpages to read later, even without an Internet connection. Some video clips in webpages can also be added to the Watch list so you can quickly find and watch them during your free time.




Only webpages will be stored on HTC Desire 200. You need to connect to the Internet when opening linked pages and video clips.

1. While viewing a webpage, tap  > **Add to**.
2. Do one of the following:
 - To save the webpage to your list, tap **Reading list**.
 - Tap **Watch list** if the webpage contains one or more video clips, and then select the videos to add to the Watch list.



Viewing items in your Reading list or Watch list

1. While viewing a webpage, tap  > **Bookmarks**.
2. On the Saved tab, do any of the following:
 - Under Reading list, tap a thumbnail of the webpage you want to open.
 - Under Watch list, tap a thumbnail of the video clip you want to open.
 - Tap  to see more options.


Viewing your browsing history

1. While viewing a webpage, tap  > History.
2. On the History tab, tap a time period to see a list of webpages you've visited.



Clearing your browsing history

1. While viewing a webpage, tap  > History.
2. On the History tab, tap  > Clear all.

Viewing a page that you often visit

1. While viewing a webpage, tap  > History.
2. On the Most visited tab, navigate to the page you want to view, and then tap the page.

Clearing the list of most visited pages

1. While viewing a webpage, tap  > History.
2. On the Most visited tab, tap  > Clear all.

Downloading apps from the web

You can download apps directly from websites.



Apps downloaded from websites can be from unknown sources. To protect HTC Desire 200 and your personal data, we strongly recommend that you only download from websites you trust.


1. Open your web browser, then go to the website where you can download the app you want.
2. Follow the website's download instructions for the app.

Before you can install the downloaded app, make sure that you've set HTC Desire 200 to allow installation of third-party apps in **Settings > Security > Unknown sources**.



After installing the app, make sure to go back to **Settings > Security** and clear the **Unknown sources** option. This can help protect your phone from installing other insecure apps from the Web.

Viewing your downloads


1. From the Home screen, tap  > Downloads.
2. Tap the file to open it.

Setting browser options

Customize the web browser to suit your browsing style. Set display, privacy, and security options when using the web browser.


From the browser screen, tap  > **Settings**.


Setting your homepage

1. From the browser screen, tap  > **Settings**.
2. Tap **General** > **Set homepage**.
3. Select the homepage you want to use.

Choosing when to show content compatible with Adobe Flash

Choose which Adobe® Flash content you want to see on a webpage, and when you want to view it.

1. From the browser screen, tap  > **Settings**.
2. Tap **Advanced** > **Enable Flash and plug-ins** > **On demand**.

After selecting **On demand**, you can show the Adobe Flash content by tapping  on the webpage.

Camera

Camera basics

Capture photos instantly, with no delay. Just directly launch the camera from the lock screen, even if HTC Desire 200 is password protected.

1. When your display is off, press POWER.
2. Drag the Camera icon to the lock screen ring so you can start taking photos and videos right away.



From the Home screen, you can also tap Camera to launch it.

Use the controls on the Viewfinder screen to add effects, zoom in or out, and more.



After using Camera (or if you temporarily leave the Viewfinder screen), you still need to unlock HTC Desire 200 if you have a screen lock.

Zooming

- Before taking a photo or video, slide your finger on the zoom bar to zoom in or out.
- When you're recording video, the zoom bar is always onscreen. You can freely zoom in or out while recording.

Choosing an effect


Use the available camera effects to make your photos look like they've been taken through special lenses or filters. You can also apply certain effects to videos.

1. Tap .
2. Scroll through the available effects and tap one that you like.



Setting the resolution

1. On the Viewfinder screen, tap .
2. Tap **Image resolution** or **Video quality**, and then choose a resolution.

Taking a photo

1. Open Camera from the lock screen or Home screen.
2. Just point the camera on what you want to capture.
3. When you're ready to take the photo, tap .

Recording video


1. Open Camera from the lock screen or Home screen.
2. When you're ready to start recording, tap .
3. To stop recording, tap .

Camera scenes

Scenes provide an easy way to override your camera's normal settings to suit your current lighting and environment. Use **Auto** and let the camera automatically determine optimal settings, or choose from a wide selection of scenes before you start taking photos.


Improving portrait shots

If you'd like your family or friends to look their best in your photos, make sure to use the portrait scene. It smoothens the skin in your shots.

1. On the Viewfinder screen, tap **A**.
2. Tap **Portrait**.
3. When you're ready to take the photo, tap .

Shooting in low light


Capture stunning images even in dim light.

1. On the Viewfinder screen, tap **A**.
2. Tap **Low light**.
3. When you're ready to take the photo, tap .



- To avoid getting blurry photos, maintain a steady grip on HTC Desire 200.
- Improve your photo after taking the shot by applying special effects like auto enhance and high contrast.

Changing camera and video settings

1. On the Viewfinder screen, tap .
2. As well as changing basic camera and video settings, you can also:
 - Change the review duration to set how long a captured photo or video will be displayed on the Review screen before the camera changes back to the Viewfinder screen.
 - Automatically take a shot when your subject smiles (photo mode only).
 - Geo-tag photos to store GPS location in your captured photos (photo mode only).
 - Set the ISO level. Higher ISO numbers are better for taking pictures in low light conditions (photo mode only).
 - Automatically upload photos to a social network (photo mode only). You can set the upload frequency, select the album to upload to, and set the privacy level.

Photos, videos, and music

Gallery


About the Gallery app

Reminisce on good times. Use Gallery to view all your photos and videos that are on HTC Desire 200 or your online albums.

You can even:

- Add photo frames and apply effects.
- Trim your videos.
- Share to your social networks, photo sharing sites, and more.

Viewing photos and videos


1. From the Home screen, tap  > Gallery.
2. Tap a photo or video album.
3. Tap a photo or video to view it in full screen.



While viewing a photo in full screen, tap anywhere on the screen, and then tap **More > Show on map** to see the location where you took the photo. (**Show on map** is available when you've enabled **Geo-tag photos** in Camera.)


Starting a photo slideshow

1. Tap a photo album.
2. Tap **Play**.

During the slideshow, tap the screen to show the controls. Tap  to set slideshow preferences.

Watching a video

1. Tap a video album and then tap a video.
2. Tap the onscreen controls to control the video playback, adjust the volume, capture an image during playback, and more.

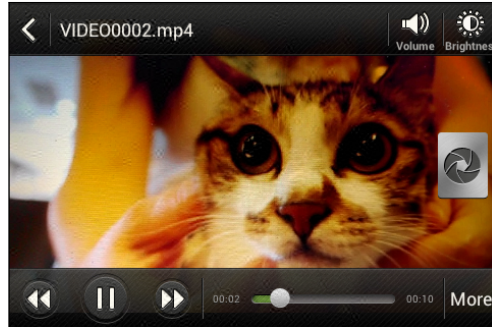

Taking a photo while watching a video

While you're watching a video in Gallery, tap  to capture a still shot.


Editing your photos and videos

Rotating a photo

1. On the Gallery app's Albums screen, tap an album.
2. Press and hold a photo, and then tap **Edit** > **Rotate left** or **Rotate right**.

Cropping a photo

1. On the Gallery app's Albums screen, tap an album.
2. Press and hold a photo, and then tap **Edit** > **Crop**. You'll see a crop box around the photo.
3. You can:
 - Drag the crop box over the part of the photo you want to crop.
 - Press and hold the edge of the crop box. When directional arrows appear, drag your finger inward or outward to resize the crop box.

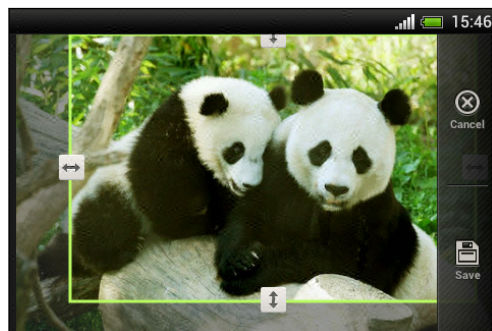

4. Tap **Save**.

The cropped photo is saved as a copy. The original photo remains unedited.

Adding photo effects

1. On the Gallery app's Albums screen, tap an album.
2. Press and hold on a photo, and then tap **Edit > Effects**.
3. Tap an effect to apply to the photo.
4. Tap **Save**.



The enhanced photo is saved as a copy. The original photo remains unedited.

Adding custom photo effects

Are the existing photo effects not exactly what you are looking for? You can make your own photo effects in Gallery.



You can only add effects to photos that are stored locally.

1. On the Gallery app's Albums screen, tap an album.
2. Press and hold a photo, and then tap **Edit > Effects**.
3. Tap  **> +**.
4. Tap a filter.
5. Drag the slider to get the effect you want.
6. You can do any of the following:
 - Add more than one filter to create a complex effect.
 - Rearrange filters to modify the effect. Press and hold the filter you want to move. Then drag it to a new position.
 - Remove filters. Press and hold the filter you want to remove. Then drag it to **Remove**.
 - Tap  to add a frame to your photo.
7. Tap **Done** to apply the effects to your photo.



To save your custom effects for future use, tap **Save Preset**.


8. Tap **Save**.

Trimming a video

Remove unwanted scenes from a video you recorded on HTC Desire 200.

1. On the Gallery app's Albums screen, tap an album.
2. Press and hold the video you want to edit, and then tap **Trim**.

3. Drag the two trim sliders to the part where you want the video to begin and end.

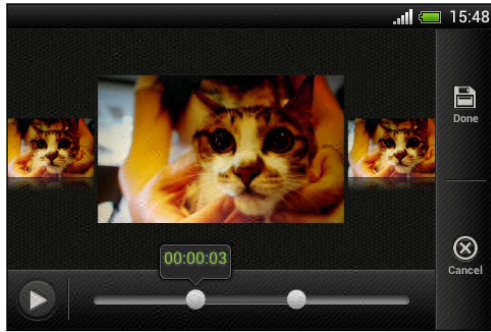

As you drag a slider, you'll see time markers and video frames. The one in the middle is your start or end frame.

4. Tap ► to preview your video.
5. Tap Done.


The trimmed video is saved as a new file. The original video remains unedited.

Viewing photos in your social networks

Right in the Gallery app, check what you and your friends have uploaded to your social networks or photo sharing sites.



Log on to your accounts before you start viewing online photos.

1. From the Home screen, tap  > Gallery.
2. On the top bar, tap ▼, and then tap a social network or photo sharing site.
3. Tap an account to start viewing photos in that account.




To comment on a photo, press and hold a photo thumbnail and then tap Add comment.


Sending your photos and videos

Send photos and videos to your computer or to another device via email, MMS, or Bluetooth.

Sending photos or videos by email

You can send several photos, videos, or both in an email message. They are added as file attachments in your email.



1. From the Home screen, tap  > Gallery.
2. Tap the album that has the photos or videos you want to share.
3. Tap Share, and then tap Gmail or Mail.

4. Select the photos or videos you want to share and then tap **Next**.
5. Compose your message and then tap  (Gmail) or **Send** (Mail).




If you selected **Mail** and you have multiple email accounts, the default email account will be used.

Sending a photo or video by MMS

1. From the Home screen, tap  > **Gallery**.
2. Tap the album that has the photos or videos you want to share.
3. Tap **Share** > **Messages**.
4. Tap the photo or video you want to send. The photo or video is automatically added into the MMS message.
5. To add another photo or video to your slideshow attachment, tap  and then tap **Picture** or **Video**.
6. Compose your message and then tap **Send**.

Sending photos or videos using Bluetooth

Use Bluetooth to send photos and videos to another device or to your computer.

1. From the Home screen, tap  > **Gallery**.
2. Tap the album that has the photos or videos you want to share.
3. Tap **Share** > **Bluetooth**.
4. Select the photos or videos you want to share and then tap **Next**.

You'll be asked to turn on Bluetooth and connect to the receiving Bluetooth device so the files can be sent.

Sharing your photos and videos on the Web

Use the Gallery app to share photos and videos straight to your social networks. And you can post videos on YouTube®.




You can also share a photo or video right after you've captured it.

Sharing photos or videos on Facebook



Log in to your Facebook account before you upload photos or videos.

1. From the Home screen, tap  > **Gallery**.
2. Tap the album that has the photos or videos you want to share.
3. Tap **Share** > **Facebook for HTC Sense**.

4. Select the photos or videos you want to share and then tap **Next**.
5. Select which album to upload to and set privacy settings for the uploaded photos or videos.




Tap **Add tag and description** to enter a caption on each photo or video or tag friends on your photos. If you're sharing several photos or videos, slide to the left to go to the next one. Remember to tap **Save** after you're done.

6. Tap **Done**.

Sharing photos and videos on Flickr



Log in to your Flickr® account before you upload photos or videos.

1. From the Home screen, tap  > **Gallery**.
2. Tap the album that has the photos or videos you want to share.
3. Tap **Share** > **Flickr**.
4. Select the photos or videos you want to share and then tap **Next**.
5. Select which album to upload to and set privacy settings for the uploaded photos or videos.





Tap **Add tag and description** to enter a caption on each photo or video or tag friends on your photos. If you're sharing several photos or videos, slide to the left to go to the next one. Remember to tap **Save** after you're done.

6. Tap **Done**.

Sharing photos on Picasa




Sign in to your Google Account before you upload photos to Picasa™.

1. From the Home screen, tap  > **Gallery**.
2. Tap the album that has the photos you want to share.
3. Tap **Share** > **Picasa**.
4. Select the photos you want to share and then tap **Next**.
5. Enter a caption for the photos you're uploading.
6. Select the online album where you want to upload the photos, or tap  to create a new album.
7. Tap **Upload**.

Sharing videos on YouTube

Upload your videos to YouTube and become an instant sensation.



1. From the Home screen, tap  > **Gallery**.
2. Tap a video album, and then tap **Share > YouTube**.
3. Select the videos you want to share and then tap **Next**.
4. Tap the Google Account that you want to use, accept the Terms of Service, and then select which data connection to use to upload the videos.
5. Enter a title and description for the videos you're uploading.
6. Select a privacy option for the videos or tag them for easy searching.
7. Tap **Upload**.

Music

Browsing music in the library




You need to copy music files to HTC Desire 200 first to use the Music app to play music.





1. From the Home screen, tap  > **Music > My phone**.
2. Tap  to browse a category, such as **Artists** or **Albums**.

Listening to music

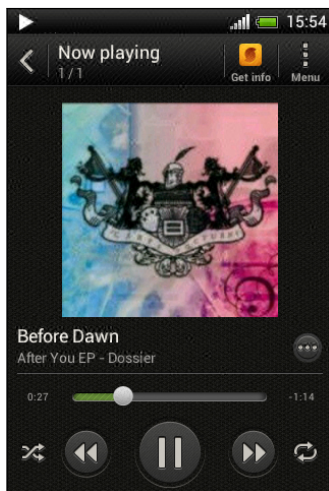
Enjoy your favorite songs on HTC Desire 200 using the Music app.

1. While browsing your music collection, tap a song to play it.
2. Tap the onscreen icons to control music playback, repeat songs, and more.




-  Press and drag your finger across the progress bar to jump to any part of the song.
-  Show options for adding the song to a playlist, sharing the song, and more.
-  Turn shuffle on or off. (Shuffle is off when button is gray.)
-  Cycle through the repeat modes: repeat all songs, repeat current song, and don't repeat.

Finding music videos on YouTube


It's easy to find music videos of the song you're listening to on YouTube. On the Now playing screen, tap  > **Search** > **YouTube**.

Updating album covers

1. On the Now playing screen, tap  > **Update album art**.
2. Choose whether to automatically or manually update all album covers or update just the current song on the Now playing screen.

Playing music from the Lock screen


When you're listening to music and the screen turns off, press **POWER** to turn the screen back on and control the music playback directly on the Lock screen.

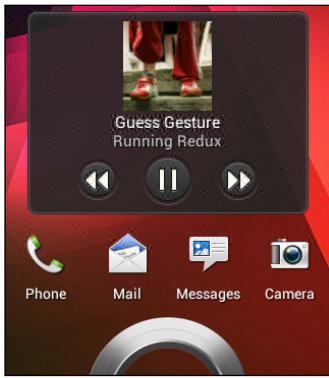

You can also pause music playback right from the Notifications panel.



Making your music sound better

When you plug in your headset, HTC Desire 200 automatically turns on the Beats Audio profile to give you an enhanced sound experience.

To turn the Beats Audio profile on or off, slide the Notifications panel open, and then tap  > **Sound** > **Sound enhancer**.

Creating a playlist

Personalize your music experience by creating music playlists. Make a playlist containing just your favorite songs or create one to match your mood for the day. You can make as many playlists as you like.

1. From the Home screen, tap  > **Music** > **My phone**.
2. Start playing a song that you want to add to a new playlist.
3. Tap  > **Add to playlist**.

4. If there are already existing playlists, tap **+** on the Select playlist screen to create a new one.
5. Enter a playlist name, and then tap **Save**.



You can also add additional songs while creating a new playlist. Tap **⋮** > **Add songs** to add more songs.

Playing the songs in a playlist

1. From the Home screen, tap **⋮** > **Music** > **My phone**.
2. Tap **▼** > **Playlists**.
3. Tap a playlist, and then tap the song you want to play first.

When you tap a song in the list to play it, the Now playing screen is updated with the songs from your playlist.

Managing playlists

After creating a playlist, you can add more songs to it, rearrange their order, and more.

1. From the Home screen, tap **⋮** > **Music** > **My phone**.
2. Tap **▼** > **Playlists**, and then tap the playlist you want to edit.
3. Tap **⋮** > **Edit playlist**.

Add songs	<ol style="list-style-type: none"> 1. Tap ⋮ > Add songs. 2. Tap ▼ to choose a category, and then browse for songs. 3. Select the songs you want to add to the playlist, and then tap Add.
Rearrange songs	Press and hold ☰ next to the song title you want to move, and then drag it to its new position.
Delete songs	Select the songs you want to remove from the playlist.
Change playlist name	Type the new name of the playlist in the title text box.



4. Tap **Save**.

Deleting playlists

1. From the Home screen, tap **⋮** > **Music** > **My phone**.
2. Tap **▼** > **Playlists**.
3. You can:
 - Press and hold the playlist you want to delete, and then tap **Delete playlist**.
 - Tap **⋮** > **Delete playlists** to remove several playlists.



Setting a song as a ringtone

Pick a song from your Music library and set it as your ringtone or as ringtone for a favorite contact.

1. From the Home screen, tap  > **Music** > **My phone**.
2. Find the song that you want to set as a ringtone.
3. Tap  > **Set as ringtone**.
4. Tap **Phone ringtone** or **Contact ringtone**. If you select **Contact ringtone**, choose the contacts you want to associate the ringtone with.


Trimming an MP3 ringtone

Use the Music app's ringtone trimmer if you want to set only a part of the song as ringtone.

1. When you find the song that you want, tap  > **Set as ringtone** > **Trim the ringtone**.
2. Drag the trim sliders  to the part where you want the ringtone to begin and end.



For a more precise trimming, tap the left or right arrow buttons. Time markers indicate where you are on the song.
3. When you're done trimming, tap **Set as**.
4. Choose whether to set your trimmed song as your **Phone ringtone** or **Contact ringtone**.



You can see your new ringtone in the phone settings. Slide the Notifications panel open, and then tap  > **Sound** > **Phone ringtone**.

Sharing music using Bluetooth


Choose a song from the Music app's library and use Bluetooth to send it to another device or your computer.

1. From the Home screen, tap  > **Music** > **My phone**.
2. Find the song you want to send.
3. Tap  > **Share** > **Share file** > **Bluetooth**.

You'll be asked to turn on Bluetooth on HTC Desire 200 and connect to the receiving Bluetooth device so the music can be sent.


Accounts and sync

Adding your social networks, email accounts, and more

1. Slide the Notifications panel open, and then tap  > **Accounts & sync**.
2. Tap **+**.
3. Tap the account type you want to add.
4. Follow the onscreen instructions to enter your account information.

Adding one or more Google Accounts

Sign in to your Google Account to see your Gmail, contacts, and calendars, and to use Google apps on HTC Desire 200.

1. Slide the Notifications panel open, and then tap  > **Accounts & sync**.
2. Tap **+**.
3. Tap **Google**.
4. Follow the onscreen instructions to sign in to an account or create a new account.



If you added more than one Google Account, apps such as Gmail can allow you to switch between your accounts.


Forgot your Google Account password?

If you have forgotten your Google Account password, you can try to recover it by going to the Google website.



1. On HTC Desire 200 or on your computer, open your web browser
2. Go to www.google.com/accounts/recovery.
3. Select the option for retrieving your password, and then enter the email address or username that you use to sign in to your Google Account.
4. Click **Continue**.
5. Follow the instructions on the screen to reset your password.

Managing your online accounts


Syncing all your accounts automatically

1. Slide the Notifications panel open, and then tap  > Accounts & sync.
2. Tap the Auto-sync On/Off switch to turn automatic sync on or off.

Syncing an account manually



1. Slide the Notifications panel open, and then tap  > Accounts & sync.
2. Tap the account you want to sync.
3. Tap .

Changing the synced data or settings for an account

1. Slide the Notifications panel open, and then tap  > Accounts & sync.
2. Tap the account that you want to update.
3. Tap the item you want to sync or edit.

Removing an account

You can remove an account to delete all information associated with it from HTC Desire 200. Removing an account does not delete information from the online service itself.

1. Slide the Notifications panel open, and then tap  > Accounts & sync.
2. Tap the account that you want to remove.
3. Tap .

People

About the People app


With the People app, easily manage your communications with your contacts via phone, messaging, email, and social networks.

And, if you have the same contacts from different sources, you can merge their contact information so you won't have duplicate entries.

To open People, from the Home screen, tap  > People.

Your contacts list

The People app lists all contacts stored locally and from the online accounts you're logged in to.

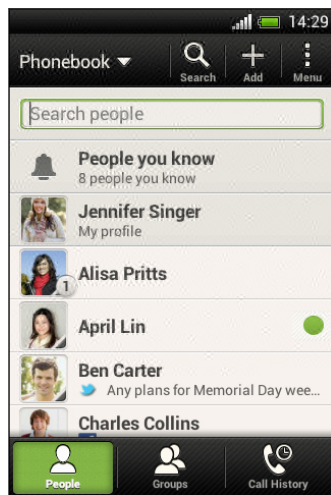


You can:


- View your profile and edit your contact information.
- Create, edit, or find contacts.
- See status updates.
- Tap a name to see that contact's stored information.
- See a notification icon when a contact has sent you new messages.
- Get notified when it's the contact's birthday.
- Check out who's online in Google Talk™. Online status icons are displayed if you're signed in to Google Talk.

Filtering your contacts list

Choose which account contacts to show.


1. On the People tab, tap ▼ on the top bar.
2. Choose the online accounts that contain the contacts you want to display.
3. Press .



To set your contact sorting options, tap  > Settings.


Setting contact search options

In addition to searching contacts by name, you can also search by other criteria such as by their group name or company.

1. On the People tab, tap  > **Settings**.
2. Tap **Search contacts by**, and then choose the types of criteria to search for.




Setting up your profile

Store your personal contact information to easily send it to other people.

1. On the People tab, tap **My profile**.
2. Tap **Edit my contact card**.
3. Enter or edit your name and contact details.
4. Tap  (or the current photo) to change your contact photo.
5. Tap **Save**.

What you can see on your profile


When you tap **My profile**, you'll see the following tabs:

	Details Shows your contact details. You'll also see your most recent posts in social networks (if you're signed in to social networks.) You can also edit your profile or share it with others.
	Updates Shows the updates that you've posted in your social networks.
	Gallery Shows your social network albums and photos.

Adding a new contact

1. On the People tab, tap **+**.
2. Tap the **Name** field, and then enter the contact name.



Tap  if you want to separately enter the contact's first, middle, and last name. Depending on the contact type, you may also be able to add a name suffix (such as Ph.D).

3. Select the Contact type. This determines which account the contact will sync with.

 


Some fields may not be available when you're adding contacts to your SIM card.



4. Enter the contact information in the fields provided.
5. Tap **Save**.

Finding people you know on social networks

HTC Desire 200 automatically searches for your phone contacts on different social networks you're signed into. Based on matching email addresses and contact details, you can send requests to your contacts to join your social network.

To turn this feature on or off, tap  > **Settings** on the People tab, and then select or clear the **Find people you know** option.




To manually refresh the list of people suggestions, tap  > **Manage contacts** > **Linked contacts**. On the Notifications tab, tap  > **Refresh**.

Sending social network requests to your contacts


1. Tap the People you know notification (when it's available on the People tab).
2. Choose the people to follow or send friend requests using the social networks you're signed into.

Importing or copying contacts


Importing contacts from your SIM card

1. On the People tab, tap  > **Manage contacts**.
2. Tap **Import/Export contacts** > **Import from SIM card**.
3. If you have a Google or Exchange ActiveSync account, tap the type for the imported contacts.
4. Select the contacts you want to import.
5. Tap **Save**.

Importing a contact from an Exchange ActiveSync account

1. On the People tab, enter the contact's name or email address in the search box.
2. Tap **Search contacts in your Company Directory**.
3. Tap the name of the contact you want copied to HTC Desire 200.
4. Tap  to import the contact.

Copying contacts from one account to another

1. On the People tab, tap  > **Manage contacts**.
2. Tap **Copy contacts**, and then choose a contact type or online account to copy from.




Contacts from your social network accounts may not be copied.

3. Select a contact type or account you want to save to.



Merging contact information

Avoid duplicate entries by merging contact information from different sources, such as your social network accounts, into one contact.

Manually merging contact information

1. On the People tab, tap the name of the contact (not the icon or photo) you want to link.
2. Tap .
3. Tap **All contacts**, and then tap the contact you want to link.

Breaking the link

1. On the People tab, tap the name of the contact (not the icon or photo) whose link you want to break.
2. Tap .
3. Under the **Linked contacts** section, tap  beside an account to break the link.

Contact information and conversations

When you tap a contact on the People screen, the contact details screen opens.

The contact details screen has the following tabs:



Details

Shows the information you've stored for the contact. Get in touch with the contact by tapping an option.



Thread

Shows SMS messages and emails you've received from the contact. It also lists all your incoming, outgoing, and missed calls to and from the contact.



Updates

Shows the contact's updates and events from social network accounts.

If you see a notification of the contact's birthday under the Events section, you can tap the notification and choose how you want to greet your contact.



Gallery

Shows the linked contact's albums and photos.


Editing a contact's information



Social network contacts cannot be edited.

1. On the People tab, press and hold the contact, and then tap **Edit contact**.
2. Enter the new information.
3. Tap **Save**.

Deleting contacts




1. On the People tab, tap  > **Delete contacts**.
2. Select the contacts you want to remove.
3. Tap **Delete**.

Contact groups




Organize your friends, family, and colleagues into groups so you can quickly send a message or email to everyone in the group. We've also set up the Frequent group to automatically add the contacts you dial or get calls from the most.

The HTC Desire 200 also syncs with groups you've created in your Google Account.

Creating a group

1. On the Groups tab, tap .
2. Enter a name for the group.
3. Tap  to select a photo for the group.
4. Tap  > **Add contact to group**.
5. Select the contacts you want to add, and then tap **Save**.
6. When your group is complete, tap **Save**.

Editing a contact group

1. On the Groups tab, press and hold the group, and then tap **Edit group**.
2. You can:
 - Tap the group name to change the name. You can only change the name for groups that you have created.
 - Tap the icon next to the group name to change or remove the group photo.
 - Tap  > **Add contact to group** to add more members.
 - To rearrange the group members, press and hold  at the end of the contact's name, and then drag it to its new position.
 - Tap  beside a contact to remove it from the group.
3. Tap **Save**.



Sending a message or email to a group



You will be charged for each text message sent. For example, if you send a message to a group of five people, you will be charged for five messages.

1. On the Groups tab, tap the group you want to send a message or email to.
2. Go to the Group action tab.
3. Choose if you want to send a text message or email.

Rearranging your contact groups


1. On the Groups tab, tap  > **Edit groups**.
2. Press and hold  at the end of the group to move, and then drag it to its new position.
3. Tap **Save**.

Deleting groups



You can only delete groups that you have created.

On the Groups tab, you can:

- Press and hold a group you want to delete, and then tap **Delete group**.
- Tap  > **Edit groups** to choose several contact groups to remove.

Adding People widgets

Stay close with the people that matter by adding a people widget for each of your groups.

1. Press and hold on an empty space on your Home screen.
2. On the Widgets tab, tap **All Widgets > People**.
3. Choose the widget style, and then drag it to a home screen thumbnail where you want to add it.
4. Select the group you want to add as a widget.
5. Repeat the above steps to add another People widget.

Setting the default communication method

Choose the communication action (for example, call or send a message) when you tap a contact's photo on the People widget.

1. On the Home screen, go to the People widget.
2. Tap a contact's photo on the widget.
3. Tap the communication method you want for the contact.



If you need to change the default communication method, tap the contact's name (not the photo), and then tap **Set default action**.

Getting in touch with a contact

1. On the Home screen, go to the People widget.
2. Tap a contact's photo (not the name) on the widget. The default communication method you've set for this contact will be performed.


Sending contact information

1. On the People tab, do one of the following:


To send	Do this
Someone's contact information	Press and hold the name of the contact (not the icon or photo), and then tap Send contact as vCard .
Your contact information	Press and hold My profile , and then tap Send my profile .

2. Choose how you want to send the vCard.
3. Select the type of information you want to send.
4. Tap **Send**.

Sending multiple contact cards


1. On the People tab, tap  > **Send contacts**.
2. Select the contacts whose contact information you want to share
3. Tap **Send**.
4. Choose how you want to send the contact cards.

Backing up your contacts to the storage card

1. On the People tab, tap  > **Manage contacts**.
2. Tap **Import/Export contacts** > **Export to Storage card**.
3. Select an account or type of contacts to export, and then tap **OK**.

Restoring contacts

You can only restore contacts that were backed up to the storage card using the **Export to SD card** feature.

1. On the People tab, tap  > **Manage contacts**.
2. Tap **Import/Export contacts** > **Import from Storage card**.
3. If you have more than one account set up, tap the type for the imported contacts.

Social

Facebook for HTC Sense

Signing in to your Facebook® account from the Accounts & sync settings or the Facebook app (preinstalled or downloaded) automatically signs you in to Facebook for HTC Sense. Also, you may need to authorize Facebook for HTC Sense to connect to your Facebook account.

With Facebook for HTC Sense, you can:

- See your Facebook contacts and their status updates in People.
- See Facebook photos in Gallery.
- Check your friends' Facebook status updates in Friend Stream™.
- View Facebook events and friends' birthdays in Calendar.

Twitter for HTC Sense

When you're signed in to Twitter for HTC Sense, you can see your Twitter contacts and their latest tweets in People. You can also send tweets and check your friends' tweets in Friend Stream.



If you have the Twitter app (preinstalled or downloaded), signing in to Twitter for HTC Sense does not sign you in to the Twitter app and vice versa. If you want to use the same Twitter account for both, you'll have to sign in to both using the same login info.

About Friend Stream

With Friend Stream, you can share and get updates from friends in popular social networks in a single feed.

From the Home screen, tap  > **Friend Stream**.

When you tap someone's status update, you can:

- Write a comment.
- Like someone's Facebook posts.
- Look at someone's album photos.


When you tap someone's photo or name, you can:

- Check the person's profile details.
- Look at the person's Facebook wall.

Tap ▼ to display posts from a particular social network.

Slide to the other tabs to see more options. You can tap ≡ > **Edit tabs** to customize the Friend Stream tabs.

Updating your status in Friend Stream

1. On the All tab, tap +.
2. Enter your status update.
3. If you do not want to send the status update to all your social network accounts, tap ≡, and then clear the social networks to exclude.
4. Tap Done.
5. Tap .
6. Choose what you want to attach to your status update.
7. Tap Post.

Enjoying Facebook in Friend Stream

Post your status updates, write messages on walls, or check in to a place.

Posting a message on a friend's Facebook wall

1. In Friend Stream, tap ▼ > Facebook.
2. Tap + > My wall.
3. Tap a friend from the list.
4. Enter your message.
5. Tap Post.

Commenting on and liking Facebook posts

Tap someone's status update on the All tab, and do any of the following:


- Tap a photo or the album name shown in the status update to view and comment on the album photos using the Gallery app.
- Like the person's status update.
- Tap the text box, and then enter what you think about the person's status update.

Checking in to a place





Let your Facebook friends know where you are by checking in to a place.





 
In order to find your location, you need to enable location sources in **Settings > Location**.

1. Go to the Locations tab, and then tap .
2. Tap a place from the list.
3. Tap **Check in**.
4. Add your status message and even tag the friends you're with.
5. Tap **Check in**.


Tweeting in Friend Stream

1. In Friend Stream, tap  > **Twitter for HTC Sense**.
2. Tap .
3. Enter your tweet.
4. Tap  to add a picture or  to add your current location to your tweet.
5. Tap **Post**.

Searching for Twitter users to follow

1. On any of the tabs, tap .
2. Type a Twitter name in the search box.
3. Tap .
4. In the search results, tap the Twitter user you want to follow.
5. Tap  > **Follow**.

 Unfollowing a Twitter user

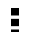1. On the All tweets tab, tap the Twitter user you want to stop following.
2. Tap  > **Unfollow**.

Sending a direct message

You can only send a direct message (DM) to someone who is following you.

1. On the DMs tab, tap **+**.
2. Tap the bar next to **To**, and select a recipient.
3. Enter your message, and then tap **Post**.

You can also send a direct message when you press and hold a tweet of the person you want to send the direct message to, and then tap **Send direct message** on the options menu.

Replying to or retweeting a tweet

1. On the All tweets tab, tap the tweet you want to reply to or retweet.
2. Do one of the following:
 - Tap **Retweet**.
 - Tap **Reply**, enter your reply or add a personal note to the tweet, and then tap **Post**.


Email

Gmail

Viewing your Gmail Inbox

All your received email messages are delivered to your Inbox.

From the Home screen, tap  > Gmail.

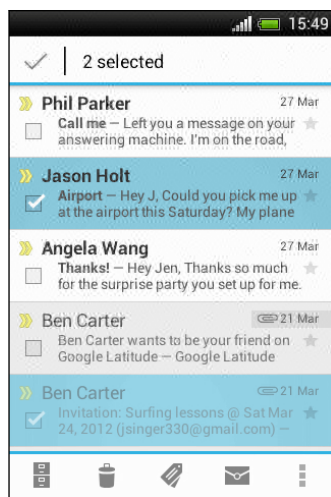

Display drafts, sent messages, and other labels

Tap **Inbox** at the top bar and then tap another label (such as **Sent**, **Drafts**, or your created label) to view its messages and conversations.


Switch to your other Gmail account

Tap **Inbox** at the top bar, and then tap the account you want to switch to.


Archive, delete or label multiple conversations

Tap the check box before the email message or conversation. Then tap the onscreen buttons at the bottom to choose what to do with the selected messages or conversations.

Get help



In the Gmail inbox, tap  > **Help**.

Sending an email message in Gmail



1. In the inbox of the Gmail account you want to use, tap .
2. Fill in one or more recipients.



Want to loop in more recipients in a carbon copy (Cc) or blind carbon copy (Bcc) of the email message? Tap  > **Add Cc/Bcc**.

3. Enter the email subject, and then compose your message.
4. If you want to attach a photo, tap  > **Attach file**.
5. Tap  to send.

Replying to or forwarding email messages in Gmail

1. In the Gmail inbox, tap the email message or conversation.
2. To reply to the sender, tap . Or, tap  and choose whether to **Reply all** or **Forward**.

3. Do one of the following:
 - If you're replying to the sender or you selected **Reply all**, enter your reply message.
 - If you selected **Forward**, specify the message recipients.





Tap **Respond inline** if you want to interleave your new message with the received email. But this removes any attachments or formatting in the original email message.

4. Tap  to send.

Mail

Adding a POP3/IMAP email account

1. From the Home screen, tap  > **Mail**.
2. Do one of the following:
 - If this is the first email account you're adding in Mail, tap **Other (POP3/IMAP)** on the Choose a mail provider screen.
 - If you've already added an email account in Mail, tap  > **New account** > **Other (POP3/IMAP)**.
3. Enter the email address and password for your email account and then tap **Next**.





If you're asked to enter more email settings, ask your email service provider for assistance.

4. Enter the account name and your name and then tap **Finish setup**.

Adding a Microsoft Exchange ActiveSync account

You can sync with Microsoft Exchange Server 2003 Service Pack 2 (SP2) or later.

1. From the Home screen, tap  > **Mail**.
2. Do one of the following:
 - If this is the first email account you're adding in Mail, tap **Microsoft Exchange ActiveSync** on the Choose a mail provider screen.
 - If you've already added an email account in Mail, tap  > **New account** > **Microsoft Exchange ActiveSync**.
3. Enter the Exchange ActiveSync account details, and then tap **Next**.




If your corporate Exchange Server does not support auto-detect, you'll need to enter your Exchange Server settings. Ask your Exchange Server administrator for details.

4. Choose the sync options that you want, then tap **Next**.
5. Enter the account name, then tap **Finish setup**.

Checking your Mail inbox

When you open the Mail app, it displays the inbox of one of your email accounts that you've set up on HTC Desire 200.

To switch between email accounts, tap the bar that shows the current email account, and then tap another account.

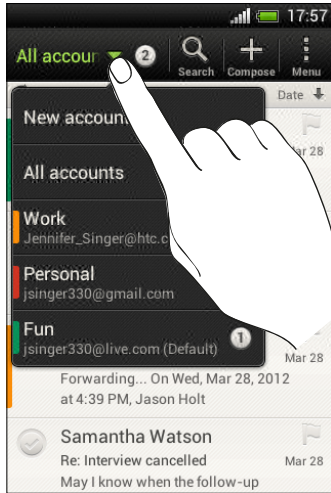

Viewing the unified inbox of all your email accounts

You can view email messages from all your accounts just in one place without having to switch to different accounts.



Just tap the bar that shows the current email account, and then tap **All accounts**. Email messages are color coded so you can easily distinguish which email accounts they belong to.



Up to 15 email accounts can be shown in the unified inbox.



Organizing email messages

Do you have a big pile of email messages in your inbox? Organize your email messages into tabs and quickly find the messages you want.

1. Switch to the email account that you want to use.
2. In the inbox, tap  > **Filters**.
3. Press and hold a tab, and then drag it to the bottom row to add.
4. Press  and then slide to the added tab.

Manually refreshing an email account

Whatever your sync settings are, you can also sync your sent and received email messages manually at any time.

- While viewing an email account, tap  > **Refresh**.
- If you have several email accounts, you can refresh them all at the same time. Go to the All accounts inbox first. Then tap  > **Refresh**.

Sorting email messages



Customize how you sort your email messages.

In an email account inbox, tap  > **Sort**, and select from the sorting options.





To quickly scroll through the message list based on the sorting option you've selected, press and hold two fingers on any email message, and then drag upward or downward.

Sending an email message


1. From the Home screen, tap  > **Mail**.
2. Switch to the email account that you want to use.
3. Tap .
4. Fill in one or more recipients.




Want to loop in more recipients in a carbon copy (Cc) or blind carbon copy (Bcc) of the email message? Tap  > **Show Cc/Bcc**.

5. Enter the subject, and then compose your message.
6. Do any of the following:
 - Add an attachment. Tap **Attach** and then choose what you want.
 - Set the priority for an important message. Tap  > **Set priority**.
7. Tap **Send**, or to send it later, tap **Save**.

Resuming a draft email message


1. In an email account inbox, tap  > **Folder** > **Drafts**.
2. Tap the message.
3. When you finish editing the message, tap **Send**.

Reading and replying to an email message

1. From the Home screen, tap  > **Mail**.
2. Switch to the email account you want to use.


3. In the email account inbox, tap the email message or conversation you want to read.



If you want to read a particular message inside an email conversation, tap  to expand the conversation, and then tap the email message.

4. Tap **Reply** or **Reply All**.





Tap  for more actions for the email.

Where are my unread email messages?

Unread email messages display in bold in your inbox. If you're viewing the unified inbox of all your email accounts, color bars also appear next to unread email messages. The color bars also indicate the email account from where the email message is received.

To group all unread email messages, add the Unread tab to your inbox.



1. Switch to the email account you want to use.
2. In the inbox, tap  > **Edit tabs**.
3. Press and hold **Unread**, and then drag it to the bottom row to add.
4. Press , and then tap the Unread tab.

Saving an email message in the Tasks app

Save an email message in your Tasks list so you can remind yourself when to reply.

1. In an email account inbox, press and hold the email message, and then tap **Save as task**.
2. On the New task screen, enter the task details, and then tap **Save**.

Searching email messages

1. Tap .
2. If you want to refine or filter your search, tap , check the search options, and then tap **OK**. For example, you can focus the search on a part of an email or filter email messages that have attachments or tagged as high priority.
3. In the search box, enter the words you want to search for.
4. Tap a result to open the email message.

Searching for emails from a contact

Do you remember the sender, but can't find a particular email from him or her?


1. Switch to the email account you want to use.
2. Press and hold an email message from a contact.
3. Tap **Search the mail from the sender**. A list of email messages from that contact appears.

Working with Exchange ActiveSync email


Flagging an email

1. Switch to your Exchange ActiveSync account.
2. While viewing the inbox, tap the flag icon that appears beside an email message or conversation.




To flag an email message inside a conversation, tap  to expand the conversation, and then tap the flag icon of the email message.

Setting your Out of the office status

1. Switch to your Exchange ActiveSync account.
2. Tap  > **Out of the office**.
3. Tap your current office status, and then select **Out of the office**.
4. Set the dates and times.
5. Enter the auto-reply message.
6. If you want a different auto-reply message for recipients outside your organization, tap the **Send auto reply message to external recipient** option, and then enter the auto-reply message in the box that appears.
7. Tap **Save**.

Sending a meeting request

 
1. Switch to your Exchange ActiveSync account.
2. Tap  > **New meeting invitation**.
3. Enter the meeting details.
4. Tap **Save**.

Managing email messages

Moving email messages to another folder

1. Switch to the email account you want to use.
2. Select the email messages you want to move.




To select all, select one email message first, and then tap  > **Select all**.

3. Tap **Move to**, and then select a folder.

Deleting email messages


1. Switch to the email account you want to use.
2. Tap the check buttons of email messages you want to delete.



To select all, select one email message first, and then tap  > **Select all**.

 
3. Tap **Delete**.

Switching to other mail folders

1. In an email account inbox, tap  > **Folder**.
2. Tap the mail folder that contains the messages you want to view.


Changing email account settings


You can change your email notification settings, add an email signature, delete an account and more.

1. Switch to the email account whose settings you want to change.
2. Tap  > **Settings**.

Syncing email less frequently

When you don't need to sync email frequently, such as when you're watching video or driving, use Smart Sync to automatically extend the time before HTC Desire 200 syncs your email account. Smart Sync helps you save battery power.

1. Switch to the email account where you want to use Smart Sync.
2. Tap  > **Settings** > **Sync, Send & Receive**.
3. Tap **Peak time sync** > **Smart Sync**.

4. Tap **Off-peak sync** > **Smart Sync**.
5. Press .

Smart Sync then extends the email synchronization time after each auto sync time passes and you don't open the Mail app. To sync your email at any time, open the Mail app and check your inbox.

Calendar

About Calendar





Never miss an important date again. Use the Calendar app to schedule your events, meetings, and appointments.

You can set up HTC Desire 200 to stay in sync with calendars such as Google Calendar, Outlook Calendar, and Microsoft Exchange ActiveSync Calendar.


If you've signed into your social network accounts, related calendar events will appear in Calendar.

Creating an event


You can create events that sync with your Google or Exchange ActiveSync calendars, as well as events on HTC Desire 200.

1. From the Home screen, tap  > **Calendar**.
2. On any Calendar view, tap .
3. Tap , and then select the calendar to which you will add the event.
4. To invite people, tap  and choose who you want to invite.
5. Enter and set the event details.
6. Tap **Save**.

Viewing the Calendar

1. Tap a Calendar tab.
2. Do any of the following:
 - In any Calendar view, return to the current date by tapping **Today**.
 - Events in day, week, and agenda views are color coded to indicate which account or type of calendar they belong to. To find out what each color represents, tap .



If you don't see a Calendar tab, tap  > **Edit tabs**, press and hold a Calendar tab, and then drag it to the bottom row.

Month view


In month view, you will see markers on days that have events.

Do any of the following in month view:

- Tap a day to view the events for that day.
- Press and hold a day to open an options menu from which you can also choose to create an event or switch to either day or agenda view.
- Slide your finger up or down the screen to view earlier or later months.

Day and agenda views

Day view shows your events per day, whereas agenda view displays all your events in chronological order.

- If the event is a birthday or anniversary of your contact, tap it to send a greeting.
- When in day view:
 - Tap a time slot to create a new event at that time.
 - Slide left or right across the screen to view earlier or later days.
 - If you see the day's weather shown, tap the weather to change it to display another city.
 - See the event time in another time zone. Tap  > **Dual time zone** > **Choose location**, and then enter the second location.

Week view

Week view displays a chart of the events of one week.

When in week view, you can:

- Press and hold on a time slot to create a new event at that time.
- Tap an event (shown as colored blocks) to view its details.
- Slide left or right across the screen to view earlier or later weeks.

Managing Calendar events

Editing an event

You can only edit events you have created, and those you have accepted from accounts such as Microsoft ActiveSync Exchange.



Editing events is not supported for all accounts.

1. While viewing an event, tap .




If you're editing an event that repeats, you'll be asked whether you want to edit just that occurrence or all occurrences of that event.

2. Make your changes to the event.
3. Tap **Save**. Or tap **Send update** if you've invited people to the event.

Deleting an event


Do any of the following:

- While viewing an event, tap  > **Delete event**.
- In day, agenda or week view, press and hold an event and then tap **Delete** or **Delete event**.

If the event repeats, you'll be asked whether you want to delete just that occurrence or all occurrences from Calendar.

Sharing an event


You can share a calendar event as a vCalendar using Bluetooth or by sending it as a file attachment with your email or message.

1. Do one of the following:
 - While viewing an event, tap  > **Forward**.
 - In day, agenda or week view, press and hold an event and then tap **Forward**.
2. Choose how you want to send the event.

Accepting or declining a meeting invitation


Go to the **Invites** tab to see meeting invitations which you have not yet accepted or declined.



- You must set up an Exchange ActiveSync account to receive meeting invitations in Calendar.
- If you don't see the **Invites** tab, tap  > **Edit tabs**, press and hold **Invites** and then drag it to the bottom row.

1. Tap the **Invites** tab and then tap a meeting invitation.
2. Accept, decline, or tentatively accept the invitation, or propose a new time.



Tap  to choose from more options, such as moving the invitation to a folder.

Setting reminders for your events


Have an important event that you must remember? Calendar makes it easy to remind yourself of important events.


1. While viewing a calendar event, tap **Reminder**.
2. Choose how far in advance you want to be reminded of the event.



You can set the default reminder time or choose an event reminder tone in the Calendar settings.

Dismissing or snoozing event reminders

If you have set at least one reminder for an event, the upcoming event icon  will appear in the notifications area of the status bar to remind you.

1. Open the Notifications panel.
2. Tap the event reminder notification.
3. Do one of the following:
 - Choose to snooze or dismiss all event reminders.
 - Press  to keep the reminders pending in the notifications area of the status bar.

Showing or hiding calendars

1. In any Calendar view, tap ▼.
2. Select or clear the calendar you wish to show or hide, and then press <.



- Calendars are kept synchronized on HTC Desire 200, even if they are hidden.
- You can also show or hide tasks that you've created on HTC Desire 200.

Changing Calendar settings

You can change Calendar settings to specify how it displays events and how it notifies you of upcoming events.

In any Calendar view, tap ☰ > **Settings**.

Online storage and services

Dropbox

Using Dropbox on HTC Desire 200

When you use Dropbox, you'll have access to your photos, videos, and documents – on HTC Desire 200, your computer, and your other mobile devices where you have Dropbox access.

On HTC Desire 200, sign in to your Dropbox account so you can:

- Enjoy an additional 23GB of free Dropbox storage for two years.
- Access your photos and videos that are stored in Dropbox right from Gallery.
- No more large attachments when sharing by email. Simply send a link to your Dropbox files.
- View and edit Office documents that are stored in Dropbox.
- Save documents, such as from email attachments, directly to Dropbox.
- Check your remaining Dropbox storage space anytime.



If the Dropbox app is not preloaded, you can download and install it from Google Play.

About the additional free Dropbox storage offer

The additional 23GB Dropbox storage is a special offer that's available on HTC phones using Android™ with HTC Sense® 4.0 or later, and have Dropbox preloaded. This offer is available to both new and current Dropbox users.



- Additional terms and requirements may apply (including a subscription fee) after your two year trial ends.
- On HTC phones that don't have Dropbox preloaded, you can download it from Google Play™ and still enjoy Dropbox integration with apps such as Gallery and Mail.
- To get the additional 23GB of Dropbox storage free for two years, please sign in to your Dropbox account from HTC Desire 200 (and not from your computer or other non-HTC devices), and complete the getting started guide on the Dropbox website (www.dropbox.com/gs).
- If you don't have a Dropbox account yet, you can create a new account from HTC Desire 200 or from your computer at www.dropbox.com.
- This additional free storage is a one-time offer only. You're eligible to use this offer only on one HTC device.



Please visit the Dropbox website (<http://www.dropbox.com/help/249>) for full terms and conditions.




Dropbox is a third-party app and is not provided by or associated with HTC Corporation.

Setting up your Dropbox account

To get your additional 23GB of free Dropbox storage for two years, set up your Dropbox account from HTC Desire 200, and complete the getting started guide on the Dropbox website.

1. Slide the Notifications panel open, and then tap  > **Accounts & sync**.
2. Tap  > **Dropbox**.
3. Follow the onscreen instructions to create or sign in to your account.
4. Using your computer's web browser, go to the Dropbox website (www.dropbox.com), log in to your account, and complete the getting started guide.




From the Home screen, you can also tap  > **Dropbox** to use the Dropbox app to set up your account.

Sharing your photos and videos on Dropbox

Use Gallery to upload your photos and videos to Dropbox. You can then share the link to your Dropbox so that your friends can see your photos and videos.

Uploading your photos and videos to Dropbox from Gallery



1. From the Home screen, tap  > **Gallery**.
2. Tap the album that contains the photos or videos you want to share.
3. Tap **Share** > **Dropbox**.
4. Select the photos or videos you want to upload, and then tap **Next**.
5. Create or choose a folder in Dropbox, and then tap **Upload**.



To view your uploads right from Gallery, put them under the Photos folder in your Dropbox. Or under Photos, create a folder and upload them to this folder.

Auto uploading camera shots



Your new camera shots will be uploaded automatically, if you turned on the Camera Upload feature when you set up your Dropbox account on HTC Desire 200. If you didn't turn it on before, you can enable it in the Dropbox settings.

1. From the Home screen, tap  > **Dropbox**.
2. Tap  > **Settings** > **Turn On Camera Upload**.

3. Choose the type of Internet connection to use for uploading your captured photos and videos to Dropbox.
4. Tap **Turn on**.

Viewing your uploaded photos and videos from Gallery

The Camera Uploads folder and subfolders under the Photos folder in your Dropbox can be accessed from Gallery. They will appear as albums.

1. From the Home screen, tap  > **Gallery**.
2. Tap  > **Dropbox**.
3. When you see a message that shows HTC Sense™ wants to access Dropbox, make sure you tap **Allow**.




This message only appears the first time you access your Dropbox photos and videos from Gallery.


4. Tap an album to view the photos and videos in it.

Sharing the link to your Dropbox

Share the link to your entire album of photos and videos that's in your Dropbox so other people can access it.


1. From the Gallery Albums screen, tap  > **Dropbox**.
2. Tap an album.
3. Do one of the following:
 - To share this album, tap **Share**.
 - To share a single photo, tap it to display it, then tap it again and tap **Share**.
4. Choose how you want to share the link to the album or photo, such as sending it by email or posting it to your social networks.



You can also use the Dropbox app to share the link. Tap  that appears next to the album folder or photo, and then tap **Share**.

Sending the links to Dropbox files by email

No more attaching files to your email. Using the Mail app, you can easily include the links to your Dropbox files and send them in your email.



1. From the Home screen, tap  > **Mail**.
2. If you have several email accounts, switch to an email account you want to use.
3. Create a new email message and fill in your recipients, or reply to an email.
4. You can:
 - Tap **Attach** > **Document**, and then choose a document type.
 - Tap **Attach** > **File** if you want to choose any file type.

5. Tap **Dropbox**.
6. Open the folder that contains the files that you want, and then select the files you want to share.
7. Tap **Done**.
You'll then see the links to your selected files added to your email message.
8. Tap **Send**.

Keeping your documents in Dropbox

Saving an Office document to Dropbox

You can open an Office document on HTC Desire 200 and save it to your Dropbox.

1. Open an Office document, such as one that's attached to an email.
2. Tap  > **File** > **Save as**.
3. Enter a new filename.
4. Tap  > **Dropbox**.
5. Tap **Save**.



Your document will be saved to the Polaris Office folder in the root of your Dropbox folder.



To save the document to another Dropbox folder, tap  > **File** > **Share** > **Dropbox**. Create or select a folder, and then tap **Upload**.

Editing an Office document in Dropbox

You can edit a document that's stored in your Dropbox and save your changes.

1. From the Home screen, tap  > **Dropbox**.
2. Open the folder that contains the document you want.
3. Tap the document to open it.
4. To make changes, tap **Edit**.
5. After editing the document, tap  > **File**.
6. Save the document, or save it as a new file in Dropbox.

Checking your Dropbox storage space

You can check how much storage space you still have in your Dropbox before you upload more content.

F Before your Dropbox storage info appears in Settings, you need to access your Dropbox from an app first (such as Gallery) and allow HTC Sense to access your Dropbox.

Slide the Notifications panel open, and then tap  > **Storage**.

Under Online storage, you'll see your available Dropbox storage.

Unlinking HTC Desire 200 from Dropbox

You can remotely unlink HTC Desire 200 from your Dropbox, if you lost your device.

1. On your computer's web browser, log in to the Dropbox website (www.dropbox.com).
2. On the right-hand corner of any page on the website, click **Account**. (Or click your account name, and then click **Settings**.)
3. Click the **Security** tab.
4. Under My devices, click **Unlink** to the right of your Android device.
5. Click **Unlink phone**.

SkyDrive

About SkyDrive for HTC Sense



With SkyDrive® online storage, you can keep all your photos and documents in one place. You can access them anytime on HTC Desire 200, your computer, and your other mobile device where you have SkyDrive access.

You can:


- Use Gallery to upload your photos. You'll also be able to access your photos that are stored in your SkyDrive storage.
- No more large attachments when sharing by email. Simply send a link to your files that are stored in SkyDrive.
- Use Polaris Office to edit your Office documents that are stored in SkyDrive.
- Save documents from HTC Desire 200 directly to your SkyDrive storage.

Signing in to SkyDrive

To use SkyDrive as your online storage, sign in using your Microsoft account.


1. Slide the Notifications panel open, and then tap  > **Accounts & sync**.
2. Tap  > **SkyDrive for HTC Sense**.
3. Follow the onscreen instructions to sign in, or to create your Microsoft account first if you don't have one yet.

Uploading your photos to SkyDrive from Gallery

1. From the Home screen, tap  > **Gallery**.
2. Tap the album that contains the photos that you want.
3. Tap **Share** > **SkyDrive for HTC Sense**.
4. Select one or more photos you want to upload, and then tap **Next**.
5. Select a folder in SkyDrive, and then tap **Done**.

Sending the links to SkyDrive files by email

To share your files stored in SkyDrive by email, you don't need to download them and attach to your message. Using the Mail app, you can easily include the links to your SkyDrive files and send them in your email.




1. From the Home screen, tap  > **Mail**.
2. If you have several email accounts, switch to an email account you want to use.
3. Create a new email message and fill in your recipients, or reply to an email.
4. You can:
 - Tap **Attach** > **Document**, and then choose a document type.
 - Tap **Attach** > **File** if you want to choose any file type.
5. Tap **SkyDrive**.
6. Open the folder that contains the files that you want, and then select the files you want to share.
7. Tap **Done**.

You'll then see the links to your selected files added to your email message.
8. Tap **Send**.


Keeping your documents in SkyDrive

Saving an Office document to SkyDrive

Using Polaris Office, you can create or open a document and save it to your SkyDrive online storage.



1. From the Home screen, tap  > Polaris Office.
2. Create or open a document.
3. Tap  > File > Save as.
4. Enter a new filename.
5. Tap  > SkyDrive.
6. Tap Save.



After opening a document, you can also tap  > File > Share > SkyDrive for HTC Sense to upload the document to a SkyDrive folder.

Editing an Office document in SkyDrive

Using Polaris Office, you can view or edit a document that's stored in your SkyDrive storage.


1. From the Home screen, tap  > Polaris Office.
2. Tap SkyDrive.
3. Open the folder that contains the document you want to view or edit.
4. Tap the document to open it.
5. To make changes, tap **Edit**.
6. After editing the document, tap  > File.
7. Save the document, or save it as a new file in SkyDrive.

Travel and maps

Location settings

Turning location services on or off

In order to find your location on HTC Desire 200, you need to enable location sources.

1. Slide the Notifications panel open, and then tap  > **Location**.
2. Select or clear the location sources you want to turn on or off.

Google Maps

About Google Maps

Google Maps™ lets you track your current location, view real-time traffic situations, and receive detailed directions to your destination.

It also provides a search tool where you can locate places of interest or an address on a map, or view locations at street level.







- To find your location with Google Maps, you need to enable location sources.
- The Google Maps app does not cover every country or city.

Getting around maps

When you open Google Maps, you can easily find your location on the map or check out nearby places by panning and zooming in and out on the map.



To find your location with Google Maps, you need to enable location sources.



1. From the Home screen, tap  > **Maps**.
2. Tap  to show your current location. The blue marker  or  shows your current location on the map.

Checking the details of a location

1. Press and hold a location on the map. A balloon opens over the location, with the name of the location, a part of the address, and a thumbnail from Street View (if available).
2. Tap the balloon to see more information. You can get directions to the location, check for nearby places of interest, and more.

Searching for a location

In Google Maps, you can search for a location, such as an address or a type of business or establishment (for example, museums).


1. In Maps, tap .
2. Enter the place you want to search for in the search box.
3. Tap the **Enter** key on the keyboard to search for the location you entered or tap a suggested search item. The search results are displayed as markers on the map.
4. Do any of the following:
 - Tap a marker . A balloon then opens, showing the location's name. If that's what you're looking for, tap the balloon.
 - Tap **Results list** to show the search results as a list, and then tap the location.

Details about the selected location displays on the screen.

5. Tap the onscreen buttons to view the location on a map, get directions, view the location in Street View (if available), and more. Scroll down the screen to view more options.

Clearing the map

After searching on a map, you can clear away the various markers drawn on it.



Tap  > **Clear Map**.

Searching for a place of interest near you

Use Places to find places of interest near your current location. Places uses Google Maps to search common places that you would want to find, such as the nearest gas station or ATM kiosk.





Before using Places, you need to enable location sources.

1. From the Home screen, tap  > **Places**.
2. Tap the type of place you want to search, or tap  to enter what you're looking for. When several places are found, the search results appear as a list.
3. You can:
 - Tap **Map view** to see where these places are on the map.
 - From the search results list, tap a place to view more information.

Getting directions

Get detailed directions to your destination. Google Maps can provide directions for travel by foot, public transportation, or car.

1. While viewing a map, tap .
2. Do any of the following:
 - Use your current location as the starting point, or enter a location from where to start in the first text box. Then enter your destination in the second text box.
 - Tap  to select an address from your contacts or a point that you tap on a map.



If the place you've set as your destination has several locations available, choose which one to go to.

3. Choose how you want to get to your destination.




If you're taking public transportation, select your transit preferences.

4. Tap **Get directions**.



If driving or walking, tap **Directions list** to view the directions in a list. You can also tap the arrow buttons on the map to follow the directions.



When you're finished viewing or following the directions, tap  to reset the map. Your destination is automatically saved in the Google Maps history.

Finding your friends with Google Latitude (available by country)

Google Latitude® user location service lets you and your friends share locations and status messages with each other. It also lets you get directions to your friends' locations, send your location details by email, and more.

Your location is not shared automatically. You must join Latitude, and then invite your friends to view your location or accept their invitations. Only friends that you have explicitly invited or accepted can see your location.

Opening and joining Latitude

1. From the Home screen, tap  > **Maps**.
2. While viewing a map, tap  > **Join Latitude**.

You can access Latitude from Maps whenever you have an Internet connection. In Maps, tap  > **Latitude**.

Getting help

If you need help or have questions about Maps or Latitude, tap  > **Help** (or **More** > **Help**).

Essential apps

Using the Clock

About the HTC Clock widget

Use the HTC Clock widget to see your current date, time, and location. You can also use the Clock to show the time in another city.



Changing the location on the Clock widget

By default, the Clock widget displays your current weather. You can customize the Clock widget on your Home screen to show the weather of another location.

1. Press and hold the Clock widget and then drag it to the **Edit** button.
2. Choose a city.


If you don't see the city that you want, tap **+** to search for it and add it.



You can add more than one Clock widget to the extended Home screen.


About the Clock app

Get more from the Clock app than just the regular date and time. Use HTC Desire 200 as a world clock to see what time it is in cities across the globe. You can also set alarms or track your time using the stopwatch or timer.


 
To open the Clock app, tap  from the Home screen, and then tap **Clock**. Tap the tabs on the bottom row or slide your finger across the tabs to switch between the different functions.

World Clock settings


Setting your home city

1. On the World Clock tab, tap  > Home settings.
2. Enter your home city's name.
3. Scroll through the list and tap your home city.

Setting the date and time manually


1. From the Home screen, tap  > Clock.
2. On the World Clock tab, tap  > Local time settings.
3. Clear **Automatic date & time** and **Automatic time zone**, and then set the time zone, date, and time as required.

Adding a city to the World Clock screen


1. On the World Clock tab, tap .
2. Enter the city name you want to add.
3. Scroll through the list and tap the city that you want to add.

Setting an alarm


You can set up one or more alarms.

1. From the Home screen, tap  > Clock.
2. On the Alarms tab, select the check button of an alarm and then tap that alarm.
3. Under Set alarm, use the scroll wheels to set the alarm time.
4. If you want the alarm for multiple days, tap **Repeat**.
5. Tap **Done**.





- To turn off an alarm, clear the check button of that alarm.
- If you need to set more than three alarms, tap .

Deleting an alarm

1. On the Alarms tab, tap .
2. Select the alarms you want to delete and then tap **Delete**.

Checking Weather


Use the Weather app and widget to check the current weather and weather forecasts for the next few days. In addition to your current location, you can view weather forecasts for other cities around the globe.

1. From the Home screen, tap  > **Weather**. The options for hourly and four-day forecasts are displayed.
2. While viewing forecasts, you can:
 - Swipe your finger up or down the screen to check the weather in other cities.
 - Tap  to update the weather information at any time.



Your settings in the Weather app also control the weather information that is shown in the Clock and Calendar.

Adding a city to the Weather screen


Add more cities to the Weather screen so you can instantly check the weather forecasts in these cities. In addition to your current location, the Weather screen can display up to fifteen cities.

1. On the Weather screen, tap .
2. Enter the location you want to add.
3. Tap the city that you want.

Changing the order of cities on the Weather screen

1. On the Weather screen, tap  > **Edit**.
2. Press and hold  at the end of the item you want to move, and then drag it to its new position.
3. Tap **Done**.

Deleting cities from the Weather screen


1. On the Weather screen, tap  > **Edit**.
2. Select the cities you want to remove, and then tap **Done**.

Working on documents

Use Polaris Office to edit Microsoft Office Word (.doc and .docx), Microsoft Office Excel (.xls and .xlsx), Microsoft Office PowerPoint (.ppt and .pptx), and plain text (.txt) files while on the go.




You can also view Microsoft Office PowerPoint Shows (.pps).

From the Home screen, tap  > Polaris Office.



Viewing a document

On the Polaris Office main screen, browse to the file that you want and open it.




While viewing the file list, tap  to refresh or sort the list.


Creating a document

1. On the Polaris Office main screen, tap .
2. Choose a file type to create.
3. Start entering text.
4. Press , and then tap **Save**.

Editing a document



1. On the Polaris Office main screen, browse to the file that you want to edit and open it.
2. Do any of the following:
 - If your file is a Microsoft Office Word, a Microsoft Office PowerPoint, or a plain text document, tap .
 - If your file is a Microsoft Office Excel document, tap a cell and then enter your changes in the text box.
3. Slide across the toolbar at the bottom to choose from different editing functions.







If you don't see the toolbar, tap  > **Toolbar on**.





4. When done making your changes, press  and then tap either **Save** or **Save as**.

Editing a presentation

1. With the Microsoft Office PowerPoint document opened, tap .
2. Tap  to show the other slides and tap the slide that you want to edit.

3. Do any of the following:
 - To add another slide, tap  and then choose a layout.
 - To edit text, tap a text box on the presentation twice.
 - To resize an image or a text box, tap it and then drag .
 - Use the tool bar at the bottom to continue editing the presentation.
4. Tap  to preview the presentation.
5. Press  and tap **Save** or **Save As**.


Editing a worksheet

1. With the Microsoft Excel file opened, tap a cell on the worksheet.
2. Do any of the following:
 - Tap the formula bar and enter text, figures, or symbols.
 - To enter a function, tap *fx*.
 - To select multiple cells, tap a cell and then drag .
 - To change the format of the text or numerical value, tap a cell and then tap  > **Format**.
 - To insert a graph, select the information that you want to include in the chart and then tap  > **Insert** > **Chart**.
 - Use the tool bar at the bottom of the screen to continue editing the worksheet.
3. Press  and tap **Save** or **Save As**.

Keeping track of your tasks

Use the Tasks app to organize and track to do and task lists. Create tasks on your phone or sync them with your Google and Microsoft Exchange ActiveSync accounts. You can also see your tasks in Calendar.


To open the Tasks app, tap  > **Tasks**.


To switch between your task accounts, tap  and then tap another account.

Creating a task

1. In the Tasks app, enter the task name in the New task text box.



If you want to create a task and enter the details later, tap  after you've entered the task name.


2. Tap  and then enter the task details.
3. Tap **Save**.

Linking a task to a contact

Helping friends out on a project or event? Link a task to a contact in the People app so that when your friend calls, the task will appear on the screen. You can also filter tasks to show what tasks are associated to a specific contact.



Only tasks under My Task can be linked to a contact.



1. While entering the details of the task, tap the text box under People, and enter a name.
2. If you want to link the task to a contact in the People app, tap .
3. Select the contact, and then tap **Save**.
4. Fill in the rest of the details, and then tap **Save**.

Linking a task to a location




 
Link tasks to a location so that the next time you are in an area, you can check which errands you can do along the way.



You can only link a location to tasks created under My Tasks.



1. While entering the details of the task, tap the text box under Location and enter a location.
2. To specify an area in the map, tap .
3. Move  to an area.
4. Tap **Done**.
5. Enter a name for the location and tap **OK**.
6. Fill in the rest of the details, and then tap **Save**.

The task is plotted on a map with other tasks linked to locations.

- To view these tasks on a map, tap  on the Tasks main screen. Pan across the map until  (location indicator) appears. The location indicator shows how many tasks are linked to that location.
- To view the details of the task, tap .
- To view your location on the map, tap  > **Locate me**.

Managing tasks

1. Go to the list that contains the task.
2. In the list of tasks, you can:

Mark a task complete	Tap the check button next to the task. To view completed tasks, tap  > Completed .
Sort tasks	<ol style="list-style-type: none"> 1. Tap  > Sort. 2. Select how you want to sort the tasks.
Edit a task	<ol style="list-style-type: none"> 1. Press and hold the task that you want to edit, and then tap Edit. 2. Edit the task details, and then tap Save.
Delete a task	Press and hold the task that you want to delete, and then tap Delete .
Postpone a task	<ol style="list-style-type: none"> 1. Press and hold an overdue task, and then tap Postpone. 2. Choose how long you want to postpone the task.
Move a task to another list	<p>You can only move the task to another list that is under the same account.</p> <ol style="list-style-type: none"> 1. Press and hold the task that you want to move, and then tap Move to. 2. Tap the task list where you want the task to appear.

Viewing the unified task list


You can view and update a unified list of tasks. Tasks are color coded so you can easily distinguish which accounts they belong to.

In the Tasks app, tap  > **All accounts**.





If you want to view tasks that are stored in HTC Desire 200 , tap **My task**.

Filtering tasks

1. Go to the list that contains the tasks that you want to filter.
2. Tap .
3. From the list, choose how you want to filter the tasks.

Creating a task list


1. In the Tasks app, tap  > Lists.
2. Tap , and then choose an account for the list.



Lists can't be created for Microsoft Exchange ActiveSync accounts.


3. Enter a name for the list, and then tap OK.

Managing task lists



1. In the Tasks app, tap  > Lists.
2. From here, you can:

Show or hide tasks or lists	To show all tasks, tap All lists . Tap a specific account and then tap the list that you want to show. Tap All lists under each account to show all the tasks under that account.
Rename a list	<ol style="list-style-type: none"> 1. Tap an account, and then press and hold the list that you want to rename. 2. Tap Rename, and then enter a new name for it.
Delete a list	<ol style="list-style-type: none"> 1. Tap an account, and then press and hold the list that you want to delete. 2. Tap Delete. (You cannot delete a main list.)

Backing up or restoring tasks

1. Go to the list that contains the tasks you want to back up.
2. Tap  > Import/Export
3. Tap **Export to storage card** to back up your tasks, or tap **Import from storage card** to restore tasks on your phone.

Changing Tasks settings

1. In the Tasks app, tap  > Settings
2. Change the settings and press .

Google Play and other apps

Getting apps from Google Play

Google Play is the place to go to find new apps for HTC Desire 200. Choose from a wide variety of free and paid apps ranging from productivity apps, entertainment, to games.




- A Google Wallet™ payment service is required to purchase a paid app. You will be asked to confirm method of payment when you purchase an app.
- The name of the Play Store app may differ depending on your region.
- The ability to purchase apps varies by region.

Finding and installing an app

When you install apps and use them on HTC Desire 200, they may require access to your personal information or access to certain functions or settings. Download and install only apps that you trust.



Be cautious when downloading apps that have access to functions or a significant amount of your data on HTC Desire 200. You're responsible for the results of using downloaded apps.

1. From the Home screen, tap  > **Play Store**.
2. Browse or search for an app.
3. When you find the app that you like, tap it and read its description and user reviews.
4. To download or purchase the app, tap **Install** (for free apps) or the price button (for paid apps).
5. Tap **Accept & download** or **Accept & buy**.





Apps sometimes get updated with improvements or bug fixes. To automatically download app updates, tap **Allow automatic updating**.

To open the app, go to the All apps view and tap the app.

Uninstalling an app



You can uninstall an app for a refund within a limited time after your purchase. To know more about the refund policy for paid apps, please visit the Google Play Help site (<http://support.google.com/googleplay/>).


1. From the Home screen, tap  > **Play Store**.
2. Tap  > **My Apps**.
3. Tap the app you want to uninstall, and then tap **Uninstall**.

Getting help

If you need help or have questions about Google Play, tap  > **Help**.


Watching videos on YouTube

Use the YouTube app to check out what's popular on the online video-sharing website.



1. From the Home screen, tap  > **YouTube**.
2. Scroll through the list of videos, and then tap a video to watch it.
3. While watching a video, you can:
 - Tap the video screen to pause, resume playback, or drag the slider to jump to a different part of the video.
 - Tap a tab to learn more about the video, see related videos, or check out what other viewers think. You can also slide your finger across the tabs to see if there are more items available.

Tap the **YouTube** icon to return to the main screen.

Searching for videos

1. On the YouTube main screen, tap .
2. In the search box, enter the words you want to search for. As you type, matching items are shown as a list.
3. If what you're searching for is in the list of suggestions, tap the item.




Tap  to enter it in the search box. New suggestions appear and you can enter more text or tap  beside a subsequent suggestion to quickly refine your search.

4. Scroll through the results and tap a video to watch it.




You also have the option to show results that were just recently posted. Tap **All time**, and then select a time period you want.





Clearing the search history

1. On the YouTube main screen, tap  > **Settings**.
2. Tap **Search** > **Clear search history**.

Sharing a video link



1. On the video's watch screen, tap .
2. Choose how you want to share the video link from the available options.

Capturing and sharing videos on YouTube

1. On the YouTube main screen, tap  > **Record**.
2. Tap  to start capturing video.
3. When you're finished capturing, tap , and then tap .
4. Enter a title and description for your video, set the privacy level, and add tags or location information.
5. Tap **Upload**.


Recording voice clips

Use Voice Recorder to capture information during lectures, interviews, or even to create your own audio log.

1. From the Home screen, tap  > **Voice Recorder**.
2. Hold the microphone near the sound source.
3. Tap  to start recording a voice clip.




Voice Recorder can run in the background while you do other things on HTC Desire 200, except when you open other apps that also use audio functions.


4. Tap  to stop recording.
5. Type a name for the voice clip and tap **Save**.

To play back the voice clip, tap .



To show options for deleting or renaming the voice clip, tap .

Setting a voice clip as a ringtone



1. On the Voice Recorder screen, tap .
2. Press and hold the voice clip you want to set as a ringtone, and then tap **Set as ringtone**.

Sharing games and apps

Having fun with a game or app that you found from Google Play? Share your favorite games and apps instantly with your circle of friends.



For your friends to link to the app and download it from Google Play, they must be using an Android device.

1. From the Home screen, tap .
2. Tap  > **Share**.
3. Tap an app, and then choose how to share it.

Your phone and computer

Where apps, data, and files are stored

HTC Desire 200 uses these storage types:

Apps and data storage	<p>Apps are installed to this storage, labeled as Internal storage in your phone settings. It also stores data such as your text messages, contacts you created or synchronized to your phone, account settings, and more.</p> <p>When you connect your phone to your computer, this storage is not accessible from your computer.</p> <p>Storage contents will be erased when you do a factory reset. Make sure to back up your data before starting a factory reset. Some apps allow you to back up to your storage card, such as People.</p>
Camera storage	<p>This is another built-in storage, labeled as Phone storage in your phone settings. This is the default storage for your camera shots.</p> <p>When you connect your phone to your computer, this storage is accessible and you can copy files between them.</p> <p>When you do a factory reset, you can choose whether to keep or erase the storage contents.</p>
Storage card	<p>You can store your files such as photos, music, and videos to this removable storage.</p> <p>When you connect your phone to your computer, this storage is accessible and you can copy files between them.</p>
Online storage	<p>If you're using an online storage account that's accessible from HTC Desire 200, you can store your files to your online storage.</p>

Connecting HTC Desire 200 to a computer

Whenever you connect HTC Desire 200 to a computer using the USB cable, the Choose a connection type screen opens and lets you choose the type of USB connection.

Select one of the following choices:

Charge only	Select this option if you only want to charge the battery while connected to your computer.
Disk drive	Select this mode when you want to copy files between the storage card or phone storage and your computer.

HTC Sync Manager	Select this option to sync media and your data such as contacts, calendar, bookmarks, and other information between your computer and HTC Desire 200. Download and install HTC Sync Manager from our website.
USB tethering	When you do not have an Internet connection on your computer, you can select this mode to share the mobile data connection of HTC Desire 200 with your computer.
Internet pass-through	If you don't have a data plan or you don't have access to a Wi-Fi network, you can select this mode to share your computer's Internet connection with HTC Desire 200.

Copying files to or from the phone storage or storage card

You can copy your music, photos, and other files to HTC Desire 200.

1. Connect HTC Desire 200 to your computer using the supplied USB cable.
2. On the Choose a connection type screen, select **Disk drive**, and then tap **Done**. Your computer recognizes accessible storages on HTC Desire 200 as removable disks.
3. Navigate to either the phone storage or storage card.
4. Copy the files from your computer to any of the removable disks, or vice versa.
5. After copying the files, unmount the removable disks (on the connected HTC Desire 200) as required by your computer's operating system to safely disconnect HTC Desire 200.

If you want to keep HTC Desire 200 connected to the computer but want it to be able to access the phone storage or storage card, open the Notifications panel, tap **Disk drive**, select an option except **Disk drive**, and then tap **Done**.

Sharing your mobile data connection by USB tethering

No Internet connection available for your computer? No problem. Use the data connection of HTC Desire 200 to connect to the Internet.



- Make sure your SIM card is inserted on HTC Desire 200.
- Install HTC Sync Manager on your computer first.
- You may need to have USB tethering added to your data plan, and it may incur additional cost. Contact your mobile service provider for details.

1. On HTC Desire 200, turn on **Mobile network** in the settings.
2. Connect HTC Desire 200 to your computer using the provided USB cable.
3. On the Choose a connection type screen, select **USB tethering**, and then tap **Done**.

Connecting to the Internet through a computer

If you temporarily don't have Internet access, you can still go online by using your computer's Internet connection.



Be sure to install HTC Sync Manager on your computer first.

1. Make sure your computer is connected to the Internet.



Two things to check for your computer's Internet connection. One, you may need to turn off your local network's firewall. Two, if your computer connects to the Internet via PPP (e.g. Dial UP, xDSL, or VPN), Internet Pass-through will only support TCP protocol.

2. Connect HTC Desire 200 to the computer using the provided USB cable.
3. On the Choose a connection type screen, select **Internet pass-through**, and then tap **Done**.

HTC Sync Manager

Syncing your media and data with HTC Sync Manager

With HTC Sync Manager, enjoy the same rich media whether you're at your computer or on the move. Use it also to store your same contacts, important documents, and other data on both your HTC phone and your computer.

HTC Sync Manager supports both Windows and Mac®. You can:

- Import music, photos, and videos from your computer and manage them in HTC Sync Manager.
- Import iTunes® and Windows Media® Player playlists from your computer to HTC Sync Manager.
- Play music, videos, and playlists using the built-in player.
- Copy music, photos, and videos from your phone to your computer.
- Sync playlists and information such as contacts, calendar, documents, and web bookmarks between your phone and your computer.
- Easily transfer iPhone® photos, videos, messages, contacts, and more to your HTC phone.
- Browse and manage files on your phone (Mac only).

Installing HTC Sync Manager on your computer




- You need to have administrator rights if you're installing HTC Sync Manager on Windows Vista® or later versions.
- If you have problem in installing HTC Sync Manager, close all your running programs and reinstall. If the problem persists, temporarily disable your anti-virus program and try installing again.

1. Download the HTC Sync Manager installer from the HTC support site (www.htc.com/support).
2. Launch the installer and follow the onscreen instructions.

3. Connect your phone to your computer using the supplied USB cable.
4. On the Choose a connection type screen, select **HTC Sync Manager**, and then tap **Done**. HTC Sync Manager opens.



To check for and download new updates, click  > **Check for updates** in HTC Sync Manager.



If you disabled your anti-virus program, make sure to turn it back on after installing HTC Sync Manager.

Transferring iPhone content to your HTC phone

With HTC Sync Manager, easily transfer iPhone content such as contacts, messages, wallpaper, camera photos and videos, and more to your HTC phone.



You need to use iTunes 9.0 or later to back up your iPhone content first to your computer.

1. Connect your iPhone and your HTC phone to your computer.
2. In HTC Sync Manager, click **More > TRANSFER**.
3. Click the **Get Started** button.
4. If you haven't used iTunes to back up your iPhone content to your computer, please do so before proceeding.
5. Click **Next**.
6. Select your iPhone backup file, and then click **OK**.
7. Select the types of content you want to transfer to your HTC phone.




You can choose whether to replace the content on your HTC phone with the iPhone content.

8. Click **Start**.

Copying or removing media on your phone

Easily copy music, photos, videos, entire albums, or playlists from your computer to your phone.

1. Connect your phone to your computer.
2. On the Choose a connection type screen, select **HTC Sync Manager**, and then tap **Done**.

In HTC Sync Manager, media that have already been copied to your phone will have the  icon on their thumbnails.

3. Click a thumbnail to select it. Or, select several media for transfer.
4. Click one of these icons:



Copy the selected media to your phone.



Remove the selected media from your phone.

Syncing data between your phone and your computer

Set up HTC Sync Manager to sync contacts, calendar events, and web bookmarks between your phone and your Windows or Mac computer.


You can sync your phone with the following applications on your computer:

- (On Windows) Outlook 2003, Outlook 2007, or Outlook 2010.
- (On Mac) Apple® Contacts, Apple Address Book, Apple Calendar, Apple iCal, or Outlook 2011 for Mac.
- Web browser such as Internet Explorer®, Firefox®, or Google Chrome. If you'll be syncing with Firefox or Google Chrome, close the browser first before syncing.

1. Connect your phone to your computer.
2. On the Choose a connection type screen, select **HTC Sync Manager**, and then tap **Done**.
3. In HTC Sync Manager, click **More**.
4. Select the check buttons of the data types you want to sync.

- Click **Settings** on the different data types to customize sync settings.

People	<ul style="list-style-type: none"> Choose the contacts application on your computer that you want to sync with your phone. If there's conflicting contact info on your phone and your computer, choose which data you want to keep.
Calendar	<ul style="list-style-type: none"> Choose the calendar application on your computer that you want to sync with your phone. Choose from when you want to start syncing calendar events. If there are conflicting appointments on your phone and your computer, choose which data you want to keep.
Bookmark	Choose the web browser on your computer that you want to sync with your phone.

- Click  if this is your first time to sync. To allow HTC Sync Manager to auto sync your data and files (such as documents and media) next time, click **More > SYNC SETTINGS**, and then select **Sync automatically whenever the phone connects**.



- Only the contact and calendar fields that are available on your phone will be synced.
- When you sync bookmarks for the first time, a favorites folder named HTC bookmarks will be created on your computer's web browser. This folder contains the bookmarks from your phone. If you have bookmarks on your computer that you want to sync with your phone, make sure to save them in the HTC bookmarks folder.

If there are conflicting bookmarks on your phone and your computer, HTC Sync Manager always keeps the bookmarks from your computer.

Syncing music, photos, and videos from your phone to your computer

Set HTC Sync Manager to import all music, photos, and videos from your phone to your computer.

- Connect your phone to your computer.
- On the Choose a connection type screen, select **HTC Sync Manager**, and then tap **Done**.

3. Do any of the following:
 - To copy music from your phone to your computer, click **Music > SETTINGS**, and then select **Copy all music from phone**.
 - To copy photos and videos from your phone to your computer, click **Gallery > SETTINGS**, and then select **Automatically import photos and videos from phone**.



Select **Delete photos and videos from phone after importing** if you want to remove the photos and videos from your phone after the transfer.

4. Click **Apply** (Windows only).
5. Click if this is your first time to sync. To allow HTC Sync Manager to auto sync your media and other items (such as documents and data) next time, click **More > SYNC SETTINGS**, and then select **Sync automatically whenever the phone connects**.


Syncing playlists between your phone and your computer

Set HTC Sync Manager to sync iTunes and Windows Media Player playlists between your phone and your computer.

1. Connect your phone to your computer.
2. On the Choose a connection type screen, select **HTC Sync Manager**, and then tap **Done**.
3. Click **Music > SETTINGS**, and then select **Sync selected playlist**.
4. Select the playlists you want to sync.
5. Click **Apply** (Windows only).
6. Click if this is your first time to sync. To allow HTC Sync Manager to auto sync your playlists and other items (such as documents, media files, and data) next time, click **More > SYNC SETTINGS**, and then select **Sync automatically whenever the phone connects**.

Syncing documents from your computer to your phone


1. Connect your phone to your computer.
2. On the Choose a connection type screen, select **HTC Sync Manager**, and then tap **Done**.
3. In HTC Sync Manager, click **Files > SYNC SETTINGS**.
4. Select the **Sync documents** option.

5. Click **Add**, and then choose the folder that contains the documents you want to sync to your phone. You can add several folders.
6. Click  if this is your first time to sync. To allow HTC Sync Manager to auto sync your documents and other items next time, click **More > SYNC SETTINGS**, and then select **Sync automatically whenever the phone connects**.

Getting help

To find out more about using HTC Sync Manager, download the user guide PDF from the HTC support site (www.htc.com/support). Or open the Help that comes with the software.




On Windows, click  in HTC Sync Manager, and then click **Help**.

Internet connections

Data connection


When you turn on HTC Desire 200 for the first time, it will be automatically set up to use your mobile operator's data connection (if the SIM card is inserted).

Checking the data connection you're using

1. Slide the Notifications panel open, and then tap .
2. Tap **Mobile network** > **Network operators** or **Access Point Names**.

Turning the data connection on or off

Turning your data connection off saves battery life and money on data charges.

1. Slide the Notifications panel open, and then tap .
2. Tap the Mobile network **On/Off** switch to turn the data connection on and off.






If you don't have the data connection turned on and you're also not connected to a Wi-Fi network, you won't receive automatic updates to your email, social network accounts, and other synchronized information.

Adding a new access point



Before you add another data connection, have the access point name and settings from your mobile operator ready (including username and password if required).


1. Slide the Notifications panel open, and then tap .
2. Tap **Mobile network** > **Access Point Names**.
3. On the APNs screen, tap  > **New APN**.
4. On the Edit access point screen, enter the APN settings. Tap an APN setting item to edit it.
5. Tap  > **Save**.

Enabling data roaming

Connect to your mobile operator's partner networks and access data services when you're out of your mobile operator's coverage area.



Using data services while roaming may be costly. Check with your mobile operator for data roaming rates before you use data roaming.

1. Slide the Notifications panel open, and then tap .
2. Tap **Mobile network**, and then select the **Data roaming** option.

Select the **Data roaming sound** option if you'd like HTC Desire 200 to play a sound so you'll know when it's connecting to a roaming network.

Managing your data usage

If you're on a limited data allowance, it's important to keep track of the activities and apps that usually send and receive data, such as browsing the web, syncing online accounts, and sending email or sharing status updates.

Here are some other examples:

- Streaming web videos and music
- Tuning in to Internet radio
- Playing online games
- Downloading apps, maps, and files
- Refreshing apps to update info and feeds
- Uploading and backing up your files to your online storage account
- Using HTC Desire 200 as a Wi-Fi Hotspot
- Sharing your mobile data connection by USB tethering


To help you save on data usage, connect to a Wi-Fi network whenever possible and set your online accounts and emails to sync less frequently.

Keeping track of your data usage

Monitor your data usage to help prevent going over your monthly data allowance.




Data usage measured by HTC Desire 200 may differ from, and be less than, your actual data usage.

1. Slide the Notifications panel open, and then tap .
2. Under **Wireless & Networks**, tap **More**.
3. Tap **Usage**.

4. On the Mobile tab, select **Limit mobile data usage** to automatically disable your data connection when you reach the set limit.
Then, drag the upper LIMIT line to set your monthly data limit.
5. Drag the lower ALERT line to set an alert before you reach your monthly data limit.
6. Tap **Reset data usage**, and then set the day of the month when your usage cycle resets. This date is usually the start of your monthly billing cycle.
7. Drag the vertical line markers to see how much data you've used during a particular time interval.

Viewing the data usage of apps

1. Slide the Notifications panel open, and then tap .
2. Under Wireless & Networks, tap **More**.
3. Tap **Usage**.
4. On the Mobile tab, drag the vertical line markers to see how much data you've used during a particular time interval.
5. Scroll down the screen to see a list of apps and their data usage info.
6. Tap an app to see more details.


Wi-Fi

To use Wi-Fi, you need access to a wireless access point or “hotspot”.



The availability and strength of a Wi-Fi signal varies depending on objects the Wi-Fi signal has to pass through (such as buildings or a wall between rooms).

Turning Wi-Fi on and connecting to a wireless network

1. Slide the Notifications panel open, and then tap .
2. Tap the Wi-Fi **On/Off** switch to turn Wi-Fi on.

3. Tap **Wi-Fi**.

Detected Wi-Fi networks will be listed.




If the wireless network that you want is not listed, tap **⋮** > **Add network** to manually add it.

4. Tap the Wi-Fi network you want to connect to.



If you selected a secured network, you'll be asked to enter the network key or password.


5. Tap **Connect**.

When HTC Desire 200 is connected to the wireless network, the Wi-Fi icon  appears in the status bar and tells you the approximate signal strength.

The next time HTC Desire 200 connects to a previously accessed secured wireless network, you won't be asked to enter the key or other security information again, unless you reset HTC Desire 200 to its factory default settings.

Connecting to a Wi-Fi network via WPS


If you're using a Wi-Fi router with Wi-Fi Protected Setup (WPS), you can connect HTC Desire 200 easily.

1. Slide the Notifications panel open, and then tap .
2. Tap the **Wi-Fi On/Off** switch to turn Wi-Fi on.
3. Tap **Wi-Fi**.
4. Tap **⋮** > **WPS Push**, and then press the WPS button on your Wi-Fi router.




To use the Wi-Fi Protected Setup (WPS) PIN method, tap **⋮** > **WPS Pin Entry**.


Disconnecting from the current wireless network

1. Slide the Notifications panel open, and then tap .
2. Tap **Wi-Fi**.
3. You can:
 - Tap the wireless network that HTC Desire 200 is connected to, and then tap **Disconnect**.
 - If you want to remove the settings for this network, press and hold the network name, and then tap **Forget network**.

Connecting to a different Wi-Fi network

1. Slide the Notifications panel open, and then tap .
2. Tap **Wi-Fi**. Detected Wi-Fi networks are displayed.



To manually scan for available Wi-Fi networks, tap  > **Scan**.




3. Tap a Wi-Fi network to connect to it.

Logging into a public Wi-Fi network automatically (WISPr)

You can set HTC Desire 200 to automatically log into a public Wi-Fi network that you regularly use. This saves you the trouble of going through the Wi-Fi provider's web authentication every time you connect to their Wi-Fi network. Just add your login credentials to the WISPr (Wireless Internet Service Provider roaming) settings.



The access point of the Wi-Fi network needs to support the WISPr web portal. Consult the Wi-Fi provider for details.

1. Slide the Notifications panel open, and then tap .
2. Tap **Wi-Fi**.
3. Tap  > **Advanced**.
4. Under WISPr settings, select the **Auto login** option.
5. Tap **WISPr account settings** > **Add a new account**.
6. Tap each item onscreen to enter the service provider name, your login name (with the full domain name), and password.
7. Tap  > **Save**
8. Turn Wi-Fi on, and then connect to the public Wi-Fi network.




- If you have access to several public Wi-Fi networks, you can add up to five sets of login credentials to the WISPr accounts list.
- In the WISPr accounts list, press and hold an account to remove or edit it.

Connecting to a Wi-Fi network using enhanced security



You may need to install a network certificate (*.p12) to HTC Desire 200 before you can connect to a Wi-Fi network with EAP-TLS authentication protocol.

1. Save the certificate file to the root folder of the storage card.
2. Slide the Notifications panel open, and then tap  > **Security**.
3. Tap **Install from storage card**.

4. Select the network certificate needed to connect to the EAP-TLS network.
5. Turn on Wi-Fi and connect to a wireless network.

Connecting to a virtual private network (VPN)

Add virtual private networks (VPNs) so you can connect and access resources inside a secured local network, such as your corporate network.

Before you can connect to your organization's local network, you may be asked to:


- Install security certificates
- Enter your login credentials
- Download and install a required VPN app on HTC Desire 200

Contact your network administrator for details. Also, HTC Desire 200 must first establish a Wi-Fi or data connection before you can start a VPN connection.

Adding a VPN connection





You must first set a lock screen PIN or password before you can use credential storage and set up the VPN.

1. Slide the Notifications panel open, and then tap .
2. Under Wireless & Networks, tap **More**.
3. Tap **VPN > Add VPN network**.
4. Enter the VPN settings and set them up according to the security details your network administrator gave you.
5. Tap **Save**.

The VPN is then added to the VPNs section of the VPN settings screen.

Connecting to a VPN

1. Slide the Notifications panel open, and then tap .
2. Under Wireless & Networks, tap **More**.
3. Tap **VPN**.
4. Tap the VPN that you want to connect to.
5. Enter your log in credentials, and then tap **Connect**. When you're connected, the VPN connected icon  appears in the notification area of the status bar.

You can then open the web browser to access resources such as your corporate network intranet.

Disconnecting from a VPN


1. Slide the Notifications panel open.
2. Tap the VPN connection to return to the VPN settings screen, and then tap the VPN connection to disconnect from it.

Using HTC Desire 200 as a wireless router

Share your data connection with other devices by turning HTC Desire 200 into a wireless router.




- Make sure the data connection is turned on.
- You must have an approved data plan associated with your account from your mobile service provider to use this service.

1. Slide the Notifications panel open, and then tap .
2. Under Wireless & Networks, tap **More**.
3. Tap **Portable hotspot & tethering**.
4. Tap **Portable Wi-Fi hotspot settings**.
5. Enter a router name or use the default router name.
6. Choose the type of security and set the password (key) for your wireless router. If you selected **None** in Security, you don't need to enter a password.



The password is the key other people need to enter on their device so they can connect and use HTC Desire 200 as a wireless router.

7. Select the **Portable Wi-Fi Hotspot** option to turn on the wireless router.

HTC Desire 200 is ready to be used as a wireless router when you see  on the status bar.




To help minimize security risks, use the default security settings and set a secure and unique password.

Bluetooth

Bluetooth basics

Turning Bluetooth on or off



1. Slide the Notifications panel open, and then tap .
2. Tap the Bluetooth **On/Off** switch to turn it on and off.



Turn off Bluetooth when not in use to save battery power, or in places where using a wireless device is prohibited, such as on board an aircraft and in hospitals.

Changing the device name

The device name identifies HTC Desire 200 to other devices.


1. Slide the Notifications panel open, and then tap .
2. If Bluetooth is off, tap the Bluetooth **On/Off** switch to turn it on.
3. Tap **Bluetooth**. The Bluetooth screen opens.
4. Tap , and then tap **Rename phone**.
5. Enter the new name for HTC Desire 200 in the dialog box, and then tap **Rename**.


Connecting a Bluetooth headset

You can listen to music over a Bluetooth stereo headset, or have hands-free conversations using a compatible Bluetooth headset.




- To listen to music with your headset, the headset must support the A2DP Bluetooth profile.
- Before you connect your headset, make it discoverable so HTC Desire 200 can find it. Refer to your headset manual for details.

1. Slide the Notifications panel open, and then tap .
2. If Bluetooth is off, tap the Bluetooth **On/Off** switch to turn it on.

3. Tap **Bluetooth**. The Bluetooth screen opens.
4. If you don't see your headset listed, tap  and then tap **Scan** to refresh the list.
5. When you see the name of your headset in the Available Devices section, tap the name. HTC Desire 200 pairs with the headset and the headset connection status is displayed in the Paired Devices section.



If automatic pairing fails, enter the passcode supplied with your headset.

When the Bluetooth headset is connected to HTC Desire 200, the Bluetooth connected icon  is displayed in the status bar.


Reconnecting a Bluetooth headset

Normally, you can easily reconnect your headset by switching on Bluetooth on HTC Desire 200, and then turning on the headset.

However, you might have to connect manually if your headset has been used with another Bluetooth device.




Make sure that the headset is discoverable. Refer to the headset manual for details.

1. Slide the Notifications panel open, and then tap .
2. If Bluetooth is off, tap the Bluetooth **On/Off** switch to turn it on.
3. Tap **Bluetooth**. The Bluetooth screen opens.
4. Tap the headset's name in the Paired Devices section.
5. If prompted to enter a passcode, try 0000 or 1234, or consult the headset documentation to find the passcode.

If you still cannot reconnect to the headset, follow the instructions in [Unpairing from a Bluetooth device](#) on page 134, and then follow the steps under [Connecting a Bluetooth headset](#) on page 132.

Disconnecting or unpairing from a Bluetooth device



Disconnecting a Bluetooth device

1. Slide the Notifications panel open, and then tap .
2. Tap **Bluetooth**. The Bluetooth screen opens.
3. In the Paired devices section, tap the name of the device to disconnect.
4. Tap OK.



Tap the name of the device to reconnect it.

Unpairing from a Bluetooth device

1. Slide the Notifications panel open, and then tap .
2. If Bluetooth is off, tap the Bluetooth **On/Off** switch to turn it on.
3. Tap **Bluetooth**. The Bluetooth screen opens.
4. In the Paired devices section, tap  next to the device to unpair.
5. Tap **Unpair**.


Sending information using Bluetooth



Before you begin, set the receiving device to discoverable mode. You may also need to set it to “Receive Beams” or “Receive Files”. Refer to the device’s documentation for instructions on receiving information over Bluetooth.


 


1. On HTC Desire 200, open the app that contains the information or file you want to send.
2. Follow the steps for the type of item you want to send:

Contact

1. In the People app, tap a contact to view the contact’s details.
2. Tap  and then tap **Send contact**.
3. Tap the down arrow icon, and then select **Bluetooth**.

Calendar appointment or event

In Day view, Agenda view, or Week view, press and hold the event, and then tap **Forward > Bluetooth**.

Photos or videos	<ol style="list-style-type: none"> 1. In the Gallery app, choose an album. 2. Tap Share > Bluetooth.
Captured photo or video	After capturing, on the Camera preview screen, tap  > Bluetooth . (Note that you must have first set a review duration in Camera settings.)
Music track	With the track displayed on the Music app's Now playing screen, tap  > Share > Share file > Bluetooth .
Voice recording	In Voice Recorder list view, press and hold a voice clip, and then tap Share > Bluetooth .
Browser	<ul style="list-style-type: none"> ▪ On a webpage you want to share, tap  > Share > Bluetooth. ▪ While viewing a webpage in Read mode, tap  > Bluetooth.

3. Turn Bluetooth on and pair with the receiving device, if you're asked to do so.
4. On the receiving device, accept the file.

Where sent information is saved

When you send information using Bluetooth, the location where it's saved depends on the type of information and the receiving device.

If you send a calendar event or contact, it is normally added directly to the corresponding application on the receiving device.

If you send another file type to a Windows computer, it is normally saved in the Bluetooth Exchange folder within your personal document folders.

- On Windows XP, the path may be: `C:\Documents and Settings\[your username]\My Documents\Bluetooth Exchange`
- On Windows Vista, the path may be: `C:\Users\[your username]\Documents`
- On Windows 7, the path may be: `C:\Users\[your username]\Documents\Bluetooth Exchange Folder`
- On Windows 8, the path may be: `C:\Users\[your username]\Documents`


If you send a file to another device, the saved location may depend on the file type. For example, if you send an image file to another mobile phone, it may be saved in a folder named "Images".

Receiving files using Bluetooth

HTC Desire 200 lets you receive various files with Bluetooth, including photos, music tracks, contact info, calendar events, and documents such as PDFs.



Refer to the device's documentation for instructions on sending information over Bluetooth.

1. Slide the Notifications panel open, and then tap .
2. If Bluetooth is off, tap the Bluetooth **On/Off** switch to turn it on.
3. Tap **Bluetooth**. The Bluetooth screen opens.
4. Tap the Bluetooth name of your device near the top of the screen to make HTC Desire 200 visible to nearby Bluetooth devices.
5. On the sending device, send one or more files to HTC Desire 200.
6. If asked, accept the pairing request on HTC Desire 200 and on the sending device. You may also be prompted to enter the same passcode or confirm the auto-generated passcode on both devices.

You'll then get a Bluetooth authorization request.

7. Tap **Pair**.
8. When HTC Desire 200 receives a file transfer request notification, slide the Notifications panel down, tap the incoming file notification, and then tap **Accept**.
9. When a file is transferred, a notification is displayed. Slide the Notifications panel down, and then tap the relevant notification.

When you open a received file, what happens next depends on the file type:

- Media files and documents are usually opened directly in a compatible app. For example, if you open a music track, it starts playing in the Music app.
- For a vCalendar file, choose the calendar where you want to save the event, and then tap **Import**. The vCalendar is added to your Calendar events.
- For a vCard contact file, you can choose to import one, several, or all of those contacts to your contacts list.

Settings and security

Turning Airplane mode on or off


When you enable Airplane (Flight) mode, all wireless radios on HTC Desire 200 are turned off, including the call function, data services, Bluetooth, and Wi-Fi.

When you disable Airplane mode, the call function is turned back on and the previous state of Bluetooth and Wi-Fi is restored.



- You can manually turn Bluetooth and Wi-Fi back on after enabling Airplane mode.
- If USB tethering is turned on, enabling Airplane mode turns it off. You need to manually turn USB tethering on after you disable Airplane mode.


Do any of the following to turn Airplane mode on or off:

- Press and hold **POWER**, and then tap **Airplane mode**.
- Slide the Notifications panel open, and then tap . Tap the Airplane mode **On/Off** switch to turn it on or off.

When enabled, the Airplane mode icon  is displayed in the status bar.


Changing display settings

Adjusting the screen brightness manually

1. Slide the Notifications panel open, and then tap .
2. Tap **Display** (or **Display & gestures**) and then tap **Brightness**.
3. Clear the **Automatic brightness** option.
4. Drag the brightness slider to the left to decrease or to the right to increase the screen brightness.

Adjusting the time before the screen turns off


After a period of inactivity, the screen turns off to conserve battery power. You can set the idle time before the screen turns off.

1. Slide the Notifications panel open, and then tap .
2. Tap **Display** (or **Display & gestures**) and then tap **Sleep**.
3. Tap the time before the screen turns off.

Turning automatic screen rotation off




Automatic rotation is not supported in all applications.


1. Slide the Notifications panel open, and then tap .
2. Tap **Display** (or **Display & gestures**).
3. Clear the **Auto-rotate screen** option.

Recalibrating the G-sensor


Recalibrate the screen if you feel that the screen orientation does not respond properly to the way you hold HTC Desire 200.

1. Slide the Notifications panel open, and then tap .
2. Tap **Display** (or **Display & gestures**) and then tap **G-Sensor calibration**.
3. Place HTC Desire 200 on a flat and level surface, and then tap **Calibrate**.
4. After the recalibration process, tap **OK**.

Keeping the screen on while charging

1. Slide the Notifications panel open, and then tap .
2. Tap **Display** (or **Display & gestures**).
3. Select the **Stay awake** option.


Switching animation effects on or off

1. Slide the Notifications panel open, and then tap .
2. Tap **Display** (or **Display & gestures**).
3. Select or clear the **Animation** option.


Changing sound settings

Switching between silent, vibrate, and normal modes

Do one of the following:


- To change from silent to normal mode, press the VOLUME UP button.
- To change from vibrate to normal mode, press the VOLUME UP button twice.
- Slide the Notifications panel open, and then tap  > **Sound** > **Sound profile**.

Playing a sound when selecting onscreen items

1. Slide the Notifications panel open, and then tap .
2. Tap **Sound**.
3. Select or clear the **Touch sounds** option.


Lowering the ring volume automatically

HTC Desire 200 has a quiet ring feature that automatically lowers the ring volume when you move it.

1. Slide the Notifications panel open, and then tap .
2. Tap **Sound**.
3. Select the **Quiet ring on pickup** option.


Making HTC Desire 200 ring louder in your pocket or bag

To help avoid missing incoming calls when HTC Desire 200 is in your pocket or bag, the pocket mode feature gradually increases the ring volume and vibrates when you receive a call.

1. Slide the Notifications panel open, and then tap .
2. Tap **Sound**.
3. Select the **Pocket mode** option.


Switching to speakerphone automatically

When you're in a call, you can switch to speakerphone by simply flipping HTC Desire 200 over.

1. Slide the Notifications panel open, and then tap .
2. Tap **Sound**.
3. Select the **Flip for speaker** option.

Changing the display language


Changing the language adjusts the keyboard layout, date and time formatting, and more.

1. Slide the Notifications panel open, and then tap .
2. Tap **Language & keyboard > System language**.
3. Tap the language you want to use.


More ways to extend battery life

Switching to GSM network mode

Switch to using GSM network if you're not using a data connection to connect to the Internet. Connecting to GSM network mode consumes less battery power.

1. Slide the Notifications panel open, and then tap .
2. Tap **Mobile network** > **Network Mode**.
3. Tap **GSM only**.

Checking battery usage


1. Slide the Notifications panel open, and then tap .
2. Tap **Power** > **Battery use**.
3. To see more details, tap the graph or the features that are using the battery power.



If you see buttons while viewing the Use details screen, you can tap them to adjust the settings that affect battery usage or to turn off the feature that's consuming battery.


Backing up settings to Google

You can choose to automatically back up some settings such as Wi-Fi and bookmarks to Google servers using your Google Account so you can restore them when needed.

1. Slide the Notifications panel open, and then tap .
2. Tap **Privacy** and select the **Back up my settings** option.

Accessibility settings

Use these settings when you've downloaded and installed an accessibility tool, such as a screen reader that provides voice feedback. You can turn accessibility functions or services on or off.

1. Slide the Notifications panel open, and then tap .
2. Tap **Accessibility** and choose the settings you want.

Protecting your SIM card with a PIN

Add another layer of security for HTC Desire 200 by assigning a PIN (personal identification number) to your SIM.



Make sure you have the default SIM PIN provided by your mobile operator before continuing.

1. Slide the Notifications panel open, and then tap > **Security**.
2. Tap **Set up SIM card lock**, then select **Lock SIM card**.
3. Enter the default SIM card PIN, and then tap **OK**.
4. To change the SIM card PIN, tap **Change SIM PIN**.

Restoring a SIM card that has been locked out

If you enter the wrong PIN more times than the maximum number of attempts allowed, your SIM card will become “PUK-locked.”

You need a PUK code to restore access to HTC Desire 200. Contact your mobile operator for this code.

1. On the Phone dialer screen, enter the PUK code, and then tap **Next**.
2. Enter the new PIN you want to use, and then tap **Next**.
3. Enter the new PIN again, and then tap **OK**.

Protecting HTC Desire 200 with a screen lock

Help protect your personal information and help prevent others from using HTC Desire 200 without your permission by setting a screen lock pattern, PIN, or password.

You'll be asked to unlock the screen every time HTC Desire 200 is turned on or when it's idle for a certain period of time.

1. Slide the Notifications panel open, and then tap > **Security**.
2. Tap **Screen lock**.
3. Select a screen lock option and set up the screen lock.
4. Tap **Lock phone after**, then specify the idle time before the screen is locked.




You can also clear **Make pattern visible** or **Make passwords visible** if you don't want your screen lock to display as you enter it onscreen.

Forgot your screen lock pattern?

If you've forgotten your screen lock pattern, you have up to five attempts to try and unlock HTC Desire 200.

If this fails, you can unlock HTC Desire 200 by entering your Google Account user name and password.


1. On the unlock screen, enter your lock pattern.
2. After the fifth attempt, when you're asked to wait for 30 seconds, tap **OK**.
3. If the display goes off, press the **POWER** button to turn the display back on, and then unlock the screen.
4. Tap the **Forgot pattern?** button when it appears.
5. Enter your Google Account name and password, and then tap **Sign in**. You'll then be asked to create a new screen lock pattern. If you no longer want to do so, tap **None** or press .

Encrypting data on HTC Desire 200

You can encrypt data such as your online accounts and other settings. After encryption, you will need to enter the screen lock PIN or password to turn on your phone and access the data.



- Set a lock screen PIN or password before encrypting your data.
- Fully charge the battery and keep HTC Desire 200 connected to the power adapter during encryption. The encryption process takes about an hour.
- You cannot undo encryption. If you want to return to an unencrypted phone, you must perform a factory reset.


1. Slide the Notifications panel open, and then tap .
2. Tap **Storage**.
3. Tap **Storage encryption** to encrypt applications and settings.
4. Tap **Encrypt**.
5. Enter the lock screen PIN or password.

6. Tap **Next**.
7. Tap **Encrypt**.

Encryption starts and the progress is displayed. The phone may restart a few times. When the encryption process is complete, enter your PIN or password.


Checking your phone's HTC Sense version

You can view the HTC Sense version, as well as other information about your phone.


1. Slide the Notifications panel open, and then tap .
2. Tap **About** > **Software information** to view the HTC Sense version.

Managing memory

Checking how much phone memory is available for use

1. Slide the Notifications panel open, and then tap .
2. Tap **Storage**. The available phone memory is displayed in the Internal storage section.

Checking the available storage card space


1. Slide the Notifications panel open, and then tap .
2. Tap **Storage**. The total and available storage card space is displayed in the storage card section.

Making more storage space (internal storage)

Easily free up space in internal storage by cleaning up the application cache, moving or uninstalling apps, and deleting old mails and messages all in one go.




You cannot move or uninstall preinstalled apps.

1. Slide the Notifications panel open, and then tap .
2. Tap **Storage**, and under Internal storage tap **Make more space**.
3. On the Clear caches screen, choose whether to clear the cache of rarely used apps only or all apps, and then tap **Next**.
4. On the Application storage screen, choose to move apps to the storage card or to uninstall apps that you'd like to remove.
5. Tap **Next**.

6. On the Mail & message storage screen:
 - Set fewer days of mails to download so that older mails will be removed from the storage automatically.
 - Lower the number of text and multimedia messages per conversation.
7. On the Content storage screen, choose what content you want to delete from storage.
8. Tap **Finish**.

Clearing application cache and data


You can delete the data or clear the cache per application.

1. Slide the Notifications panel open, and then tap .
2. Tap **Apps**.
3. On the All tab, tap an application.
4. On the screen, tap **Clear data** and/or **Clear cache**.

Uninstalling an app




You cannot uninstall an app that's preinstalled on HTC Desire 200.

1. Slide the Notifications panel open, and then tap .
2. Tap **Apps**.
3. On the Downloaded tab, tap the application you want to uninstall.
4. Tap **Uninstall**.

Moving an app to or from the storage card





You cannot move an app that's preinstalled on HTC Desire 200.

1. Slide the Notifications panel open, and then tap .
2. Tap **Apps**.
3. On the Downloaded tab, tap the application you want to move.
4. Choose to move the application to the storage card.



Stopping running applications using Task Manager

Use Task Manager to free up memory by stopping running applications that you're not currently using.

1. From the Home screen, tap  > **Task Manager**.
2. In the All applications list, tap  to the right of the application name to stop it.


Other essentials

Using the onscreen keyboard

When you start an app or select a field that requires text or numbers, the onscreen keyboard becomes available. After entering your text, you can tap  or press  to close the onscreen keyboard.

Selecting a keyboard layout


You can choose from three different keyboard layouts to suit your typing style.

1. Slide the Notifications panel open, and then tap  > **Language & keyboard**.
2. Tap **HTC Sense Input** > **Advanced settings**.
3. Tap **Keyboard types**, and then select the keyboard layout that you want to use.

Standard	This layout is similar to a desktop computer keyboard. This is the default keyboard layout.
Phone	This layout resembles the traditional mobile phone keypad.
Compact	This layout features two letters on each key. The key size is slightly bigger than on the Standard layout.


Entering text

Simply tap the keys on the onscreen keyboard to enter letters and numbers, as well as punctuation marks and symbols.

- Tap  to enter an uppercase letter. Tap twice to turn on caps lock.
- Press and hold keys with gray characters at the top to enter numbers, symbols, or accented letters. The gray character displayed on the key is the character that will be inserted when you press and hold that key. Some keys have multiple characters or accents associated with them.

Choosing multiple keyboard languages




If multiple keyboard languages are available on HTC Desire 200, you can choose which languages to enable in the onscreen keyboard.

1. Slide the Notifications panel open, and then tap  > **Language & keyboard**.
2. Tap **HTC Sense Input**.
3. Tap **Keyboard selection**, and then choose the languages you want.




Available languages depend on the region where you purchased HTC Desire 200.

Changing the keyboard language

1. While the onscreen keyboard is open, tap .
2. Select the **Toggle keyboards** option to switch between keyboard languages, and then press .
3. Tap  until you see the language you want to use.




To turn Toggle keyboards on or off, slide the Notifications panel open, and then tap  > **Language & keyboard** > **HTC Sense Input** and tap the **Toggle keyboards On/Off** switch.

Entering words with predictive text

Predictive text input is enabled by default, and word suggestions are displayed as you type.




Tap  to switch between Multitap and XT9 predictive modes when using the Compact or Phone keyboard layout.

To enter a word in predictive mode, do any of the following:

- If the word you want is highlighted in green or orange in the suggestion list, just tap the space bar to insert the word into your text.
- If the word you want shows up in the suggestion list before you finish typing the entire word, tap the word to insert it into your text.
- If there's an arrow to the right of the suggestion list, tap the arrow to see more choices.

Setting a second language for predictive text


You can set the predictive text to be bilingual. As you type, you'll get word suggestions in the languages that you've selected.

1. Slide the Notifications panel open, and then tap  > **Language & keyboard**.
2. Tap **HTC Sense Input > Advanced settings**.
3. Tap **Bilingual prediction**, and then choose the language you want.



Adding a word to the predictive text dictionary

While you're entering text using the Standard keyboard layout, any word you tap on the suggestion list is automatically added.

You can also add a word to the list manually.


1. Slide the Notifications panel open, and then tap  > **Language & keyboard**.
2. Tap **HTC Sense Input**.
3. Tap **Personal dictionary > Edit personal dictionary > +**.
4. Enter the word you want to add, and then tap **OK**.

Editing or deleting a word in the predictive text dictionary


1. Slide the Notifications panel open, and then tap  > **Language & keyboard**.
2. Tap **HTC Sense Input**.
3. Tap **Personal dictionary > Edit personal dictionary**.
 - To edit a word, tap the word.
 - To delete words from the dictionary, tap  > **Delete**. Select the words you want to remove, and then tap **Delete**.

Backing up your personal dictionary to your storage card

If you have a storage card installed, you can back up the new words you've added to the predictive text dictionary.

1. Slide the Notifications panel open, and then tap  > **Language & keyboard**.
2. Tap **HTC Sense Input**.
3. Tap **Personal dictionary > Sync personal dictionary > Copy to phone storage**.

Importing your personal dictionary from your storage card

1. Slide the Notifications panel open, and then tap  > **Language & keyboard**.
2. Tap **HTC Sense Input**.
3. Tap **Personal dictionary > Sync personal dictionary > Restore from phone storage**.

Using the Trace keyboard


Instead of tapping the keys on the onscreen keyboard, you can "trace" to type words.



You need to turn on the Trace keyboard in **Settings > Language & keyboard > HTC Sense Input**.

1. Slide your finger from one letter to the next to enter a word.
2. Lift your finger when the word is completed. The suggestion list will show possible matches.
3. You can:
 - Tap the space bar to insert a highlighted word.
 - Tap a word from the suggestion list.
 - Tap the arrow next to the suggestion list to see more choices.

Turning on trace input

1. Slide the Notifications panel open, and then tap  > **Language & keyboard**.
2. Tap **HTC Sense Input**.
3. Tap the Trace keyboard **On/Off** switch.

Restarting HTC Desire 200 (Soft reset)

If HTC Desire 200 is running slower than normal, is unresponsive, or has an app that is not performing properly, try rebooting and see if that helps solve the problem.

1. If the display is off, press the **POWER** button to turn it back on.
2. Unlock the display.
3. Press and hold the **POWER** button, and then tap **Restart**.
4. When asked to confirm, tap **Restart**.



If these steps don't work, you can remove and reinstall the battery, and then turn HTC Desire 200 on to restart it.

HTC Desire 200 not responding?

If HTC Desire 200 does not respond when you touch the screen or press the buttons, you can still restart it.

Press and hold the POWER button for at least 10 seconds. HTC Desire 200 then restarts.

Resetting HTC Desire 200 (Hard reset)

If HTC Desire 200 has a persistent problem that cannot be solved, you can perform a factory reset (also called a hard reset or master reset). A factory reset reverts the phone back to its initial state — the state before you turned on the phone for the first time.

The following will be removed from the phone when you do a factory reset:

- Your Google Account
- All accounts you've added in **Settings > Accounts & sync** and the data associated with these accounts
- Personal data that you've created or synced to the phone such as your profile, contacts, messages, email, calendar events, and more
- System and application data and settings
- Downloaded apps


Files such as your music, photos, videos, and documents will also be deleted if you select the **Erase all data** option.

Be sure to back up any data and files you want to keep before you do a factory reset.



A factory reset may not permanently erase all data from your phone, including personal information.

Performing a factory reset from settings

1. Slide the Notifications panel open, and then tap .
2. Tap **Storage > Factory data reset**.
3. If you also want to delete media and other data on HTC Desire 200, select **Erase all data**.
4. Tap **Reset phone**, and then tap **Erase everything**.

Performing a factory reset using hardware buttons

If you can't turn HTC Desire 200 on or access settings, you can still perform a factory reset by using the hardware buttons on HTC Desire 200.

1. Remove the battery, wait for a few seconds, then reinsert the battery.
2. Press and hold the VOLUME DOWN button, and then press and hold the POWER button.
3. Wait for the screen with the three Android images to appear, and then release the POWER and VOLUME DOWN buttons.
4. Press VOLUME DOWN to select **FACTORY RESET**, and then press the POWER button.

Trademarks and copyrights

©2013 HTC Corporation. All Rights Reserved.

HTC, the HTC logo, HTC Desire, Friend Stream, and HTC Sense are trademarks or service marks of HTC Corporation.

Google, the Google logo, Android, the Android logo, Android Market, Google Apps, Google Calendar, Google Checkout, Google Earth, Google Latitude, Google Maps, Google Play, Google Talk, Google Wallet, Gmail, Picasa, and YouTube are trademarks of Google Inc.

Microsoft, Windows, ActiveSync, Excel, Outlook, PowerPoint, SkyDrive, Windows Media, and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Adobe and Flash are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Wi-Fi[®] is a registered trademark of the Wireless Fidelity Alliance, Inc.

microSD is a trademark of SD-3C LLC.

Beats, BeatsAudio, and the b logo are trademarks of Beats Electronics, LLC.

Facebook is a trademark of Facebook, Inc.

FLICKR and the FLICKR Dots logo are the trademarks and/or registered trademarks of Yahoo! Inc.

iPhone, iCal, iTunes, and Mac are trademarks of Apple Computer, Inc.

Polaris Office is a trademark of Infracore, Inc.

Twitter is a trademark of Twitter, Inc., and is used under license.

All other company, product and service names mentioned herein are trademarks, registered trademarks or service marks of their respective owners.

The HTC Sync Manager software can be used with copyrighted materials that you own or are lawfully authorized to use and/or duplicate. Unauthorized use and/or duplication of copyrighted material may be a violation of copyright law in the United States and/or other countries/regions. Violation of U.S. and international copyright laws may subject you to significant civil and/or criminal penalties. HTC Corporation shall not be held responsible for any damages or losses (direct or indirect) that you may incur as a result of using this software.

Screen images contained herein are simulated. HTC shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from furnishing this material. The information is provided “as is” without warranty of any kind and is subject to change without notice. HTC also

reserves the right to revise the content of this document at any time without prior notice.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in a retrieval system, or translated into any language in any form without prior written permission of HTC.

Index

A

- Airplane mode *137*
- Alarm *105*
- Android Market
 - See Google Play
- Apps
 - deleting *113*
 - icons *30*
 - installing *112*
 - sharing *115*
- Auto sync *68*

B

- Backup
 - contacts *76*
 - media *119*
 - messages *46*
 - photos *122*
 - settings *140*
 - tasks *111*
- Battery
 - charging *14*
 - checking usage *140*
 - saving battery power *24*
- Bluetooth
 - connecting a Bluetooth headset or car kit *132*
 - disconnecting or unpairing *134*
 - receiving Calendar event information (vCalendar) *136*
 - receiving Contact information (vCard) *136*
 - sending information *134*
 - sharing music *66*
 - turning on or off *132*
- Browser
 - bookmarks *50*
 - history *50*
 - opening an incognito tab *50*
 - options *53*
 - using *48*

C

- Calendar
 - creating an event *89*
 - managing events *91*
 - reminders *92*
 - settings *93*
 - views *89*
- Call history *39*
- Camera
 - basics *54*
 - effects *54*
 - recording a video *55*
 - scenes *55*
 - settings *56*
 - taking a photo *55*
 - zooming *54*
- Capture screen *22*
- Change phone language *139*
- Clock *104*
- Conference call *38*
- Contacts
 - adding *70*
 - copying from SIM card *71*
 - deleting *73*
- Copying text *21*

D

- Data connection
 - access point *125*
 - turning on or off *125*
 - usage *126*
- Data transfer
 - transferring media *122*
- Delete apps *113*
- Delete contacts *73*
- Display
 - adjusting screen brightness *137*
 - changing the time before the screen turns off *137*
 - recalibrating G-sensor *138*
 - turning off screen rotation *138*

Documents

- editing *107*
- viewing *107*

Downloading

- viewing downloads *52*

Dropbox *94*

E

Exchange ActiveSync

- Out of office *86*
- sending a meeting request *86*
- working with Exchange ActiveSync email *86*

F

Facebook

- checking in to a place *79*

Facebook for HTC Sense *77*Factory reset *149*

Firmware

- See Software update

Flash player *53*

Folder

- grouping apps *31*
- removing items *32*
- renaming *32*

FOTA

- See Software update

Friend Stream *77*

G

Gallery

- about *57*
- editing photos *58*
- sending photos and videos *60*
- sharing photos and videos *61*
- viewing photos *57*
- watching video *58*

Geotag *56, 57*Gmail *81*Google Latitude *103*Google Maps *101*Google Play *112*GPS (Global Positioning System) *101*

H

Hands free *132*

Hard reset

- See Factory reset

Headphones *132*Home dialing *40*

Home screen

- about *17*
- adding widgets *29*
- extended *17*
- launch bar *31*
- rearranging items *30*

HTC Clock

- setting an alarm *105*
- World Clock *105*

HTC Sync Manager *119*

I

Idle screen

- See Lock screen

Incognito mode *50*Internet calling *38*

Internet connection

- data connection *125*
- VPN *130*
- Wi-Fi *127*
- wireless router *131*

K

Keyboard

- dictionary *147*
- entering text *145*
- predictive text *146*

L

Language *139*

Locations

- turning on location services *101*

Lock screen

- playing music *64*

Low light *56*

M

Mail

- adding a POP3/IMAP account *82*
- adding an Exchange account *82*
- managing email messages *87*
- sending *84*
- sorting email messages *84*

- unified inbox *83*
 - working with Exchange ActiveSync email *86*
 - Making a call *34*
 - Managing memory *143*
 - Maps
 - Google Maps *101*
 - Market
 - See Google Play
 - Master reset
 - See Factory reset
 - Meeting request *86*
 - Messages
 - copying to the SIM card *45*
 - deleting *45*
 - deleting a conversation *46*
 - forwarding *44*
 - locking *45*
 - viewing *43*
 - microSD card *11*
 - MMS *41*
 - Multimedia message *41*
 - Music
 - browsing the library *63*
 - listening *63*
 - playing music from Lock screen *64*
 - playlist *64*
 - setting a song as ringtone *66*
 - sharing music using Bluetooth *66*
 - transferring from iPhone *120*
-
- N**
-
- Notifications
 - panel *23*
-
- O**
-
- Online accounts
 - managing *68*
 - what can you sync with *67*
 - Onscreen keyboard
 - See Keyboard
-
- P**
-
- Pair a Bluetooth device *132*
 - People
 - adding a new contact *70*
 - deleting contacts *73*
 - editing a contact *73*
 - filtering your contacts *69*
 - groups *73*
 - merging contact information *72*
 - setting search options *70*
 - transferring contacts *71*
 - widget *75*
 - Phone calls
 - calling a number in a message *35*
 - calling a number in an email *35*
 - calling using Wi-Fi *38*
 - making an emergency call *35*
 - receiving *36*
 - setting up a conference call *38*
 - Phone information *143*
 - Phone settings
 - About *143*
 - Applications *143*
 - Display *137*
 - Language & keyboard *139*
 - Sound *138*
 - Storage *143*
 - Phone updates
 - See Software update
 - Photos
 - editing *58*
 - sharing *61*
 - tagging *61*
 - viewing *57*
 - Power
 - charging the battery *14*
 - checking battery usage *140*
 - entering sleep mode *18*
 - saving battery power *24*
 - Print screen
 - See Capture screen
 - PUK (PIN Unblock Key) *141*
-
- R**
-
- Reader mode *49*
 - Reading list *51*
 - Record your voice *114*
 - Restart *148*
 - Ring volume
 - lowering ring volume automatically *139*
 - making your phone ring louder *139*

Ringtone

- setting *66*
- trimming *66*

Router

See Wireless router

S

Scenes *27*

Screen

- adjusting screen brightness *137*
- changing the time before the screen turns off *137*
- idle screen *18*
- recalibrating G-sensor *138*
- turning off screen rotation *138*

Screen lock *141*

Screen shot

See Capture screen

SD card *11*Search *48*Security *141*

Settings

- About *143*
- Applications *143*
- Language & keyboard *139*
- Sound *138*
- Storage *143*

Sharing

- games and apps *115*
- photos and videos *61*

Shortcuts *19*

SIM card

- copying a message *45*
- inserting *10*
- removing *10*
- SIM PIN *141*

SkyDrive *98*Sleep mode *18*Slideshow *57*SMS *41*Social networks *77*Software update *25*

Sound

- ringtone, notifications, and alarms *32*
- audible selection *139*
- lowering ring volume automatically *139*
- Pocket mode *139*

- sound set *32*

- switching profiles *138*

- switching to speakerphone *139*

Speakerphone *37*Speed dial *34*

Storage card

- moving apps to the storage card *144*

Sync

- HTC Sync Manager *119*
- online accounts *68*
- syncing with computer *122, 123*

T

Tasks

- creating a list *111*
- creating a task *108*
- filtering tasks *110*
- managing lists *111*

Tethering

See USB Tethering

Text message *41*To-do lists *111*Twitter *77*

U

Upgrade

See Software update

USB Tethering *118*

V

Videos

- editing *59*
- recording *55*
- sharing *61*
- transferring from iPhone *120*
- watching *58*

Voice Recorder *114*

VPN

- adding a connection *130*
- connecting *130*

W

Wallpaper

- changing *28*

Watch list *51*

Weather

- adding cities *106*
- checking weather *106*

Wi-Fi

- calling *38*
- connecting to another network *129*
- connecting via WPS *128*
- disconnecting from network *128*
- turning on *127*

Widgets

- adding *29*
- changing settings *29*
- removing *30*

Wireless router *131*

Y

YouTube

- sharing videos *63*