

GT-S5530 user manual



using this manual

This user manual has been specially designed to guide you through the functions and features of your mobile phone. To get started quickly, refer to “introducing your mobile phone,” “assembling and preparing your mobile phone,” and “using basic functions.”

Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:



WARNING

Warning—situations that could cause injury to yourself or others



CAUTION

 
Caution—situations that could cause damage to your phone or other equipment



Note—notes, usage tips, or additional information



Refer to—pages with related information; for example: ► p. 12 (represents “see page 12”)

- **Followed by**—the order of options or menus you must select to perform a step; for example: In Menu mode, select **Messages** → **Create message** (represents **Messages**, followed by **Create message**)
- [] **Square brackets**—phone keys; for example: [] (represents the Power/Menu exit key)
- < > **Angled brackets**—softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Copyright information

Rights to all technologies and products that comprise this phone are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.
- Java™ is a trademark of Sun Microsystems, Inc.
- Windows Media Player® is a registered trademark of Microsoft Corporation.

CE0168

contents

safety and usage information	1
Safety warnings	1
Safety precautions	4
Important usage information	6
introducing your mobile phone	12
Unpack	12
Phone layout	13
Keys	14
Display	15
Icons	16
assembling and preparing your mobile phone	17
Install the SIM or USIM card and battery ...	17
Charge the battery	19
Insert a memory card (optional)	20

using basic functions	21	Use advanced camera functions	43
Turn your phone on and off	21	Use advanced music functions	47
Access menus	22	using tools and applications	51
Switch applications	22	Use the Bluetooth wireless feature	51
Use the smart home screen	23	Activate and send an SOS message	53
Customise your phone	25	Activate the mobile tracker	54
Use basic call functions	27	Record and play voice memos	55
Send and view messages	28	Edit images	55
Add and find contacts	30	Print images	57
Use basic camera functions	31	Upload photos and videos to the web	58
Listen to music	32	Use Java-powered games and	
Browse the web	34	applications	59
Use the Google services	35	Synchronise data	60
using advanced functions	37	Create and view world clocks	61
Use advanced call functions	37	Set and use alarms	62
Use advanced phonebook functions	40	Use the calculator	62
Use advanced messaging functions	41	Convert currencies or measurements	62

Set a countdown timer	63
Use the stopwatch	63
Create a new task	63
Create a text memo	63
Manage your calendar	64
Search for data	64
troubleshooting	a
index	d

safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your mobile phone.



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing of used batteries or phones.

- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Do not use the phone if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hands and face. Bring the phone to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.



CAUTION

Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C or above 45° C). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not disassemble your phone due to a risk of electric shock.
- Do not allow your phone to get wet—liquids can cause serious damage and will change the colour of the label that indicates water damage inside the phone. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.

CAUTION

- If your phone has a camera flash or light, avoid using it close to the eyes of children or animals.
- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.

Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.

- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards or memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 W/kg.

During testing, the maximum SAR recorded for this model was 0.613 W/kg. In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy.

The Declaration of Conformity at the back of this manual demonstrates your phones compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

"THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY,

FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES."

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

introducing your mobile phone

In this section, learn about your mobile phone's layout, keys, display, and icons.


Unpack

Check your product box for the following items:


- Mobile phone
 - Battery
 - Travel adapter (charger)
 - User manual
-  • The items supplied with your phone may vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Samsung dealer.
- The supplied accessories perform best for your phone.

Phone layout

The front of your phone includes the following keys and features:

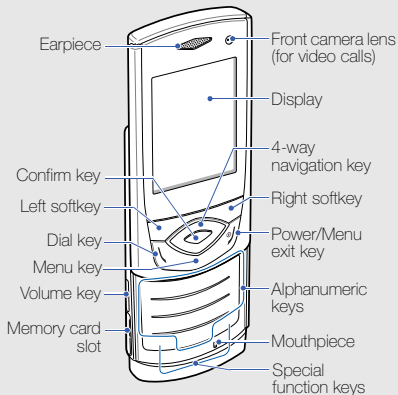



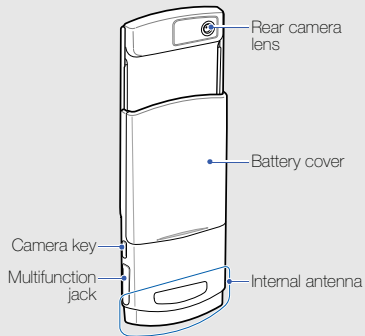




The rear of your phone includes the following keys and features:







Closing the phone automatically locks the exposed keys to prevent you from accidentally pressing them. To unlock these keys, press **<Unlock>** → **<OK>**.

Keys


Key	Function
 Softkeys	Perform actions indicated at the bottom of the display
 4-way navigation	Scroll through menu options; In Idle mode, access user-defined menus (depending on your service provider, pre-defined menus may differ)
 Confirm	Select the highlighted menu option or confirm an input; In Idle mode, launch the web browser or access Menu mode (depending on your service provider or region, the key may perform differently)
 Dial	Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers

Key	Function
 Power/ Menu exit	Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode
 Camera	In Idle mode, view the last taken photo; In Idle mode, turn on the camera (press and hold); In Camera mode, take a photo or record a video
 Alpha- numeric	Enter numbers, letters and special characters; In Idle mode, press and hold [1] to access voice mails and [0] to enter an international call prefix

Key	Function
 	<p>Special function</p> <p>Enter special characters or perform special functions; In Idle mode, press and hold [#] for the silent profile; Press and hold [*] to enter a pause between numbers</p>
	<p>Volume</p> <p>Adjust the phone's volume</p>
	<p>Menu</p> <p>Access Menu mode; Show all active applications (press and hold)</p>





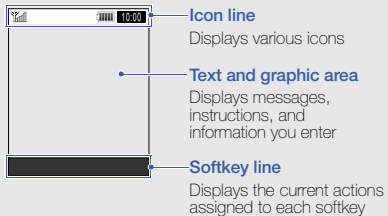






Display












 
Your phone's display consists of three areas:



Icons

Learn about the icons that appear on your display.

Icon	Definition
	Signal strength
	GPRS network connected
	EDGE network connected
	UMTS network connected
	HSDPA network connected
	Voice call in progress
	Video call in progress
	SOS message feature activated
	Browsing the web
	Connecting to secured web page
	Call diverting activated

Icon	Definition
	Roaming (outside of normal service area)
	Synchronised with PC
	Alarm activated
	Bluetooth activated
	Memory card inserted
	New text message (SMS)
	New multimedia message (MMS)
	New email message
	New voice mail message
	Normal profile activated
	Silent profile activated
	Battery power level
	Current time

assembling and preparing your mobile phone


Get started by assembling and setting up your mobile phone for its first use.


Install the SIM or USIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card with subscription details, such as your personal identification number (PIN) and optional services. To use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card.


To install the SIM or USIM card and battery,

1. Remove the battery cover.

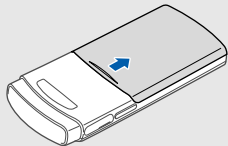


If the phone is on, press and hold [] to turn it off.

2. Insert the SIM or USIM card.

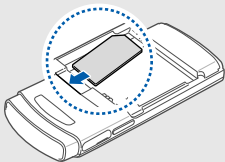


- Place the SIM or USIM card in the phone with the gold-coloured contacts facing down.
- Without inserting a SIM or USIM card, you can use your phone's non-network services and some menus.

3. Insert the battery.

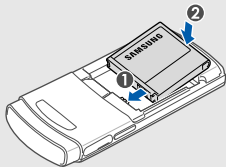


4. Replace the battery cover.

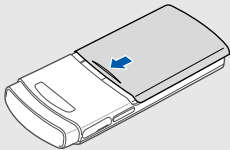


Charge the battery

Before using the phone for the first time, you must charge the battery.

1. Open the cover to the multifunction jack on the side of the phone.
2. Plug the small end of the travel adapter into the multifunction jack.

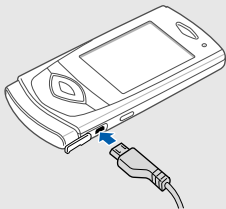

Improperly connecting the travel adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

3. Plug the large end of the travel adapter into a power outlet.
4. When the battery is fully charged (the  icon is no longer moving), unplug the travel adapter from the power outlet.
5. Unplug the travel adapter from the phone.
6. Close the cover to the multifunction jack.



About the low battery indicator

When your battery is low, the phone will emit a warning tone and a low battery message. The battery icon will also be empty and blinking. If the battery level becomes too low, the phone will automatically power off. Recharge your battery to continue using your phone.


Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type).



- Your phone supports only FAT12, FAT16, and FAT32 file systems for memory cards.
 - Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
 - Frequent writing and erasing of data will shorten the lifespan of memory cards.
1. Open the cover to the memory card slot on the left side of the phone.

2. Insert a memory card with the gold-coloured contacts facing down.

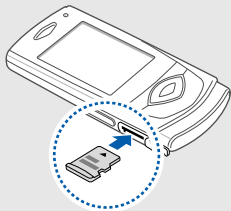

3. Push the memory card in the memory card slot until it locks in place.

To remove the memory card, push it gently until it disengages from the phone, and then pull the memory card out of the memory card slot.

using basic functions

Learn how to perform basic operations and use the main features of your mobile phone.

Turn your phone on and off

To turn your phone on,

1. Press and hold [Ⓜ].
2. Enter your PIN and press <Confirm> (if necessary).

To turn your phone off, repeat step 1 above.

Switch to the offline profile

By switching to the offline profile, you can use your phone's non-network services in areas where wireless devices are prohibited, such as aeroplanes and hospitals.

To switch to the offline profile, in Menu mode, select **Settings** → **Sound profiles** → **Offline**.



Follow all posted warnings and directions from official personnel when in areas where wireless devices are prohibited.

Access menus

To access your phone's menus,

1. In Idle mode, press <Menu> to access Menu mode.



You may need to press the Confirm key to access Menu mode depending on your region or service provider. When you are using the smart home screen, you cannot use the Confirm key to access Menu mode.

2. Use the Navigation key to scroll to a menu or option.
3. Press <Select>, <Save>, or the Confirm key to confirm the highlighted option.
4. Press <Back> to move up one level; Press [↶] to return to Idle mode.

Switch applications

Your phone allows you to multi-task by running multiple applications at the same time.

Switch from one active application to another

1. Press and hold [⌘] to open a list of applications.
2. Scroll to an application and select it.
To change the view mode, press <Options> → **3D view**.




When you are running too many applications at once, a pop-up message will warn you that there are not enough resources. Restart your phone or press <Options> → **End all** to close applications.

Close applications

To close the current application, press [].

To close an application that is running in the background,

1. Press and hold [,] to open a list of applications.
2. Scroll to an application and press <Options> → **End**.

Use the smart home screen

The smart home screen allows you to access your favourite applications and contacts and view upcoming events or tasks. You can customise the smart home screen to fit your preferences and needs.



When you are using the smart home screen, the Navigation key does not access shortcuts.

Customise the smart home screen

1. In Menu mode, select **Settings** → **Display** → **Smart home**.
2. Press <Edit>.
3. Select the items to display on the smart home screen.
4. Press <Options> → **Save**.
If you select **Dual clock**, you can set the second clock.
5. Press the Confirm key.



You can change the idle screen to another style. In Menu mode, select **Settings** → **Display** → **Smart home** and scroll left or right to a style you want.

Access the smart home idle items

Press the Navigation key to scroll through the items on the smart home screen and press the Confirm key to select an item. The following items are available.



Available items may vary depending on your service provider.

- **Shortcuts toolbar:** access your favourite applications. You can customise the shortcut toolbar as desired.
- **My buddies:** access contacts that are saved in the favourite number list.
- **PIMs ticker:** access upcoming calendar events and tasks.
- **Smart search:** search for any specific data stored in your device or on the web.
- **Dual clock:** view your home clock and a world clock.

- **Monthly calendar:** view the monthly calendar.
- **Single clock:** view the current time and date.
- **Facebook/Twitter:** access recently updated feeds.

Customise the shortcut toolbar

1. In Menu mode, select **Settings** → **Display** → **Smart home**.
2. Press <Edit>.
3. Scroll to **Shortcuts toolbar** and press <Options> → **Edit shortcuts**.
4. Select a menu to change or an empty location.
5. Select the menus you want.
Press <Options> → **Open** to select submenus (if necessary).
6. Press <Save>, or press <Options> → **Save**.

Customise your phone

Get more from your phone by customising it to match your preferences.

Adjust the volume of the key tones

In Idle mode, press the Volume key and adjust the key tone volume.

Switch to or from the silent profile

In Idle mode, press and hold [#] to silence or unsilence your phone.

Change your ringtone

1. In Menu mode, select **Settings** → **Sound profiles**.
2. Scroll to the profile you are using.



If you are using the silent or offline profile, you are not allowed to change the ringtone.

3. Press <Edit> → **Voice call ringtone** or **Video call ringtone**.
4. Select a memory location (if necessary).
5. Select a ringtone.
6. Press the Confirm key.

To switch to another profile, select it from the list.

Select a wallpaper (Idle mode)

1. In Menu mode, select **Settings** → **Display** → **Wallpaper**.
2. Select a memory location (if necessary).
3. Select an image.

Select a theme for the display

1. In Menu mode, select **Settings** → **Display** → **My theme**.
2. Select a theme by pressing the Confirm key.
3. Scroll left or right to preview the theme.
4. Press <Set>.

Set menu shortcuts

1. In Menu mode, select **Settings** → **Phone** → **Shortcuts**.
2. Select a key to use as a shortcut.
3. Press the Confirm key and select a menu to assign to the shortcut key.



When you are using the smart home screen, the Navigation key (left/right) does not work as shortcuts.

Lock your phone

1. In Menu mode, select **Settings** → **Security** → **Phone lock**.
2. Enter a new 4- to 8-digit password and press <Confirm>.
3. Enter the new password again and press <Confirm>.



- The first time you access a menu that requires a password, you will be prompted to create and confirm a password.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Use basic call functions

Learn to make or answer calls and use basic call functions.

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [\] to dial the number.
For a video call, press <Options> → **Video call**.
3. To end the call, press [⏏].

Answer a call

1. When a call comes in, press [\].
2. For a video call, press <Show me> to allow the caller to see you via the front camera lens.
3. To end the call, press [⏏].

Adjust the volume

To adjust the volume during a call, press the Volume key.

Use the speakerphone feature

1. During a call, press the Confirm key to activate the speaker.
2. To switch back to the earpiece, press the Confirm key again.



In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Use the headset

By plugging the supplied headset into the multifunction jack, you can make and answer calls:

- To redial the last call, press and hold the headset button.
- To answer a call, press the headset button.
- To end a call, press and hold the headset button.

Send and view messages

Learn to send or view text (SMS), multimedia (MMS), or email messages.

Send a text or multimedia message

1. In Menu mode, select **Messages** → **Create message**.
2. Enter a recipient number and scroll down.

3. Enter your message text. ► p. 29
For sending as a text message, skip to step 5.
For attaching multimedia, continue with step 4.
4. Press <**Options**> → **Add multimedia** and add an item.
5. Press the Confirm key to send the message.

Send an email

1. In Menu mode, select **Email**.
2. Press <**Options**> → **Create email**.
3. Enter an email address.
4. Scroll down and enter a subject.
5. Scroll down and enter your email text.
6. Press <**Options**> → **Attach items** and attach a file (if necessary).
7. Press the Confirm key to send the message.

Enter text



Available text input modes may vary depending on your region.

When entering text, you can change the text input mode:

- Press and hold [#] to switch between T9 and ABC modes. Depending on your country, you may be able to access an input mode for your specific language.
- Press [#] to change case or switch to Number mode.
- Press [*] to switch to Symbol mode.

Enter text in one of the following modes:

Mode	Function
ABC	Press an appropriate alphanumeric key until the character you want appears on the display.

Mode	Function
T9 ABC	<ol style="list-style-type: none">1. Press appropriate alphanumeric keys to enter an entire word.2. When the word displays correctly, press [0] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternative word.
Number	Press an appropriate alphanumeric key to enter a number.
Symbol	Press an appropriate alphanumeric key to enter a symbol.

View text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.

View an email

1. In Menu mode, select **Email**.
2. Press the Confirm key.
3. Select an email or a header.
4. If you selected a header, press the Confirm key to view the body of the email.

Add and find contacts

Learn the basics of using the phonebook feature.



The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → **<Options>** → **Settings** → **Save new contacts to** → a memory location. If **Save new contacts to** does not appear on the display, select **View contacts on** → **All**.

Add a new contact

1. In Idle mode, enter a phone number and press **<Options>**.
2. Select **Add to Contacts** → **Create contact**.
3. Select a memory location (if necessary).
4. Select a number type (if necessary).
5. Enter contact information.
6. Press the Confirm key to add the contact to memory.

Find a contact

1. In Menu mode, select **Contacts**.
2. Enter the first few letters of the name you want to find.
3. Select the contact's name from the contact list.




Once you have found a contact, you can:



- call the contact by pressing [\]
- edit the contact information by pressing <Options> → **Edit**

Use basic camera functions

Learn the basics to capture and view photos and videos.

Capture photos

1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments.
 - To change the preview screen, press the Navigation key up (.

- To adjust the brightness, press the Navigation key left or right (.
- To change the time delay, press the Navigation key down (.
- To zoom in or out, press the Volume key.

4. Press the Confirm key or the Camera key to take a photo.

The photo is saved automatically.

After capturing photos, press <View> to view photos.

View photos




Use one of the following methods to view photos:

- In Menu mode, select **My files** → **Images** → a photo file.
- In Menu mode, select **Apps** → **Media browser** → a photo file.



With **Media browser**, you can rate the files or add tags to them.

Capture videos

1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Press [1] twice to switch to Recording mode.
4. Aim the lens at the subject and make any adjustments.
 - To change the preview screen, press the Navigation key up (.
 - To adjust the brightness, press the Navigation key left or right (.
 - To change the time delay, press the Navigation key down (.
 - To zoom in or out, press the Volume key.
5. Press the Confirm key or the Camera key to start recording.

6. Press <Stop> or the Camera key to stop recording.

The video is saved automatically.

After capturing videos, press <View> to view videos.

View videos

Use one of the following methods to view videos:

- In Menu mode, select **My files** → **Videos** → a video file.
- In Menu mode, select **Apps** → **Media browser** → a video file.

Listen to music

Learn how to listen to music via the music player or FM radio.

Listen to the FM radio

1. Plug the supplied headset into the phone's multifunction jack.

- In Menu mode, select **Apps** → **FM radio**.
- Press the Confirm key to start the FM radio.
- Press <Yes> to start automatic tuning.
The radio scans and saves available stations automatically.



The first time you turn on the FM radio, you will be prompted to start automatic tuning.

- Control the FM radio using the following keys:

Key	Function
Confirm	Turn the FM radio on or off
Volume	Adjust the volume
Navigation	<ul style="list-style-type: none"> Left/Right: Tune a radio station Up/Down: Select a radio station saved in the favourite list ▶ p. 50

If you want to get information about the song you hear, press <Options> → **Find music**. ▶ p. 50

- To turn off the FM radio, press the Confirm key.

Listen to music files

Start by transferring files to your phone or memory card:

- Download from the wireless web. ▶ p. 34
- Download from a PC with the optional Samsung Kies. ▶ p. 47
- Receive via Bluetooth. ▶ p. 52
- Copy to your memory card. ▶ p. 47
- Synchronise with Windows Media Player 11. ▶ p. 48

After transferring music files to your phone or memory card,

- In Menu mode, select **Music** → **Library**.
- Select a music category → a music file.

3. Control playback using the following keys:

Key	Function
Confirm	Pause or resume playback
Volume	Adjust the volume
Navigation	<ul style="list-style-type: none"> • Left: Skip backward; Scan backward in a file (press and hold) • Right: Skip forward; Scan forward in a file (press and hold) • Up: Open the current playlist • Down: Change the repeat mode
1	Rate the current track
2	Change a sound effect
3	Select a skin type
4	Change the repeat mode
5	Activate or deactivate Shuffle mode

Browse the web

Learn to access and bookmark your favourite web pages.



- You may incur additional charges for accessing the web and downloading media.
- The browser menus may be labelled differently depending on your service provider.

Browse web pages

1. In Menu mode, select **Internet** to launch your service provider's homepage.
2. Navigate web pages using the following keys:

Key	Function
Navigation	Scroll up or down on a web page
Confirm	Select an item
<Back>	Return to the previous page
<Options>	Access a list of browser options

Bookmark your favourite web pages

1. In Menu mode, select **Internet**.
2. Press <**Options**> → **Bookmarks**.
3. Press <**Add**>.
4. Enter a page title and a web address (URL) and press the Confirm key.

Download contents from the web

1. In Menu mode, select **Downloads**.
2. Select a menu according to the content type to download.
3. Search for a ringtone or picture and download it to the phone.

Use the Google services

Learn how to use various Google services.



- This feature may be unavailable depending on your region or service provider.
- The steps you must select to use this feature may differ depending on your region or service provider.

Connect to Search

1. In Menu mode, select **Apps** → **Google** → **Search**.
2. Enter a keyword in the search field.

Connect to Mail

1. In Menu mode, select **Apps** → **Google** → **Mail**.
2. Set up your Google account and sign in.
3. Send or receive emails.

Connect to Maps

To search the map,

1. In Menu mode, select **Apps** → **Google** → **Maps**.
2. Scroll through the map.
3. Zoom in or out on the location you want.

To search for a specific location,

1. In Menu mode, select **Apps** → **Google** → **Maps**.
2. Press <**Search**> and enter the address or the category of the business.

To get directions to a specific destination,

1. In Menu mode, select **Apps** → **Google** → **Maps**.
2. Press <**Menu**> → **Directions**.
3. Enter the addresses of the starting location and the ending location.
4. Select **Show directions** to view on the map.



using advanced functions

Learn how to perform advanced operations and use additional features of your mobile phone.

Use advanced call functions

Learn about your phone's additional calling capabilities.

View and dial missed calls

Your phone will display calls you have missed on the display. To dial the number of a missed call,

1. Press <Open>.
2. Scroll to the missed call you want to dial.
3. Press [\] to dial.

Call a recently dialed number

1. In Idle mode, press [\] to display a list of recent numbers.
2. Scroll to the number you want and press [\] to dial.

Hold a call or retrieve a held call

Press <**Hold**> to place a call on hold or press <**Retrieve**> to retrieve a held call.

Dial a second call

If your network supports this function, you can dial another number during a call:

1. Press <**Hold**> to place the first call on hold.
2. Enter the second number to dial and press [\].
3. Press <**Swap**> to switch between the two calls.
4. To end the call on hold, press <**Options**> → **End** → **Held call**.
5. To end the current call, press [Ⓜ].

Answer a second call

If your network supports this function, you can answer a second incoming call:

1. Press [\] to answer the second call.
The first call is automatically placed on hold.
2. Press <**Swap**> to switch between the calls.

Make a multiparty call (conference call)

1. Call the first party you want to add to the multiparty call.
2. While connected to the first party, call the second party.
The first party is automatically placed on hold.
3. When connected to the second party, press <**Options**> → **Conference call**.
4. Repeat steps 2-3 to add more parties (if necessary).
5. To end the multiparty call, press [Ⓜ].

Call an international number

1. In Idle mode, press and hold [0] to insert the + character.
2. Enter the complete number you want to dial (country code, area code, and phone number), and then press [\] to dial.

Call a contact from the phonebook

You can call numbers directly from the phonebook using stored contacts. ► p. 30

1. In Menu mode, select **Contacts**.
2. Scroll to the number you want to dial and press [\] to dial.

Reject a call

To reject an incoming call, press [*]. The caller will hear a busy tone.

To reject calls from certain numbers automatically, use the auto rejection. To activate the auto rejection and set up the reject list,

1. In Menu mode, select **Settings** → **Call** → **All calls** → **Auto reject**.
2. Press <**Change**> to select **On**.
3. Select **Reject list**.
4. Press <**Create**>, or press <**Options**> → **Create**.
5. Enter a number to reject and press the Confirm key.
6. To add more numbers, repeat steps 4-5 above.

Use advanced phonebook functions

Learn to create your namecard, set speed dial numbers, and create groups of contacts.

Create your namecard

1. In Menu mode, select **Contacts**.
2. Press <Options> → **Settings** → **My namecard**.
3. Enter your personal details.
4. Press <Options> → **Save**, or press the Confirm key.



You can send your namecard by attaching it to a message or email or transferring it via the Bluetooth wireless feature.

Set favourite numbers

1. In Menu mode, select **Contacts**.
2. Scroll left or right to **Favourites**.

3. Scroll to an empty location and press <Assign>.
4. Select a number you want to set.
The contact is saved to the favourite number list.



You can now call this contact from Idle mode by pressing and holding the assigned favourite number.

Create a group of contacts

By creating groups of contacts, you can assign ringtones and caller ID photos to each group or send messages to an entire group. Start by creating a group:

1. In Menu mode, select **Contacts**.
2. Scroll left or right to **Groups**.
3. Press <Options> → **Create group** → a memory location (phone or SIM, if necessary).

4. Enter a group name and press the Confirm key.
5. To set a group ringtone, scroll to the group you created and press **<Options>** → **Group ringtone** → **<Change>** → a ringtone.

Use advanced messaging functions

Learn to create templates and use templates to create new messages, use the instant messenger, and create message folders.

Create a text template

1. In Menu mode, select **Messages** → **My folders** → **Templates**.
2. Press **<Create>** to open a new template window.
3. Enter your text.
4. Press the Confirm key to save the template.

Create a multimedia template

1. In Menu mode, select **Messages** → **My folders** → **MMS cards**.
2. Press **<Create>** to open a new template window.
3. Create a multimedia message, with a subject and desired attachments, to use as your template. ► p. 28
4. Press the Confirm key to save the template.

Insert text templates in new messages

1. In Menu mode, select **Messages** → **Create message**.
2. In the text input field, press **<Options>** → **Add text** → **Templates** → a template.

Create a message from a multimedia template

1. In Menu mode, select **Messages** → **My folders** → **MMS cards**.
2. Scroll to the template you want and press **<Options>** → **Send**.
Your template opens as a new multimedia message.

Use the instant messenger



- This feature may be unavailable depending on your region or service provider.
- To change the language for the messenger, access the messenger and press **<Menu>** → **Settings** → **Language**.

1. In Menu mode, select **Commun.** → **Instant messenger**.

2. Press **<OK>** from the intro window.



The first time you access the messenger, you will be prompted to confirm.

3. Enter your user ID and password, and press **<Sign In>**.
4. Chat with your family or friends instantly.

Create a folder to manage messages

1. In Menu mode, select **Messages** → **My folders**.
2. Press **<Options>** → **Create folder**.
3. Enter a folder name and press the Confirm key.
Move messages from a message folder to your folders to manage them as your preferences.

Use advanced camera functions

Learn how to capture photos in various modes and customise camera settings.

Capture photos in Beauty shot mode

1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Press **<Options>** → **Shooting mode** → **Beauty** → **<Back>**.
4. Make any necessary adjustments.
5. Press the Confirm key or the Camera key to take a photo of the subject's face.
The photo is saved automatically without facial imperfections.

Capture photos in Smile shot mode

1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Press **<Options>** → **Shooting mode** → **Smile** → **<Back>**.
4. Make any necessary adjustments.
5. Press the Confirm key or the Camera key.
6. Aim the camera lens at your subject.
Your phone recognises people in an image and detects their smiles. When the subject smiles, the phone automatically takes a photo.

Capture a series of photos

1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Press **<Options>** → **Shooting mode** → **Continuous** → **<Back>**.
4. Make any necessary adjustments.
5. Press and hold the Confirm key or the Camera key to take a series of photos.

Capture panoramic photos

1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.

3. Press **<Options>** → **Shooting mode** → **Panorama** → **<Back>**.
4. Make any necessary adjustments.
5. Press the Confirm key or the Camera key to take the first photo.
6. Slowly move the phone to the direction you want. The phone captures the next photo automatically.
7. Repeat step 6 to complete the panoramic photo.

Capture divided photos

1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Press **<Options>** → **Shooting mode** → **Mosaic**.

4. Scroll left or right to an image layout and press the Confirm key.
5. Make any necessary adjustments.
6. Press the Confirm key or the Camera key to take photos for each segment.

Capture photos with decorative frames

1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Press <Options> → **Shooting mode** → **Frame**.
4. Scroll left or right to a frame and press the Confirm key.
5. Make any necessary adjustments.
6. Press the Confirm key or the Camera key to take a photo with the frame.

Use camera options

Before capturing a photo, press <Options> to access the following options:

Option	Function
Shooting mode	Change the shooting mode
Resolution	Change the resolution option
White balance	Adjust the colour balance
Effects	Apply a special effect
Exposure metering	Select a type of exposure metre

Before capturing a video, press <Options> to access the following options:

Option	Function
Recording mode	Change the recording mode
Resolution	Change the resolution option

Option	Function
White balance	Adjust the colour balance
Effects	Apply a special effect

Customise camera settings

Before capturing a photo, press <Options> → **Settings** to access the following settings:

Option	Function
Night mode	Set whether to use Night shot mode
Photo quality	Adjust the quality of your photos
Viewfinder mode	Change the preview screen
Review	Set the camera to switch to the review screen after capturing photos
Shutter sound	Select a sound to accompany the shutter action

Option	Function
Storage	Select a memory location to store photos
Shortcuts	View the shortcut information
Reset settings	Reset the camera settings


Before capturing a video, press <Options> → **Settings** to access the following settings:

Option	Function
Video quality	Adjust the quality of your video clips
Viewfinder mode	Change the preview screen
Audio recording	Turn the audio on or off
Storage	Select a memory location to store video clips
Shortcuts	View the shortcut information
Reset settings	Reset the camera settings


Use advanced music functions

Learn to prepare music files, create playlists, and store radio stations.


Copy music files via Samsung Kies

1. In Menu mode, select **Settings** → **PC connections** → **Samsung Kies**.
2. Press [] to return to the Idle mode.
3. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.
4. Run Samsung Kies and copy files from the PC to the phone.
Refer to the Samsung Kies help for more information.

Copy music files to a memory card

1. Insert a memory card.
2. In Menu mode, select **Settings** → **PC connections** → **Mass storage**.
3. Press [] to return to the Idle mode.
4. Using an optional PC data cable, connect the multifunction jack on your phone to a PC. When connected, a pop-up window will appear on the PC.
5. Open a folder to view files.
6. Copy files from the PC to the memory card.

Synchronise your phone with Windows Media Player

1. In Menu mode, select **Settings** → **PC connections** → **Media player**.
2. Press [] to return to the Idle mode.
3. Using an optional PC data cable, connect the multifunction jack on your phone to a PC with Windows Media Player installed.
When connected, a pop-up window will appear on the PC.
4. Open Windows Media Player to synchronise music files.
5. Edit or enter your phone's name in the pop-up window (if necessary).
6. Select and drag the music files you want to the sync list.
7. Start synchronisation.

Create a playlist

1. In Menu mode, select **Music** → **Library** → **Playlists**.
2. Press <**Options**> → **Create playlist**.
3. Enter a title for your new playlist and press the Confirm key.
4. Select the new playlist.
5. Press <**Options**> → **Add** → **Tracks**.
6. Select the files you want to include and press <**Add**>.

Customise your music player settings

1. In Menu mode, select **Music**.
2. Select **Settings** → **Player settings**.

- Adjust the settings to customise your music player:

Option	Function
Effects	Select a sound effect
Background playing	Set whether to play music in the background when you end the music player
Music auto off	Select time for player to turn off automatically
Visualisation	Select a skin type

Record songs from the FM radio

- Plug the supplied headset into the phone's multifunction jack.
- In Menu mode, select **Apps** → **FM radio**.
- Press the Confirm key to start the FM radio.
- Select a radio station you want.

- Press <**Options**> → **Record** to start recording.
- When you are finished recording, press <**Stop**>. The music file will be saved in **Sounds** (in Menu mode, select **My files**).

Store radio stations automatically

- Plug the supplied headset into the phone's multifunction jack.
- In Menu mode, select **Apps** → **FM radio**.
- Press <**Options**> → **Self-tuning**.
- Press <**Yes**> to confirm (if necessary). The radio scans and saves available stations automatically.

Set up your favourite radio station list

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select **Apps** → **FM radio**.
3. Press the Confirm key to start the FM radio.
4. Select a radio station to add to the favourite list.
5. Press <**Options**> → **Add to** → **Favourites**.
6. Select an empty location you want to set.



You can access your favourite stations by pressing the location number on the FM radio screen.

Find information of music

Learn to access an online music service and get information about the songs you hear while on the move.

1. In Menu mode, select **Music** → **Find music**.
Your phone connects to the server.
2. When the phone is successfully registered, press the Confirm key to record a part of music you want to find.



Some service providers may not support this service and the database may not have information for all songs.

using tools and applications

Learn how to work with your mobile phone's tools and additional applications.

Use the Bluetooth wireless feature

Learn about your phone's ability to connect to other wireless devices for exchanging data and using hands-free features.

Turn on the Bluetooth wireless feature

1. In Menu mode, select **Apps** → **Bluetooth**.
2. Press <**Options**> → **Settings**.
3. Press <**Change**> to select **On**.
4. To allow other devices to locate your phone, scroll down to **My phone's visibility** and press <**Change**> to select **On**.
If you selected **Custom**, set duration that your phone is visible.

Find and pair with other Bluetooth-enabled devices

1. In Menu mode, select **Apps** → **Bluetooth**.
2. Press the Confirm key and select a device.
3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and press **<OK>**.

When the owner of the other device enters the same code or accepts the connection, pairing is complete.



You may not need to enter a PIN depending on the device.

Send data using the Bluetooth wireless feature

1. Select a file or item from one of your phone's applications that you want to send.
2. Press **<Options>** → **Send via** or **Send namecard via** → **Bluetooth** (when sending contact data, specify which data to send).

Receive data using the Bluetooth wireless feature

1. Enter the PIN for the Bluetooth wireless feature and press **<OK>** (if necessary).
2. Press **<Yes>** to confirm that you are willing to receive data from the device (if necessary).

Use Remote SIM mode

In Remote SIM mode, you can make or answer calls only with a connected Bluetooth hands-free car kit via the SIM or USIM card on your phone.

To activate Remote SIM mode,

1. In Menu mode, select **Apps** → **Bluetooth**.
2. Press <Options> → **Settings**.
3. Scroll down to **Remote SIM mode**.
4. Press <Change> to select **On**.

To use Remote SIM mode, start the Bluetooth connection from a Bluetooth hands-free car kit.

Activate and send an SOS message

When you have an emergency, you can send an SOS message asking for help.



This feature may be unavailable depending on your region or service provider.

1. In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
2. Press <Change> to select **On**.
3. Scroll down and press the Confirm key to open the recipient list.
4. Press <Options> → **Contacts**.
5. Select a contact.
6. Select a number (if necessary).
7. When you are finished selecting contacts, press <Add> to return to the recipient list.

8. Press the Confirm key to save the recipients.
9. Scroll down and set the number of times to repeat the SOS message.
10. Press <Back> → <Yes>.

To send an SOS message, the keys must be locked. Press the Volume key four times.



Once you send an SOS message, all phone functions will be suspended until you press [📞].

Activate the mobile tracker

When someone inserts a new SIM or USIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone.

To activate the mobile tracker,

1. In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
2. Enter your password and press <Confirm>.
3. Press the Confirm key to select **On**.
4. Scroll down and press the Confirm key to open the recipient list.
5. Press <Options> → **Contacts** to open your contact list.
6. Select a contact.
7. When you are finished selecting contacts, press <Add> to return to the recipient list.
8. Press the Confirm key to save the recipients.
9. Scroll down and enter the sender's name.
10. Press the Confirm key → <Accept>.

Record and play voice memos

Learn to operate your phone's voice recorder.

Record a voice memo

1. In Menu mode, select **Apps** → **Voice recorder**.
2. Press the Confirm key to start recording.
3. Speak your memo into the microphone.
4. When you are finished speaking, press <**Stop**>.

Play a voice memo

1. From the voice recorder screen, press <**Options**> → **Go to Sounds**.
2. Select a file.

3. Control playback using the following keys:

Key	Function
Confirm	Pause or resume playback
Volume	Adjust the volume

Edit images

Learn to edit images and apply fun effects.

Apply effects to images

1. In Menu mode, select **Apps** → **Image editor**.
2. Select an image.
3. Press the Confirm key → **Effects** → an effect.
4. Select an option and press <**Apply**>.
5. When you are finished, press <**Options**> → **Save**.

6. Select a memory location (if necessary).
7. Enter a new file name for the image and press the Confirm key.

Apply a blur effect to a specific area of an image

1. Open an image to be edited. Refer to steps 1-2 of "Apply effects to images."
2. Press the Confirm key → **Effects** → **Partial blur**.
3. Move the rectangle over the area you want to apply the blur effect and press the Confirm key. To resize the rectangle, press <**Resize**>.
4. Save the edited image with a new file name. Refer to steps 5-7 of "Apply effects to images."

Adjust an image

1. Open an image to be edited. Refer to steps 1-2 of "Apply effects to images."

2. Press the Confirm key → **Adjust** → an adjustment option (brightness, contrast, or colour).
3. Adjust the image as desired and press <**Apply**>.
4. Save the edited image with a new file name. Refer to steps 5-7 of "Apply effects to images."

Transform an image

1. Open an image to be edited. Refer to steps 1-2 of "Apply effects to images."
2. Press the Confirm key → **Resize**, **Rotate**, or **Flip**.
3. Resize, rotate or flip the image as desired and press <**Save**> or <**Apply**>.
4. Save the edited image with a new file name. Refer to steps 5-7 of "Apply effects to images."

Crop an image

1. Open an image to be edited. Refer to steps 1-2 of “Apply effects to images.”
2. Press the Confirm key → **Crop**.
3. Move the rectangle over the area you want to crop and press the Confirm key.
To resize the rectangle, press <**Resize**>.
4. Save the edited image with a new file name.
Refer to steps 5-7 of “Apply effects to images.”

Insert a visual feature

1. Open an image to be edited. Refer to steps 1-2 of “Apply effects to images.”
2. Press the Confirm key → **Insert** → a visual feature (text, frame, emoticon, clip art or image).
3. Select a visual feature, or enter text and press the Confirm key.

4. Move, resize, or rotate the visual feature by pressing <**Options**> (if necessary).
5. Press the Confirm key.
6. Save the edited image with a new file name.
Refer to steps 5-7 of “Apply effects to images.”

Print images

Learn to print your images with a USB connection or the Bluetooth wireless feature.

To print an image using a USB connection,

1. Connect the multifunction jack on your phone to a compatible printer.
2. Open an image. ► p. 31
3. Press <**Options**> → **Print via** → **USB**.
4. Set print options and print the image.

To print an image using the Bluetooth wireless feature,

1. Open an image. ► p. 31
2. Press <Options> → **Print via** → **Bluetooth**.
3. Select a Bluetooth-enabled printer and pair with the printer. ► p. 52
4. Set print options and print the image.

Upload photos and videos to the web

Learn to post your photos and videos to photo sharing websites and blogs.



Communities may be unavailable depending on your region or service provider.

Set your favourite destination list

1. In Menu mode, select **Commun.** → **Communities**.
2. Press <Yes> to set your favourite destination list (if necessary).
3. Press <Accept> to confirm that you agree to the general disclaimer.



The first time you access **Communities**, you will be prompted to confirm.

4. Select the destinations you want to add and press <Save>.

If you selected <Options> → **Update lists**, new destination sites are added to the list automatically.

Upload a file

To upload photos and videos, you must have accounts of photo sharing websites and blogs.

1. In Menu mode, select **Commun.** → **Communities**.
2. Select a destination you want to post to.
3. Press <Options> → **Upload to**.
4. Press <Options> → **Add item** → a media file.
5. Enter the post details and <Options> → **Upload**.
6. Enter the user ID and password of the destination (if necessary).



You can also upload media files from **Camera** or **My files** by pressing <Options> → **Upload to web**.

Customise the Communities settings

1. In Menu mode, select **Commun.** → **Communities**.
2. Press <Options> → **Settings**.
3. Adjust the following settings:

Option	Function
Preferred lists	Edit favourite destinations
Communities profiles	Change the connection profile
Disclaimer	View the disclaimer information

Use Java-powered games and applications

Learn to use games and applications powered by award-winning Java technology.

Play games

1. In Menu mode, select **Apps** → **Games and more**.
2. Select a game from the list and follow the on-screen instructions.



Available games may vary, depending on your region or service provider. Game controls and options may vary.

Launch applications

1. In Menu mode, select **Apps** → **Games and more**.
2. Select an application and press <**Options**> to access a list of various options and settings for your application.

Synchronise data

Learn to synchronise contacts, calendar, tasks, and memos with the web server you have specified.

Create a synchronisation profile

1. In Menu mode, select **Apps** → **Synchronise**.
2. Press <**Add**> and specify profile parameters.
3. When you are finished, press <**Save**>.

Start synchronisation

1. In Menu mode, select **Apps** → **Synchronise**.
2. Select a synchronisation profile and press the Confirm key.
3. Press <**Continue**> to start synchronisation with the web server you have specified.

Create and view world clocks

Learn to view the time in another region and set world clocks to appear on your display.

Create a world clock

1. In Menu mode, select **Organiser** → **World clock**.
2. Press the Confirm key.
3. Scroll left or right to a time zone and press **<Select>**.
The world clock is set as the second clock.
4. To set daylight saving time, press **<Options>** → **Daylight saving on**.
5. To add more world clocks, repeat steps 2 - 3 above.

Add a world clock to your display

In Dual clock mode, you can view clocks with two different time zones on your display.

After you have created world clocks,

1. In Menu mode, select **Organiser** → **World clock**.
2. Scroll to the world clock you want to add and press **<Options>** → **Set as second clock**.
3. Press **<Back>** twice and select **Settings** → **Display** → **Smart home**.
4. Press **<Edit>** → **Dual clock**.
5. Press **<Options>** → **Save** → the Confirm key.

Set and use alarms

Learn to set and control alarms for important events.

Set a new alarm

1. In Menu mode, select **Organiser** → **Alarms**.
2. Press <**Create**>.
3. Set the details of the alarm.
4. Press <**Save**>.

Stop an alarm

When the alarm sounds,

- Press <**OK**> to stop the alarm.
- Press <**Snooze**> to silence the alarm for the snooze period.

Deactivate an alarm

1. In Menu mode, select **Organiser** → **Alarms**.
2. Select the alarm you want to deactivate.
3. Press <**Options**> → **Deactivate alarm**.

Use the calculator

1. In Menu mode, select **Organiser** → **Calculator**.
2. Use the keys that correspond to the calculator display to perform basic mathematical operations.

Convert currencies or measurements

1. In Menu mode, select **Organiser** → **Converter** → a conversion type.
2. Enter the currencies or measurements and units in the appropriate fields.

Set a countdown timer

1. In Menu mode, select **Apps** → **Timer**.
2. Enter time to count down.
3. Press <**Start**> to begin the countdown.
4. When the timer expires, press <**OK**> to stop the alert.

Use the stopwatch

1. In Menu mode, select **Apps** → **Stopwatch**.
2. Press <**Start**> to begin the stopwatch.
3. Press the Confirm key to record lap times.
4. When you are finished, press <**Stop**>.
5. Press <**Reset**> to clear recorded times.

Create a new task

1. In Menu mode, select **Organiser** → **Task**.
2. Press <**Create**>.
3. Enter the details of the task.
4. Press <**Save**>, or press the Confirm key.

Create a text memo

1. In Menu mode, select **Organiser** → **Memo**.
2. Press <**Create**>.
3. Enter your memo text and press the Confirm key.

Manage your calendar

Learn to change the calendar view and create events.

Change the calendar view

1. In Menu mode, select **Organiser** → **Calendar**.
2. Press <Options> → **View by week** → <Options> → **View by month**.

Create events

1. In Menu mode, select **Organiser** → **Calendar**.
2. Press <Options> → **Create** → an event type.
3. Enter the details of the event as required.
4. Press <Save>.

View events

1. In Menu mode, select **Organiser** → **Calendar**.
2. Select a date on the calendar.
3. Select an event to view its details.

Search for data

Learn to search for data stored in your device or on the web

Search for files or data in the phone

1. In Menu mode, select **Apps** → **Smart search**.
2. Scroll left or right to **Phone**.
3. Enter a letter or a word of the data to search.
4. Select the data you want to access from the list.

Search on the web

1. In Menu mode, select **Apps** → **Smart search**.
2. Scroll left or right to **Internet**.
3. Enter a letter or a word of the data to search on the web.
4. Select a search option between Bing and Google.
5. Select the data you want to access.



troubleshooting

If you are having trouble with your mobile phone, try these troubleshooting procedures before contacting a service professional.

When you turn on your phone or while you are using the phone, it prompts you to enter one of the following codes:

Code	Try this to solve the problem:
Password	When the phone lock feature is enabled, you must enter the password you set for the phone.
PIN	When using the phone for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM or USIM card. You can disable this feature by using the PIN lock menu.

Code	Try this to solve the problem:
PUK	Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
PIN2	When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM or USIM card. For details, contact your service provider.

The phone prompts you to insert the SIM card.

Ensure that the SIM or USIM card is installed correctly.

Your phone displays “Service unavailable” or “Network error.”

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

You enter a number, but the call is not dialed.

- Ensure that you have pressed the Dial key: [\].
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

Another caller cannot reach you.

- Ensure that your phone is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

Another caller cannot hear you speaking.

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

The phone beeps and the battery icon flashes.

Your battery is low. Recharge or replace the battery to continue using the phone.

The audio quality of the call is poor.

- Ensure that you are not blocking the phone's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

You select a contact to call, but the call is not dialed.

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.

The battery does not charge properly or sometimes the phone turns itself off.

- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery.

Your phone is hot to the touch.

When you use applications that require more power, your phone may heat up.

This is normal and should not affect your phone's lifespan or performance.

index

alarms

- creating, 62
- deactivating, 62
- stopping, 62

battery

- charging, 19
- installing, 17
- low battery indicator, 19

Bluetooth

- activating, 51
- receiving data, 52
- remote SIM mode, 53
- sending data, 52

browser

- see web browser

calculator

- see tools, calculator

calendar

- see tools, calendar

calls

- advanced functions, 37
- answering additional calls, 38
- answering, 27
- basic functions, 27
- dialling additional calls, 38
- dialling missed calls, 37
- from the phonebook, 39
- international numbers, 39
- making, 27
- multiparty, 38

- placing on hold, 38
- recently dialled, 37
- rejecting, 39
- retrieving held calls, 38
- viewing missed, 37

clock

- see world clock

communities

- see tools, mobile blog

conference calls

- see calls, multiparty

contacts

- adding, 30
- creating groups, 40
- finding, 30

convertor

see tools, convertor

countdown timer

see tools, countdown timer

FM radio

listening to, 32

recording songs, 49

storing stations, 49

Google services 35**headset** 28**images**

adjusting, 56

applying effects, 55

cropping, 57

inserting visual features, 57

printing, 57

transforming, 56

instant messenger

see messages, sending

instant

internet

see web browser

Java

accessing applications, 60

launching games, 60

key tones 25**lock**

see phone lock

memo

see text or voice memos

memory card 20**messages**

sending email, 28

sending instant, 42

sending multimedia, 28

sending text, 28

viewing email, 30

viewing multimedia, 29

viewing text, 29

mobile blog 58**mobile tracker** 54**multimedia**

see messages

music

finding information, 50

playing, 33

music player

creating playlists, 48

customising, 48

listening to music, 33

synchronising, 48

- namecards 40
- offline profile 21
- phone lock 26
- photos
 - advanced capturing, 43
 - basic capturing, 31
 - editing, 55
 - viewing, 31
- radio
 - see FM radio
- ringtone 25
- Samsung Kies 47
- shortcuts 26
- silent profile 25
- SIM card 17
- SOS message 53
- stopwatch
 - see tools, stopwatch
- synchronisation
 - creating a profile, 60
 - starting, 60
- task 63
- templates
 - inserting, 41
 - multimedia, 41
 - text, 41
- text
 - creating memos, 63
 - entering, 29
 - messages, 28
- theme 26
- timer
 - see tools, countdown timer
- tools
 - alarm, 62
 - calculator, 62
 - calendar, 64
 - convertor, 62
 - countdown timer, 63
 - image editor, 55
 - mobile blog, 58
 - stopwatch, 63
- videos
 - capturing, 32
 - viewing, 32
- voice memos
 - playing, 55
 - recording, 55

volume

- call volume, 27
- key tone volume, 25

wallpaper 26**web browser**

- adding bookmarks, 35
- launching homepage, 34

Windows Media Player 48**world clock**

- creating, 61
- setting dual display, 61

Declaration of Conformity (R&TTE)

We, **Samsung Electronics**

declare under our sole responsibility that the product

GSM_WCDMA Mobile Phone : GT-S5530

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950- 1 : 2001 +A11:2004
EMC	EN 301 489- 01 V1.6.1 (09-2005)
	EN 301 489- 01 V1.8.1 (04-2008)
	EN 301 489- 07 V1.3.1 (11-2005)
	EN 301 489- 17 V2.1.1 (05-2009)
	EN 301 489- 24 V1.4.1 (09-2007)
SAR	EN 50360 : 2001
	EN 62209-1 : 2006
RADIO	EN 301 511 V9.0.2 (03-2003)
	EN 300 328 V1.7.1 (10-2006)
	EN 301 908- 1 V3.2.1 (05-2007)
	EN 301 908- 2 V3.2.1 (05-2007)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[V] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House,
Churchfield Road,
Walton-on-Thames,
Surrey, KT12 2TD, UK*
Identification mark: 0168



The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*
2010. 06. 10



Joong-Hoon Choi / Lab Manager

(place and date of issue)

(name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

SAMSUNG ELECTRONICS



www.samsungmobile.com

Printed in Korea
Code No.:GH68-28176A
English (EU). 07/2010. Rev. 1.4