



ENGLISH

LG-E730 User Guide

This guide helps you to get started using your phone.

- Some of the contents of this manual may not apply to your phone, depending on the software and your service provider.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright ©2011 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities. All other trademarks are the property of their respective owners.
- Google™, Google Maps™, Gmail™, YouTube™, Google Talk™ and Android Market™ are trademarks of Google, Inc.



Getting to know your phone

Before you start using the phone, please read this!

Please check to see whether any problems you encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone memory

When there is less than 10% of space available in your phone memory, your phone cannot receive new messages. You need to check your phone memory and delete some data, such as applications or messages, to

make more memory available.

To uninstall applications:

- 1 **Applications > Settings > Applications > Manage applications**
- 2 Once all applications appear, scroll to and select the application you want to uninstall.
- 3 Touch **Uninstall**.

2. Optimising battery life

Extend your battery's life between charges by turning off features that you don't need to have running constantly in the background. You can monitor how applications and system resources consume battery power.

Extending your phone's battery life:

- Turn off radio communications you are not using. If you are not using Wi-Fi, Bluetooth or GPS, turn them off.
- Reduce screen brightness and set a shorter screen timeout.

- Turn off automatic syncing for Google Mail™, Calendar, Contacts and other applications.
- Some applications you have downloaded may reduce battery power.

To check the battery power level:

- **Applications > Settings > About phone > Status**

The battery status (charging or not charging) and level (percentage charged) is displayed at the top of the screen.

Getting to know your phone

To monitor and control how battery power is being used:

- **Applications > Settings > About phone > Battery use**

Battery usage time is displayed at the top of the screen. It tells you how long it has been since you last connected your phone to a power source or, if currently connected, how long the phone was last running on battery power. The screen shows the applications or services using battery power, listed in order from the greatest to smallest amount used.

3. Before installing an open source application and OS

WARNING

If you install and use an OS other than the one provided by the manufacturer it may cause your phone to malfunction. In addition, your phone will no longer be covered by the warranty.

 **WARNING**

To protect your phone and personal data, only download applications from trusted sources, such as Android Market™. If there are improperly installed applications on your phone, it may not work normally or a serious error may occur. You must uninstall those applications and all associated data and settings from the phone.

4. Using the hard reset (Factory reset)

If your phone needs to be restored to its original condition, use hard reset to reboot your phone.

1. When the phone is switched off, press and hold the **Volume down key + Power key** with your left hand.
2. When the LED on the bottom of the phone lights up, touch and hold the **Menu key + Back key** with your right hand. You need to do this immediately, before the screen displays the LG logo. Make sure your left

Getting to know your phone

hand is still holding the Volume down and Power keys.

3. When the LG logo is displayed on the screen, continue to hold the keys for around 2 seconds, and then release all them at the same time, before the LG logo disappears.

Leave your phone for at least a minute while the hard reset is carried out. You will then be able to switch your phone back on.

Caution: If you perform a hard reset, all user applications and user data will be deleted. This cannot be reversed. Remember to back up any important data before performing a hard reset.

5. Using a microSD card

Pictures, music and video files, can only be saved to external memory.

Before using the built-in camera, you will need to insert a microSD memory card into your phone.

If you don't insert a memory card, you cannot save the pictures or videos you take with the camera.

6. Opening and switching applications

Multitasking is easy with Android because you can keep more than one application running at the same time. There's no need to quit an application before opening another. Use and switch between several open applications. Android manages each application, stopping and starting them as needed to ensure that idle applications don't consume resources unnecessarily.

To stop applications:

- 1 **Applications > Settings > Applications > Manage applications**
- 2 Scroll to the desired application and touch **Stop** to stop it.

TIP! To return to recent apps Press and hold the **Home** key. The screen then displays a list of applications you have recently used.

Getting to know your phone

7. Installing LG PC Suite

LG PC Suite IV is a program that helps you connect your mobile phone to a PC using a USB data communication cable. Once connected, you can use the functions of your mobile phone on your PC.

Major functions of LG PC Suite IV

- Easily create, edit and delete phone data
- Synchronise mobile phone data with PC data (contacts, calendar, SMS messages, bookmarks and call log)
- Easily transfer multimedia files (photos, videos, music) by simply dragging and dropping between a PC and your phone
- Transfer SMS messages from your phone to a PC
- Software update without losing your data

LG-E730 does not support the following functions:

- LG Air Sync (Web Sync, R-Click)
- To-do in Calendar
- Memo
- Java application

Installing LG PC Suite from your microSD

- 1** Insert your microSD memory card into your phone. (It may already be inserted)
- 2** Before connecting the USB data cable, make sure that **Mass storage only** mode is enabled on your phone. (In the applications menu, choose **Settings** > **Storage** > **Mass storage only** check box.)
- 3** Use the USB data cable to connect your phone to the PC.
- 4** In the status bar, drag the USB icon. Choose USB connected and Turn on USB

storage. Then select "ok" to confirm. You can view the mass storage content on your PC and transfer files.

- 5** Copy the LGPCSuiteIV folder from mass storage to your PC.
- 6** Run the LGInstaller.exe file on your PC and follow the instructions.
- 7** When LG PC Suite IV installation is complete, disable **Mass storage only** mode to run LG PC Suite IV.

Or you can download the program from the LG website (www.lg.com). Go to www.lg.com and select your region, country and language.

Getting to know your phone

NOTE: Do not remove or delete other program files installed on your memory card. This may damage your preinstalled applications.

8. Synchronising your phone to a computer via USB

NOTE: To synchronise your phone with your PC using the USB cable, you need to install LG PC Suite onto your PC. Please refer to previous pages to install LG PC Suite.

- 1** Use the USB cable to connect your phone to a USB port on your computer. Once connected, you will receive a notification that a USB connection has been made.
- 2** Open the notification drawer and touch USB connected.
- 3** Touch **Turn on USB storage** and select "Ok" to confirm that you want to transfer files between your phone's microSD card and the computer.

You will receive a notification when the phone connects as USB storage. You can now copy files to and from the microSD card.

TIP! To use the microSD card on your phone again, you need to open the notification drawer and touch **Turn off USB storage**.

During this time, you can't access the microSD card from your phone, so you can't use applications that rely on the microSD card, such as Camera, Gallery and Music.

To disconnect your phone from the computer:

Open the notification drawer and touch **Turn Off USB Storage** to disconnect your phone from the computer safely.

9. Hold your phone upright

Hold your mobile phone vertically, as you would a regular phone. The LG-E730 has an internal antenna. Be careful not to scratch or damage the back of the phone, as this may affect performance.

Getting to know your phone

While making/receiving calls or sending/receiving data, avoid holding the lower part of the phone where the antenna is located. Doing so may affect call quality.

10. When the screen freezes

If the screen freezes or the phone does not respond when you try to operate it:

 
Remove the battery, reinsert it, then turn the phone on.

OR


Press and hold the **Power/Lock** key for 10 seconds to turn it off.

If it still does not work, please contact the service centre.

Device components


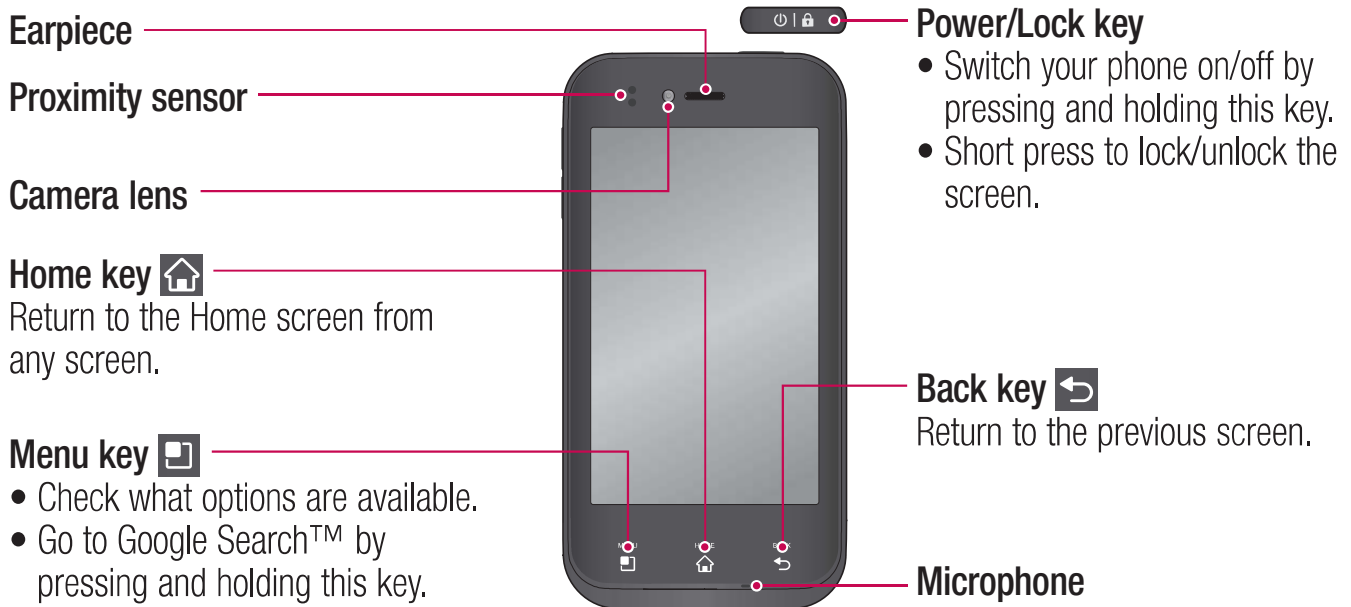


Getting to know your phone

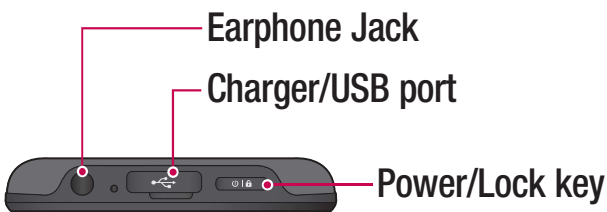 

Volume keys

  
- In the Home screen: Control ringer volume.
- During a call: Control your earpiece volume.
- When playing a track: Control volume continuously.

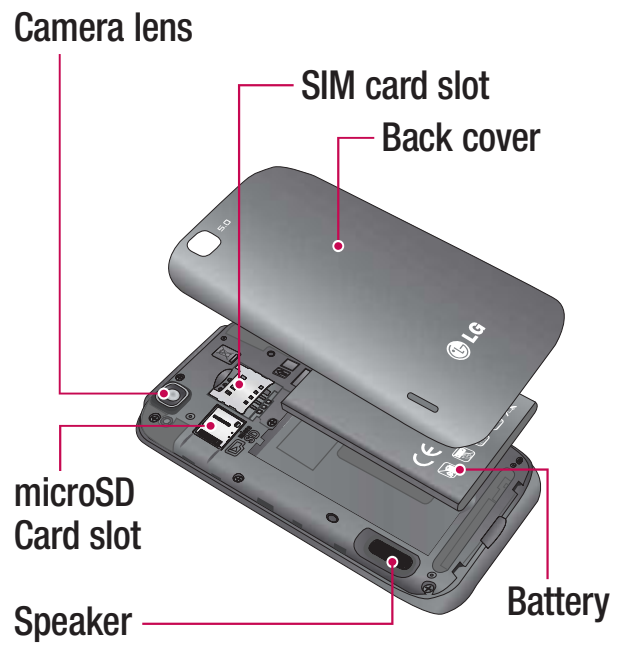

Your Home screen

Notification drawer

 The notification drawer runs across the top of your screen.

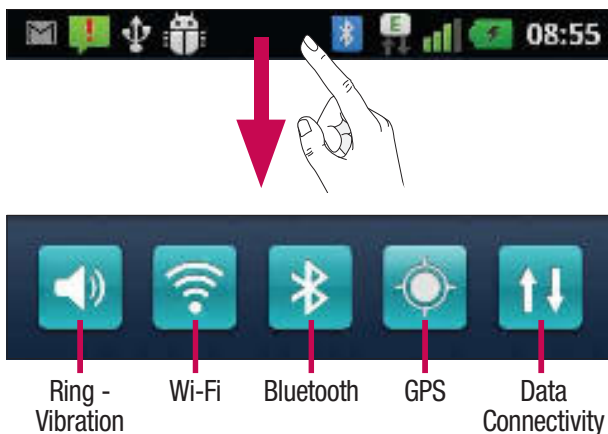

Touch and slide the notification drawer down with your finger.

Or, on the Home screen, press the **Menu** key and select **Notifications**. Here you can check and manage sound, Wi-Fi, Bluetooth and GPS as well as other notifications.







Viewing the status bar







The status bar uses different icons to display phone information such as signal strength, new messages, battery life, active Bluetooth and data connections.













 



Your Home screen

Below is a table explaining the meaning of icons you're likely to see in the status bar.








Icon	Description
	No SIM card
	No signal
	Airplane mode
	Connected to a Wi-Fi network
	Wi-Fi Direct is on
	Wired headset




 


Icon	Description
	Call in progress
	Call hold
	Speakerphone
	Phone microphone is muted
	Missed call
	Bluetooth is on

Icon	Description
	Connected to a Bluetooth device
	System warning
	Alarm is set
	New voicemail
	Ringer is silenced
	Vibrate mode
	Battery fully charged

Icon	Description
	Battery is charging
	Data in and out
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is acquiring
	Receiving location data from GPS

Your Home screen

Icon	Description
	On-Screen Phone connected
	3 more notifications not displayed
	Data is syncing
	Download finished
	New Gmail
	New Google Talk message
	New message

Icon	Description
	Song is playing
	Upcoming event
	FM radio turned on in the background
	USB tethering is active
	Portable Wi-Fi hotspot is active
	Both USB tethering and portable hotspot are active

Google account set up

When you first turn on your phone, you have the opportunity to activate the network, to sign into your Google Account and how you want to use some Google services.

To set up your Google account:

- Sign into a Google Account from the prompted set up screen.

OR

- **Applications** > select a Google application, such as **Gmail** > select **Create** to create a new account.

If you have a Google account, enter your email address and password, then touch **Sign in**.

Once you have set up your Google account on your phone, your phone automatically synchronises with your Google account on the web.

Your contacts, Gmail messages, Calendar events and other information from these applications and services on the web are synchronised with your phone. (This depends on your synchronisation settings)

After signing in, you can use Gmail™ and take advantage of Google services on your phone.

Connecting to Networks and Devices

Wi-Fi

With Wi-Fi, you can use highspeed Internet access within the coverage of the wireless access point (AP). Enjoy wireless Internet using Wi-Fi, without extra charges.

Connecting to Wi-Fi networks

To use Wi-Fi on your phone, you need to access a wireless access point or "hotspot". Some access points are open and you can simply connect to them. Others are hidden or use security features; you must configure your phone to be able to connect to them.

Turn off Wi-Fi when you're not using it to extend the life of your battery.

NOTE: If you are out of the Wi-Fi zone or set Wi-Fi to **OFF**, additional charges may be applied by your mobile operator for mobile data use.

Turning Wi-Fi on and connecting to a Wi-Fi network

- 1 **Applications > Settings > Wireless & networks > Wi-Fi settings.**

- 2 Touch **Wi-Fi** to turn it on and start scanning for available Wi-Fi networks.
- A list of available Wi-Fi networks is displayed. Secured networks are indicated by a lock icon.
- 3 Touch a network to connect to it.
- If the network is open, you are asked to confirm that you want to connect to that network by touching **Connect**.

- If the network is secured, you are prompted to enter a password or other credentials. (Ask your network administrator for details)
- 4 The status bar displays icon that indicate Wi-Fi status.

Bluetooth

You can use Bluetooth to send data by running a corresponding application, not from the Bluetooth menu as on most other mobile phones.

Connecting to Networks and Devices

TIP! With LG-E730, you can enjoy Bluetooth high speed.

If the device you want to share files with also supports high speed Bluetooth, the files will automatically be transferred via the high-speed network. To use Bluetooth high speed data transfer, please make sure the Wi-Fi is OFF on your devices before use. The settings for Bluetooth high speed may be different depends on the device. Please check the device's settings with their service provider.

Turning on Bluetooth and pairing up your phone with a Bluetooth device

- 1 Applications > Settings > Wireless & networks > Bluetooth > ON**
- 2 Go to Bluetooth settings > Scan for devices**
- 3 Choose the device you want to pair up with from the list.**

Once the pairing is successful, your device will connect to the device.

If the device you want to pair up with is not on the list, make sure that target device is set to be **Discoverable**, then scan again.

Sending pictures using Bluetooth

- 1** Select a picture > Menu > Share > Bluetooth
- 2** Check whether **Bluetooth** is **ON**, then select **Scan for devices**.
- 3** Choose the device you want to send data to from the list.

Camera

 
Getting to know the viewfinder



- 1 **Switch lenses** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 **Zoom** – Zoom in or zoom out. Alternatively you can use the side volume keys.
- 3 **Brightness** – This defines and controls the amount of sunlight entering the image.
- 4 **Scene mode** – Choose from **Auto**, **Portrait**, **Landscape**, **Sports**, **Night** and **Sunset**.
- 5 **Settings** – Touch this icon to open the Settings menu.
- 6 **Video mode** – Slide this icon down to switch to video mode.
- 7 **Taking a photo**
- 8 **Gallery** – Touch to view the last photo you captured. This enables you to access your gallery and view saved photos within camera mode.

Video camera

Getting to know the viewfinder

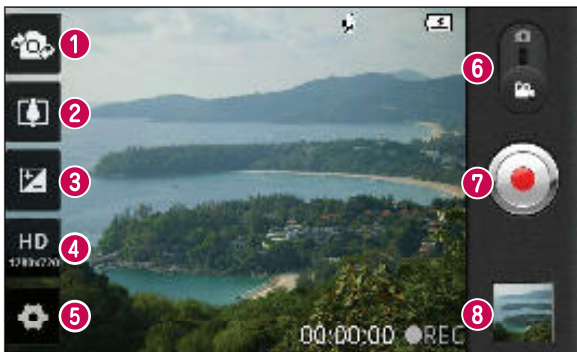

- 1 **Switch lenses** – Switch between the rear-facing camera lens and the front-facing camera lens.
- 2 **Zoom** – Zoom in or zoom out. Alternatively you can use the side volume keys.
- 3 **Brightness** – This defines and controls the amount of sunlight entering the video.
- 4 **Video size** – Touch to set the size (in pixels) of the video you record.
- 5 **Settings** – Touch this icon to open the settings menu.
- 6 **Camera mode** – Slide this icon up to switch to camera mode.
- 7 **Start recording**
- 8 **Gallery** – Touch to view the last video you recorded. This enables you to access your gallery and view your saved videos from within video mode.

