




Dell Venue Pro 11 – 5130

User's Guide

Regulatory Model: T06G
Regulatory Type: T06G001



Notes, Cautions, and Warnings

-  **NOTE:** A NOTE indicates important information that helps you make better use of your computer.
-  **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.
-  **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

© 2013 Dell Inc. All Rights Reserved.

Trademarks used in this text: Dell™, the DELL logo, Venue™, and Wi-Fi Catcher™ are trademarks of Dell Inc. Intel®, Xeon®, Core™, and Atom™, are registered trademarks or trademarks of Intel Corporation in the U.S. and other countries. Microsoft®, Windows®, MS-DOS®, Windows Vista®, the Windows Vista start button, and Office Outlook® are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Wi-Fi® is a registered trademark of Wireless Ethernet Compatibility Alliance, Inc.

2013 -10

Rev. A00

Contents

1 Working on Your Tablet.....	5
Before Working Inside Your Tablet.....	5
Turning off Your Tablet.....	6
2 Setting Up Your Tablet.....	9
Charging the Tablet.....	9
Turning On Your Tablet.....	10
Turning off the Screen.....	11
Using power buttonUsing Charms.....	11
3 Using Your Tablet.....	13
Screen Orientation.....	13
How to lock the screen orientation.....	13
Gestures.....	14
Right-Click.....	15
The Windows Start Screen.....	15
How to access the Start screen.....	16
Get to know Windows 8.1.....	16
Swipe Right.....	16
Swipe Left.....	16
Swipe Up/Down.....	17
Split Screen.....	17
Using Headphones.....	17
Removing the Micro-SD card.....	18
Installing the micro-SIM Card.....	19
4 Managing your tablet settings.....	21
Wi-Fi setting.....	21
Turning On/Off Wi-FiConnecting to a network.....	21
Mobile broadband setting.....	22
Turning On/Off mobile broadbandConnecting to a mobile broadband networkDisconnecting from mobile broadband networkMobile broadband optionsService Provider hardware informationEnabling PIN lock.....	22
Refreshing / Recovering / Re-setting your tablet.....	25
Refresh your PC without affecting your filesRemove everything and re-install WindowsAdvanced startup.....	25
5 Synchronizing your tablet.....	27


Using Microsoft account.....	27
Copying music, photos, and videos.....	27
6 Optional Stylus Features.....	29
Getting Your Stylus Ready for Use.....	29
Using the Optional Stylus with Your Tablet	30
7 Desktop Dock Features.....	31
Connecting the Power Adapter.....	32
8 Thin Travel Keyboard Dock Features.....	33
Docking Your Tablet to the Thin Travel Keyboard Dock	33
9 Mobile Keyboard Dock Features.....	35
Docking Your Tablet to the Keyboard Dock	35
Undocking Your Tablet from the Keyboard Dock.....	36
Charging the dock.....	36
Battery behavior.....	37
10 Cleaning Your Tablet.....	39
11 Troubleshooting.....	41
Battery problem.....	41
System problem.....	42
Touchscreen problem.....	42
Network problem.....	43
12 System Setup.....	45
System Setup (BIOS) Options.....	45
Updating the BIOS	52
13 Specifications.....	55
14 Contacting Dell.....	59


Working on Your Tablet


Before Working Inside Your Tablet


Use the following safety guidelines to help protect your tablet from potential damage and to help to ensure your personal safety. Unless otherwise noted, each procedure included in this document assumes that the following condition exists:


- You have read the safety information that shipped with your tablet.


 **WARNING:** Before working inside your tablet, read the safety information that shipped with your tablet. For additional safety best practices information, see the Regulatory Compliance Homepage at www.dell.com/regulatory_compliance

 **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

 **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface, such as a connector on the back of the tablet.


 **CAUTION:** Handle components and cards with care. Do not touch the components or contacts on a card. Hold a card by its edges or by its metal mounting bracket.

 **CAUTION:** When you disconnect a cable, pull on its connector or on its pull-tab, not on the cable itself. Some cables have connectors with locking tabs; if you are disconnecting this type of cable, press in on the locking tabs before you disconnect the cable. As you pull connectors apart, keep them evenly aligned to avoid bending any connector pins. Also, before you connect a cable, ensure that both connectors are correctly oriented and aligned.

 **NOTE:** The color of your tablet and certain components may appear differently than shown in this document.

To avoid damaging your tablet, perform the following steps before you begin working inside the tablet.

1. Ensure that your work surface is flat and clean to prevent the tablet cover from being scratched.
2. Turn off your tablet (see [Turning Off Your Tablet](#)).
3. If the tablet is connected to a docking device (docked) such as the optional docking station or keyboard dock, un-dock it.
4. Disconnect the power adapter from the tablet.
5. Turn the tablet upside-down on a flat work surface.

 
 **NOTE:** To avoid damaging the system board, you must remove the main battery before you service the tablet.


6. Remove the main battery.



7. Press and hold the power button for a few seconds to remove the flea power from the system board.
 - ⚠ **CAUTION:** To guard against electrical shock, always unplug your tablet from the electrical outlet.
 - ⚠ **CAUTION:** Before touching anything inside your tablet, ground yourself by touching an unpainted metal surface, such as the metal at the back of the tablet. While you work, periodically touch an unpainted metal surface to dissipate static electricity, which could harm internal components.
8. Remove the storage SD card from the tablet.

Turning off Your Tablet

Turning off your tablet completely shuts down your tablet. You can turn off your tablet by two ways:

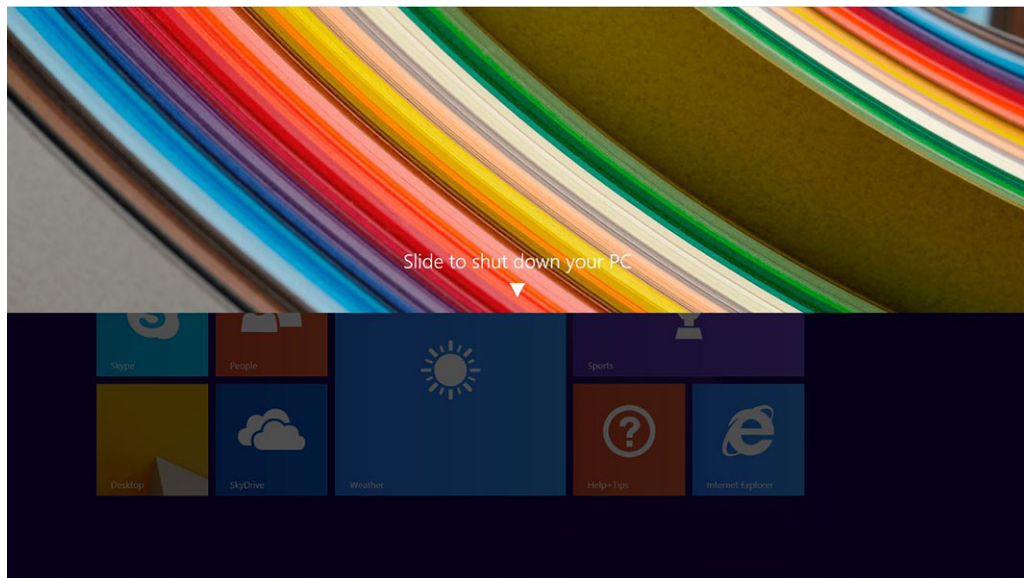- Using power button
 - Using charms menu
1. To turn off your tablet using power button:
 - a) Press and hold the **Power** button  for more than 10 seconds.
 - b) Windows displays a confirmation to shut down your tablet.






- c) Slide to shut down your tablet.
 - ✎ **NOTE:** You can also turn off your tablet without sliding down the screen. Press the **Power** button again to turn off your tablet.
2. To turn off your tablet using the charms menu:
 - a) Swipe from the right edge of the display to access the **Charms** menu.
 - b) Touch **Settings**  → **Power**  → **Shut down** to turn off the tablet.



Setting Up Your Tablet

Charging the Tablet

-  **CAUTION:** Charge the battery in an ambient temperature of 0 °C to 40 °C.
-  **CAUTION:** Use only the power adapter and power cable that came with your tablet. Using unauthorized power adapters or power cables may cause severe damage to your tablet.
-  **NOTE:** The battery is not fully charged when you unpack your tablet.

1. Connect the power cable into the power adapter.

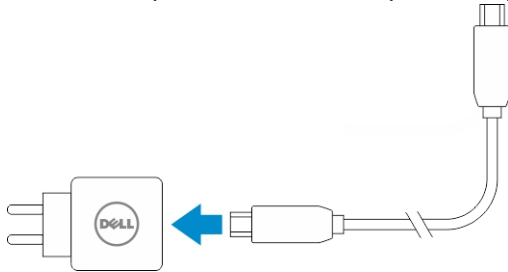




Figure 1.

2. Connect the power adapter to an electrical outlet and charge the tablet until the battery is fully charged.

-  **NOTE:** The tablet battery requires about 4 hours to fully charge.
-  **NOTE:** You can also trickle charge the tablet via micro-USB connection. The battery takes up to 24 hours to fully charge depending on the power output of the USB port. The trickle charging also works with other non-Dell adapters.

You can check the tablet battery charge status from:

- Battery-charge light located on the front of the tablet:







LED Behavior	Description
Solid white color on	Battery is charging.
Off	Battery is not charging. Either no AC adapter is connected or battery is fully charged.
Amber color on Momentarily	<ul style="list-style-type: none"> – The LED will be solid amber for 2 seconds and then change to solid white. This is an indication that the system cannot power on with the current state of charge, but the battery is being charged. – Battery is charging

LED Behavior	Description
--------------	-------------

- The tablet will not power on.

 
NOTE: You can check the exact battery charge level by booting to the operating system.

- Battery icons displayed on the screen:


Battery icon	Description
	Battery is fully charged and AC adapter is connected.
	Battery is charging with AC adapter.
	Your tablet is running on battery power and the battery is discharging.
	Your tablet is plugged in, and either no battery is detected or the battery is not working correctly.
	Battery is at low level.
	Battery is at critical level.

Turning On Your Tablet


NOTE: Use this tablet in an ambient temperature between 0 °C and 40 °C.

1. Press and hold the **Power** button  for 2 seconds to turn on your tablet.
2. If the lock screen image displays, swipe your finger from the bottom of the display to switch to the login screen, and then enter password to log in to Windows.

The tablet is ready for use after the Windows Start screen displays.

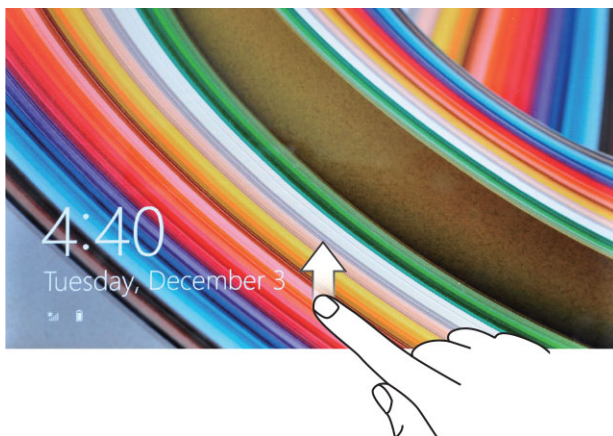

NOTE: If the login screen is not enabled in Windows 8.1, you will be taken directly from the lock screen to the start screen.



 **NOTE:** The lock screen is only displayed when returning from a sleep state.


 

Turning off the Screen

Using power button

Press the **Power** button  to turn off the screen.

Using Charms


1. Swipe from the right edge of the display to access the Charms.
2. Touch **Settings**  → **Power**  → **Sleep** to turn off the screen.

 **NOTE:** If your tablet is in a sleep state (tablet is on, but screen is off), press the **Power** button  or **Windows** button  once to turn on the screen.





Using Your Tablet


Screen Orientation

For optimal viewing experience, the screen orientation changes automatically to portrait or landscape format depending on how you hold the tablet.

 **NOTE:** Some applications may not support automatic screen rotation to portrait or landscape format.


How to lock the screen orientation

1. Swipe from the right edge of the display to access the Charms sidebar.
2. Touch **Settings**  → **Screen** .
3. Touch  toggle to lock the screen orientation, or touch  toggle to unlock the screen orientation.

You can also adjust the screen brightness here by using the slider under the toggle  menu.





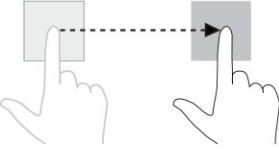
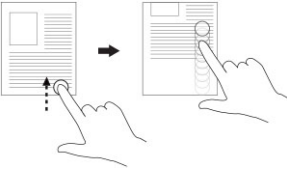
You can also adjust your screen automatically. To adjust the screen brightness automatically:

1. Swipe from the right edge of the display to access the Charms sidebar.
2. Touch **Settings**  → **PC settings** → **PC and devices** → **Power and sleep**.


3. Under Brightness, slide left or right to turn on / turn off the automatic brightness option.

Gestures


Your tablet has a multi-touch display. You can touch the screen to operate the tablet.

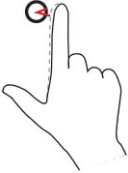Finger Gestures	Allows you to:
<p>Touch</p>  <p>Tap gently on the display with your fingertip.</p>	<ul style="list-style-type: none">• Select items on the screen, including options, entries, images, and icons.• Start applications.• Touch buttons on the screen.• Input text using the on-screen keyboard.
<p>Touch and Hold</p>  <p>Touch and hold your finger on the display.</p>	<ul style="list-style-type: none">• Display detailed information about an item.• Open the context menu of an item to perform further actions.
<p>Drag</p>  <ol style="list-style-type: none">1. Touch and hold your finger on an item on the screen.2. Keeping your finger in contact with the display, move your fingertip to the desired location.3. Take your finger off the display to drop the item in the desired location.	<ul style="list-style-type: none">• Move item such as images and icons on the screen.
<p>Swipe or Slide</p>  <p>Move your finger in a vertical or horizontal direction on the display.</p>	<ul style="list-style-type: none">• Scroll through the Start screen, web pages, lists, entries, photos, contacts, and so on.• Close an app. (Swipe the app to the bottom of the display.)
<p>Zoom in</p>	<ul style="list-style-type: none">• Enlarge the view of an image or web page.


Finger Gestures

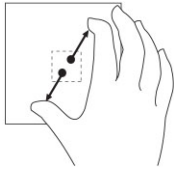Allows you to:

Touch the display with two fingers and then move the fingers apart.

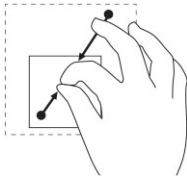Zoom out

Touch the display with two fingers and then move the fingers closer.

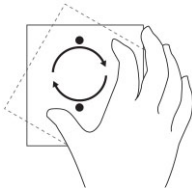Rotate

Touch the display with two or more fingers and then move the fingers in a clockwise or counter-clockwise arc.

- Reduce the view of an image or web page.

- Rotate an object by 90 degrees.

Right-Click

To perform a right-click in your tablet, Touch and Hold your finger for 2 seconds on any section of the screen or an icon and then release your finger.

The options menu appears on the screen.




The Windows Start Screen

The Windows Start screen displays a list of default and custom Live Tiles, which act as a shortcut to Control Panel, Windows Explorer, Weather app, RSS, Windows Store, Internet Explorer, and other installed applications.

Live Tiles on your Start screen change and update in real time so you can get real-time updates about news or sports, check what your friends are up to, and get the latest weather forecast.



The tile-based user interface gives you direct access to your most recently used applications, Emails, photos, music, videos, contacts, Facebook & Twitter updates, and frequently viewed websites. You can pin desired or favorite apps as Live Tiles to customize the Start screen.

You also can personalize the Start screen by setting your favorite picture as the wallpaper.

 **NOTE:** Live Tiles can be added or removed by using Pin  or Unpin  options.


How to access the Start screen

Follow either method to access the Start screen:

- Press the **Windows** image button. 
- Swipe from the right edge of the display to access Charms, and then touch the **Start** icon. 



Get to know Windows 8.1

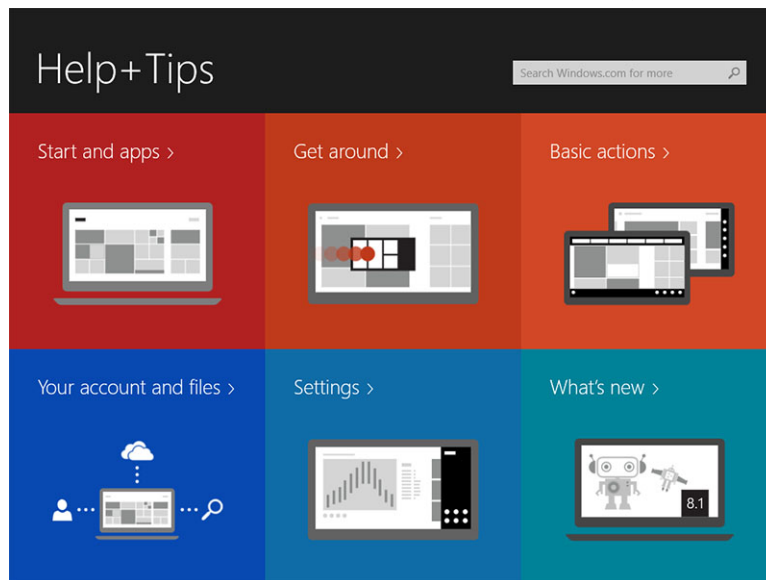You can touch the Help+Tips tile on the Start screen to get help and tips on using Windows 8.1.



Swipe Right

Swiping-in from the right edge of the display reveals Charms. Charms provide access to the system commands, such as Start, Search, Share, Devices, and Settings options.


If your tablet is running on an application or performing actions, pressing the **Start** icon  takes you back to the Start screen. If you are at the Start screen, pressing the **Start** icon  takes you to the most recently used application or most recently viewed screen.

 **NOTE:** The functionality of the **Start** icon  is same as **Windows** button .

Swipe Left


- Swiping-in quickly from the left edge of the display switches the currently running applications.
- Swiping slowly from the left edge to the right edge of the display reveals thumbnails of the open applications and cycles the thumbnails of the open applications.
- Swiping-in and out on the left edge of the display brings up a list of the most recently used applications.

Swipe Up/Down

 
 
- Swiping-in from the bottom or top edge of the display reveals the **All apps** icon . Touch **All apps** to show an alphabetical list of all applications installed on your tablet.
- Swiping-in from the top to the bottom of an app docks or closes the application.

For more information on using Windows Start screen, see <http://windows.microsoft.com/en-us/windows-8/start-screen-tutorial>.

You can also enable the camera (front), when the screen is in lock mode. To enable the camera when the screen is in lock mode:

1. Swipe from the right edge of the display to access the Charms.
2. Click **Settings**  → **Change PC Settings** → **PC and Devices**
3. Scroll down and navigate to **Camera**.
4. Swipe to turn on, to use the camera during the lock screen mode.

To make sure you can use the camera during the lock screen mode:

1. Press **Power**  button to turn off the screen.
2. Press **Power**  button again to enable the lock screen mode.
3. Swipe down to enable the **camera**.

Split Screen


The split screen option enables you to open upto three applications of variable width on the same screen, which helps you in multitasking. To split the screen:

1. Open any two applications that you want to perform the split screen, making sure that any one application is in full screen.
2. Swipe from the left to open the second application and hold your finger until the screen splits into two equal-sized windows.
3. Release your finger to drop the second application.
4. If you want to split the screen with a third application, you can swipe in from the left to open the application and place it alongside the other applications on the split screen.


Using Headphones

You can use 3.5 mm headphones to listen to music and sounds, record audio, or make calls.


 **WARNING: Listening to loud music for extended period of time can lead to hearing loss.**

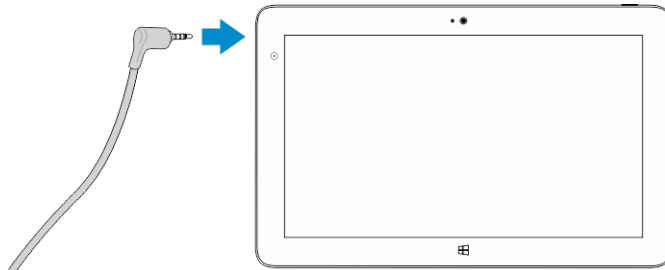


1. Connect the headphones to the audio port (3.5 mm) on the tablet.
2. Insert the earphones in your ears and adjust the volume level to a comfortable level.

 **NOTE:** When you connect an audio device to the 3.5 mm audio jack, the integrated speakers on your tablet are muted automatically.

 **CAUTION:** To prevent damage to the headphones when disconnecting it from the tablet, pull the connector and not the cable.

 **NOTE:** It is recommended that you turn down the volume level before plugging the headphone, and then adjust to a comfortable level. Sudden exposure to loud sounds can cause hearing damage.


Removing the Micro-SD card

 **CAUTION:** Removing the Micro-SD card when transferring data may cause data loss or result in application errors. Make sure your tablet has finished all save operations to the Micro-SD card.

1. Enter the Desktop mode. Touch **Safely Remove Hardware**  in the notification area at the bottom-right corner of the screen.

 **NOTE:** If you don't see **Safely Remove Hardware** , touch **Show Hidden Icons** to display all icons in the notification area.


2. Touch **Eject SD Memory Card**. A message appears confirming that the Micro-SD card can be safely removed. If a warning message appears stating the Micro-SD card cannot be removed, ensure all data transfers involving the Micro-SD card are complete.
3. Insert the tip of a small bent paperclip into the small hole on the micro-SD slot cover.
4. Push the tip all the way into the hole until the micro-SD tray ejects. Pull the micro-SD card tray out.
5. Remove the micro-SD card from the micro-SD slot cover.

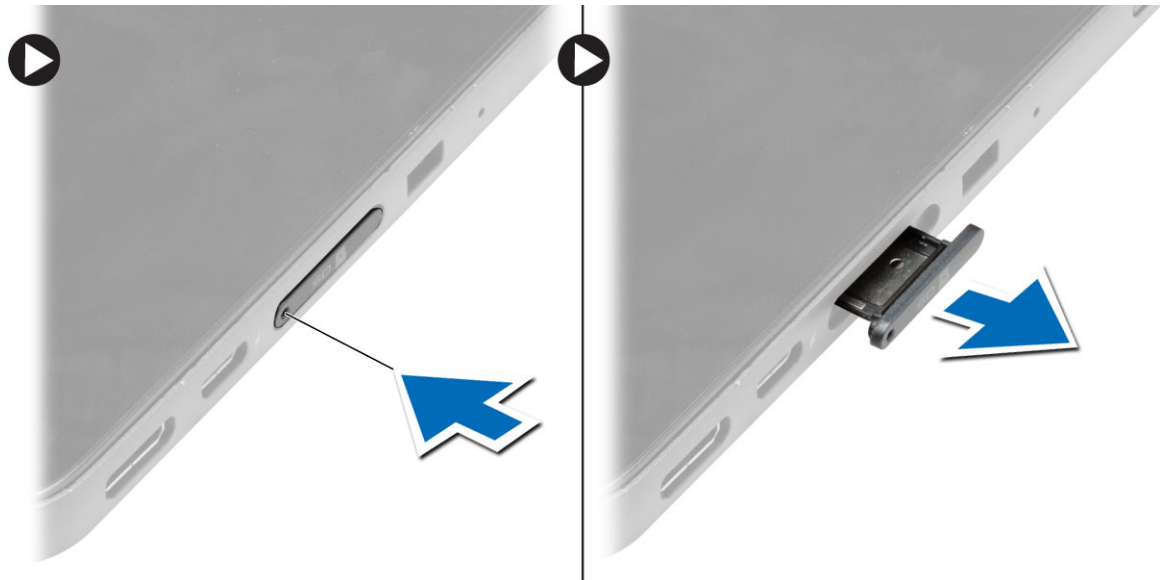


Installing the micro-SIM Card

⚠ CAUTION: Removing the Micro-SIM card when the tablet is on may cause data loss or damage the card. Make sure your tablet is turned off or the network connections are disabled.


1. Turn off your tablet. For more information on turning off your tablet, see [Turning off Your Tablet](#).
2. Pry the base cover in the direction indicated and lift it at an upward angle to remove it from the tablet.

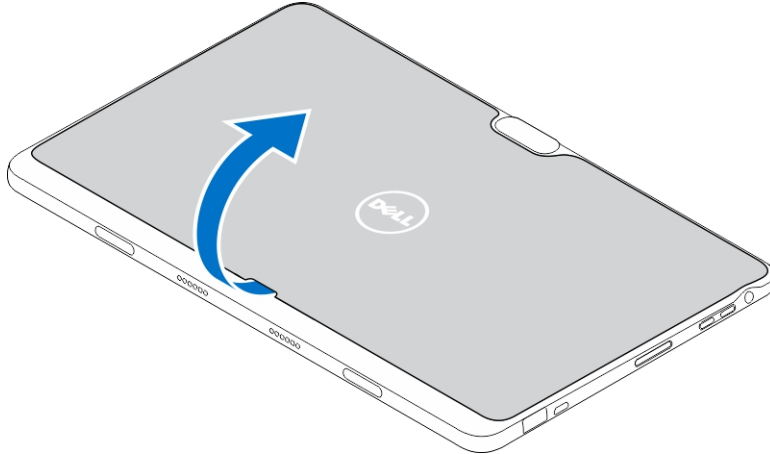

3. Slide the release latch in the direction indicated to unlock the battery. Lift and remove the battery from the tablet.

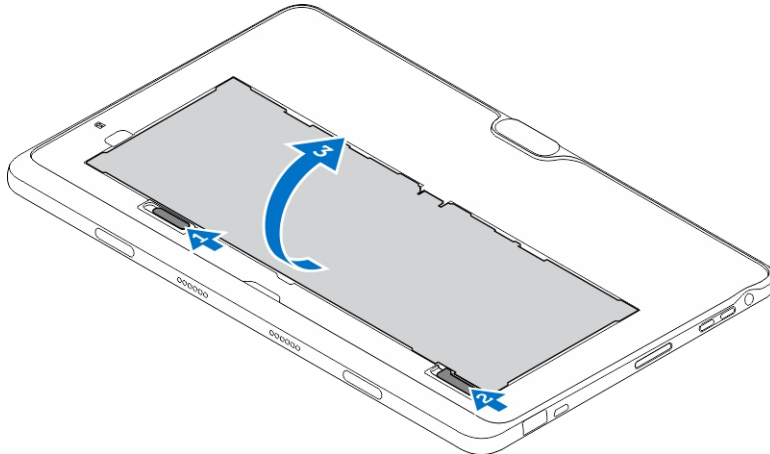


4. Install the micro-SIM card into its slot.

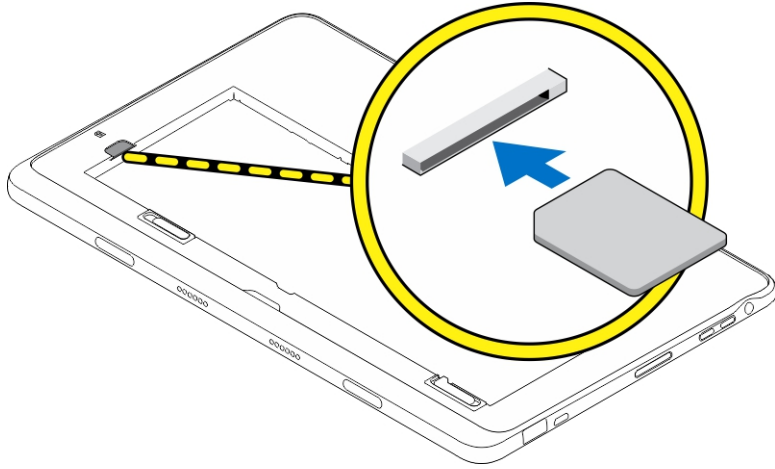


Managing your tablet settings

Wi-Fi setting

Turning On/Off Wi-Fi

1. Swipe from the right edge of the display to access Charms.
2. Touch Settings  → **Change PC settings** → **Networks** → **Airplane mode**.
3. Swipe Wi-Fi icon right or left to turn Wi-Fi on or off.

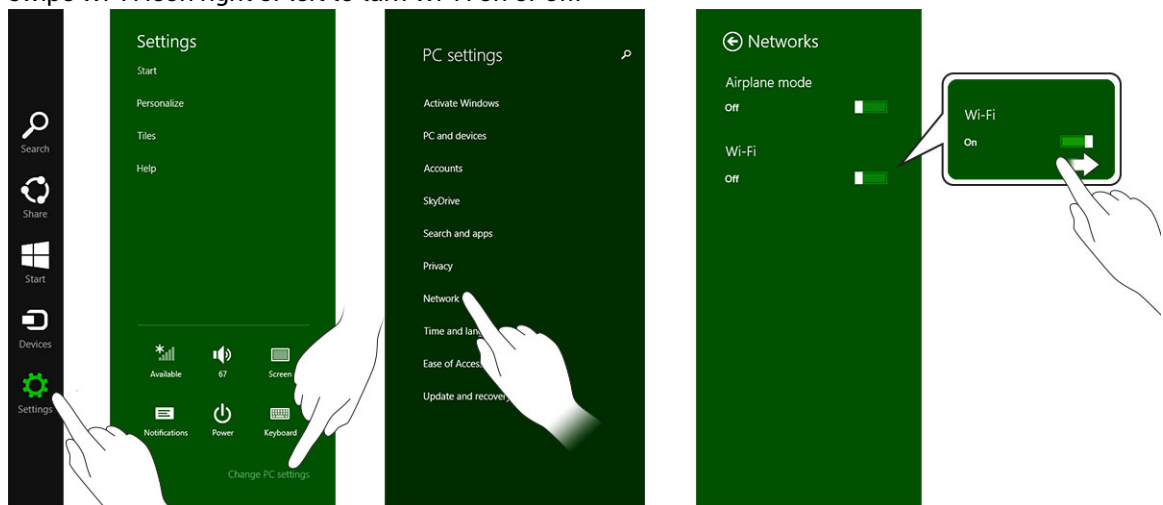

Connecting to a network




1. Swipe from the right edge of the display to access Charms.
2. Touch Settings  → **Available**  → **Select an available network** → **Connect**.

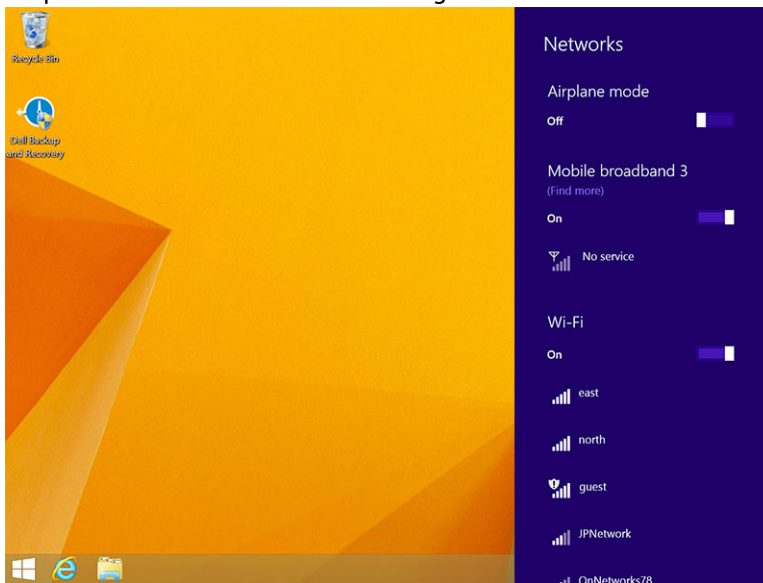


Figure 2.



Mobile broadband setting


Turning On/Off mobile broadband



1. Swipe from the right edge of the display to access Charms.
2. Touch Settings  → Change PC settings → Networks → Airplane mode.
3. Swipe **Mobile broadband** icon left or right to turn mobile broadband on or off.



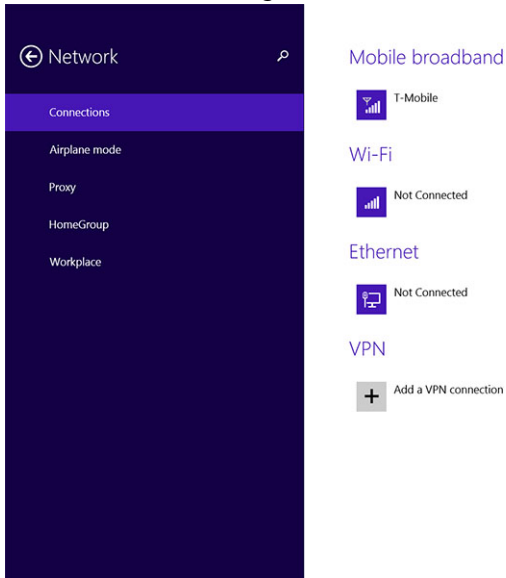

Connecting to a mobile broadband network


1. Ensure an active SIM card is inserted into the tablet.
2. Swipe from the right edge of the display to access Charms.
3. Touch **Setting**  → **Network** → **Connections**  → **Your Service Provider** → **Connect**.
4. The estimated data usage will be shown once the mobile broadband network is enabled.





-  **NOTE:** You can choose the option **Connect automatically** to connect the mobile broadband automatically.
-  **NOTE:** Your tablet will automatically prioritize Wi-Fi networks over mobile broadband networks, when both are available. If your tablet is connected to the mobile broadband and any of saved Wi-Fi connections comes within range, it will disconnect from the mobile network and connect to the Wi-Fi automatically. For more information on turning on Wi-Fi network, see [Wi-Fi setting](#).

Disconnecting from mobile broadband network


1. Swipe from the right edge of the display to access Charms.
2. Touch **Setting**  → **Network**  → **Your Service Provider** → **Disconnect**.

-  **NOTE:** Once your tablet has disconnected from mobile broadband, the option **Connect automatically** will be disabled as well.


Mobile broadband options


1. Swipe from the right edge of the display to access Charms.
2. Touch **Settings**  → **Networks** .
3. Touch and hold **Your Service Provider** or right-click if docked.
 - Touch **Show estimated data usage**/**Hide estimated data usage** to show or hide your data usage.

- Touch **Set as metered connection/Non metered connection** to set a particular connection as a metered/non-metered connection.
- Touch **View connection properties** to view your connected mobile broadband properties.



 **NOTE:** If the option **Set as metered connection** is enabled, Windows Update will not download updates automatically unless it is a high priority, critical security update.

Service Provider hardware information

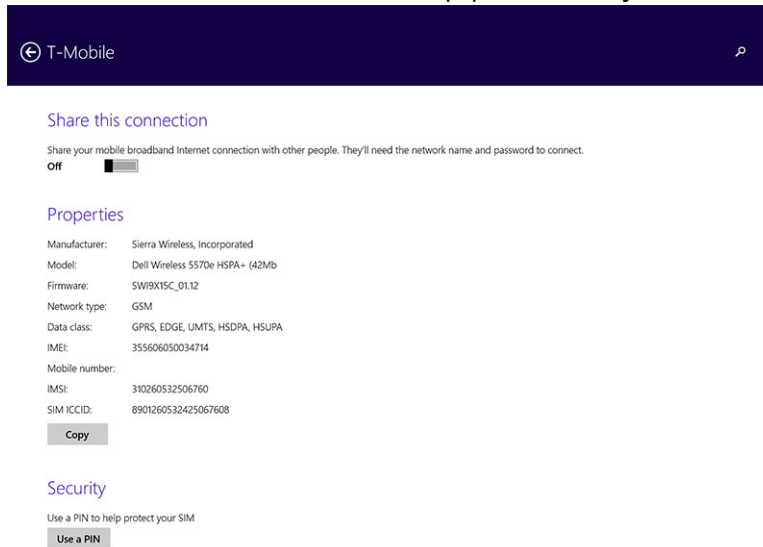
1. Swipe from the right edge of the display to access Charms.
2. Touch **Setting**  → **Change PC settings** → **Network**
3. Touch **Your Service Provider** to view the hardware information including the subscriber information and International Mobile Equipment Identity (IMEI) number.




Enabling PIN lock

1. Swipe from the right edge of the display to access Charms.
2. Touch **Settings**  → **Network** .
3. Touch and hold **Your Service Provider** or right-clicked if docked.
4. Touch **View connection properties** → **Security** → **Use a PIN**.
5. Enter your SIM PIN Code.


 **NOTE:** Your Service Provider refers to the network service providers available in your location.

 **CAUTION:** If you enter the incorrect PIN code, your mobile broadband connection will not be established. If you unsuccessfully enter the code three times, your SIM card will be locked. To unlock the SIM card, contact your carrier to get a Personal Unblocking Key (PUK) to unlock the SIM card.

 **NOTE:** Before you contact your carrier, have your IMEI number ready.

Refreshing / Recovering / Re-setting your tablet

You can refresh / recover / restore your tablet to original factory settings.

1. Swipe from the right edge of the display to access the Charms.
2. Touch **Settings**  → **Change PC Settings** → **Update and recovery** → **Recovery**.
 - **Refresh your PC without affecting your files**
 - **Remove everything and reinstall Windows**
 - **Advanced startup**
3. Select any recovery option to complete the task.

Refresh your PC without affecting your files

This option enables you to refresh your tablet without losing your photos, music, videos, and other personal files. If you want to perform this action:

1. Click **Get started**. The Refresh your PC window opens.
2. Click **Next**.
3. Click **Refresh**.

Click **Cancel** to cancel this action.


Remove everything and re-install Windows

This option enables you to recycle or start over your tablet completely, and you can reset to its default / factory settings. If you want to perform this action:

1. Click **Get Started**. The Rest your PC window opens.
2. Click **Next**.

After you click **Next**, you will now have to select any of the two below options to finish the task:


- **Just remove my files** — If you select this option, Windows removes all your files including your photos, music, videos, and other personal files.
- **Fully clean the drive** — If you select this option, Windows resets your tablet.

 **CAUTION: Resetting your tablet erases all data from your tablet, including your account configuration, music, pictures, files, and so on. Ensure that you back up all the required data before you proceed.**

Click **Cancel** to cancel this action.

Advanced startup

This option enables you to start up from a device or compact disc (such as DVD or USB drive) and change your tablet's firmware settings, change Windows startup settings, or restore Windows from the system image. If you want to perform this action, click **Restart Now**.



 **NOTE:** Third-party apps will be removed.

Synchronizing your tablet

Using Microsoft account

If your computer has Microsoft Windows 8.1 installed, you can synchronize user settings of your tablet with your computer using a Microsoft account. When you sign in with your Microsoft account on your tablet, you can automatically synchronize your settings, including internet browser history, application settings, and personal files etc., with other Windows 8.1 PCs and Windows 8.1 tablets.

 **NOTE:** You need a wireless connection for both your computer and tablet.

1. Go to Charms, then click **Settings**  → **PC Settings** → **Accounts** → **Switch to a Microsoft account** to switch your computer local account to your Microsoft account.
2. A new option will be added to **PC Settings** called **Sync your settings**.
3. Click **Settings**  → **PC Settings** → **More PC Settings** → **Sync your settings** to show all kind of toggles for synchronizing your data and settings.

Copying music, photos, and videos

1. Connect a USB key or a Micro-SD card to the computer and copy the required files.
2. After the copy is complete, use the **Safely Remove Hardware** wizard to remove your tablet from the computer.
3. You can also use the Skydrive feature of Win 8.1 to copy music, photos, and videos.

Optional Stylus Features

This section provides information about the features available on the Stylus.

 


Figure 3.

Table 1.

Feature	Functionality
1 Pen lead	Provides touch functionality.
2 Pen button	Used to perform a left-click and right-click.
3 Middle barrel	Provides access to the battery compartment.
4 Pen clip / Pen rear cap	Used to secure the stylus in your pocket.

 **NOTE:** The Stylus is optional and is sold separately.

Getting Your Stylus Ready for Use

1. Twist the middle barrel in a counter clockwise direction.




Figure 4.

2. Insert a AAAA battery with the positive side facing the tip of the pen.



Figure 5.

 **NOTE:** Follow your local and regional statutes and regulations on disposal of battery waste.

3. Re-assemble the barrel securely.

 


Figure 6.

Using the Optional Stylus with Your Tablet

The Stylus is ergonomically designed to work with your tablet for long time periods. The user can seamlessly switch between pen and finger entry without any manual mode switching. The stylus supports features such as palm rejection, hovering, and pressure sensing, which allow for industry leading accuracy and ease of use with no calibration necessary. The two buttons are software configurable for using features such as erasing, highlighting, or performing mouse clicks. You can use the tip of the stylus to draw shapes, select text, turn a page and write or sign the documents on your tablet.

You can also press the button on the side of the stylus to perform the left-click and right-click functions on your tablet.

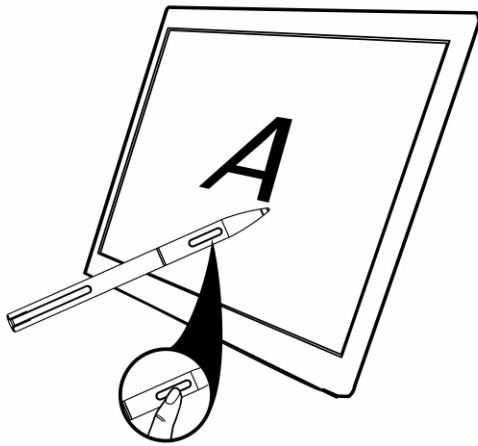


Figure 7.

Desktop Dock Features

This section provides information about the features available on the Desktop dock.

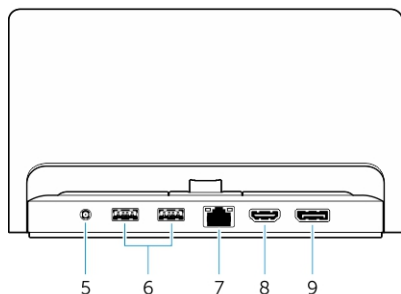
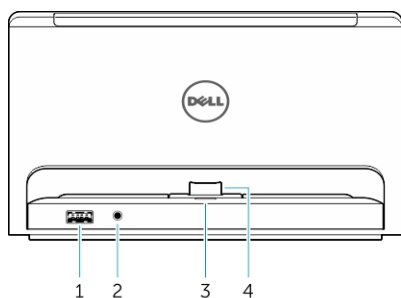



Table 2.


Feature	Functionality
1 USB 3.0 connector	Connect USB devices, such as flash memory.
2 Audio connector	Connect headphones or external speakers.
3 Power status light	Indicates the power status.
4 Docking connector	Connect the docking connector on the tablet.
5 Power connector	Connect the AC adapter.
6 USB 3.0 connectors	Connect USB devices, such as flash memory.
7 Network connector	Connect an Ethernet cable for internet access.
8 HDMI connector	Connect HDMI-capable devices such as projectors, TV's, and monitors.
9 DisplayPort connector	Connect DisplayPort-capable devices such as projectors, TV's, and monitors.

 **NOTE:** The desktop dock will only support USB 2.0 when docked with Venue Pro 11–5130.

 **NOTE:** The Desktop dock is sold separately and is not shipped with the tablet.

Connecting the Power Adapter

1. Connect one end of the power adapter to a wall socket and the other end to the power connector port on the desktop dock.

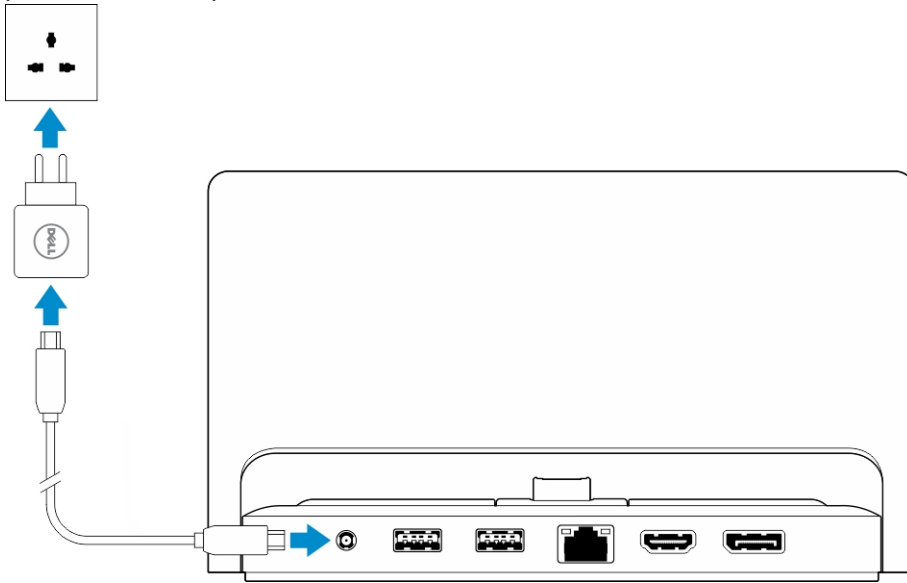

Thin Travel Keyboard Dock Features

This section provides information about the features available on the Thin keyboard dock.

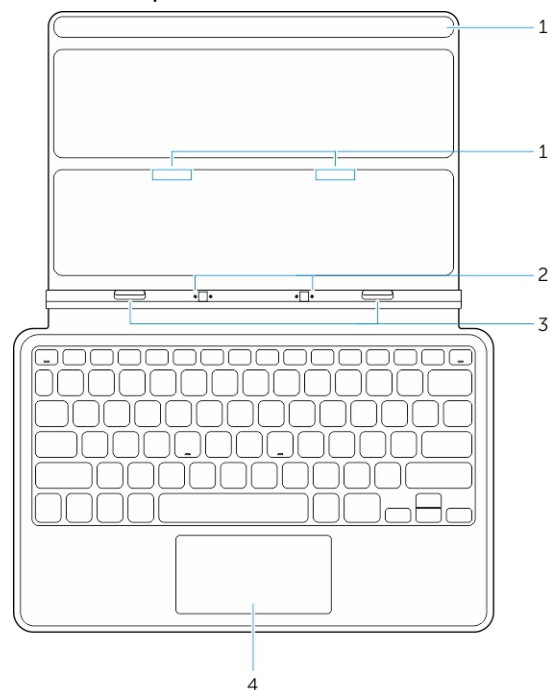



Table 3.


Feature	Functionality
1 Magnets	Magnets to enable docking.
2 Docking pins	Allows the tablet to make electrical contact with the dock.
3 Docking Connectors	Connect the docking connector on the tablet.
4 Touch pad	Allows you to move the mouse pointer on the screen and provides the function of a mouse.

 **NOTE:** The Thin travel keyboard dock is sold separately and is not shipped with the tablet.



Docking Your Tablet to the Thin Travel Keyboard Dock


1. Align the two docking connectors on the tablet to those on the dock.

2. Slide the tablet downward until the tablet clicks into place..

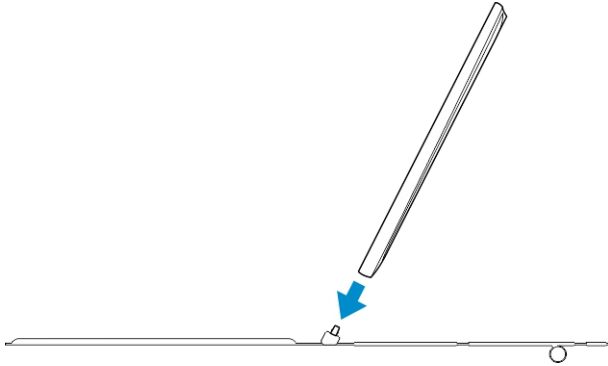


3. Attach the keyboard cover and slide it down to attach the dock to the tablet.

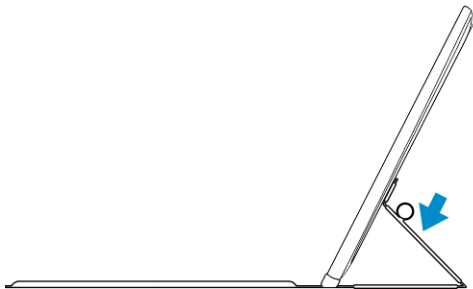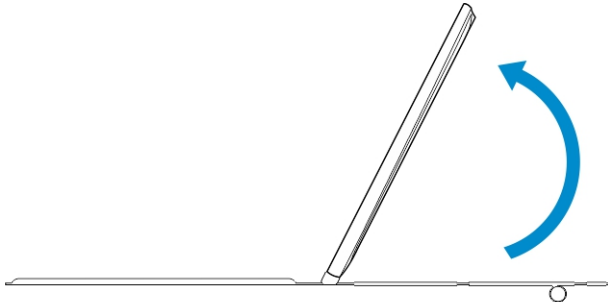


 **NOTE:** When the connection is made, you need to manually turn the on-screen keyboard off if it is displayed on the screen.

Mobile Keyboard Dock Features

This section provides information about the features available on the keyboard dock.

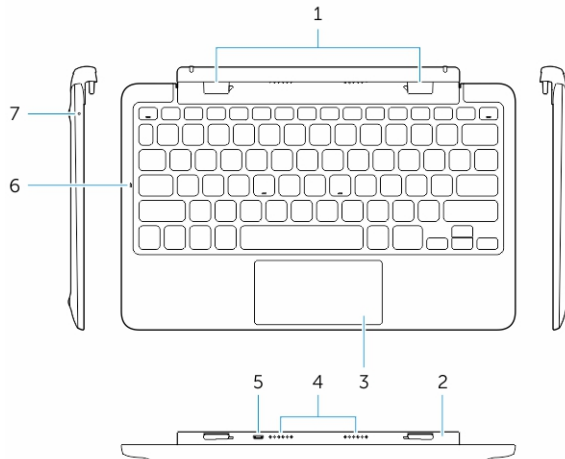


Feature	Functionality
1 Docking connectors	Connect the docking guide slots on the tablet.
2 Rotatable hinge	Allows the tablet to rotate around the hinges.
3 Touch pad	Allows you to move the mouse pointer on the screen and provides the function of a mouse.
4 Dock Pins	Allows the tablet to make electrical contact with the dock.
5 micro USB power connector	Connect a micro USB charger to charge the dock
6 Caps Lock LED	Indicates if the Caps Lock key on the keyboard is turned on.
7 Battery charge LED	Indicates if the battery is charging when connected to AC power.


 **NOTE:** The keyboard dock is sold separately and is not shipped with the tablet.


Docking Your Tablet to the Keyboard Dock

1. Dock the tablet.

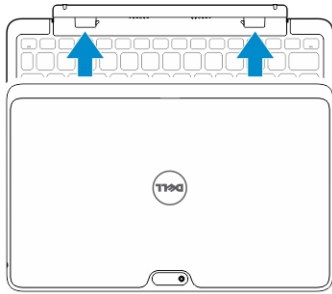


2. Open the tablet and press the power button.

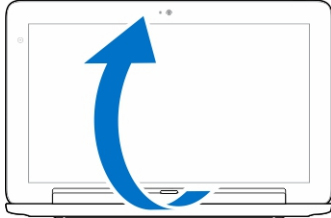

 **NOTE:** When the connection is made, you need to manually turn the on-screen keyboard off if it is displayed on the screen.


Undocking Your Tablet from the Keyboard Dock

1. Push the release button on the keyboard dock.

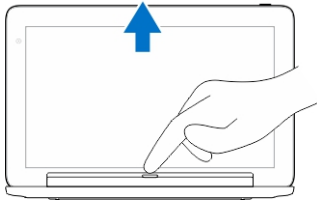


2. Lift the tablet from the keyboard dock.


Charging the dock


 **CAUTION:** Use only the supplied power adapter and power cable to charge your tablet and dock. Using unauthorized power adapters or power cables may cause severe damage to your tablet and dock.

1. Connect the power adapter to the microUSB charging port on your keyboard dock.

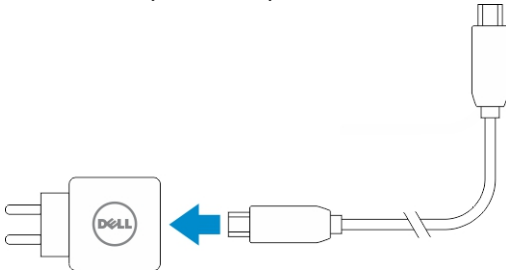

2. The keyboard dock charges through the tablet if AC power is attached to the tablet.

 **NOTE:** Power can't be directly attached to travel keyboard when the tablet is docked.

 **NOTE:** The dock battery requires about four hours to fully charge.

For more information on the tablet battery charging time, see [Charging the tablet](#).

You can check the keyboard dock battery status from:

- Battery-charge light located on the left side of the keyboard dock:


LED behavior	Description
Solid white color on	Battery is charging with AC power when AC adapter is connected directly to the dock.
Off	Battery is not charging, either no AC is connected or battery is fully charged or the AC power is connected directly to the tablet.

For more information on checking the tablet battery status, see [tablet battery charge status](#).


Battery behavior


When AC power is connected, the tablet gets charged first followed by the dock. During discharge or when AC power is not connected, the dock battery gets used first followed by the tablet.

Cleaning Your Tablet

 **CAUTION:** Before you clean your tablet, disconnect all cables. Clean your tablet with a soft cloth dampened with water. Do not use liquid or aerosol cleaners, which may contain flammable substances.

1. Turn off your tablet. For more information on turning off your tablet, see [Turning Off Your Tablet](#)
2. Disconnect any attached devices, headphones, speakers, and keyboard dock from the tablet and from their electrical outlets.
3. Remove any installed Micro-SD and Micro-SIM card. For more information on removing the Micro-SD card and Micro-SIM card, see [Remove the Micro-SD card](#) and [Remove the Micro-Sim card](#).
4. Moisten a soft, lint-free cloth with either water or a display cleaner, and wipe the surface of the tablet until it is clean. Do not allow water from the cloth to seep down to the tablet ports and surrounding **Windows** button.

 **NOTE:** To avoid damaging the tablet or display, do not spray cleaning solution directly onto the display. Only use products specifically designed for cleaning displays, and follow the instructions that are included with the product.

 **NOTE:** Do not clean the keyboard with a moist cloth.

Troubleshooting

Battery problem

Problems	Possible causes	Possible solutions
Battery does not charge		<ul style="list-style-type: none"> • Unplug the supplied Dell AC power adapter from the wall and verify that the outlet is functioning. • Check all cable connections and plug back into the wall, then back into the tablet. • Check the AC adapter LED light to ensure if the AC adapter is working. • Check all connectors to ensure proper connectivity. <p>If the AC adapter works and the battery does not charge, try to:</p> <ul style="list-style-type: none"> • Remove and re-insert the battery to ensure the battery fits to its connectors properly. • Replace with another battery, if available.
	The tablet's temperature is below 0 °C or higher than 40 °C.	Charge the battery in an ambient temperature between 0 °C to 40 °C.
	The battery or power adapter is damaged.	Contact a Dell authorized reseller to replace the battery or power adapter.
Battery drains quickly even when the tablet is in Standby mode	If the tablet is not in the range of a network it can connect to, the tablet continues to send out signals to locate a base station and drains the battery.	<ul style="list-style-type: none"> • Temporarily turn off the tablet. • Move the tablet in range of a network it can connect to, or temporarily turn off

the wireless connection on your tablet.

- Use your tablet in airplane mode.

System problem

Problems	Possible causes	Possible solutions
Tablet does not turn on	The battery is completely discharged.	<ol style="list-style-type: none">1. Charge the tablet for at least 4 hours.2. Press and hold the Power button for 4 seconds.
Tablet does not turn off		Press and hold the Power button for 11 seconds to perform a hard shut down.
Tablet locks up		Remove the power supply and plug/unplug the battery.
Tablet is not responding or behaving unexpectedly	<ul style="list-style-type: none">• Driver failure• Operating system failure• Virus/Malware	<ol style="list-style-type: none">1. Reboot the tablet. .2. Refresh the tablet.3. Contact Dell's support service. Go to Dell support or dell.com/ContactDell
Software or feature is not working as expected		Restart your tablet. Software updates may have been downloaded in the background. Swipe from the right edge of the display to access Charms and touch Settings → Power → Restart to restart the tablet.
Docking station not working as expected		Un-dock / Re-dock your tablet. If the issue still continues, power cycle your tablet on the dock.

Touchscreen problem

Problems	Possible causes	Possible solutions
Touchscreen responds slowly or improperly	Protective cover prevents the tablet from recognizing your inputs.	<ul style="list-style-type: none">• Gently wipe the display with a clean dry cloth.• Remove any protective covers from the touchscreen.

- If the operating system is re-installed, make sure all the drivers are installed.

Network problem


Problems	Possible causes	Possible solutions
No wireless connection		<ol style="list-style-type: none"> 1. Check if the wireless radio is on. See Wi-Fi setting . 2. Try to get closer to the wireless access point. 3. Reset the wireless router if using a private network; open the browser to view the landing page if using a public network.
No mobile broadband connection	<ul style="list-style-type: none"> • The mobile broadband has been capped. • No signal from the service provider. 	<ol style="list-style-type: none"> 1. Check if the mobile broadband is turned on. See Turning On/Off mobile broadband 2. Move your tablet to a different location for better signal reception. <p>Stop using mobile broadband until the next billing cycle or contact your service provider to change your broadband plan.</p>


System Setup

System Setup enables you to manage your computer hardware and specify BIOS-level options. From the System Setup, you can:

 
- Change the NVRAM settings after you add or remove hardware
- View the system hardware configuration
- Enable or disable integrated devices
- Set performance and power management thresholds
- Manage your computer security

To access the system setup options (BIOS):

1. Connect your tablet to the keyboard dock or connect a USB enabled keyboard to your tablet.
2. Press the **Power**  button to turn on your tablet or restart your tablet, if you have already turned on your tablet.
3. Press **F2** after the Dell logo appears.

 **NOTE:** You might have to press **F2** repeatedly until the Windows redirects to the system setup options.

To access the setup options (BIOS) without an external keyboard :

1. Press the **Power**  button to turn on your tablet or restart your tablet, if you have already turned on your tablet.
2. Press and hold the Volume Up button when the Dell logo appears on the screen.

System Setup (BIOS) Options

Table 4. System Information

Option	Function
BIOS Version	Displays the BIOS revision.
Service Tag	Displays the service tag of your tablet.
Asset Tag	Displays the asset tag of your computer.
Ownership Tag	Displays the ownership information.
Manufacture Date	Displays the date of manufacture.
Express Service Code	Displays the Express Service code of the computer.
Ownership Date	Displays the ownership date.

Option	Function
Memory Installed	Displays the memory installed on the computer.
Memory Available	Displays the memory available on the computer.
Memory Speed	Displays the memory speed.
Memory Channel Mode	Displays when the memory capacities of more than one DIMM are unequal
Memory Technology	Displays new type of device file in Linux for interacting with flash memory
Processor Type	Displays the processor type available on the computer.
Core Count	Displays the core count of the computer.
Processor ID	Displays the processor ID of the computer.
Current Clock Speed	Displays the current clock speed of the computer.
Minimum Clock Speed	Displays the minimum clock speed of the computer.
Maximum Clock Speed	Displays the maximum clock speed of the computer.
Processor L2 Cache	Displays the L2 cache of the computer.
Processor L3 Cache	Displays the L3 cache of the computer.
Video Controller	Displays the video controller used in the computer.
Video BIOS Version	Displays the BIOS version number of the computer.
Video Memory	Displays the video memory of the computer.

Option	Function
Panel Type	Displays the panel type used in the computer.
Native Resolution	Displays the resolution of the computer.
Audio Controller	Displays the audio controller used in the computer.
Wi-Fi Device	Displays the Wi-Fi device in the computer.
Cellular Device	Displays the cellular device in the computer.
Bluetooth Device	Displays the Bluetooth device in the computer.

Table 5. Battery Information

Option	Function
AC Adapter	Displays the AC Adapter information.
Battery Status	Displays the current battery status.
Battery Charge State	Displays if the battery is charging/discharging.
Battery Health	Displays the battery health.

Table 6. Boot Sequence

Option	Function
Add Boot Option	Displays the order that the BIOS searches devices when trying to find an operating system to boot. A new device can be added here.
Del Boot Option	A displayed boot device can be removed from the boot order.

Table 7. Advanced Boot Sequence

Option	Function
Enable UEFI Network Stack	Enable UEFI Network Stack function with IPV4/ IPV5 PXE protocol stack.

Table 8. Date/Time

Option	Function
System Date	Displays the system date.
System Time	Displays the system time.

Table 9. System Configuration


Option	Function
USB Configuration	Enables Boot Support. Default : Enabled Enable External USB Port
USB PowerShare	Enable USB PowerShare
Audio	This field enables or disables the integrated audio connector <ul style="list-style-type: none"> • Disable Audio Default : Disabled • Enable Audio
Miscellaneous Devices	Allows you to enable or disable various on-board devices. <ul style="list-style-type: none"> • Enable Camera Device • Enable Media Card • Disable Media Card

Table 10. Video

Option	Function
LCD Brightness	Displays the panel brightness when the ambient light sensor is off. <ul style="list-style-type: none"> • Brightness on Battery • Brightness on AC

Table 11. Security

Option	Description
Admin Password	This field lets you set, change, or delete the administrator (admin) password (also known as the setup password). The admin password enables several security features. The drive does not have a password set by default. To add a new password: <ul style="list-style-type: none"> • Enter the old password • Enter the new password • Confirm the new password Click OK after entering the password details.
System Password	Allows you to set, change, or delete the computer password (previously called the primary password). The drive does not have a password set by default.

Option	Description
Strong Password	<p>To add a new password:</p> <ul style="list-style-type: none"> • Enter the old password • Enter the new password • Confirm the new password <p>Click OK after entering the password details.</p>
Password Configuration	<p>Enable strong password - This option is disabled by default.</p> <p>This field controls the minimum and maximum number of characters allowed for the admin and system passwords. Changes to these fields are not active until they are committed via the apply button or saving changes before exiting setup.</p> <ul style="list-style-type: none"> • Admin Password Min • Admin Password Max • System Password Min • System Password Max
Password Bypass	<p>This option lets you bypass the system (Boot) Password and the internal HDD password prompts during a system restart.</p> <ul style="list-style-type: none"> • Disabled • Reboot Bypass (Default Enabled)
Password Change	<p>Allows you to determine whether changes to the system and hard disk passwords are permitted when an administrator password is set.</p> <ul style="list-style-type: none"> • Allow Non-Admin Password Changes (Default)
Non-Admin Setup Changes	<p>This option lets you determine whether changes to the setup options are permitted when an administrator password is set.</p> <ul style="list-style-type: none"> • Allow Wireless Switch Changes (Default)
TPM Security	<p>This option lets you control whether the Trusted Platform Module (TPM) in the system is enabled and visible to the operating system.</p> <p>TPM Security (Default)</p> <ul style="list-style-type: none"> • TPM ACPI Support • Deactivate • Activate <p> NOTE: Activation, deactivation, and clear options are not affected if you load the setup program's default values. Changes to this option take effect immediately.</p>
PTT	<p>Allows you to enable or disable PTT Support.</p> <ul style="list-style-type: none"> • Internal Platform Trust Technology

Option	Description
Computrace (R)	This field lets you activate or disable the BIOS module interface of the optional <i>Computrace Service</i> from <i>Absolute Software</i> . <ul style="list-style-type: none"> Deactivate (Default) Disable Activate
CPU XD Support	This option enables or disables the Execute Disable mode of the Processor. <ul style="list-style-type: none"> Enable CPU XD Support (Default Enable)
Admin Setup Lockout	Allows you to enable or disable the option to enter setup when an admin password is set. <ul style="list-style-type: none"> Enable Admin Setup Lockout (Default)

Table 12. Secure Boot

Option	Function
Secure Boot	Enables or Disables the secure boot feature. Default : Disabled
Expert Key Management	Allows you to manage all secure boot keys.

Table 13. Performance

Option	Description
Multi Core Support	Specifies whether the process will have one or all cores enabled. The performance of some applications will improve with the additional cores. <ul style="list-style-type: none"> All (Default) 1
Intel SpeedStep	Allows you to enable or disable the Intel SpeedStep mode of the processor. <ul style="list-style-type: none"> Enable Intel(R) SpeedStep (Default)
C States Control	Allows you to enable or disable the additional processor sleep states. <ul style="list-style-type: none"> C states (Default)
Intel TurboBoost	Allows you to enable or disable Intel TurboBoost mode of the processor. <ul style="list-style-type: none"> Enable Intel TurboBoost (Default) — Allows the Intel TurboBoost driver to increase the performance of the CPU or graphics processor.

Table 14. Power Management

Option	Description
AC Behavior	Allows the computer to power-on automatically, when AC adapter is plugged. The option is disabled.

Option	Description
	<ul style="list-style-type: none"> Wake on AC
Auto On Time	<p>Allows you to set the time at which the system must turn on automatically. The options are:</p> <ul style="list-style-type: none"> Disabled (Default) Every Day Weekdays Select Days
Peak Shfit	<p>This option allows to use minimize AC consumption during peak power time of day.</p> <ul style="list-style-type: none"> Monday Tuesday Wednesday Thursday Friday Saturday Sunday
Advanced Battery Charge Configuration	<p>This option places batteries in the system advanced battery charging mode to maximize battery health.</p> <ul style="list-style-type: none"> Monday Tuesday Wednesday Thursday Friday Saturday Sunday
Primary Battery Charge Configuration	<ul style="list-style-type: none"> Standard ExpressCharge

Table 15. POST Behaviour

Option	Description
Adapter Warnings	<p>Allows you to activate the adapter warning messages when certain power adapters are used. The option is enabled by default.</p> <ul style="list-style-type: none"> Enable Adapter Warnings
Fastboot	<p>This option can speed up the boot process by bypassing some compatibility steps.</p> <ul style="list-style-type: none"> Minimal Thorough

Option	Description
	<ul style="list-style-type: none"> Auto (Default Enable)

Table 16. Virtualization Support

Option	Description
Virtualization	<p>This option specifies whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by Intel Virtualization technology.</p> <ul style="list-style-type: none"> Enable Intel Virtualization Technology (Default)

Table 17. Wireless

Option	Description
Wireless Device Enable	<p>Allows you to enable or disable the wireless devices</p> <ul style="list-style-type: none"> WWAN (Default Enable) WLAN

Table 18. Maintenance

Option	Description
Service Tag	Displays the service tag of your computer.
Asset Tag	Allows you to create a system asset tag if an asset tag is not already set. This option is not set by default.

Table 19. System Logs

Option	Description
BIOS events	<p>Displays the system event log and allows you to clear the log.</p> <ul style="list-style-type: none"> Clear Log
Power events	<p>Displays the power event log and allows you to clear the log.</p> <ul style="list-style-type: none"> Clear Log


Updating the BIOS

It is recommended to update your BIOS (system setup), on replacing the system board or if an update is available. For laptops, ensure that your computer battery is fully charged and connected to a power outlet

1. Restart the computer.
2. Go to dell.com/support.
3. If you have your computer's Service Tag or Express Service Code:




NOTE: To locate the Service Tag, click **Where is my Service Tag?**

 **NOTE:** If you cannot find your Service Tag, click **Detect Service Tag**. Proceed with the instructions on screen.

4. Enter the **Service Tag** or **Express Service Code** and click **Submit**.
5. If you are unable to locate or find the Service Tag, click the Product Category of your computer.
6. Choose the **Product Type** from the list.
7. Select your computer model and the **Product Support** page of your computer appears.
8. Click **Drivers & Downloads**.
9. On the Drivers and Downloads screen, under the **Operating System** drop-down list, select **BIOS**.
10. Identify the latest BIOS file and click **Download File**.
11. Select your preferred download method in the **Please select your download method below window**; click **Download File**.
The **File Download** window appears.
12. Click **Save** to save the file on your computer.
13. Click **Run** to install the updated BIOS settings on your computer.
Follow the instructions on the screen.

Specifications

 **NOTE:** Offerings may vary by region. The following specifications are only those required by law to ship with your computer. For comprehensive specification of your computer go to **Specifications'** section in your **Owner's Manual** available on the support site at dell.com/support. For more information about the configuration of your computer, go to **Help and Support** in your Windows operating system and select the option to view information about your computer.

System Information	
System Chipset	Intel Atom Z3770 series
DRAM bus width	64 bits/channel (LPDDR3 * 2CH)
Flash EPROM	128Mbit SPI
Processor	
Processor type	Intel Atom Z3770 processor
External bus frequency	1066MT/s (LPDDR3)
Memory	
Memory capacity	2GB; 1GB * 2 CH(64-bit bus width per channel)
Memory type	LPDDR3
Memory speed	1066MT/s
Minimum memory	2 GB
Maximum memory	2 GB
Video	
Video type	Gen7 embedded in the Bay Trail-T SoC
Data bus	Gen7 embedded in the Bay Trail-T SoC
Video controller	Gen7 Media decode (H. 264(1080p60),MPEG2,MVC,VC-1,WMV9,VP8,MJPEG)
Communications	
Network adapter	LTE,HSPA+
Wireless	WLAN,BT,NFC

Ports and Connectors	
Audio	3.5mm jack x1
Video	Mini HDMI x1
USB 2.0	USB3.0/2.0 x1 combo connector
USB 3.0	USB3.0/2.0 x1 combo connector
Memory card reader	None but micro-SD card socket
Docking port	Dell 40-pin dock connector x1
Subscriber Identity Module (SIM) port	Micro SIM slot x1
Smart card	None
Display	
Type	TFT-LCD with eDP I/F
Size	10.8 inches diagonal
Dimensions:	
Height	250.20 mm (9.85 inches)
Width	149.25 mm (5.90 inches)
Diagonal	274.32 mm (10.08 inches)
Active area (X/Y)	239.04 mm / 134.46 mm
Maximum resolution	1920 pixels x 1080 pixels
Maximum brightness	400 nits
Refresh rate	
Minimum viewing angles:	
Horizontal	80/80
Vertical	80/80
Pixel pitch	
Front camera	
Type	OV 2722 (2 MP)
Resolution	1920 pixels x 1080 pixels
Rear camera	
Type	IMX 175 (8 MP)
Resolution	3264 pixels x 2448 pixels
Storage	
Storage	<ul style="list-style-type: none"> eMMC 4.5.1 32 GB (HS200)

Storage

- eMMC 4.5.1 64GB (HS200)

Battery


Type	2 Series X 1 Parallel (2S1P) Lithium ion 32Wh (Nominal)
Dimensions	
Depth	230.64mm (9.08 inches)
Height	4.71mm (0.19 inch)
Width	83.3mm (3.28 inches)
Weight	220.00 g (0.49 lb)
Voltage	7.4 VDC (nominal) and 8.7 VDC (maximum)
Temperature range	
Operating	Charge: 0 °C to 50 °C; 32 °F to 158 °F <u>Discharge:</u> 0 °C to 70 °C; 32 °F to 122 °F
Non-Operating	-20 °C to 65 °C; 4 °F to 149 °F
Coin-cell battery	3 V CR1220 lithium ion Voltage : 3V Capacity : 35mAh (23+/- 3 degree) Weight: 0.8g Temperature : -20 ~ +60 degree.

AC Adapter

Type	
Input voltage	100 VAC to 240 VAC
Input current (maximum)	0.60 A
Input frequency	50 Hz to 60 Hz
Output power	23.4W/30W
Output current (30 W)	19.5V/1.2A (Continuous) 19.5V/1.538A (peak current) ; 5V/2A (Continuous)
Rated output voltage	19.5 Vdc
Temperature range:	
Operating	0 °C to 40 °C (32 °F to 104 °F)
Non-operating	-40 °C to 70 °C (-40 °F to 158 °F)

Physical	
Height	176.76 mm
Width	279.74 mm
Depth	10.2 mm
Weight (minimum)	726.3 g
Environmental	
Temperature:	
Operating	0 °C to 40 °C
Storage	-40 °C to 65 °C
Relative humidity (maximum):	
Operating	Operating 10% to 90% (noncondensing)
Storage	Storage 5% to 95% (noncondensing)
Altitude (maximum):	
Operating	-16 m to 3048 m (-50 to 10,000 ft)
Non-operating	-15.2 m to 10,668 m (-50 ft to 35,000 ft)
Airborne contaminant level	G1 as defined by ISA-71.04-1985

Contacting Dell

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Visit dell.com/support
2. Select your support category.
3. Verify your country or region in the Choose a Country/Region drop-down menu at the top of page.
4. Select the appropriate service or support link based on your need.