 
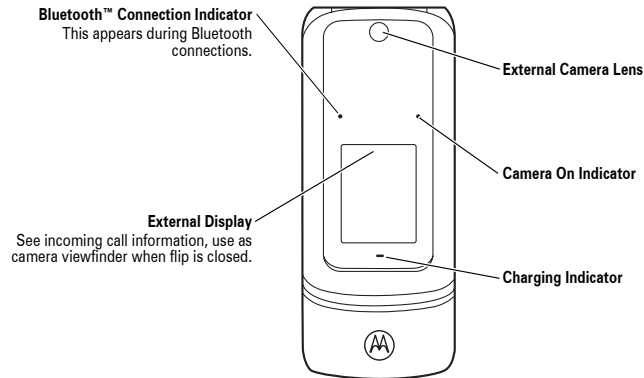 


HELLOMOTO

Introducing your new **MOTOKRZR™ K3** wireless phone. Here's a quick anatomy lesson.

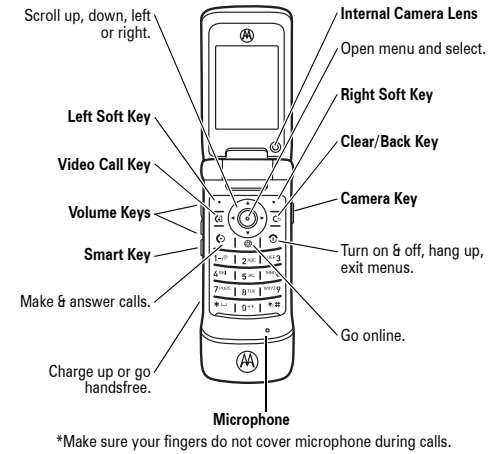

To change your automatic key lock, see page 59.

Home Screen



- 1 Press and hold the **Power Key** [Power] for a few seconds or until the display lights up to turn on your phone.
- 2 Press the **Centre Key** [Center] key to open the **Main Menu**.

Main Menu



- 3 Press the **Navigation Key** up, down, left, or right [Navigation] to highlight a menu feature.
- 4 Press the **Centre Key** [Center] to select it.

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their

proprietor and used by Motorola, Inc. under licence. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows and Windows Me are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© Motorola, Inc., 2006.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for

copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the

core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.

contents

menu map	8	essentials	22	main attractions	30	basics	50	calls	66	SAR Data95
safety information	10	about this guide	22	Bluetooth™ wireless	30	display	50	turn off a call alert	66	WHO Information97
FCC Notice	17	SIM card	22	audio player	35	text entry	53	recent calls	66	index98
use and care	19	battery	23	voice commands	38	volume	57	redial	68		
EU Conformance	20	turn it on & off	25	photos	39	navigation key	58	return a call	68		
recycling information	21	make a call	26	videos	42	smart key	58	caller ID	68		
		answer a call	26	video calls	43	external display	58	emergency calls	69		
		store a phone		text messages	44	handsfree speaker	59	voicemail	69		
		number	26	memory card	45	codes & passwords	59				
		call a stored phone		cable connections	47	lock & unlock phone	59	other features	71		
		number	27	phone updates	49	lock & unlock		advanced calling	71		
		your phone number	28			external keys	60	phonebook	75		
		Motorola SETUP	28					messages	79		
						customise	61	personalising	82		
						ring style	61	call times & costs	84		
						time & date	62	handsfree	85		
						wallpaper	62	data calls	86		
						screen saver	63	network	87		
						themes	63	personal organiser	88		
						display appearance	64	security	91		
						answer options	65	fun & games	91		

menu map

main menu

- Video Camera**
- Games & Apps**
 - MOTOKRZRK3Help *
- Recent Calls**
 - (press the or to scroll through the call lists)
- Camera**
- Phonebook**
- Messages**
 - Create Message
 - Voicemail
 - Message Inbox
 - Email
 - Browser Messages
 - Info Services *
 - Outbox
 - Drafts
 - Templates
- Tools**
 - My Services *
 - Calculator
 - Calendar
 - Alarm Clock
 - Dialling Services
 - Fixed Dial *
 - Service Dial *
 - Quick Dial
 - World Clock
- Multimedia**
 - Media Finder
 - Music
 - Pictures
 - Videos
 - Voice Notes
 - Ring Tones
 - Wallpapers
 - Themes
 - Camera
 - Video Camera
 - Voice Record
- Voice Message**

- WebAccess**
 - Browser
 - Bookmarks
 - History
 - Go To Page
 - Stored Pages
 - Browser Setup
 - Web Sessions *
- Connection**
 - Bluetooth Link
 - USB Settings
 - MOTOSYNC *
- Settings**
 - (see next page)

* optional features

This is the standard main menu layout. Your phone's menu may be a little different.

Tip: Press to exit the current menu, or to exit all menus.

Tip: For feature help, select **MOTOKRZRK3Help** under **Games & Apps**.

settings menu

- Personalise**
 - Home Screen
 - Main Menu
 - Voice dial setup
 - Skin
 - Greeting
 - Wallpaper
 - Screen Saver
 - Quick Dial
- Ring Styles**
 - Style
 - style Detail
- Call Divert ***
 - Voice Calls
 - Video Calls
 - Cancel All
 - Divert Status
 - Push to Call Fwd No.
- Initial Setup**
 - Time and Date
 - Speed Dial
 - Auto Redial
 - Display Timeout
 - Backlight
 - Charging Lights
 - Scroll
 - Text Marquee
 - Language
 - Brightness
 - DTMF
 - Master Reset
 - Master Clear
- In-Call Setup**
 - Date and Time
 - In-Call Timer
 - Call Cost Setup *
 - My Caller ID
 - Answer Options
 - Call Waiting
 - MSG Alert
- Phone Status**
 - My Tel. Numbers
 - Credit Info/Available *
 - User Accounts *
 - Active Line *
 - Battery Meter
 - Download Location
 - Storage Devices
 - Voice Dial Languages
 - Other Information
- Car Settings**
 - Auto Answer
 - Auto Handsfree
 - Power-Off Delay
 - Charger Time
- Headset**
 - Auto Answer
 - Ringer Options
 - Voice Dial
- Aeroplane Mode**
 - Aeroplane Mode
 - Prompt At Startup

* optional features

- Connection**
 - Bluetooth Link
 - USB Settings
 - MOTOSYNC *
- Java™ Settings**
 - Java System
 - Delete All Apps
 - App Vibration
 - App Volume
 - App Priority *
 - App Backlight
 - Set Standby App *
 - DNS IP *
- Security**
 - Phone Lock
 - External Key Lock
 - Lock Application
 - Fixed Dial *
 - Restrict Calls *
 - Call Barring *
 - SIM PIN
 - SIM PIN 2 *
 - Hide Private Entries *
 - New Passwords
 - Certificate Mgmt *
- Network**
 - New Network
 - Network Setup
 - Available Networks
 - My Network List *
 - Service Tone
 - Call Drop Tone

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.¹

Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

1. The information provided in this document supersedes the general safety information in user's guides published prior to May 1, 2006.

10 safety information

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Pacemakers

If you have a pacemaker, consult your doctor before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimetres (8 inches) from your pacemaker when the mobile device is turned ON.

12 safety information

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of antennas, modifications or attachments could damage the mobile device and/or may result in your device not complying with local regulatory requirements in your country.

- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or doctor to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult your doctor or the manufacturer of your device to determine if it is adequately shielded from RF energy.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimetres (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimetres (1 inch) from your body.

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you cannot concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola Web site: www.motorola.com/callsmart.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: www.motorola.com.

RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

safety information **11**

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted and can include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities or areas where the air contains chemicals or particles, such as grain, dust or metal powders.

When you are in such an area, turn off your mobile device and do not remove, install or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

safety information **13**

Damaged Products

If your mobile device or battery has been submerged in water, punctured or subjected to a severe fall, do not use it until you take it to a Motorola Authorised Service Centre. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

If jewellery, keys, beaded chains or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse or other container with metal objects. **Use only Motorola Original batteries and chargers.**



Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.

Discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour and stop use if you are very tired.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Symbol	Definition
	Do not let your battery, charger or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts or if you have a family history of such occurrences, please consult with your doctor before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a doctor.

FCC Notice To Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

If your mobile device or accessory has a USB connector, or is otherwise considered a computer peripheral device whereby it can be connected to a computer for purposes of transferring data, then it is considered a Class B device and the following statement applies:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



microwaves

Don't try to dry your phone in a microwave oven.



dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions.



the ground

 
Don't drop your phone.

European Union Directives Conformance Statement

CE Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site.

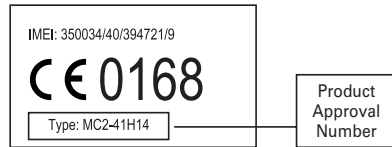

The above gives an example of a typical Product Approval Number.

Caring for the Environment by Recycling



This symbol on a Motorola product means the product should not be disposed of with household waste.

Recycling Mobile Phones and Accessories

Please do not dispose of mobile telephones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems have been set up to handle waste electrical and electronic items. Please contact your regional authorities for more details. If no suitable scheme exists, you may return unwanted mobile telephones and electrical accessories to any Motorola Approved Service Centre in your region.

about this guide

This guide shows how to open a menu feature as follows:

Find it: > Messages > **Create Message**

This means that, from the home screen:

- 1 Press the *centre key* to open the menu.
- 2 Press the *navigation key* to scroll to **Messages**, and press the *centre key* to select it.
- 3 Press the navigation key to scroll to **Create Message**, and press the *centre key* to select it.

symbols	
	This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.

 
SIM card

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.


Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries. It can also contain your voicemail, text message, and Internet access settings. If you put your SIM card in another phone, that phone uses your phone number.

To insert and use a **memory card**, see page 45.

Turn off your phone and remove your battery before you install or remove a SIM card.

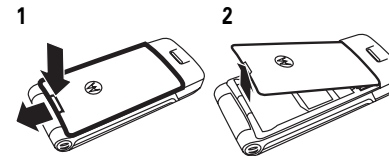

3

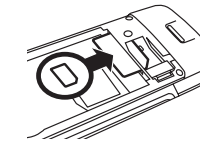 

battery

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.



- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

 
 


Contact your local recycling centre for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the "Safety and General Information" section included in this guide.

battery installation

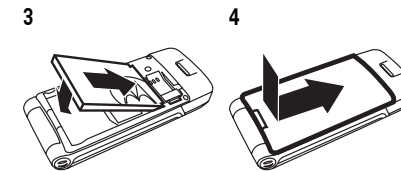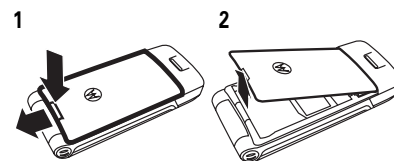

battery charging

New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. Your display shows **Charge Complete** when finished. Your phone's battery charging


indicator (see page 2) lights up while the battery is charging.

Tip: Your battery will perform best after you fully charge and discharge it a few times.


Note: The battery charger shipped with this device is designed for Motorola 3G mobile phones. Other chargers might take longer to charge your battery, or cause your calls to fail during charging.

turn it on & off


Caution: Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**. Contact your service provider.


To turn on your phone, press and hold  for a few seconds or until the keypad or display lights up. If prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code.




To turn off your phone, press and hold  for a few seconds.

make a call


Enter a phone number and press  to make a call.

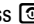
To “hang up,” close the flip or press .

To make video calls, see page 43.

Tip: Press and hold  to use voice commands, see page 38.


answer a call

When your phone rings and/or vibrates, just open the flip or press  to answer.

To “hang up,” close the flip or press .

store a phone number



You can store a phone number in your **Phonebook**:


- 1 Enter a phone number in the home screen.
- 2 Press the **Store** key.
Select **Create Contact**, if necessary.
- 3 Enter a name and other details for the phone number. To select a highlighted item, press the *centre key* .
- 4 Press the **Done** key to store the number.





To edit or delete a phonebook entry, see page 75.

To store an email address from the home screen, press  >  **Phonebook** then press **Options** > **Create New** > **Phone Contact**. Enter the new contact’s name and email information.



call a stored phone number

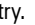Find it:  >  **Phonebook**

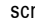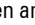

- 1 Scroll to the phonebook entry.
Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want.
- 2 Press  to call the entry.

Note: You can show contacts stored in your phone’s memory or on your SIM card. To choose which contacts you see, press  >  **Phonebook**, then press **Options** > **View**. You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**. Contacts on the SIM card only have a name and number. To choose where you store contacts, go back to the home screen and press  >  **Phonebook**, then press **Options** > **Setup** > **Store Contacts to** > **Phone** or **SIM Card**.

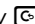
your phone number

From the home screen, press *the clear key*  then  to see your number.



Tip: Want to see your phone number while you’re on a call? Press **Options** > **My Tel. Number**.

You can edit the name and phone number stored on your SIM card. From the home screen, press  , select an entry, press the **View** key, press the **Options** key, and select **Edit**. If you don’t know your phone number, contact your service provider.

Motorola SETUP

Use **Motorola SETUP** to quickly and easily set up your Internet connection and MMS messaging. 

Note: Motorola SETUP may not be available on your phone. Contact your service provider for more information.

- 1 Press  >  **Games & Apps** > **Motorola SETUP**.
- 2 At the Motorola SETUP screen press **Options** > **Start**.
- 3 Your phone’s setup is verified:
 - If your phone is already set up the message “**Setup Complete**” is displayed. Press **Done** and you are finished.
 - If your phone is not set up, press **Yes** to set up your phone now.

- 4 Follow the on-screen instructions. You will need to select your service provider and may need to select your payment plan.
- 5 Wait until the **Settings Sent** screen is displayed, press **Exit**.
- 6 Two text messages with your settings will be sent to your phone. Open the text messages and press **Options** > **Install**. You may be asked to set your service provider web session as default. Press **Yes** to set as default. You are now ready to use the Internet and MMS messaging.

Note: Data charges may apply for certain applications. Contact your service provider for more information.

main attractions

You can do much more with your phone than make and receive calls!

Bluetooth™ wireless


Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can also connect your phone with a phone or computer that supports Bluetooth connections to exchange files.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the

30 main attractions

- 3 Select a recognised device name, or **[Look For Devices]** to search for the device where you want to copy the file.

If your phone could not copy the file to the other device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

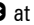Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator  at the top when there is a Bluetooth connection. To change a device's access setting, see page 35.

32 main attractions

laws and regulations on the use of these products.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

use a headset or handsfree car kit

Before you try to connect your phone with a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device).



Find it:  >  **Connection** > **Bluetooth Link** > **[Add Audio Device]** 

Your phone lists the devices it finds within range.


receive files from another device


If you do not see the Bluetooth indicator  at the top of your phone display, turn on your phone's Bluetooth feature by pressing  >  **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On.** 

- 1 Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognise each other, place your phone in discoverable mode so the sending device can locate it. Press  >  **Connection** > **Bluetooth Link** > **[Find Me].**

- 2 Press the **Accept** key on your phone to accept the file from the other device.

- 1 Scroll to a device in the list and press the *centre key* .
- 2 Press the **Yes** or **OK** key to connect to the device.
- 3 If necessary, enter the device passkey (such as **0000**) and press the **OK** key.


When your phone is connected, the Bluetooth indicator  shows in the home screen, and the external Bluetooth indicator light flashes.

You cannot play some copyrighted files over a Bluetooth connection.

Shortcut: When Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device, or move it near the phone. During a call or while playing a sound file, you can press **Options** > **Use Bluetooth** to connect to a headset or handsfree device you have used before.

Your phone notifies you when file transfer is complete. If necessary, press the **Save** key to save the file.

send files to a printer


You can use a Bluetooth connection to send a picture, message, phonebook entry, or calendar view from your phone to a printer. 

Note: You cannot print message **Templates** or a phonebook **Mailing List**.

- 1 On your phone, scroll to the object that you want to print, then press **Options** > **Print** > **Bluetooth**. In the calendar, you can print the month, week, or day.
Tip: If you see it, you can print it. After you capture a picture in the camera, you can press the **Options** key and select **Print**.
- 2 If available, choose additional objects or print options.

Tip: Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

copy files to another device

You can copy a media file, phonebook entry, calendar event, or Web shortcut from your phone to a computer or other device. 

Note: You can't copy some copyrighted objects.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options**, then select:
 - **Manage** > **Copy** for media files.
 - **Share** > **Contact** for phonebook entries.
 - **Send** for calendar events.




main attractions 31

- 3 Select a recognised printer name listed in the **Printers** menu, or **[Look For Devices]** to search for the printer where you want to print the object.

Note: If you see **Service Not Supported** when you try to print, select **Options** > **Manage** > **Copy** > **Bluetooth** instead. Always use this option to print 4x6 photos.

advanced Bluetooth features

A device is *recognised* after you connect to it once (see page 30).

features	
make phone visible to other device	Allow a Bluetooth device to discover your phone:   >  Connection > Bluetooth Link > [Find Me]

main attractions 33

features	
connect to recognised device	Connect your phone to a recognised handsfree device: <ul style="list-style-type: none"> • > Connection > Bluetooth Link > Audio Devices > <i>device name</i>
drop connection with headset or handsfree device	<ul style="list-style-type: none"> • > Connection > Bluetooth Link > Audio Devices <p>Scroll to the device name and press the Drop key.</p>
switch to headset or handsfree device during call	<p>During a call, press Options > Use Bluetooth to switch to a recognised headset or car kit.</p> <p>Your phone connects automatically or shows a list of devices you can select.</p>

34 main attractions

Press **•** up or down to scroll to an option, and press the *centre key* **•** to select it:

options	
All Songs	Show and play individual songs. Note: All of your phone's songs appear in this list. Some songs do not have any Artist , Album , or Genre information, so they don't appear in those lists.
Recently Played	Show songs you played recently.
Playlists	Create or play a playlist (see page 37).
Artists	Select an artist to show or play their songs.
Albums	Select an album to show or play its songs.
Genres	Select a type of music to show or play songs.

36 main attractions

features	
play sound files on a recognised headset	<p>While playing a sound file, press Options > Listen via Bluetooth to switch to a recognised headset.</p> <p>Your phone connects automatically, or shows a list of devices you can select.</p> <p>You cannot play some copyrighted files over a Bluetooth connection.</p>
move multimedia object to device	<p>Caution: Moving an object deletes the original object from your phone.</p> <p>Scroll to the object, press Options > Manage > Move, select the device name.</p>

options	
Composers	Select a composer to show or play songs.

When you select a song:

- **Play or pause** the song by pressing the *centre key* **•**.
- **Skip back or forward** by pressing **•** left or right.
- **Change volume** by pressing the volume keys.
- **Hide the player** by pressing **Options** > **Hide**. This lets you use other phone features while the song plays. To stop the hidden audio player, press **•** in the home screen.

features	
copy multimedia object to device	<p>Scroll to the object, press Options > Manage > Copy, select the device name.</p>
edit device properties	<ul style="list-style-type: none"> • > Connection > Bluetooth Link > Found Devices <p>Scroll to the device name and press the <i>centre key</i> •.</p> <p>Note: The Access setting can restrict how this device connects to your phone. You can choose Automatic (always connects), Always Ask (asks you before connecting), Just Once, Never, or Custom.</p>

Tip: You can listen to music on the go. Use Bluetooth™ A2DP enabled devices, such as stereo headphones, for enhanced music quality and use Bluetooth AVRCP enabled devices, such as car stereos, to control playback (see page 30). If you're on a plane, use a wired headset and *airplane mode* to make your phone safe to use (see page 94).

Your phone also has a **Ring Tones** player. To use it, press **•** > **Multimedia** > **Media Finder** > **Ring Tones**.

play music with your phone closed

You can close your phone while you listen to music. When your phone is closed, the external display shows the song, artist, title, and time. To control your music playback:

- **Change volume** by pressing the volume keys.

features	
set Bluetooth options	<ul style="list-style-type: none"> • > Connection > Bluetooth Link > Setup <p>Note: The Bluetooth Connection Indicator (see page 2) lights when your phone has a Bluetooth connection. To disable this indicator, choose Bluetooth Lights > Off under the Setup menu.</p>

audio player

Your phone can play and store WMA and MP3 song files. You can use a removable memory card with your phone to store more songs (see page 45).

Find it: **•** > **Multimedia** > **Media Finder** > **Music**

main attractions 35

- Press and release the **smart key** to show the track list. Press the volume keys to scroll through the list and select the track to be played.

load music files

To download songs from the Internet, see page 93. To copy files between your phone and a computer, see page 48.

Note: Your phone may not play MP3 files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

create a playlist

Find it: **•** > **Multimedia** > **Media Finder** > **Music** > **Playlists** > **[Create New Playlist]**

main attractions 37

Open a song list, and press the *centre key* to select each song you want. After you press the **Done** key, enter a name for your list.

To hear your playlist, highlight it under **Playlists** and press **Options** > **Play**.

voice commands

You can use voice commands to make calls, and to open and use some phone applications.

Note: Not all phone languages support voice recognition and voice commands.

open applications

 
To open the **Camera** or **VoiceMail** applications, **Redial** (dialled calls list), or **Received Calls** list:

1 Press and hold **[Camera]**.

Your phone prompts you to say a command.

38 main attractions

1 Press **[Camera]** > **Camera** to see the camera viewfinder.

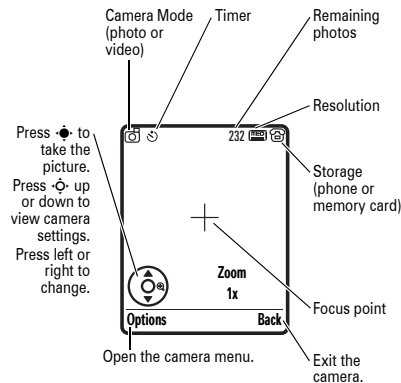

40 main attractions

2 Say one of the following commands: "Camera," "VoiceMail," "Redial" (dialled calls list), or "Received Calls".

Your phone opens the application.

make a call

You can use voice commands to make a call:

- Use **name dial** to dial a phonebook entry by speaking the entry's name.
- Use **digit dial** to dial any phone number by speaking its digits.

Tip: Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.

1 Press and hold **[Camera]**.

Your phone prompts you to say a command.

2 Say "name dial" or "digit dial".

2 Press the *centre key* to take the photo in the viewfinder. You can:

- Press the **Options** key to store or discard the photo.
- Press the **Send** key to send the photo in a message.

If you press **Options** > **Print**, you can print the picture over a Bluetooth™ connection (see page 33).

Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press the **Yes** key to send the message.

- Press **[Camera]** to discard the photo and return to the active viewfinder.

3 When prompted, say the name of the phonebook entry or speak the digits in the phone number.


If your phone recognises the name or number, it makes the call.

Note:

- Your phone may prompt you to repeat a name or number. If the name/number isn't valid, the phone doesn't make the call.
- If the phone does not recognise the name or number, the display shows a list of names/numbers, asks, "Did you say ...," and highlights the first item in the list. Say "Yes" to call the highlighted number, or "No" to go to next list item.

To select the name or number manually, scroll to the name/number on the list and press the **Select** key.

Before you capture the photo, you can press **Options** to open the camera menu:

options	
Go To Pictures	See stored pictures and photos.
Go To Video Mode	Switch to the video camera.
Internal View/ External View	Switch to the camera facing you (Internal View) or facing away from you (External View).
Auto-Timed Capture	Set a timer for the camera to take a photo.
Camera Setup	Open the setup menu to adjust photo settings.
Switch Storage Device	Choose to store videos on your phone or a memory card. 

- You can improve voice dial operations by training the phone to recognise your voice. Press **[Camera]** > **Settings** > **Personalise** > **Voice Dial Setup** > **Adapt digits**.

photos

To view, edit, or delete photos you've taken, see page 92.

Your camera lens is on the back of your phone's flip when the phone is open.

main attractions 39

options	
Free Space	See how much memory remains. Note: Your service provider may store some content in user memory before you receive the phone.

self portrait


If you close your phone while the viewfinder is active, the external display shows the image. Press the volume keys to zoom, or press the smart key to capture and store the image.

main attractions 41

 
videos

To view, edit, or delete videos you've recorded, see page 92.

Your camera lens is on the back of your phone's flip, when your phone is open.

Note: Below your phone's external lens is a **camera on indicator**. This can blink when your camera is on, to let people around you know that they might be in your photo or video. 

Press  >  **Video Camera** to see the video viewfinder.

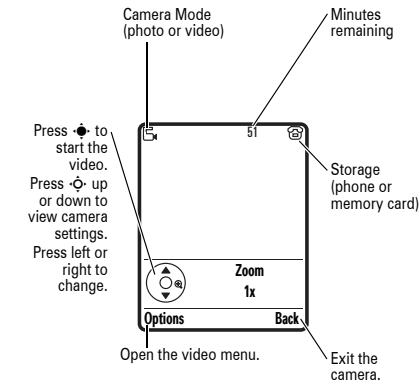


Note: The number of minutes remaining is an estimate.

Tip: If you want to send your video in a message, the video length must be set to

42 main attractions


- Press the **Stop Video** key to change the call to a voice call with the speakerphone on.
- If you accept another **incoming voice call**, your phone changes this video call to a voice call.
- If you accept another **incoming video call**, your phone ends this video call.

3 To end the call, press .

text messages

To create a group mailing list, see page 77. For more message features, see page 79.

send a text message

A text message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message, and you can put text and media 

objects on each page. You can send a message to other compatible phones or to email addresses.

Find it:  >  **Messages** > **Create Message** > **New Message**

1 Press keypad keys to enter text on the page (for details about text entry, see page 53).


To insert a **picture, sound, or other object** on the page, press **Options** > **Insert**. Select the file type and the file.

To insert **another page** in the message, enter text or objects on the current page and press **Options** > **Insert** > **New Page**. You can enter more text and objects on the new page.


- 2 When you finish the message, press the **Send To** key.
- 3 To **send** the message, press the **Send** key.


44 main attractions

 
MMS. To set length, press **Options** > **Video Camera Setup** > **Video Length**.

- 1 Press the **centre key**  to start recording the video in the viewfinder.
- 2 Press the **Stop** key to stop recording the video. You can:


- Press the **Options** key to preview, store, or discard the video.

To play a stored video from the home screen, press  > **Multimedia** > **Media Finder** > **Videos** > **All Videos** > *video name*.


- Press the **Send** key to send the video in a message. 

Enter text and press **Send To**, then scroll to a recipient address and press the **centre key**  to select it. Press the **Options** key to enter a new number. To send the message, press the **Send** key.



Note: Some other phones or networks do not support messages with videos.

- Press  to discard the video and return to the active viewfinder.

video calls

If you call someone who has a 3G video phone, you can see each other while you talk. If your phone is roaming on a **non-3G network**, video calls will not work (see the Roam indicator on page 52). 

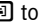

make a video call

- 1 Enter a phone number and press  to see the video call preview.
- 2 Press  to make the call.

During the call:

main attractions 43

receive a text message

When you receive a message, your phone plays an alert, and the display shows **New Message** with a message indicator, such as . 

Press the **Read** key to open the message.

To view see all of your text messages:


Find it:  >  **Messages** > **Message Inbox**

If a multimedia message contains media objects:

- Photos, pictures, and animations show as you read the message.
- A sound file plays when its slide shows. Use the volume keys to adjust the sound volume.
- Attached files are added to the end of the message. To open an attachment, scroll to the file indicator/filename and press the **View** key (image), **Play** key

(sound), or **Open** key (phonebook vCard, calendar vCalendar entry, or unknown file type).

memory card

 
You can use a removable microSD memory card (supports up to 2 GB) with your phone to store and retrieve multimedia objects (such as photos and sounds). 

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

main attractions 45

install or remove a memory card

- 1 Remove the battery door (see page 24).
- 2 **To install the memory card**, make sure the memory card's metal contacts are facing down, and slide the top of the memory card under the metal band.
To remove the memory card, slide it back out of the holder.
- 3 Replace the battery door.

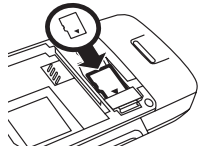

see and change memory card information

To **see the files** stored on your memory card and on your phone, open a file list, such as **Pictures** (see page 92). Icons can indicate if a file is stored in your phone memory (📁) or on your memory card (📁). To copy or move a file from your phone to your memory card, highlight it in the list and press **Options** > **Manage** > **Copy** or **Move** > **Memory Card**. You cannot copy or move some copyrighted files.

To **copy files** between your memory card and a computer, you can use a cable connection (see page 48) or a Bluetooth connection (see page 30).

To see your **memory card name**, **available memory**, and other information about the card:

Find it: 📶 > ⚙️ **Settings** > **Phone Status** > **Storage Devices**

connect your memory card to a computer

You can use a cable connection to access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Disconnect the cable from your phone, if it is connected, then press 📶 > 📶 **Connection** > **USB Settings** > **Default Connection** > **Memory Card**.

This directs the USB connection to your memory card.

Connect the cable to your phone and to an available USB port on your computer. Then follow these steps:

On your computer:

- 1 Open your "My Computer" window, where your phone's memory card shows as a "Removable Disk" icon.
- 2 Click on the "Removable Disk" icon to access the files on your phone's memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows:
audio files: > mobile > audio
screen savers: > mobile > picture
wallpapers: > mobile > picture
video clips: > mobile > video
- 4 When you finish, disconnect your phone by selecting the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen. Then disconnect the "USB Mass Storage Device."

- 1 Press 📶 to scroll to the memory card that is installed.
- 2 Press the **centre key** 📶 to see the memory card information. Your phone stores any content that you add, like ring tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

or

Press **Options** to see the **Storage Dev. Menu**, which lets you **Format** or **Rename** the memory card.

- 5 Disconnect the cable from your phone and computer.

On your phone:

To return to **Data** as your USB default connection, press 📶 > 📶 **Connection** > **USB Settings** > **Default Connection** > **Data Connection**.

 
phone updates

Sometimes we think of ways to make your phone's software faster or more efficient after you've purchased your phone. You can find out if your phone can be updated and register for free update notifications at: <http://www.hellomoto.com/support/update>

Note: Software updates do not affect your phonebook entries or other personal entries. If you receive a software update but choose to install it later, see page 88.

cable connections

📶 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

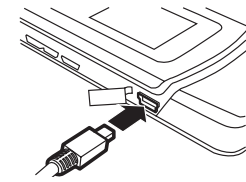

Note: Motorola Original USB data cables and supporting software may be sold separately. Check your computer or hand-held device to determine the type of cable you need. To make **data calls** through a connected computer, see page 86.



 
basics

See page 1 for a basic phone diagram.

Tip: Want some help? Press **•** > **Games & Apps** > **MOTOKRZRK3Help**. Use **MOTOKRZRK3Help** options to find information about phone features.

display

The *home screen* shows when you turn on the phone.

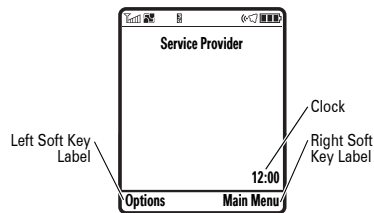

50 basics

 
Note: Your home screen might look different from the one shown, depending on your service provider.

To dial a number from the home screen, press number keys and **☎**.

Press **•** up, down, left, or right in the home screen to open basic menu features.

Press the *centre key* **•** to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

Status indicators can show at the top of the home screen:

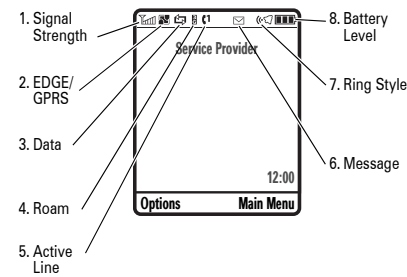

1 Signal Strength Indicator – Vertical bars show the strength of the network connection. You can't make or receive calls when **⏏** or **⏏** shows.

2 EDGE/GPRS Indicator – Shows when your phone is using a high-speed *Enhanced Data for GSM Evolution* (EDGE) or *General Packet Radio Service* (GPRS) network connection. Indicators can include:

- GPRS PDP context active
- EDGE active
- GPRS packet data available

3 Data Indicator – Shows connection status.

- secure packet data transfer
- unsecure packet data transfer
- secure application connection
- unsecure application connection

 
7 Ring Style Indicator – Shows the ring style setting.

- loud ring
- soft ring
- vibrate
- vibrate & ring
- vibrate then ring
- silent

8 Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

text entry

Some features let you enter text.

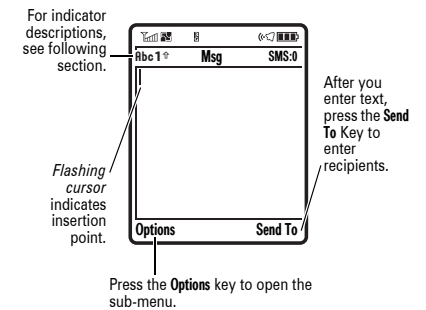

secure *Circuit Switch Data* (CSD) call

High-Speed Downlink Packet Access (HSDPA) data transfer

Bluetooth™ connection is active

4 Roam Indicator – Shows when your phone is seeking or using a network outside your home network. Indicators can include:

2G home

2G roam

2.5G home

2.5G roam

3G home

3G roam

HSDPA home

HSDPA roam

HSDPA is *High-Speed Downlink Packet Access*, available on some networks.

5 Active Line Indicator – Shows **☎** to indicate an active call, or **☎** to indicate when call diverting is on. Indicators for dual-line-enabled SIM cards can include:

☎1 line 1 active

☎1 line 1 active, call divert on

☎2 line 2 active

☎2 line 2 active, call divert on

When an alarm is activated, **🔔** can show here.

6 Message Indicator – Shows when you receive a new message. Indicators can include:

text message

voice message

52 basics

basics 51

basics 53

Press **#** in a text entry view to select an entry mode:

entry modes	
1 or [1]	Your Primary text entry mode can be set to any iTAP™ [1] or tap 1 mode.
2 or [2]	Your Secondary text entry mode can be set to any iTAP™ [2] or tap 2 mode, or set to None if you don't want a secondary entry mode.
123	Numeric mode enters numbers only.
@%	Symbol mode enters symbols only.

To set your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view and select **Primary Text** or **Secondary Text**.

iTAP™ and tap mode tips

 
- Press **[0]** in a text entry view to change text case to all capital letters (**ABC**), no capitals (**abc**), or next letter capital (**Abc**).
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP or Tap mode.
- Press **[1]** to enter punctuation or other characters.
- Press **[←]** to move the flashing cursor to enter or edit message text.
- Press **[C]** to delete the character to the left of the cursor. Hold **[C]** to delete the word.
- To cancel your message, press **[C]**.

iTAP™ mode

Press **#** in a text entry view to switch to iTAP mode. If you don't see **[1]** or **[2]**, press **Options > Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words and predicts each word as you enter it.

For example, if you press **[7] [7] [6] [4]**, your display shows:

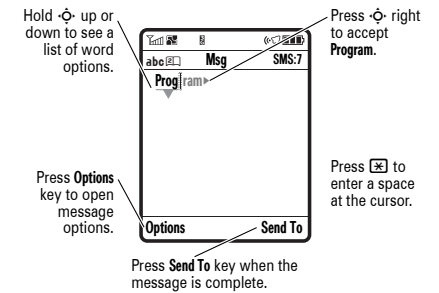

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.

 
Tip: Don't worry if you forget how iTAP works. In a text entry display, you can press **Options > Text Setup > Text Tutorial** to see an explanation.

tap and tap extended modes

Press **#** in a text entry view to switch to tap mode. If you don't see **Abc 1** or **Abc 2**, press **Options > Text Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in **Tap** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter. The **Tap Extended** mode works the same way, but includes more special characters and symbols.

For example, if you press **[7]** one time, your display shows:

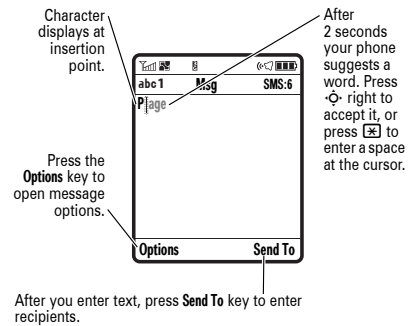

The first character of every sentence is capitalised. If necessary, press **[0]** down to change the character to lowercase before the cursor moves to the next position.

numeric mode

Press **#** in a text entry view until you see **123**. Press the number keys to enter the numbers you want.

Shortcut: You can press and hold a number key to temporarily switch to numeric mode from iTAP™ or Tap modes. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.

 
symbol mode

Press **#** in a text entry view until your phone shows a list of symbols. Scroll to the symbol you want, then press the *centre key* **[0]**.

volume

Press the volume keys to:

- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen

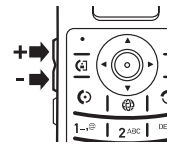


Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key while you are in the home screen. You can also switch to **Silent** or back by holding **#** in the home screen.

To change your ringer volume when your phone is closed, see page 58.

navigation key

 Press the *navigation key* (◂) up, down, left, or right to scroll to items in the display. When you scroll to an item, press the *centre key* (●) to select it.



smart key

The smart key gives you another way to do things. For example, when you scroll to a menu item, you can press the smart key to select it (instead of pressing the *centre key* (●)). The smart key usually does the same thing as pressing the *centre key* (●). To find the smart key, see page 1. To change what the smart key does in the home screen, see page 84.

external display

When you close your phone, the external display shows the date, status indicators, and notifications for incoming calls and other events. For a list of phone status indicators, see page 51.

set phone ring style in external display

- 1 Press a volume key to see **Ring Styles**.
- 2 Press the smart key repeatedly, until the style you want appears.
- 3 Press a volume key to return to the home screen.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **Options** key and select **Speakerphone On** to turn the handsfree speaker on. Your display shows **Speakerphone On** until you turn it off or end the call.

Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it: (●) > (⚙️) **Settings** > **Security** > **New Passwords**

You can also change your **SIM PIN** or call barring passwords.

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press (●) and enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:

Press (●) > (⚙️) **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press (●) > (⚙️) **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 69). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

lock & unlock external keys

When your phone is closed, your external keys (the smart key, volume keys, and camera key) lock to prevent accidental key presses.

To change how long your phone waits before it automatically locks your external keys:

(●) > (⚙️) **Settings** > **Security** > **External Key Lock** > **Timer** > a *time interval* or **Off**

Note: If you choose **Off**, you can still manually lock your external keys by holding the smart key.

To **unlock** your external keys, press **smart key** once, then hold the **smart key** (the key below your volume keys).

customise

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

- Loud
- Soft
- Vibrate
- Vibe & Ring
- Vibe then Ring
- Silent

The ring style profile's indicator shows at the top of your home screen. To choose your profile:

Find it: > **Settings** > **Ring Styles**
> **Style:** *style name*

Shortcut: In the **home screen**, press the volume keys up or down to quickly change your ring style profile. With your **phone closed**, press a volume key to see your ring style profile, press the smart key to change it, then press a volume key to store the change.

Tip: Do you get a lot of text messages? If you don't want to hear incoming message alerts during phone calls, press > **Settings** > **In-Call Setup** > **MSG Alert** > **Not in Call**.

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it: > **Settings** > **Ring Styles**
> *style* **Detail**

Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Change** key to change it.
- 2 Scroll to the alert you want, then press the **centre key** .
- 3 Press the **Back** key to save the alert setting.

time & date

Your phone needs the time and date for the calendar.

To **synchronise** the time and date with the network: Press > **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate** > **On**.

To **manually** set the time and date, turn off **Autoupdate**, then: Press > **Settings** > **Initial Setup** > **Time and Date** > *time* or *date*.

To choose an **analogue**, **digital**, or **no** clock for your home screen, press > **Settings** > **Personalise** > **Home Screen** > **Clock**.

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Note: Your *theme* can also set your wallpaper (page 63).

Find it: > **Settings** > **Personalise**
> **Wallpaper**

options	
Picture	Press up or down to select a picture, or select None for no wallpaper.

options	
Layout	Select Centre to centre the image in the display, Tile to repeat the image across the display, or Fit-to-screen to stretch the image across the display.

screen saver

Set a photo, picture, or animation as a screen saver. The screen saver shows when the flip is open and no activity is detected for a specified time.

Note: Your *theme* can also set your screen saver (page 63).

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

Find it: > **Settings** > **Personalise** > **Screen Saver**

options	
Picture	Press up or down to select a picture or animation, or select None for no screen saver.
Delay	Select the length of inactivity before the screen saver shows.

themes

A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more.

To **apply** a theme, press > **Multimedia** > **Themes** > *theme*.

To **download** a theme, see page 93.

To **delete themes you downloaded**, press > **Multimedia** > **Themes**, scroll to the theme, and press **Options** > **Delete** or **Delete All**.

To **preview** a theme, press > **Multimedia** > **Themes**, scroll to the theme, and press **Options** > **Preview**.

display appearance

To choose a phone **skin** that sets the look and feel of your phone's display: Press > **Settings** > **Personalise** > **Skin**. Your *theme* can also set your phone skin (page 63).

To set your display **brightness**: Press > **Settings** > **Initial Setup** > **Brightness**.

To save battery life, your keypad **backlight** turns off when you're not using your phone. The backlight turns on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:

Press > **Settings** > **Initial Setup** > **Backlight**.

Note: To turn the backlight on or off for Java™ applications, press > **Settings** > **Java Settings** > **App Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press > **Settings** > **Initial Setup** > **Display Timeout**.

answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Find it: > **Settings** > **In-Call Setup** > **Answer Options**

options	
Multi-Key	Answer by pressing any key.
Open to Answer	Answer by opening the flip.

calls


To make and answer calls, see page 26.

turn off a call alert


You can press the volume keys to turn off a call alert before answering the call.



recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

Shortcut: Press  from the home screen to see a list of dialled calls.



Find it:  >  **Recent Calls**, press  or  to select > **Dialled Calls**, **Received Calls** or **Missed Calls**

Scroll to a call. A  next to a call means the call connected.



- To call the number, press .
- To see call details (like time and date), press the *centre key* .



- To see the **Last Calls Menu**, press **Options**. This menu can include:

options	
Store	Create a phonebook entry with the number in the No. field. Store does not appear if the number is already stored.
Video Call	Make a video call to the number.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Send Voice Msg	Record and send a voice message to the number.

options	
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. Note: This option shows only during a call.
Filter by	Select dialled or received calls.
Notepad	Open the number in a text editor.
Call Times	Open your call time information. 
Call Cost	Open your call cost information. 

redial


- 1 Press  from the home screen to see a list of recent calls.
- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal**, and you see **Call Failed**, you can press  or the **Retry**  key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.


return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press the **View** key to see the received calls list.

- 2 Scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID)  shows the phone number for an incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.


You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 76).

To show or hide **your phone number** from the next person you call, enter the phone number and press **Options** > **Hide ID/Show ID**.


emergency calls

Your service provider programs one or more emergency phone numbers, such as 999 that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.


Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number. 

Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press the **Call** key to listen to the message.

To **check** voicemail messages:

Find it:  >  **Messages** > **Voicemail**



Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.


Note: You can't store a **Insert Pause** (pause), **Insert Wait** (wait), or **Insert n'** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then you can use the entry to call your voicemail.



other features

advanced calling



features
international calls  If your phone service includes international dialling, press and hold 0 to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.
hold a call Press Options > Hold to put all active calls on hold.
mute a call Press the Mute key (if available) or Options > Mute to put all active calls on mute.



features
call waiting  When you're on a call, you'll hear an alert if you receive a second call. Press Options to answer the new call. <ul style="list-style-type: none">To switch between calls, press the Switch key.To connect the two calls, press the Link key.To end the call on hold, press Options > End Call On Hold. To turn the call waiting feature on or off, press Options > Settings > In-Call Setup > Call Waiting > On or Off .
conference call  During a call: Dial next number, press Options , press the Link key.

features
attach a phone number  Dial an area code or prefix for a phonebook number, then press Options > Attach Number .



features
transfer a call  During a call: Options > Transfer , dial transfer number, press Options .
automatic call diverting  Set up or cancel automatic call diverting: Options > Settings > Call Divert Choose Voice Calls or Video Calls to set up diverting, or Cancel All to cancel diverting. You can set how long your phone waits before it diverts a call (5, 10, 15, 20, or 25 seconds).

features
notepad Press Options > Recent Calls , press the Options key, then > Notepad . <ul style="list-style-type: none">To call the number, press Options.To create a phonebook entry with the number in the No. field, press the Store key.To open the Dialling Menu to attach a number or insert a special character, press Options.

features
manual call diverting  You can set your phone to divert an incoming call only when you press a key. To set the number where your phone diverts the calls: Options > Settings > Call Divert > Push to Call Fwd No. , and enter the phone number To choose which key you press to divert incoming calls: Options > Settings > Personalise > Home Screen > Home Keys , select one of the key presses in the list, and then select Push to Call Forward
restrict calls  Restrict outgoing or incoming calls: Options > Settings > Security > Restrict Calls Tell your phone to allow All , None , or only the calls from your Phonebook .

features
<p>call barring </p> <p>Restrict outgoing or incoming calls:</p> <p>Restrict your voice or video calls to block all calls, international calls, or all calls except ones on your home network.</p> <p>☎ > ⚙ Settings > Security > Call Barring</p>
<p>fixed dial </p> <p>When you turn on fixed dialling, you can only call numbers stored in the fixed dial list.</p> <p>Turn fixed dialling on or off:</p> <p>☎ > ⚙ Settings > Security > Fixed Dial</p> <p>Use the fixed dial list:</p> <p>☎ > 📞 Tools > Dialling Services > Fixed Dial</p> <p>Note: Fixed dial is PIN2 password protected.</p>

74 other features—advanced calling

features
<p>service dial </p> <p>Your service provider might give you phone numbers for taxi companies or other services. These phone numbers are stored on your SIM card. To see them:</p> <p>☎ > 📞 Tools > Dialling Services > Service Dial</p>
<p>quick dial </p> <p>Dial preprogrammed phone numbers:</p> <p>☎ > 📞 Tools > Dialling Services > Quick Dial</p>
<p>DTMF tones</p> <p>Activate DTMF tones:</p> <p>☎ > ⚙ Settings > Initial Setup > DTMF</p> <p>To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press Options > Send Tones.</p>

phonebook

features
<p>assign a speed dial key to a phonebook entry</p> <p>You can assign the keys 1 to 9 to phonebook entries. Then, when you press and hold a key, your phone calls the entry.</p> <p>Note: Your service provider might assign some keys, such as 1 for your voicemail number. You can only speed dial the phonebook entries stored on your phone (not on your SIM card).</p> <p>Press ☎ > 📞 Phonebook and scroll to the phonebook entry. Then, press Options > Add to Speed Dial and pick a speed dial key.</p>

features
<p>use the speed dial key for a phonebook entry</p> <p>To use a speed dial key that you assigned to a phonebook entry, just press and hold the key while in your home screen.</p>
<p>edit or delete a phonebook entry</p> <p>Edit a number stored in the phonebook:</p> <p>☎ > 📞 Phonebook, scroll to the phonebook entry, and press Options. You can select Edit Contact, Delete Contact, or other options.</p> <p>Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press ⓧ and # to see the entries you use frequently or entries in other categories.</p>

other features—phonebook 75

features
<p>set ringer ID for a phonebook entry</p> <p>Assign a ring alert (ringer ID) to an entry:</p> <p>☎ > 📞 Phonebook > entry, then press Options > Edit Contact > Ringer ID > ringer name</p> <p>Note: The Ringer ID option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 78.</p> <p>Activate ringer IDs:</p> <p>☎ > ⚙ Settings > Ring Styles > style Detail > Ringer IDs</p>

76 other features—phonebook


features
<p>set picture ID for a phonebook entry</p> <p>Assign a photo or picture to show when you receive a call from an entry:</p> <p>☎ > 📞 Phonebook > entry, then press Options > Edit Contact > Picture > picture name</p> <p>Note: The Picture option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 78.</p>
<p>set picture ID view for phonebook</p> <p>Show entries as a text list, or with picture caller ID photos:</p> <p>☎ > 📞 Phonebook, then press Options > Setup > View by > view name</p>

features
<p>set category for a phonebook entry</p> <p>☎ > 📞 Phonebook > entry, then press Options > Edit Contact > Category > category name</p> <p>Note: The Category option isn't available for entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 78.</p> <p>When you open your phonebook, press ⓧ or # to see your categories.</p>
<p>set category view for phonebook</p> <p>☎ > 📞 Phonebook, then press Options > Filter by > Category > category name</p> <p>You can show all entries, entries in a predefined category (General, Friends, Family, Work), or entries in a category you create.</p> <p>Shortcut: When you open your phonebook, press ⓧ or # to see your categories.</p>

features
<p>create group mailing list</p> <p>You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list:</p> <p>☎ > 📞 Phonebook, then press Options > Create New > Message List</p> <p>You can select the list name as an address for multimedia messages.</p> <p>Note: A Message List cannot include entries stored on the SIM card. To copy an entry from SIM to phone memory, see page 78.</p>
<p>sort phonebook list</p> <p>Set the order in which entries are listed:</p> <p>☎ > 📞 Phonebook, then press Options > Setup > Sort by > sort order</p> <p>You can sort the phonebook list by First Name or Last Name.</p>

other features—phonebook 77


features
<p>copy one phonebook entry</p> <p>Copy an entry from the phone to the SIM card, or from the SIM card to the phone:</p> <p>☛ > ☑ Phonebook, scroll to the entry, press Options > Copy to SIM Card or Copy to Phone</p>
<p>copy multiple phonebook entries</p> <p>Copy multiple phonebook entries between the phone and SIM card:</p> <p>☛ > ☑ Phonebook, scroll to one entry, press Options > Select Multiple to, then select Copy to SIM Card or Copy to Phone</p>



features
<p>send phonebook entry to another device</p> <p>Send a phonebook entry to another phone, computer, or device:</p> <p>☛ > ☑ Phonebook, scroll to the entry, press Options > Share > Contact</p> <p>For more information about copying files to another device, see page 31.</p>
<p>print phonebook entry over Bluetooth™ connection </p> <p>You can use a Bluetooth wireless connection to send a phonebook entry from your phone to a printer.</p> <p>☛ > ☑ Phonebook</p> <p>Scroll to the entry you want to print, and press Options > Select Multiple to > Print.</p> <p>You cannot print a Mailing List. For more about Bluetooth connections, see page 30.</p>


messages



For basic text message features, see page 44.


Your phone reads message settings from the USIM card. If you put another USIM card in your phone, your phone sends and receives messages for the phone number on the new card.


features
<p>send email </p> <p>☛ > ☑ Messages > Create Message > New Email</p> <p>Note: To use email, you might need to enter a User ID and Password in your email settings (see page 82).</p>


features
<p>send voice message </p> <p>☛ > ☑ Messages > Create Message > New Voice Msg</p> <p>To record the voice message, press the Record key, speak, then press the Stop key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to receive the message.</p>
<p>use a message template </p> <p>☛ > ☑ Messages > Templates > Text Templates or Multimedia Templates</p> <p>Select a template to create a new message based on the template.</p>



features
<p>read and manage messages </p> <p>☛ > ☑ Messages > Message Inbox</p> <p>Icons next to each message indicate if it is read ☑ or unread ☐. Icons can also indicate if the message is locked 🔒, urgent ⚡, or low priority ↓, or if it has an attachment 📎.</p> <p>To Reply, Forward, Lock, or Delete a message, scroll to it and press Options.</p> <p>To open a message, press ☛. Then, you can press Options to use or store any phone numbers, email addresses, Web sites, or files in the message.</p>

features
<p>read and manage email </p> <p>☛ > ☑ Messages > Email</p> <p>To Reply, Forward, Lock, or Delete a message, scroll to it and press Options.</p> <p>To open a message, press ☛. Then, you can press Options to use or store any phone numbers, email addresses, Web sites, or files in the message.</p>
<p>store message objects </p> <p>Go to a multimedia message page, or scroll to an object in a message, then:</p> <p>Options > Store</p>

features
<p>print message over Bluetooth™ connection </p> <p>You can use a Bluetooth wireless connection to send a message from your phone to a printer.</p> <p>☛ > ☑ Messages > Message Inbox, Email, Outbox, or Drafts</p> <p>Scroll to the message you want to print and press Options > Print.</p> <p>You cannot print message Templates. For more about Bluetooth connections, see page 30.</p>

features
<p>store text messages on your SIM card </p> <p>To store incoming text messages on your SIM card, press:</p> <p>☛ > ☑ Messages, then press Options > Setup > Message Setup > Text Msg Setup > Default Storage > SIM Card</p>



features
edit email settings  <p>You can edit the settings for your Email connections. To use email, you need to store your email User ID and Password.</p> <p>☛ > ☑ Messages, then press Options > Setup > Email Msg Setup > Account Settings</p> <p>If you have more than one email account, select an account to edit.</p> <p>Your phone shows a list of email settings. Here is where you store your email User ID and Password.</p> <p>Note: To create a new account, select New Entry in the Account Settings list. Your display shows a folder for each email account under ☛ > ☑ Messages > Email.</p>

features
browser messages  <p>Read messages received by your micro-browser:</p> <p>☛ > ☑ Messages > Browser Messages</p>
info services  <p>Read subscription-based information services messages:</p> <p>☛ > ☑ Messages > Info Services</p>

personalising

features
language <p>Set menu language:</p> <p>☛ > ⚙ Settings > Initial Setup > Language</p>

82 other features—personalising


features
show/hide menu icons  <p>Show or hide menu feature icons in the home screen:</p> <p>☛ > ⚙ Settings > Personalise > Home Screen > Home Keys > Icons</p>
change home keys  <p>Change features for the soft keys, navigation key, and smart key in the home screen:</p> <p>☛ > ⚙ Settings > Personalise > Home Screen > Home Keys</p>
master reset <p>Reset all options except unlock code, security code, and lifetime timer:</p> <p>☛ > ⚙ Settings > Initial Setup > Master Reset</p>

features
master clear <p>Caution: Master clear erases all information you have entered (including phonebook and calendar entries) and content you have downloaded (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.</p> <p>☛ > ⚙ Settings > Initial Setup > Master Clear</p>




call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing ☑. This time includes busy signals and ringing.

84 other features—call times & costs


features
scroll <p>Set the scroll bar to Up/Down or Wrap Around in menu lists:</p> <p>☛ > ⚙ Settings > Initial Setup > Scroll</p>
text marquee  <p>Set the speed for scrolling text in your display:</p> <p>☛ > ⚙ Settings > Initial Setup > Text Marquee</p>
activate ringer IDs <p>Activate ringer IDs assigned to phonebook entries and categories:</p> <p>☛ > ⚙ Settings > Ring Styles > <i>style Detail</i> > Ringer IDs</p>
ring volume <p>☛ > ⚙ Settings > Ring Styles > <i>style Detail</i> > Ring Volume</p>

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features
call times  <p>Show call timers:</p> <p>☛ > ☎ Recent Calls, press the Options key, then > Call Times</p>
in-call timer  <p>Show time or cost information during a call:</p> <p>☛ > ⚙ Settings > In-Call Setup > In-Call Timer</p>
in-call date and time display  <p>Show the current date and time during voice calls:</p> <p>☛ > ⚙ Settings > In-Call Setup > Date and Time</p>

features
keypad volume <p>☛ > ⚙ Settings > Ring Styles > <i>style Detail</i> > Key Volume</p>
reminders <p>Set reminder alerts for messages that you receive:</p> <p>☛ > ⚙ Settings > Ring Styles > <i>style Detail</i> > Reminders</p>
menu view <p>Show the main menu as graphic icons or as a text-based list:</p> <p>☛ > ⚙ Settings > Personalise > Main Menu > View</p>
main menu <p>Reorder your phone's main menu:</p> <p>☛ > ⚙ Settings > Personalise > Main Menu > Reorder</p>








other features—personalising 83




features
call cost  <p>Show call cost trackers:</p> <p>☛ > ☎ Recent Calls, press the Options key, then > Call Cost</p>

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.


other features—handsfree 85

features
<p>speakerphone </p> <p>Activate the speakerphone during a call:</p> <p>Press the Speaker key (if available), or Options > Speakerphone On.</p>
<p>auto answer (car kit or headset) </p> <p>Automatically answer calls when connected to a car kit or headset:</p> <p> >  Settings > Car Settings or Headset > Auto Answer</p>
<p>voice dial (headset) </p> <p>Enable voice dial with headset send/end key:</p> <p> >  Settings > Headset > Voice Dial</p>




features
<p>auto handsfree (car kit) </p> <p>Automatically route calls to a car kit when connected:</p> <p> >  Settings > Car Settings > Auto Handsfree</p>

data calls



To connect your phone with a USB cable, see page 47.





features
<p>send data </p> <p>Connect your phone to the device, then place the call through the device application.</p>

86 other features—data calls



features
<p>software update </p> <p>Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to download it and install it later. To install a software update you downloaded:</p> <p> >  Settings > Phone Status > Software Update > Update Now</p>

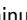

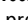
personal organiser

features
<p>set alarm</p> <p> >  Tools > Alarm Clock</p>




features
<p>turn off alarm</p> <p>When an alarm happens:</p> <p>To turn off the alarm, press the Disable key or . To set an eight-minute delay, press the Snooze key.</p> <p>Note: The Snooze key is available only if the phone is already powered on when the alarm sounds.</p>
<p>add new calendar event or task</p> <p>Your calendar can store events (with a start and end time that can repeat) or tasks (with a due date).</p> <p> >  Tools > Calendar, scroll to the day, press , press Options > Create New Event or Create New Task</p>

88 other features—personal organiser




features
<p>receive data </p> <p>Connect your phone to the device, then answer the call through the device application.</p>
<p>setting up Exchange ActiveSync </p> <p>You can use the Internet to synchronise your phone's phonebook and calendar entries with an email account on a Microsoft® Exchange 2003 Server.</p> <p>You need to know the email account's user name and password, the Microsoft® Exchange server name, and the user domain name. Confirm that the Mobility option is enabled on the email account, and that data service is activated with your phone service provider.</p>


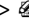
features
<p>using Exchange ActiveSync </p> <p>Once you set up an Exchange ActiveSync partner, you can schedule your phone to synchronise with the account automatically.</p> <p>To schedule synchronisation, press  >  Connection > MOTOSYNC > Exchange, press the Options key, then > Auto Sync Setup. Enter the time and days you want your phone to synchronise.</p>

network


features
<p>network settings </p> <p>See network information and adjust network settings:</p> <p> >  Settings > Network</p>

other features—network 87

features
<p>see calendar event or task</p> <p>See or edit event or task details:</p> <p> >  Tools > Calendar, scroll to the day, press .</p> <p>Tip: Keeping up with life can be tough work. To see a list of your upcoming events or tasks, open the calendar and press Options > View > Organised Events or Organised Tasks.</p>

features
<p>change calendar settings</p> <p> >  Tools > Calendar, then press Options > Setup</p> <p>You can choose the Default View that appears when you open your calendar, and you can show or hide the Tasks On Day View. You can tell your phone to Power On if it is turned off when a calendar alert occurs. Turn on Lunar Calendar if you do not want to use a solar calendar.</p>
<p>event reminder</p> <p>When an event reminder happens:</p> <p>To see reminder details, press the View key. To close the reminder, press the Back key.</p>

other features—personal organiser 89

features
<p>send calendar event to another device</p> <p>Send a calendar event to another phone, computer, or device:</p> <p>• > Tools > Calendar, scroll to the day, press •, scroll to the event, press Options > Send</p>
<p>print calendar month, week, or day over Bluetooth™ connection </p> <p>You can use a Bluetooth wireless connection to send a calendar month, week, or day from your phone to a printer.</p> <p>• > Tools > Calendar</p> <p>Go to the month, week, or day view and press Options > Print.</p> <p>For more about Bluetooth connections, see page 30.</p>

features
<p>create voice record</p> <p>• > Multimedia > Voice Record</p> <p>Press •. When prompted, speak into the phone.</p> <p>Note: Recording phone calls is subject to varying Laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.</p>
<p>play voice note</p> <p>Play back a voice note:</p> <p>• > Multimedia > Media Finder > Voice Notes > All Voice Notes > <i>voice note</i></p>
<p>calculator</p> <p>• > Tools > Calculator</p>

features
<p>currency converter</p> <p>• > Tools > Calculator, then press Options > Exchange Rate</p> <p>Enter exchange rate, press the OK key, enter amount, and press Options > Convert Currency.</p>

security


features
<p>SIM PIN</p> <p>Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows SIM Blocked.</p> <p>Lock or unlock the SIM card:</p> <p>• > Settings > Security > SIM PIN</p>



features
<p>lock feature</p> <p>• > Settings > Security > Lock Application</p>



fun & games

Note: Icons next to a picture, sound, or other object can indicate if the file is locked (🔒), or if it is stored on your phone (📱) or on your memory card (💾).

For basic information on the camera, see page 39.

features
<p>view, delete, or manage pictures</p> <p>Manage photos, pictures, and animations:</p> <p>• > Multimedia > Media Finder > Pictures > All Pictures</p> <p>To copy or move a file from your memory card (💾) to your phone memory (📱), highlight it in the list and press Options > Manage > Copy or Move > Phone. You cannot copy or move some copyrighted files. </p>

features
<p>view, delete, or manage video clips</p> <p>• > Multimedia > Media Finder > Videos > All Videos</p> <p>To copy or move a file from your memory card (💾) to your phone memory (📱), highlight it in the list and press Options > Select Multiple to > Copy or Move > Phone. You cannot copy or move some copyrighted files. </p>
<p>start micro-browser </p> <p>Just press 🌐.</p> <p>Your phone reads micro-browser settings from the USIM card. When you remove the USIM card, your phone clears the browser cache. To edit your settings, press</p> <p>• > WebAccess > Web Sessions.</p>

features
<p>download objects from Web page </p> <p>Download a picture, sound, or other object from a Web page:</p> <p>Press 🌐, go to the page that links to the file, scroll to the link, and select it.</p>
<p>Web sessions </p> <p>A <i>Web Session</i> stores settings that your phone uses to access the Internet. To select or create a Web session:</p> <p>• > WebAccess > Web Sessions</p>
<p>clear micro-browser history </p> <p>Clear the micro-browser's history, cache, or cookies:</p> <p>• > WebAccess > Browser Setup > Clear History, Reset Cache, or Clear Cookies</p>

features
<p>download game or application </p> <p>You can download a Java™ game or application the same way you download pictures or other objects:</p> <p>Press 🌐, go to the page that links to the file, scroll to the link, and select it.</p>
<p>start game or application </p> <p>Start a Java™ game or application:</p> <p>• > Games & Apps, scroll to the game or application, press the <i>centre key</i> •.</p> <p>Note: To install and run games stored on your memory card, press • > Games & Apps > [Install New].</p>

features

aeroplane mode

You can switch your phone to aeroplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an aeroplane, without interfering with aeroplane communications.

• > ⚙️ **Settings** > **Aeroplane Mode**
> **Aeroplane Mode** > **On**

You can make the aeroplane mode option appear whenever you turn on your phone:

• > ⚙️ **Settings** > **Aeroplane Mode**
> **Prompt At Startup** > **On**

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.45 W/kg.¹ As

mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is 1.13 W/kg.¹

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

-
1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
 2. Please see the Safety and General Information section about body worn operation.

Information from the World Health Organisation

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information:
<http://www.who.int./peh-emf>

index

A

accessories 22, 85
active line indicator 52
airplane mode 94
alarm clock 88
alarm indicator 52
alert
 set 57, 58, 61
 turn off 57, 61, 66
animation 92
answer a call 26, 65
attach a number 67, 71
audio player 35

B

backlight 64
battery 24, 25

98 index

K

keypad 65, 83

L

language 82
linking. See Bluetooth connection
lock
 application 91
 phone 59
 SIM card 91
Low Battery message 53

M

make a call 26
master clear 84
master reset 84
Media Finder 35
memory card 45
menu 3, 22, 50, 83
menu icons 50, 83, 84

100 index

 extending battery life 23
battery indicator 53
battery life, extending 63, 64
Bluetooth connection
 calendar entry, printing 90
 calendar entry, sending 90
 description 30
 indicator 31, 35
 messages, printing 81
 phonebook entries 78
 restricting access 35
brightness 64
browser messages 82
browser. See micro-browser

C

cables 47

message 79, 80, 81
message alerts 61
message indicator 45, 52
message reminders 83
micro-browser 82, 92, 93
Missed Calls message 68
MMS, defined 44
MP3 sound files 35, 37
multimedia message 44, 79, 80, 81
mute a call 72

N

navigation key 22, 58
network settings 87
notepad 71
number. See phone number
numeric entry mode 57

O

object exchange 31

calculator 90
calendar 88, 89
call
 answering 26, 65
 barring 59, 74
 diverting 73
 end 26
 ending 26, 44
 making 26
 timers 85
 waiting 72
call divert indicator 52
caller ID 67, 68, 76
camera 39
camera key 1
car kit 85
categories 77
centre key 58

open to answer 65
optional accessory 22
optional feature 22

P

pairing. See Bluetooth connection
passwords. See codes
personalise 82
phone number 28
phonebook 67, 71, 75
photo 39, 92
picture 92
picture ID 68, 76
PIN code 26, 59, 91
PIN2 code 59
play music with phone
 closed 37
power key 1, 26
printing 33

centre select key 22
clear/back key 1
clock 62
codes 59
conference call 72
copy files 31
costs, tracking 85

D

data call 86, 87
data indicator 51
date, setting 62
dial a phone number 26, 74
dialled calls 66
digital audio 35
display 3, 50, 64
divert calls 73
downloaded files
 from Web pages 93
 in messages 80
DTMF tones 67, 74

Q

quick dial 74

R

received calls 66
recent calls 66
redial 68
reminders 83
restrict calls 73
return a call 68
ring style indicator 53
ring style, setting 57, 58, 61
ringer ID 68, 76, 83
ringer volume 57, 83
roam indicator 52

S

screen saver 63
scrolling 83
security code 59
send key 1, 26

E

earpiece volume 57
EDGE indicator 51
email
 reading and managing 80
 sending 79
 settings 82
emergency number 69
end a call 26, 44
end key 1, 26
Enter Unlock Code message 59
external display 41, 58

F

fax call 86, 87
fixed dial 74
flip 26, 65

G

games 93

service dial 74
set up 28
signal strength indicator 51
SIM Blocked message 25, 91
SIM card 22, 26, 59, 74, 81, 91
skin 64
smart key 1, 37, 58, 84
soft keys 1, 50, 84
software update 88
speakerphone 85
speed dial 75
store your number 28
symbol entry mode 57
synchronising 87

T

tap text entry mode 56
telephone number. See phone number
text entry 53
text marquee 83

GPRS indicator 51
group mailing list 77

H

handsfree speaker 59
headset 85
hold a call 72
home screen 3, 50, 84

I

i-mode 28
in-call indicator 52
Incoming Call message 68
information services 82
international access code 72
iTAG text entry mode 55

J

Java applications 93

index 99

text message 80, 81
themes 63
time, setting 62
timers 85
transfer a call 73
turn on/off 25

U

unlock
 application 91
 phone 26, 59
 SIM card 91
unlock code 59
USB cables 47

V

video call key 1
video clip 92
videos 42
voice commands 38
voice dial 86

index 101

voice message 79
voice note 90
voice recognition 38
voice record 90
voicemail 69
voicemail message indicator
52, 69
volume 57, 83
volume keys 1, 37

W

wallpaper 62
Web pages 92
Web sessions 93
WHO information 97

Y

your phone number 28

6803540F08