

Х8 <u>User guide – short version</u>

5 Tap Set

- 6 Press <>> to go back to the setup guide.
- - $\dot{\Psi}$ While setting time, you can shift between 12-hour and 24-hour format. If you want to use AM and PM, you have to unmark Use 24-hour format.

To set up your phone to use Google™ services

- 1 From the setup guide, tap Google account.
- 2 Tap Next.
- 3 Tap Sign in if you want to use an existing Google™ account, or Create if you want to create a new account. Follow the on-screen instructions to finish setting up your phone with a Google™ account.

To set up an email account

- From the setup guide, tap Email.
 Tap Email address, enter your email address and tap
- Next 3 Enter your password and tap Done.
- 4 Tap Continue.
- 5 If the phone cannot download your email account settings automatically, enter the account settings manually.
- account settings. For example, you need to know if the account type is POP3 or IMAP.

To set up Timescape™ to work with Facebook™

1 From the setup guide, tap Facebook. 2 Tap Username, enter your Facebook™ username and tap Next.

A status bar at the top of the screen displays phone status information and notifications. Notification icons appear on

the left side of the status bar. Phone status icons appear on

In the Notification panel, notification icons are displayed in a detailed view. You can open notifications, such as

messages, reminders, or event notifications directly from

the Notification panel. You can also open running

applications such as the music player or the radio.

the right side. From the status bar you can access the

3 Enter your password and tap Done.

To add widgets to the Home screen

2 Tap Arrange widgets > Add widget
 3 Select a widget from the list.

4 Press <> to exit the edit mode.

3 Select an option

1 Press III.

Status bar

notification panel.

Notification panel

User guide in the phone

An extended User quide is available in your phone. The extended User guide is also available at www.sonvericsson.com/support

- To access the User guide in your phone 1 From the Home screen, drag 🗖 upwards.
- 2 Find and tap User guide.
- If the supplied memory card is not inserted into your phone, you can access the User guide by selecting the Online user guide option after you tap User guide in sten 2

User support application

The support application is your window to Sony Ericsson support. Watch how-to videos, get the latest support news, enter the support zone or get the latest software for your phone.

To open the user support application • From the Home screen, flick through the horizontal list of widgets and tap Support ?

Experience more. Discover how.

To set up Timescape[™] to work with Twitter[™] 1 From the setup guide, tap **Twitter**.

To transfer contacts using Sony Ericsson Sync

3 Enter your password and tap Done.

1 From the setup guide, tap Sync.

2 Tap Sony Ericsson Sync.

Sony Ericsson account.

To exit the setup quide

To access the setup guide

To open the Notification pane

Next

information

Visit www.sonyericsson.com/support to get the most from your phone.

2 Tap Username, enter your Twitter™ username and tap

Before you can transfer contacts to your new phone

3 Enter your username and password, then tap Log in. 4 Tap Save. The phone will now synchronise contacts,

calendar events and bookmarks with your

1 From the Home screen, drag a upwards.

5 Press <> to return to the setup guide.

using this method, you need to set up a Sony Ericsson account and synchronise your old phone with this

 
account. Go to www.sonyericsson.com/user for more

Important information Please read the Important information leaflet before you use your mobile phone.

Some of the services and features described in this User guide are not supported in all countries/regions or by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply.

Assembly

To remove the battery cove



- Insert the tip of your finger or a thin object into the opening on the side of the phone, between the phone and the battery cover, and slowly lift up the cover.
- Do not use sharp objects that may damage parts of the

Getting to know your phone

Phone overview

1	3.5 mm headset connector	C	3
2	Power key/Screen lock	4	•
3	Connector for charger/ USB cable	5 6 7	
4	Proximity sensor	í I	
5	Ear speaker	8	
6	Notification LED	- I.	
7	Light sensor	- L	
8	Touch screen		85

The battery is fully charged Green Flashing red The battery level is low The battery is charging. The battery level is between low and full Orange Flashing

- low, pending notifications (flashing green) are not indicated by the LED.
- 3 Touch and hold an item in the last pane until it vibrates

and then drag it to the right. 4 Press <> to exit the edit mode.

- To move an application 1 From the Home screen, press #.
- 2 Tap Arrange icons. 3 Touch and hold an item until it vibrates and drag it to one of the corners or to another application pane. If you move an item in the last applications pane, the pane switches
- to the next pane.
- 4 Press < to exit the edit mode</p>
- to the applications but the actual applications. When you move an application from the applications panes to corners or vice versa, the actual application gets moved and not shortcut. There are no shortcuts to the applications

Using the touch screen

- This phone is equipped with a conductive display. Moisture on the screen may prevent proper functionality.
- To open or highlight an item Tap the item.
- To mark or unmark options • Tap the relevant checkbox or in some cases the right side of the list option, to mark or unmark an option.

- · Drag the status bar downwards To close the Notification panel
- Press <>.
- Drag the Notification panel upwards.
- To open a running application from the Notification panel • From the Notification panel, tap the icon for the running application to open it.

Applications panes

You can access your applications in the phone using the applications panes. The applications panes extend beyond the screen. You can create new panes and arrange the applications according to your preferences.



•••• Shows which applications pane you are in

ways.

• From the applications panes, flick right or left.

From the Home screen, press 🗄. 2 Tap Arrange icons.



- charging.

There is a pending message or you have

3

 
 \checkmark

 \checkmark

 \checkmark

To open the applications panes

You can open the applications panes by different



- From the Home screen, drag a upwards.
 From the Home screen, tap .
- Flick the Home screen upwa • From the Home screen, press
- o browse the applications pane

10 Home key When you are finished with the setup guide, tap Done 11 Back key 2 Find and tap Settings > Basic settings > Setup guide.





14 Camera key 12 15 Speaker 16 Strap holder LED status

12 Camera lens

13 Volume key

To insert the SIM card and the memory card

· Slide in the SIM card and the memory card with the gold-

· Insert the battery with the battery usage labels facing

down and the connectors facing each other.

coloured contacts facing down.

To insert the batterv

To attach the battery cover



1 Secure the left side of the battery cover by aligning it into the openings on the rear left of the phone. 2 Press the right side of the battery cover down to lock the cover into place.

Turning the phone on and off

- To turn on the phone 1 Press and hold down the ①/r=0 key on the top of the nhone
- 2 Press I to unlock the screen. 3 Enter your SIM card PIN, when requested, and select
- 4 At first startup, follow the instructions in Setup guide. -- Your PIN is supplied by your network operator. If you want to correct a mistake made while entering your SIM card PIN, press

- To turn off the phone 1 Press and hold **()/r=0** until the options menu opens. 2 In the options menu, tap Power off.
- 3 Tap OK.
- To activate the screen • Press ()/--0.

Starting your phone for the first time

The first time you start your phone, a setup guide helps you enter essential phone settings and set up your email and online services accounts. This is also a good time to use Sony Ericsson Sync to synchronise your old contacts with your new phone or to import contacts from a SIM card. You can also access the setup guide later from the Settings menu.

To set the language

- 1 Scroll through the available languages list 2 Tap the language you want to use in your phone. The
- language is marked. 3 Tap Save.
- ↓- If you choose the wrong language and cannot read the menu texts, go to www.sonyericsson.com/suppor for help

Internet and messaging settings

To send text and multimedia messages and to access the Internet, you must have a 2G/3G mobile data connection

To charge the phone using a computer 1 Connect the phone to a USB port on a computer using

Menu • Open a list of options available in the

Home • Go to the Home screen or to the

Back • Go back to the previous screen

Notification panel

current screen or application

applications panes from any application or screen

Open the recently used applications

Close the onscreen keypad, a dialog

box, an options menu, or the

 \triangleleft

the USB cable included in the phone kit.

2 Tap Charge phone.

Using the hardware keys

Charging the battery

- The phone battery is partly charged when you buy the phone. It may take a few minutes before the battery icon appears on the screen when you connect the phone to a power source. You can still use your phone while it is
- The battery will start to discharge a little after it is fully charged and then charges again after a certain time. This is to extend battery life and may result in the charge status showing a level below 100 percent.



To charge the phone using the power adapt

• Connect the phone to a power outlet using the USB cable and the power adapter.

- Marked checkbox
- Unmarked checkbox
- Marked list option
- Unmarked list option

- When this option is available, drag the screen to pan.
- When available, tap or or to zoom in or out. · Touch, hold and drag upwards or downwards to zoom in or out
- You may have to drag your finger on the screen (in any direction) to make the zoom icons appear

Scrollina

- You can scroll up or down, and on some webpages you can also scroll to the sides.
- Pragging or flicking will not activate anything on the

Using the keyboard

When you start an application or select a field that requires text or numbers, the keyboard appears.

To display the keyboard to enter text · Tap a text entry field.

- To hide the keyboard
- When you enter text, tap 🕎.

To enter tex

RR

 \square

 \triangleleft

- To enter a character visible on the keyboard, tap the characte
- To enter a letter variant, touch and hold a regular keyboard letter to get a list of available options, then select from the list. For example, to enter "é", touch and hold "e" until a list appears, then select "é" from the list.

To shift between upper-case and lower-case letters Before you enter a letter, tap 1.

window

- To enter numbers or sy
- When you enter text, tap . A keyboard with numbers and symbols appears.
- To edit text
- 1 When you enter text, touch and hold the text field until the Edit text menu appears. 2 Select an option.

To change writing langua

- When you enter text, tap P, or touch and hold .
- 2 Tap Writing languages.3 Select the languages you want to use for writing. When
- you are finished, press <> repeatedly to return to entering
- 4 If you have selected more than one input language, tap if to switch between the selected writing languages.

Phone settings overview

You can set up the phone to suit your requirements, for example, Date & time, Wireless controls and Data synchronization

and the correct settings. There are different ways to get these settings:

- For most mobile phone networks and operators, Internet and messaging settings come preinstalled on your phone. You can then start using the Internet and send messages right away.In some cases you will get the option to download
- Internet and messaging settings the first time you turn on your phone. It is also possible to download these settings later from the Settings menu.
- You can manually add and change Internet and network settings in your phone at any time. Contact your network operator for detailed information on your Internet and messaging settings.

To import contacts from the SIM card

- When you copy contacts from a phone to a SIM card, the amount and the type of information you can transfer for each contact is limited. To get more help on how to copy contacts between two phones, go to www.sonyericsson.com/support from your computer.
- 1 When you start your phone for the first time, the setup wizard prompts you to import your SIM contacts. Tap Import contacts.
- When you are asked to confirm if you want to import your contacts from the SIM card to the phone, tap Yes.


To set the time and date

- From the setup guide, tap Time & date.
 Unmark the Automatic checkbox, if it is marked.
- 3 Tap Set date or Set time.
 4 Tap + or = to adjust the date or hour and minute.

Home screen

The Home screen is the starting point of your phone. You can personalise the **Home screen** by adding widgets, or by changing the wallpaper and the applications in the corners.

A widget is a part of an application on the Home screen. It displays important information from a particular application. For example, the Sony Ericsson Timescape[™] widget displays incoming messages and the Media widget allows you to start playing music directly.

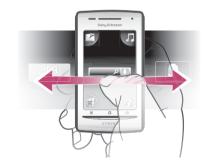

To view the extended Home scree • Drag your finger to the sides of the screen.

- To change the Home screen wallpaper
- Press 🔠.
- 2 Tap Change wallpaper

- To access the phone settings 1 From the **Home screen**, drag upwards.
- 2 Find and tap Settings.

To change the SIM card PIN

- 1 From the Home screen, drag vpwards.
- Find and tap Settings > Security & location > Set up SIM card lock > Change SIM PIN.
 Enter the old SIM card PIN and tap OK.
 Enter the new SIM card PIN and tap OK.

To download Internet and messaging settings

- From the Home screen, drag upwards.
 Find and tap Settings > Basic settings > Settings
- download.

To turn off all data traffic

- 1 From the Home screen, drag Aupwards. 2 Find and tap Settings > Wireless controls > Mobile
- networks
- 3 Unmark the Data traffic checkbox.

Calling

- To make an emergency call
- From the Home screen, tap .
 Enter the emergency number and tap . To delete a number, tap 💌
- inserted.

To make an emergency call while the SIM card is locked 1 Tap Emergency call.

2 Enter the emergency number and tap . To delete a number, tap .

To make a cal

- 1 From the Home screen, tap 📰. 2 If the call log is shown, tap into enter the dial pad view.
- 3 Enter the number of the recipient and tap 7. To delete a number, tap 🗙.

To end a cal

• Tap 💫.

To answer a call

• Drag the indicator to

Contacts

- To view your contact: • From the Home screen, tap 👔 to open the Contacts application.
- If you have not set up your phone for synchronisation with a web service, or imported SIM contacts, you can choose to do so the first time you open Contacts.

To import contacts from the SIM card

1 From the Home screen, tap []. 2 Press III, then tap Import/export > Import from SIM card.

Before you download applications and content

Before you download, make sure that you have an Internet connection. Also, you may need to have a memory card inserted in your phone to download content, such as music. ringtones and themes.

To open Android™ Market From the Home screen, drag upwards. 2 Find and tap Market.

Synchronising

Synchronising content between your phone and a computer is an easy and practical way to share the same contacts, messages, or calendar events on both devices. You can synchronise in several different ways:

- Sony Ericsson Sync Synchronise with a Sony Ericsson account to transfer contacts between different phones, and make backups of your phone contacts
- Google Sync™ Synchronise your phone with your Gmail™, Google Calendar™ and Google™ contacts.
- RoadSync[™] Synchronise and get your company email contacts and calendar in your phone. Your company or organisation must be running Microsoft® Exchange Server 2003 or later

To create a new Sony Ericsson account in your phone 1 From the Home screen, drag A upwards.

2 Find and tap Svnc.

Sony Ericsson

Preflighted by **Elanders** 🗵 PASSED 🗆 FAILEE

SE-221 88 Lund. Sweden

Ericsson Mobile Communications AB

3 Tap Sony Ericsson Sync

3 Tap OK.

If you have already imported the contacts from the SIM card you are using, there is no need to do it again To export contacts to the SIM card

1 From the Home screen, tap [2].

- 2 Press : then tap Import/export > Export to SIM card
- 3 Tap OK.
- When you copy contacts to your SIM card, the amount and the type of information you can transfer for each contact is limited. This is due to limited memory on SIM cards.

Multimedia and text messaging

To create and send a message **1** From the **Home screen**, tap \swarrow .

2 Tap New message

Sony Ericsson account

to start the synchronisation

Tap Save.

2 Find and tap Sync.

- 3 Tap Write message, enter your message text and tap 4 To add a recipient, select a contact from the list. You can
- also tap the text field, enter a number manually and then tap Done. 5 If you want to add a photo or a video, tap 🖳 and select
- an option. 6 If you want to add, remove or edit recipients, press
- then tap Edit recipients and edit the recipients.

4 Tap Sign up. Follow the registration wizard to create a

5 If desired, change the default synchronisation settings.

3 Tap the sync icon 🔘 for any listed synchronisation item

5 Mark the checkboxes for the synchronisation items you

To set up automatic synchronisations in Google sync

From the Home screen, drag ▲ upwards.
 Find and tap Settings > Data synchronization.

3 Mark the Background data checkbox.

want to synchronise automatically.

To set up RoadSync™ synchronisations

Contact your Microsoft® Exchange Server

1 From the Home screen, drag A upwards.

administrator for the correct account settings.

3 Follow the on-screen instructions to set up a Microsoft®

4 Once you have entered your account settings, you can

change the account preferences. When finished, press

Exchange Server synchronisation with the **RoadSync** Mail, **RoadSync Calendar** and **Contacts** applications.

4 Mark the Auto-sync checkbox

2 Find and tap RoadSync Mail.

o synchronise using Sony Ericsson Sync

1 From the Home screen, drag vpwards.

7 When you are finished, tap Send.

as a draft. The message thread will be tagged with the word Draft.

Fo read a received messag

- From the Home screen, tap . 2 Tap a message thread
- 3 If the message is not downloaded yet, tap the message
- and then tap **Download message**. 4 If the received message contains music or a video, tap the item and then tap View video or Play audio.
- ♦- When you receive a text or multimedia message, appears in the status bar. To read the message you can also drag the status bar downwards and tap the received message when the status bar is open.

Email

computer

You can use your phone to send and receive emails through vour regular email account.

→ You can set up synchronisation with a Microsoft® Exchange Server by using the Dataviz® RoadSync™ application in your phone. You can then use the RoadSync Mail application in your phone with your Microsoft® Exchange Server email account. Go to www.dataviz.com for more information.

Connect your phone to a computer and start transferring

pictures, music and other file types. All you have to do is connect a USB cable between the

application can help you access additional applications to

transfer and organise media files, update your phone and

protected material between your phone and computer

Connect your phone to a computer using a USB cable.

2 Phone: Tap Connect your phone. The memory card is

3 Computer: Wait until the phone memory and the memory

card appear as external disks in the file explorer.

4 Computer: Drag and drop selected files between the

Do not disconnect the USB cable when transferring

1 Computer: Make sure to enable the hardware to be

content as this may corrupt the content.

safely removed.2 Phone: Drag the status bar downwards.

phone and computer to launch an installation of PC Companion on the computer. The PC Companion

You might not be able to transfer some copyright-

To drag and drop content between your phone and a

mounted to the computer

phone and the computer.

3 Tap Turn off USB storage.

To disconnect the USB cable safely

To set up an email account in your phone From the Home screen, drag a upwards. 2 Find and tap Email.

3 Tap Email address, enter your email address and tap Next.

- 4 Enter your password and tap Done
- 5 Tap Continue. 6 If the phone cannot download your email account settings automatically, you can proceed by entering the account settings manually.
- your email service provider for the correct email account settings. For example, you need to know if the account type is POP3 or IMAP.

To create and send an email me 1 From the Home screen, drag vpwards.

- 2 Find and tap Email.
- 3 Tap Write new. 4 Tap To: and enter the recipient's address, then tap Done. You can add more recipients the same way, or
- delete a recipient by tapping x. 5 Tap Subject, enter the subject and tap Done
- 6 Tap Write email, enter the message text and tap Done
- 7 To attach a file, tap and select the type of file to

8 Tap Send

- To receive and open email mess 1 From the Home screen, drag Aupwards.
- 2 Find and tap Email.
- 3 Tap Inbox
- 4 To update the inbox with new messages, tap
- 5 To open and read a message, tap the message
- 4 Tap Turn Off Connecting your phone to a
 - 5 Disconnect the USB cable.
 - Computer instructions may vary depending on your operating system. See the documentation of your computer's operating system for more information

To install PC Companio 1 Connect your phone to a computer using a USB cable.

- 2 Tap Install PC Companion. 3 Computer: PC Companion automatically starts on your computer after a few seconds. Follow the on-screen
- instructions to install PC Companion.

To use PC Companior

SIM card is locked.

SIM card is PUK-locked.

Sony Ericsson E15i/E15a

Publication number: 1237-9492.2

All rights reserved.

Legal information

operator.

provider

- 1 Connect your phone to a computer using a USB cable. 2 Phone: Tap Connect your phone. 3 Computer: PC Companion automatically starts on your
- computer after a few seconds.
- If PC Companion does not start automatically, you can start it from the start menu of your computer.

Updating your phone

To download software updates w

- 1 From the Home screen, drag upwards
- 2 Find and tap Settings > About phone > Software update. Follow the on screen instructions to update your phone.

To download software updates using a USB cable

A Do not disconnect the USB cable when updating your phone as this may corrupt the content. Make sure that

You have entered your PIN incorrectly 3 times in a row. To

unlock the phone, you need the PUK provided by your

You have entered your PUK (Personal Unblocking Key)

incorrectly 10 times in a row. Please contact your service

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/ or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incommented into environments the larger will be and the set of the environment.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not ourarate

censed or is otherwise authorized. Sony Ericsson does not guarantee

the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liab

in any way for your improper use of additional content or other third party This User guide may reference services or applications provided by third parties. Use of such programming or services may require separate

rporated into new editions of this User guide

©Sony Ericsson Mobile Communications AB, 2010

Common questions

H, then tap Done

My phone is not working as expected

- If you experience problems with your phone, check these tips before you try anything else: Restart vour phone.
- Remove and re-insert the battery and SIM card. Then restart your phone.
- Update your phone. Updating your phone ensures optimal performance and provides the latest enhancements.
- · Reset your phone.
- A Be patient while resetting your phone. Restarting the phone during a reset procedure may damage the phone permanently.

Resetting the phone

Resetting the phone deletes all data, including downloaded applications, and resets the phone back to its initial state. the state before you turned on the phone for the first time. Make sure to back up important data you have on the phone before you reset the phone.

eset the phone

- 1 From the Home screen, drag ▲ upwards. 2 Find and tap Settings > SD card, USB Mass Storage & phone storage > Factory data reset > Reset
- 3 Tap Erase everything

No battery charging icon appears when I start charging the phone

It may take a few minutes before the battery icon appears on the screen.

I cannot transfer content between my phone and the

computer, when using a USB cable The software or the USB drivers have not been properly installed. Go to www.sonyericsson.com/support for more detailed installation instructions and troubleshooting

Your phone is in flight mode. Make sure flight mode is off.

operator and make sure that the network has coverage

card in another phone. If this works, it is probably your

phone that is causing the problem. In this case, contact the nearest Sony Ericsson service center.

You are within range of a network, but you are not allowed

to use it. However, in an emergency, some network

operators allow you to call the international emergency

• Your phone is not receiving any network signal, or the received signal is too weak. Contact your network

The SIM card is not working properly. Insert your SIM

Error messages No network coverage

where you are

Emergency calls only

number 112.

Sony Ericsson Timescape[™]

Sony Fricsson Timescape™ revolutionises your social experience by collecting all your communications into one view. Every event - Facebook or Twitter updates, text and multimedia messages, missed calls - appears as a tile in a chronological flow on the screen. You can see a snack-size preview of an event before choosing to view the full content You can filter by event type to view all communications for a contact.

-- The services and features described in this chapter may not be supported in all countries/ regions or by all networks and/or service providers in all areas.

To start Timescape¹

when you are finished.

2 Tap Connect your phone.

updates for your phone.

IMEI number

network in your country.

1 From the Home screen, drag A upwards. 2 Find and tap Timescape.

3 The first time you start Timescape, you can tap Log in and log in to your Facebook or Twitter account to receive Facebook and Twitter updates in Timescape. If you do not want to log in, tap Continue

the first time, when you start TimescapeTM, the welcome screen will not be displayed and you are not required to log in again

-- If you are not logged in and you tap Continue, then you can always log in from the Home screen by tapping Settings > Sony Ericsson > Timescape™ settings.

the hardware is safely removed from your computer

Before you can carry out the instructions below, you

computer. To install PC Companion, connect your

phone to the computer using a USB cable and follow

1 Connect your phone to a computer using a USB cable. If you have just installed PC Companion, make sure you

it again before trying to download software updates.

3 Computer: Wait a few seconds for PC Companion to

can start it from the start menu of your computer.

on-screen instructions to update your phone.

Every phone has a unique IMEI (International Mobile

Equipment Identity) number. You should keep a copy of this number. If your phone is stolen, your network provider can

use your IMEI number to stop the phone from accessing the

While using PC Companion, you will also get

disconnect your phone from the computer and reconnect

start. If PC Companion does not start automatically, you

4 Click Support Zone > Software Update and follow the

notifications whenever there are available software

need to have PC Companion installed on your

the on-screen instructions in your phone.

The Timescape[™] start screen



1 Tile filter icon

- Status update icon
- 3 Go to contact icon
- 4 Refresh icon (only visible if you are logged in to a web service account)
- 5 Timescape[™] tiles, in chronological order
- 6 Tile content icon

To update your Facebook or Twitter status in Timescape™ 1 From the Home screen, drag A upwards. 2 Find and tap Timescape.

To view your IMEI number



• You can find the IMEI number under the battery.

Troubleshooting

Battery performance

The standby time is defined as the time when the phone is connected to one network operator and located in a place where it has full network coverage and a strong signal strength. The standby time may vary depending on your position in the network and the signal strength. The more time your phone is in standby, the more the battery lasts.

The following tips will help you improve battery performance

Charge your phone often.

3 Tap .4 Tap Select services.

- 5 Use the toggles to select the services for which you want to update your status. If you want to update your status for a service you are not logged in to, tap the service and log in to it. When you have selected the desired services, Done.
- 6 Tap Edit status, enter your new status, and tap Send.
- To view an event in Timescap
- From the Home screen, drag upwards.
 Find and tap Timescape.
- 3 Scroll to the tile for the desired event, then tap the tile.

Android[™] Market

You can personalise and find new ways to use your phone by downloading additional applications and content. When you open Android™ Market you enter a world of applications and games. You can browse the applications and games through categories and top downloads.

To use Android[™] Market, you need to have a Google [™] account.

- I Android[™] Market may not be available in all countries or regions
- When you download content to your phone, you might be charged for the amount of data transferred to your phone. Contact your operator for information about data transfer rates in your country.

- Turn off WLAN and Wi-Fi® when not using these functions. You do not need to turn off 3G.
- Some of the applications from the Android™ Market affect your battery performance. It is recommended to check, which applications consumes more battery in the battery usage menu in the phone, which can be accessed from Settings > About phone.
- Set synchronisation applications like RoadSync™ in the phone to synchronise manually. You can synchronise
- automatically but change the intervals. It is recommended to reduce the update frequency or set it to manual for applications which require that the network connection is updated continuously, such as Facebook™ and Twitter™.
- If you are not using applications that use GPS, such as
- Google Maps™, you should disable GPS. It is recommended to temporarily turn off your phone, if you are in an area with no network coverage. Otherwise, your phone repeatedly scans for available networks. which consumes power.
- Add the Power control widget to the Home screen to easily turn on and off Wi-Fi®, Bluetooth™ wireless technology, GPS, background data and display brightness
- → To add the Power control widget, press ⊞, then tap Arrange widgets > Add widget and select Power Control
- Go to www.sonyericsson.com/support to learn more about how to maximise the battery performance.

ration with the third party provider and may be subject to additional terms of use. For applications accessed on or through a third-party website, please review such websites' terms of use and applicable privacy policy in advance. Sony Ericsson does not warrant or guarantee the availability or performance of any third-party websites or offered

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license. The Liquid Identity logos, Xperia, Timescape and X8 are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

Sony and "make.believe" are trademarks or registered trademarks of

Google, Google Maps, Gmail, Google Sync, Google Calendar and Android are trademarks or registered trademarks of Google, Inc. Ericsson is a trademark or registered trademark of Telefonaktiebolaget

Dataviz and Roadsync are trademarks or registered trademarks of Dataviz, Inc.

Facebook is a trademark or a registered trademark of Facebook, Inc. Twitter is a trademark or a registered trademark of Twitter, Inc. Wi-Fi is a trademark or a registered trademark of the Wi-Fi Alliance. Microsoft, Windows, Windows Vista, Windows Server and Explorer are egistered trademarks or trademarks of Microsoft Corporation in the

United States and/or other countries. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

her product and company names mentioned herein may be the demarks of their respective owners. Any rights not expressly granter rein are reserved. All other trademarks are property of their respective

All illustrations are for illustration only and may not accurately depict the actual phone

Sony Ericsson

SAR Information FCC Statement Declaration of Conformity

Sony Ericsson E15i

UMTS HSPA band 1 8 GSM GPRS/EDGE 850/900/1800/1900

Important Information

United States & Canada

THIS PHONE MODEL HAS BEEN CERTIFIED IN COMPLIANCE WITH THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

The E15i Series mobile phones have been designed to comply with applicable safety requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed to not exceed the limits* of exposure to radio frequency (RF) energy set by governmental authorities. These limits establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by international scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a safety margin designed to assure the safety of all individuals, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands. While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves. For more information on SAR, please refer to the safe and efficient use chapter in the User Guide.

The highest SAR value as reported to the authorities for this phone model when tested for use by the ear is 0.76 W/kg*, and when worn on the body is 0.68 W/kg* for speech and 0.77 W/kg* for data calls. Body worn measurements are made while the phone is in use and worn on the body with a Sony Ericsson accessory supplied with or designated for use with this phone. It is therefore recommended that only Ericsson and Sony Ericsson phones.

**Before a phone model is available for sale to the public in the US, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by

the government-adopted requirement for safe exposure". The tests are performed in positions and locations (i.e., by the ear and worn on the body) as required by the FCC for each model. The FCC has granted an Equipment Authorization for this phone model with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. While there may be differences between the SAR levels of various phones, all mobile phones granted an FCC equipment authorization meet the government requirement for safe exposure. SAR information on this phone model is on file at the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/fccid after searching on FCC ID PY7A3880091. Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) website at http://www.phonefacts.net.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a margin of safety to give additional protection for the public and to account for any variations in measurements.

**This paragraph is only applicable to authorities and customers in the United States.

Renseignements importants États-Unis et Canada

CE MODÈLE DE TÉLÉPHONE À ÉTÉ CERTIFIÉ CONFORME AUX EXIGENCES GOUVERNEMENTALES RELATIVES À L'EXPOSITION AUX ONDES RADIOÉLECTRIQUES.

Les téléphones mobiles E15i ont été conçus pour répondre aux normes de sécurité en vigueur en matière d'exposition aux onder radioélectriques. Votre téléphone sans fil est un émetteur et un récepteur radio. Il est conçu de manière à ne pas dépasser les limites* d'exposition aux signaux radiofréquences (RF) établies par les autorités gouvernementales. Ces limites fixent les niveaux maximaux d'énergie radiofréquence auxquels peut être soumis le grand public. Ces lignes directrices sont basées sur des normes qui ont été élaborées par des organisations scientifiques internationales par le biais d'évaluations périodiques et approfondies des études scientifiques. Ces normes prévoient une marge de sécurité visant à assurer la protection de toutes les personnes, quels que soient leur âge et leur état de santé.

Les lignes directrices relatives à l'exposition aux ondes radioélectriques utilisent une unité de mesure appelée "Débit d'absorption spécifique" (SAR). Les tests de SAR sont effectués selon des méthodes standardisées dans lesquelles le téléphone émet dans toutes les bandes de fréquences utilisées, à la plus forte puissance pour laquelle il a été homologué. Bien que le débit d'absorption spécifique puisse être différent d'un modèle de téléphone à un autre, tous les appareils sont conçus pour respecter les lignes directrices relatives aux ondes radioélectriques. Pour en savoir plus sur le débit d'absorption spécifique, reportez-vous au chapitre sur l'utilisation efficace et sans danger de ce présent guide.

Le débit d'absorption spécifique le plus élevé relevé par les autorités pour ce modèle de téléphone est de 0,76 W/kg* lorsqu'il est testé en utilisation près de l'oreille, et de 0,68 W/kg* (pour les appels vocaux) et de 0,77 W/kg* (pour les appels de données) lorsqu'il est porté sur le corps. Lors des mesures de port sur le corps, le téléphone était maintenu par un accessoire Sony

Ericsson fourni avec ce téléphone ou conçu pour être utilisé avec l'appareil. Il est par conséquent recommandé de n'utiliser que les accessoires authentiques Ericsson et Sony Ericsson avec les téléphones Sony Ericsson.

**Avant qu'un modèle de téléphone ne soit offert au public aux États-Unis, la FCC (Federal Communications Commission) doit le tester et certifier qu'il respecte les limites fixées dans les exigences. gouvernementales d'exposition sans danger*. Pour chaque modèle. les tests sont effectués en position et aux endroits d'usage (c'est-à- dire près de l'oreille et porté sur le corps), tel que l'exige la FCC. La FCC a accordé une autorisation d'équipement (Equipment Authorization) pour ce modèle de téléphone, après que tous les débits d'absorption spécifique indiqués aient été évalués et considérés conformes aux lignes directrices de la FCC en matière d'exposition aux radiofréquences. Même s'il peut v avoir des différences entre les niveaux de SAB des différents. téléphones, tous les téléphones mobiles auxquels la FCC a accordé une autorisation d'équipement répondent aux normes gouvernementales en matière d'exposition sans danger. La ECC conserve dans ses dossiers l'information relative aux débits d'absorption spécifique relevés pour ce modèle de téléphone. Vous pouvez la consulter au http://www.fcc.gov/oet/fccid. sous la rubrique "Display Grant ", après avoir effectué une recherche sur FCC ID PY7A3880091. Vous trouverez des renseignements supplémentaires concernant le débit d'absorption spécifique (SAR) sur le site Web de la Cellular Telecommunications & Internet Association (CTIA) au http://www.phonefacts.net.

*Aux États-Unis et au Canada, la limite de débit d'absorption spécifique (SAR) des téléphones mobiles utilisés par le public est de 1,6 watt/kg (W/kg) en moyenne sur un gramme de tissus. Cette norme comporte une marge importante de sécurité afin d'assurer une protection supplémentaire et de tenir compte de toute variation dans les mesures.

**Ce paragraphe ne concerne que les autorités et les clients des États-Unis.

Información importante

Estados Unidos y Canadá

ESTE MODELO DE TELÉFONO HA SIDO CERTIFICADO Y CUMPLE CON LOS REQUISITOS GUBERNAMENTALES DE EXPOSICIÓN A LAS ONDAS DE RADIO.

El teléfono móvil E15i ha sido diseñado para cumplir con los requisitos de seguridad aplicables de exposición a las ondas de radio. El teléfono inalámbrico es un transmisor y receptor de radio. Está diseñado para no superar los límites* de exposición a la energía de radiofrecuencia (RF) establecidos por las autoridades gubernamentales. Estos límites establecen los niveles permitidos de energía de RF para la población en general. Las especificaciones se basan en los estándares desarrollados por organizaciones científicas internacionales mediante una evaluación periódica y minuciosa de estudios científicos. Estos estándares incluyen un margen de seguridad destinado a garantizar la seguridad de todas las personas, independientemente de su edad y condición de salud.

Las especificaciones de exposición a las ondas de radio emplean una unidad de medición conocida como Tasa específica de absorción (SAR). Las pruebas de SAR se realizan usando métodos estandarizados mientras el teléfono transmite al nivel de potencia más alto certificado en todas las bandas de frecuencia utilizadas. Si bien puede haber diferencias entre los niveles de SAR de diversos modelos de teléfono, todos los teléfonos han sido diseñados para cumplir con las especificaciones pertinentes de exposición a las ondas de radio. Para obtener más información acerca de SAR, consulte el capítulo sobre uso seguro y eficaz en la Guía del usuario.

El mayor valor SAR según lo informado a las autoridades para este teléfono cuando se evaluó para su uso cerca del oído fue de 0,76 W/kg⁺, y cuando se utilizó cerca del cuerpo fue de 0,68 W/kg⁺ para llamadas de voz y 0,77 W/kg⁺ para llamadas de datos. Las mediciones para el uso cerca del cuerpo se realizan mientras el teléfono está en uso y ubicado cerca del cuerpo con un accesorio Sony Ericsson proporcionado con el teléfono o diseñado para su

uso con este teléfono. Por lo tanto, se recomienda utilizar sólo accesorios originales Ericsson y Sony Ericsson en conjunto con los teléfonos Sony Ericsson.

**Antes de que un modelo de teléfono esté disponible para la venta al público en los EE.UU., se debe probar y certificar ante la Comisión Federal de Comunicaciones (FCC) que no supera el límite establecido por los requisitos gubernamentales de exposición segura*. Las pruebas se realizan en las posiciones y lugares (es decir, en el oído y cerca del cuerpo) exigidos por la FCC para cada modelo. La FCC ha otorgado una Autorización de equipo para este modelo de teléfono con todos los niveles SAR informados y que han sido evaluados en cumplimiento con las especificaciones de exposición de BE de la ECC. Si bien puede haber diferencias en los niveles SAR entre distintos modelos de teléfonos móviles, todos los teléfonos móviles que han recibido una autorización de equipo de la FCC cumplen con los requisitos. gubernamentales de exposición segura. La información de SAR acerca de este modelo de teléfono está archivada en la FCC v se puede encontrar en la sección Display Grant de http://www.fcc.gov/oet/fccid luego de buscar en FCC ID PY7A3880091 Si desea información adicional acerca de SAB puede encontrarla en el sitio Web de la Asociación de Telecomunicaciones Celulares e Internet (CTIA, Cellular, Telecommunications & Internet Association) en la dirección http://www.phonefacts.net.

* En los Estados Unidos y Canadá, el límite SAR para teléfonos móviles utilizados por el público es de 1,6 watts/kilogramo (W/kg) promediado sobre un gramo de tejido. El estándar incorpora un margen de seguridad para entregar protección adicional al público y para representar las variaciones en las mediciones.

**Este párrafo sólo es aplicable a las autoridades y clientes en los Estados Unidos.

Important Information

Latin & South America

Radio wave exposure and Specific Absorption Rate (SAR) information

The E15i Series mobile phones have been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

For more information on SAR, please refer to the safety chapter in the User Guide.

SAR data information for residents in countries that have adopted the SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/kg averaged over ten (10) gram of tissue (for example European Union, Japan, Brazil and New Zealand):

The highest SAR value for this model phone when tested by Sony Ericsson for use at the ear is 0.84 W/kg (10g).

Información importante

Latinoamérica y América del Sur

Información acerca de la exposición a ondas de radio y la Tasa específica de absorción (SAR)

El teléfono móvil E15i ha sido diseñado para cumplir con los requisitos de seguridad aplicables de exposición a las ondas de radio. Dichos requisitos se basan en directrices científicas que establecen márgenes de seguridad con el fin de evitar perjuicos a todas las personas, independientemente de su edad o estado de salud.

Las directrices de exposición a ondas de radio utilizan una unidad de medida denominada coeficiente de absorción específica o SAR. Las pruebas de SAR se llevan a cabo utilizando métodos normalizados, con el teléfono transmitiendo en el nivel más elevado de potencia autoridado en todas las bandas de frecuencia utilizadas.

Aunque puede existir diferencias entre los niveles de SAR de diferentes modelos de teléfono, todos han sido diseñados para cumplir las directrices pertinentes sobre exposición a ondas de radio.

Para obtener más información sobre el SAR, consulte el capítulo sobre seguridad en la guía del usuario.

Información sobre datos de SAR para residentes de países en los que se haya adoptado el limite de SAR recomendado por la International Commission on Non-Ionizing Radiation Protection (ICNIRP, Comisión internacional de protección contra la radiación no ionizantes (ICNIRP, International Commission on Non-Ionizing Radiation Protection), es 2 W/kg promedio por cada diez (10) gramos de tejido (por ejemplo, la Unión Europea, Japón, Brasil y Nueva Zelanda):

El valor de SAR más elevado para este modelo de teléfono cuando Sony Ericsson realizó la prueba para su uso en la oreja era de 0,84 W/kg (10g).

Informação importante

América do Sul e Latina

Informações sobre SAR (Taxa de Absorção Específica) e exposição à radiofreqüência

O celular E15i foi projetado para cumprir os requisitos de segurança aplicáveis para exposição à radiofreqüência. Esses requisitos têm como base diretrizes científicas que incluem as margens de segurança para garantir a segurança de todas as pessoas, independentemente da idade e da saúde.

As diretrizes de exposição à radiofreqüência usam uma unidade de medida conhecida como SAR ou Taxa de Absorção Específica. Os testes de SAR são conduzidos por métodos padronizados com a transmissão telefônica em seu nível certificado de energia mais alto em todas as faixas de freqüência usadas.

Embora possa haver diferenças entre os níveis de SAR de vários modelos de telefone, todos foram projetados para atender as diretrizes relevantes de exposição à radiofreqüência.

Para obter mais informações sobre SAR, consulte o capítulo de segurança do Guia do Usuário.

Informações sobre os dados de SAR para moradores de países que adotaram o limite SAR recomendado pelo ICNIRP (International Commission on Non-Ionizing Radiation Protection) que é o limite médio de 2 W/kg em dez (10) gramas de tecido (por exemplo, União Européia, Japão, Brasil e Nova Zelândia).

Quando testado pela Sony Ericsson, o valor de SAR mais alto para este modelo de telefone para uso junto ao ouvido foi de 0,84 W/kg (10g).

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of Conformity for E15i

We, Sony Ericsson Mobile Communications AB of Nya Vattentornet SE-221 88 Lund, Sweden declare under our sole responsibility that our product Sony Ericsson type AAD-3880091-BV and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 301 908-1:V3.2.1, EN 301 908-2:V3.2.1, EN 300 440-2:V1.3.1, EN 300 328:V1.7.1, EN 301 489-7:V1.3.1, EN 301 489-17:V2.1.1, EN 301 489-24:V1.4.1, EN 301 489-3:V1.4.1 and EN 60 950-1:2066 following the provisions of, Radio Equipment and Telecommunication Terminal Equipment directive 1999/5/EC.

Lund, July 2010

(€0682 ⊕

Dan Redin,

Corporate Vice President, Head of Development We fulfil the requirements of the R&TTE Directive (1999/5/EC). Ce produit est conforme aux directives de R&TTE (1999/5/EC).

Cumplimos con los requisitos de la Directiva R&TTE – Normas sobre equipos de terminales de radio y telecomunicaciones (1999/ 5/EC).

Atendemos aos requisitos da Diretriz R&TTE (1999/5/EC).

www.sonyericsson.com



Sony Ericsson Mobile Communications AB SE-221 88 Lund, Sweden

1238-3674.1

GPS/Location based functions

interiors or areas adjacent to buildings.

distraction from driving.

Emergency calls

and standby times.

Antenna

Use of location-based information by the device may not be

uninterrupted or error free and may additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building

Caution: Do not use GPS functionality in a manner which causes

Calls cannot be guaranteed under all conditions. Never rely solely

upon mobile phones for essential communication. Calls may not be possible in all areas, on all networks, or when certain network services and/or phone features are used.

Use of antenna devices not marketed by Sony Ericsson could damage the phone, reduce performance, and produce SAR levels above the established limits. Do not cover the antenna with your hand as this affects call quality, power levels and can shorten talk

Radio Frequency (RF) exposure and Specific Absorption Rate (SAR)

When the phone or Bluetooth handsfree is turned on, it emits low

levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin

designed to assure the safety of all persons and to account for any

variations in measurements. Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a mobile

Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered.

Sony Ericsson does not warrant against recovery of information

Software delivered with this device and its media is owned by Sony Ericsson Mobile Communications AB, and/or its affiliated companies and its suppliers and licensors. Sony Ericsson grants you a non-exclusive limited licence to use

the Software solely in conjunction with the Device on which it is installed or delivered. Ownership of the Software is not sold, transferred or otherwise conveyed. Do not use any means to discover the source code or any component of the Software, reproduce and distribute the

Software, or modify the Software. You are entitled to transfer rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided the third party agrees in writing to be bound by the terms of this

This licence exists throughout the useful life of this Device. It can be terminated by transferring your rights to the Device to a third

Failure to comply with any of these terms and conditions will

Sony Ericsson and its third party suppliers and licensors retain all rights, title and interest in and to the Software. To the extent that the Software contains material or code of a third party, such third parties shall be beneficiaries of these terms.

and does not assume responsibility for disclosure of any

Loudness warning! Avoid volume levels that may be harmful to your hearing.

Protection of personal information

information even after a master reset

Licence.

party in writing.

terminate the licence immediately.

End User Licence Agreement

Sony Ericsson Consumer Web site At www.sonyericsson.com/support there is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Service and support

- You have access to a portfolio of exclusive service advantages such as:
- Global and local Web sites providing support.
 A global network of Contact Centers.
 An extensive network of Sony Ericsson service partners
- · A warranty period. Learn more about the warranty conditions in theLimited warrantysection.
- At www.sonyericsson.com/support, you can find the latest support lools and information. For operator-specific services and features, please contact your network operator. You can also contact our Contact Centers. If your country/region
- is not represented in the list below, please contact your local dealer. (Calls are charged according to national rates, including local taxes, unless the phone number is a toll-free number.) If your product needs service, please contact the dealer from whom it was purchased, or one of our service partners. For warranty claims, save proof of purchase

Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have the product checked by a certified service partner before charging or using it.

Recommendations for care and safe use of our products • Handle with care and keep in a clean and dust-free place. • Warning! May explode if disposed of in fire.

Do not expose to liquid or moisture or excess humidity

phone. The SAR value is determined at the highest certified powe Some products provide GPS/Location based functions. Location determining functionality is provided "As is" and "With all faults". Sony Ericsson does not make any representation or warranty as to the accuracy of such location information. level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone has been tested when positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and

properly used with an appropriate Sony Ericsson accessory and worn on the body. For more information about SAR and radio frequency exposure, go to: www.sonvericsson.com/health.

Flight mode Bluetooth and WLAN functionality, if available in the device, can be enabled in Flight mode but may be prohibited onboard aircraft or in other areas where radio transmissions are prohibited. In such environments, please seek proper authorisation before enabling Bluetooth or WLAN functionality even in Flight mode.

Malware

5

9

Malware (short for malicious software) is software that can harm the mobile phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While the device does employ security measures to resist such efforts. Sony Ericsson does not warrant o represent that the device will be impervious to the introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and conly downloading content to the mobile phone from known reliable sources.

This licence is governed by the laws of Sweden. When applicable, the foregoing applies to statutory consumer rights. In the event Software accompanying or provided in conjunction with your device is provided with additional terms and conditions, such provisions shall also govern your possession and usage of the Software.

Export regulations

Export regulations: Goods delivered under this Agreement may be the subject to import and export regulations of the European Union, the United States and other countries. Purchaser will Union, the United States and other countries. Purchaser will obtain comply with these applicable laws and regulations and will obtain and maintain any export and import license required for the delivery of goods to Purchaser under this Agreement. Without limiting the foregoing, and as an example, Purchaser will not knowingly export or re-export goods to destinations identified pursuant to Articles in Chapter II of European Council Regulation (EC) 428/2009 and specifically, and without limitation, Purchaser will also comply with U.S. government Export Administration Regulations ("EAR", 15 C.F.R. §§ 730-774, http:// www.bis.doc.gov/) administered by Department of Commerce, Bureau of Industry and Security and economic sanctions regulations (30 C.F.R. §§ 500 et. seq., http://www.treas.gov/ offices/enforcement/ofac/) administered by the U.S. Department of Treasury, Office of Foreign Assets Control.

Limited Warranty

Sony Ericsson Mobile Communications AB, SE-221 88 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty for your mobile phone, original accessory delivered with your mobile phone, and/or your mobile computing product (hereinafter referred to as "Product"). Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local

- . For optimum performance, the product should not be
- For optimum performance, the product should not be operated in temperatures below -10°C(+14°F) or above +45°C(+113°F). Do not expose the battery to temperatures above +60°C(+140°F).
 Do not expose to flames or lit tobacco products.
 Do not drop, throw or try to bend the product.
 Do not paint or attempt to disassemble or modify the product. Only Sony Ericsson authorised personnel should perform service. \mathbb{X} \mathbb{X}
- · Consult with authorised medical staff and the instructions of the medical device manufacturer before using the product near pacemakers or other medical devices or equipment. Discontinue use of electronic devices, or disable the radio transmitting functionality of the device, where required or
- requested to do so.
- Do not use where a potentially explosive atmosphere exists Do not use where a potentially explosive atmosphere exists.
 Do not place the product, or install wireless equipment, in the area above an air bag in a car.
- · Caution: Cracked or broken displays may create sharp edges or
- splinters that could be harmful upon contact. Do not use the Bluetooth Headset in positions where it is uncomfortable or will be subject to pressure

Children

Warning! Keep out of the reach of children. Do not allow children to play with mobile phones or accessories. They could hurt themselves or others. Products may contain small parts that could become detached and create a choking hazard.

Power supply (Charger) Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. If it does not fit into the outlet, have a proper outlet installed by an electrician. When a power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged.

Accessories

2

6

Use only Sony Ericsson branded original accessories and certified service partners. Sony Ericsson does not test third-party accessories. Accessories may influence RF exposure, radio performance, loudness, electric safety and other areas. Thirdparty accessories and parts may pose a risk to your health or safety or decrease performance

Accessible Solutions/Special Needs

In the US, compatible Sony Ericsson phones may offer compatibility with TTY terminals (with use of necessary accessory). For more information call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or go to www.sonvericsson-snc.com

Disposal of old electrical and electronic equipment

as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human health. Check local regulations by contacting your local city office, your household waste disposal service, the shop where you purchased the product or calling a Sony Ericsson Contact Center. Do not attempt to remove internal batteries. Internal batteries shall be removed only by a waste treatment facility or trained service professional

Disposing of the battery Check local regulations or call a Sony Ericsson Contact Center for information. Never use municipal waste.

Memory card

If the product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If the product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Sonv Ericsson Contact Center (national rates may apply) or visit www.sonyericsson.com to get further informatio

Our warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of two (2) years as from the original date of purchase of the Product for your mobile phone, and for a period of one (1) year following the original purchase date of the Product for all original accessories (such as the battery, charger or handsfree kit) which may be delivered with your mobile phone.

What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorised distributors or service workmanning, convertised nathematic distributions of service partners, in the country/region" where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein. Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads and other information may be lost when your Sony Ericsson Product is repaired or replaced. At present, Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Fricsson Product for repair or replacement

Use of charging devices that are not Sony Fricsson branded may pose increased safety risks

Battery

New or idle batteries can have short-term reduced capacity. Fully New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. Use for the intended purpose only. Charge the battery in temperatures between +5°C(+41°F) and +45°C(+113°F). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before removing the battery. Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks. Replace the battery only with another Sony Ericsson battery that has been qualified with the product per the standard IEEE-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

Personal medical devices

Personal medical devices Mobile phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 15 cm(6 inches) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer

Driving

3

X

7

11

Some vehicle manufacturers forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with the vehicle manufacturer's the installation. Check with the vehicle manufacturer's representative to be sure that the mobile phone or Bluetooth handsfree will not affect the electronic systems in the vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

4

8

Warning!

If the device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter

- Precautions on memory card use
 Do not expose the memory card to moisture.
 Do not touch terminal connections with your hand or any metal object
- · Do not strike, bend, or drop the memory card.
- Do not strike, bend, or drop the memory card.
 Do not attempt to disassemble or modify the memory card.
 Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
 Do not let dirt, dust, or foreign objects get into the insert port of
- any memory card adapter. Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card. • Recorded data may be damaged or lost when you remove the
- memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

www.sonvericsson.com



Sony Ericsson Mobile Communications AB SE-221 88 Lund, Sweden



Conditions

 This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony Ericsson authorised dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. presented with the Product to be repaired or replaced.
Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
If Sony Ericsson repairs or replaces the Product, the repair for the dealer.

the defect concerned, or the replaced Product shall be warranted (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.

 This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any maintenance of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid.

A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out - this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace the battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson

Minor variations in display brightness and colour may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between phones. This is nothing uncommon and is not regarded as a defective camera module.

4. Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation availability, coverage, services or range of that system

ı.

12

5. This warranty does not cover Product failures caused by 6. This warranty does not cover Product induces action of the Product performed by a non-Sony Ericsson authorised person.
6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which

are not Sony Ericsson branded original accessories intended for use with the Product

Sony Ericsson disclaims any and all warranties, whether express or implied, for failures caused to the Product or peripheral devices as a result of viruses, trojan horses, spyware, or other malicious software. Sony Ericsson strongly recomm that you install appropriate virus protection software on your Product and any peripheral devices connected to it, as available, and update it regularly, to better protect your device. It is understood, however, that such software will never fully protect your Product or its peripheral devices and Sony Ericsson disclaims all warranties, whether express or implied, in case of failure by such antivirus software to fulfil its intended purpose. 7. Tampering with any of the seals on the Product will void the warranty.

8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN I HEHE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICS SON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration 13

0 800 011 0400 guestions.CO@support.sonyericsson.com

of implied warranties, so the preceding limitations or exclusions

may not apply to you. The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

*Geographical scope of the warranty

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of European Economic Area (EEA) or in Switzerland or the Republic Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing, provided that an identical Product is sold in such country by an authorised Sony Ericsson distributor. To find out if your Product is sold in the country you are in, please call the local Sony Ericsson Contact Center. Please observe that certain services may not be available outside the country of original purchase, for example, due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products. ** In some countries/regions additional information (such as a

valid warranty card) may be requested.

Trademarks and acknowledgements

The Liquid Identity logo and Xperia are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB. Sony is a trademark or a registered trademark of Sony Corporation.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson. Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under

license.

~				
	ıın	n	ົ	ľ

Suppo	Costa Rica		
Anguilla	1-800-080-9518 (Toll Free)	questions.CO@support.sonyericsson.com	Danmark
Antigua and Barbuda	1-800-081-9518 (Toll Free)	questions.CO@support.sonyericsson.com	Deutschland
Argentina	0800-333-7427 (número gratuito)	questions.CO@support.sonyericsson.com	Dominica
Australia	1300 650-050 (Toll Free)	questions.AU@support.sonyericsson.com	Ecuador
The Bahamas	1-800-205-6062 (Toll Free)	questions.CO@support.sonyericsson.com	Eesti
Barbados	1-800-082-9518 (Toll Free)	questions.CO@support.sonyericsson.com	Egypt/مصر Ελλάδα
Belgique/ België	02-0745 1611	questions.BE@support.sonyericsson.com	
Belize	AN 815, PIN 5597 (Toll Free)	questions.CO@support.sonyericsson.com	El Salvador
Bermuda	1-800-083-9518 (Toll Free)	questions.CO@support.sonyericsson.com	España
Bolivia	800-100-542 (número gratuito)	questions.CO@support.sonyericsson.com	France
Brasil	4001-0444 (ligação gratuita)	questions.BR@support.sonyericsson.com	
Canada	1 866 766 9374 (Toll Free / sans frais)	questions.CA@support.sonyericsson.com	Guatemala
Cayman Islands	1-800-084-9518 (Toll Free)	questions.CO@support.sonyericsson.com	Haïti/Ayiti
Central and Southern Africa	+27 11 506 0123	questions.CF@support.sonyericsson.com	Honduras
Česká republika	844 550 055	questions.CZ@support.sonyericsson.com	Hong Kong/
Chile	800-646-425	questions.CO@support.sonyericsson.com	香港
Colombia	(número gratuito) 01800-0966-080 (número gratuito)	questions.CO@support.sonyericsson.com	Hrvatska India/भारत

	(numero gratuito)	
)anmark	3331 2828	questions.DK@support.sonyericsson.com
eutschland	0180 534 2020 (ortsübliche Gebühren)	questions.DE@support.sonyericsson.com
ominica	1-800-085-9518 (Toll Free)	questions.CO@support.sonyericsson.com
cuador	1-800-0102-50 (número gratuito)	questions.CO@support.sonyericsson.com
esti	06 032 032	questions.EE@support.sonyericsson.com
مصر/gypt	16727	questions.EG@support.sonyericsson.com
λλάδα	801 11 810 810 +30 210 899 19 19 (από κινητό τηλέφωνο)	questions.GR@support.sonyericsson.com
l Salvador	gratuito)	questions.CO@support.sonyericsson.com
spaña	902 180 576 (tarifa local)	questions.ES@support.sonyericsson.com
rance	09 69 32 21 21 09 69 32 21 22 (Xperia™ uniquement)	questions.FR@support.sonyericsson.com
auatemala	1-800-300-0057 (número gratuito)	questions.CO@support.sonyericsson.com
laïti/Ayiti	AN 193, PIN 5598 (numéro gratuit / nimewo gratis)	questions.CO@support.sonyericsson.com
londuras	AN 8000122, PIN 5599 (número gratuito)	questions.CO@support.sonyericsson.com
long Kong/ 昏港	+852 8203 8863	questions.HK@support.sonyericsson.com
Irvatska	062 000 000	questions.HR@support.sonyericsson.com
ndia/भारत	1800 11 1800 (Toll Free)	questions.IN@support.sonyericsson.com

17

	+91 (011) 39011111	
Indonesia	021 2701388	questions.ID@support.sonyericsson.com
Ireland	1850 545 888 (Local rate)	questions.IE@support.sonyericsson.com
Italia	06 48895206 (tariffa locale)	questions.IT@support.sonyericsson.com
Jamaica	1-800-442-3471 (Toll Free)	questions.CO@support.sonyericsson.com
Kύπρος/ Kıbrıs	0800 90 909	questions.CY@support.sonyericsson.com
Latvija	67 21 43 01	questions.LV@support.sonyericsson.com
Lietuva	8 700 55030	questions.LT@support.sonyericsson.com
Magyarország	01 880 47 47	questions.HU@support.sonyericsson.com
Malaysia	1800-88-9900 (Toll Free / bebas tol)	questions.MY@support.sonyericsson.com
المغرب/Maroc	+212 2 2958 344	questions.MA@support.sonyericsson.com
México	0 1800 000 4722 (número gratuito)	questions.MX@support.sonyericsson.com
Nederland	0900 8998318	questions.NL@support.sonyericsson.com
Nederlandse Antillen	(gratis nummer)	questions.CO@support.sonyericsson.com
New Zealand	0800-100-150 (Toll Free)	questions.NZ@support.sonyericsson.com
Nicaragua	AN 1800-0166, PIN 5600 (número gratuito)	questions.CO@support.sonyericsson.com
Norge	815 00 840 (lokaltakst)	questions.NO@support.sonyericsson.com
Österreich	0810 200 245	questions.AT@support.sonyericsson.com
Pakistan/ باکستان	021 - 111 22 55 73	questions.PK@support.sonyericsson.com
Panamá	00800-787-0009 (número gratuito)	questions.CO@support.sonyericsson.com
Paraguay	009 800 54 20032 (número gratuito)	questions.CO@support.sonyericsson.com

18

14

Other product and company names mentioned herein may be the trademarks of their respective owners. Any rights not expressly granted herein are reserved

Perú	0800-532-38 (número gratuito)	questions.CO@support.sonyericsson.com
Philippines/ Pilipinas	+63 2 7891860	questions.PH@support.sonyericsson.com
Polska	+48 22 22 77 444	questions.PL@support.sonyericsson.com
ortugal	808 204 466 (chamada local)	questions.PT@support.sonyericsson.com
lepública Iominicana	1-800-751-3370 (número gratuito)	questions.CO@support.sonyericsson.com
România	+40 21 401 0401	questions.RO@support.sonyericsson.com
aint Kitts Ind Nevis	1-800-087-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Saint Vincent and the Grenadines	1-800-088-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Schweiz/ Suisse/ Svizzera	0848 824 040	questions.CH@support.sonyericsson.com
Singapore	+65 6744 0733	questions.SG@support.sonyericsson.com
Slovenia	01 600 5000	questions.SI@support.sonyericsson.com
Slovensko	02 5443 6443	questions.SK@support.sonyericsson.com
South Africa	0861 632222	questions.ZA@support.sonyericsson.com
South Korea/대한 민국	(+82) 1588 4170	questions.KO@support.sonyericsson.com
Suomi	09 299 2000	questions.FI@support.sonyericsson.com
Sverige	013 24 45 00 (lokal taxa)	questions.SE@support.sonyericsson.com
rinidad and obago	1-800-080-9521 (Toll Free)	questions.CO@support.sonyericsson.com
ürkiye	+90 212 473 77 77	questions.TR@support.sonyericsson.com
Jnited (ingdom	08705 237 237 (Local rate)	questions.GB@support.sonyericsson.com
Jnited States	1 866 766 9374	questions.US@support.sonyericsson.com
Jruguay	000-401-787-013 (número gratuito)	questions.CO@support.sonyericsson.com
/enezuela	0-800-1-00-2250 (número gratuito)	questions.CO@support.sonyericsson.com

19

15

Việt Nam	1900 1525 (miễn phí)	questions.VN@support.sonyericsson.com
Беларусь	8 82 00 361 0001	questions.BY@support.sonyericsson.com
България	0800 1 8778	questions.BG@support.sonyericsson.com
Россия	+7 (495) 7870986	questions.RU@support.sonyericsson.com
Україна	(+380) 44 590 1515	questions.UA@support.sonyericsson.com
الأردن	+971 4 3919 880	questions.JO@support.sonyericsson.com
الإمارات العربية المتحدة	+971 4 3919 880 (UAE)	questions.AE@support.sonyericsson.com
الكويت	+971 4 3919 880	questions.KW@support.sonyericsson.com
المملكة العربية	800-8200-727	questions.SA@support.sonyericsson.com
السعودية		
中国	+86 400 810 0000	questions.CN@support.sonyericsson.com
ムン語	000 0 05005511	questions TW@support sonveriesson.com

1/2 02 2483 030 questions.TH@support.sonyericsson.com

20