



Cisco Cius User Guide

Release 9.2(1)

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

Text Part Number: OL-24484-01

Contents

Preface xix

Guide Organization xix

Related Documentation xix

Additional Information xx

Obtaining Documentation and Submitting a Service Request xx

Overview 1

Hardware 2

Power Button 7

Turn Cisco Cius On 7

Turn Cisco Cius Off 8

Turn On Silent Mode 8

Turn Off Silent Mode 8

Turn On Airplane Mode 8

Turn Off Airplane Mode 8

Turn Off the Screen 8

Home Key 8

View the Home Screen 8

Multitasking 9

Menu Key 9

View a Menu 9

Back Key 9

Go to the Previous Page or Application 9

Battery 9

Insert the Battery 9

Charge the Battery 9

Remove the Battery 10

Camera LED 10

Features 10

- Lock Screen **10**
 - Unlock the Screen **10**
 - Add a PIN **11**
 - Add a Password **11**
 - Reset a Lost PIN or Password **11**
 - Place an Emergency Call from the Unlock Screen **11**
 - Set Screen Timeout **11**
- Setup Assistant **12**
 - Run the Setup Assistant **12**
- Home Screen **13**
 - Notifications Bar **13**
 - Quick Launch Bar **14**
 - Applications Menu **14**
 - Phone Application **14**
 - Add to Cius Home Screen **14**
 - Search **15**
 - Customize the Home Screen **15**
 - Add an Application to the Home Screen **15**
 - Add a Widget to the Home Screen **15**
 - Add a Folder to the Home Screen **15**
 - Move a Widget or an Icon **15**
 - Remove a Widget or an Icon from the Home Screen **15**
 - Change Your Wallpaper **16**
 - Work Spaces **16**
 - Navigate Between Work Spaces **16**
- On-Screen Keyboard **16**
 - Switch Keyboard Modes **16**

Quick Reference 17

- Keys **17**
- Tips and Tricks **17**

Applications 19

- Wireless & Networks **19**
 - Connect to a Wireless Network **19**
 - Connect to a Hidden Wireless Network **19**

Edit a Wireless Network	20
Delete a Wireless Network	20
Web Proxy	20
Add a Web Proxy	20
Edit a Web Proxy	21
Delete a Web Proxy	21
TFTP	21
Connect to a TFTP Server	21
AnyConnect VPN	22
AutoNetDetect	22
Password Persistence	22
Enable VPN	22
Add a VPN Connection Profile	23
Edit a VPN Connection Profile	23
Connect to a VPN	23
Disconnect from a VPN	23
Delete a VPN Connection Profile	24
Phone	24
Your Phone Number	25
Place a Call	25
Place an Emergency Call from the Unlock Screen	25
Incoming Calls	25
Answer a Call	27
Ignore a Call	27
Divert a Call	27
Call Control Bar	27
View More Call Control Bar Options	28
End a Call	28
Video Calls	28
View a Video Call in Full Screen Mode	28
Video Call Control Bar	29
Mute Your Video Transmission	29
Automatic Video Transmission	29
Stop Automatically Transmitting Video	29
Adjust Video Call Settings	30

Turn Off Video Calls	30
Self-View	30
Show Self-View	30
Barge	30
Call Forward All	31
Forward Your Calls	31
Stop Forwarding Your Calls	31
Conference	31
Add Another Party to Your Call to Create a Conference	31
Swap Between Active Calls from the Conference Dialog Box	32
Contacts	32
View Call Details	32
Display the Keypad	32
Do Not Disturb	33
Turn DND On and Off	33
Favorites	33
HD Media Station	33
Call History	33
Hold	34
Put a Call on Hold	34
Put a Call on Hold by Answering a New Call	34
Line Status	34
Message Indicator	35
Missed Calls	35
Mobile Connect	35
Mute	36
Mute Your Phone	36
On-hook Dialing	36
Plus Dialing	36
Dialing an International Number	36
Privacy	36
Recent Call List	37
Set Your Ringtone	37
Secure and Nonsecure Indication Tone	37
Shared Lines	38
Speed Dial	38

Transfer	38
Transfer a Call to Another Number	38
Swap Between Active Calls from the Transfer Dialog Box	39
Visual Voice Mail	39
Set Up Visual Voice Mail	39
Sign In to Visual Voice Mail	39
Listen to a Voice Message	40
View Voice Message Details	40
Delete a Voice Message	40
Call Waiting	40
Cisco Unified CM User Options	40
Sign In and Out of User Options Web Pages	41
Device	41
Select a Device From the User Options Web Pages	41
Customize Do Not Disturb Options	41
Line Settings	42
Set Up Call Forwarding for a Line	42
Change the Audible Voice Message Indicator Setting for a Line	42
Speed Dial on the Web	43
Set Up Speed-Dial Buttons	43
User Settings	43
Change Your Browser Password	43
Change Your PIN	43
Change the Language for Your User Options Web Pages	43
Directory	44
Personal Address Book	44
Add a New PAB Entry	44
Search for a PAB Entry	44
Mobility Settings	44
Add a New Remote Destination	45
Create an Access List	45
Contacts	46
Contact Details	47
Add a Contact	47
Edit a Contact	47
Remove a Contact	47

Mark a Contact as a Favorite	48
Add a Group	48
Delete a Group	48
Add a Contact to a Group	48
Contact Icons	48
Call a Contact	49
View Contact Details	49
Send an Email Message	49
Start a Conversation	49
Start a WebEx Meeting	49
Search	49
Search Your Contacts	50
Import Contacts	50
Export Contacts	50
Availability	50
Email	51
Settings	51
Add an Email Account	51
Inbox	52
Refresh Your Inbox	53
Send an Email Message	53
Save an Email Message Draft	53
Reply to an Email Message	53
Forward an Email Message	54
Add an Attachment to an Email Message	54
Add a CC or BCC Recipient	54
Delete an Email Message	54
Delete Multiple Email Messages	54
Mark an Email Message as a Favorite	54
Mark Multiple Email Messages as Favorites	54
Mark an Email Message as a New Message	55
Mark Multiple Email Messages as New Messages	55
Add a Signature to Your Email Messages	55
Set Your Email Check Frequency	55
Select Your Ringtone	55
Edit Your Vibrate Settings	55

Chat	56
Set Up an Account	56
Add a Chat Account	56
Signing In	56
Contacts	57
Add a Chat Contact	57
Remove a Chat Contact	57
Show Offline Contacts	57
View Chat Contact Details	58
Start a Conversation with a Chat Contact	58
Call a Chat Contact	58
Start a WebEx Meeting with a Chat Contact	58
Send an Email Message to a Chat Contact	58
Unsynced Contacts	59
Add an Unsynced Contact to Your Chat Contacts	59
Start a Conversation with an Unsynced Contact	59
Call an Unsynced Contact	59
Start a WebEx Meeting with an Unsynced Contact	59
Send an Email Message to an Unsynced Contact	59
Contact Requests	60
View Your Contact Requests	60
Conversations	60
Start a Conversation	61
End a Conversation	61
Availability	61
Add a Custom Status	61
Delete a Custom Status	62
Emoticons	62
Insert an Emoticon into a Conversation	62
Links	62
Open a URL	62
Email Address	62
Phone Number	62
WebEx	62
Search	63
Add a Search Result to Your Chat Contacts	63

Start a Conversation with a Search Result	63
Settings	63
Set Your Profile Picture	63
Remove a Profile Picture	63
Enable Status Bar Notifications	64
Enable Audio Notifications	64
Enable In-Chat Audio Notifications	64
Set Your Ringtone	64
Sign Out of Chat	64
Calendar	65
Set Up an Account	65
Add a Calendar Account	66
Add a Calendar Event	66
Edit an Event	67
Delete an Event	67
Start a Scheduled WebEx Meeting	67
Join a Scheduled WebEx Meeting	67
Settings	68
Hide Declined Events	68
Set Alerts and Notifications	68
Select Your Ringtone	68
Edit Your Vibrate Settings	68
Set Your Default Reminder Time	68
Calendar Widget	69
Unified Inbox	69
Contacts View	69
View Communications with a Contact	69
Search the Contact List	69
View an Email Message	70
View Event Details	70
Join a WebEx Meeting	70
Reorder the Panels	70
Refresh Application Data	70
Events View	70
View Event Details	70

View an Email Message	71
Reorder the Panels	71
Refresh Application Data	71
View Communications with a Contact	71
Search the Contact List	71
Contact Icons	71
Start a Conversation	71
Call a Contact	72
Start a WebEx Meeting	72
Send an Email Message	72
Unified Inbox Widget	72
Cisco WebEx Meetings	72
Start an Instant WebEx Meeting	73
Schedule a New WebEx Meeting	73
Start a Scheduled WebEx Meeting	74
Join a Scheduled WebEx Meeting	74
Join a WebEx Meeting by Meeting Number	74
Start an Unscheduled WebEx Meeting	74
Invite More Participants to a WebEx Meeting	75
Invite More Participants During a WebEx Meeting	75
Invite Participants on a Phone Call into a WebEx Meeting	75
Invite Participants in a Chat into a WebEx Meeting	75
Cisco WebEx Meetings Widget	75
Google Search	76
Search the Internet	76
Search for Applications	76
Search Your Contacts	76
Add More Search Options	76
Search Widget	77
Browser	77
View a Website	77
Open a New Window	77
View Open Windows	77
View Your Bookmarks	78
Bookmark a Website	78

Open a Bookmark	78
Open a Bookmark in a New Window	78
Edit a Bookmark	78
Delete a Bookmark	79
Add a Shortcut to the Home Screen	79
Share a Link	79
Copy a Link URL	79
Set a Link as Your Homepage	80
View Your Most Visited Websites	80
View Your Browser History	80
Refresh a Page	80
Search a Page	80
View Download History	81
Edit Browser Settings	81
Quickoffice	81
Open a Word Document	81
Open a Spreadsheet	81
Open a Presentation	81
Open a PDF Document	82
Save a File	82
Camera	82
Switch Between Picture and Video	82
Switch Cameras	83
Pictures	83
Take a Picture	83
Adjust the Picture Size	83
Change the Exposure	83
Change Color Effects	83
Restore Default Camera Settings	83
Enable Location Data	83
Disable Location Data	83
Videos	84
Record a Video	84
Change the Exposure	84
Change Color Effects	84

Restore Default Camera Settings	84
Adjust the Video Quality	84
Gallery	85
Albums	85
View an Album	85
Switch Album Views	85
Select All Items in an Album	86
Pictures	86
View a Picture	86
View a Slideshow	86
Share a Picture	86
Delete a Picture	86
Rotate a Picture	86
Set a Picture as Wallpaper	87
Set a Picture as a Contact Icon	87
Crop a Picture	87
View Picture Details	87
Picture Frame Widget	87
Videos	88
View a Video	88
Delete a Video	88
Share a Video	88
View Video Details	88
Music	88
Songs	90
Play a Song	90
Delete a Song	90
Use a Song as a Ringtone	90
Playlists	90
Add a Song to a Playlist	90
Remove a Song from a Playlist	90
Play a Playlist	90
Rename a Playlist	91
Delete a Playlist	91
Edit the Recently Added Playlist	91

- Music Widget **91**
- Clock **91**
 - Set an Alarm **91**
 - Edit an Alarm **92**
 - Delete an Alarm **92**
 - View a Slideshow **92**
 - Open the Music Player application **92**
 - Analog Clock Widget **92**
- Sound Recorder **92**
 - Record **93**
 - Play Back a Recording **93**
- Desktop Virtualization **93**
- Google Mobile Services **94**
 - Add a Google Account **94**
 - Gmail **94**
 - Google Search **95**
 - Latitude **95**
 - Maps **95**
 - Market **95**
 - Navigation **95**
 - News & Weather **95**
 - Places **95**
 - Talk **96**
 - YouTube **96**
- More Applications **96**
 - Cisco AppHQ **96**
 - Sign In **96**
 - View Featured Applications **97**
 - View a Category **97**
 - Search Applications **97**
 - View Application Downloads **97**
 - View Application Details **97**
 - Download an Application **98**
 - Remove an Application **98**
 - Exit **98**

- Android Market **98**
 - Market Widget **98**
- UCM App **99**
- Remove an Application **99**

Accessories 101

- HD Media Station **101**
 - Connect Cisco Cius to an HD Media Station **103**
 - Power Cisco Cius Through the Power Port **104**
 - Power Cisco Cius Through PoE+ **104**
 - Launch the Phone Application **104**
 - Answer a Call **104**
 - Docking and Undocking During a Call **104**
 - Start a Speakerphone Call **104**
 - Switch to a Speakerphone Call **104**
 - End a Speakerphone Call **105**
 - Adjust the Ringer Volume **105**
- USB Accessories **105**
 - USB Keyboard and Mouse **105**
 - Cisco Cius Key Shortcuts **105**
 - Typing Shortcuts **106**
 - Browser Shortcuts **106**
 - Gmail Shortcuts **106**
 - Mouse Actions **107**
 - VDI Shortcuts **107**
 - Keyboard Shortcuts **107**
 - Mouse Shortcuts **107**
 - USB Memory Stick **107**
 - USB-Powered Hub **108**
 - USB Console Cable **108**
- Micro-USB Port **108**
 - Turn On USB Storage **108**
 - Turn Off USB Storage **108**
- MicroSD Card Slot **108**
 - Mount a MicroSD Card **108**

Format a MicroSD Card	109
Connecting to a Monitor	109
Edit HDMI Settings	109
VDI	110
Bluetooth	110
Enable Bluetooth	110
Edit Bluetooth Settings	111
Scan for Bluetooth Devices	111
Pair a Bluetooth Device	111
Unpair a Bluetooth Device	111
Make the Cius Discoverable	111
Set Your Bluetooth Device Name	111
Sharing Files	112
Disconnect a Bluetooth Device	112
Disconnect and Unpair a Bluetooth Device	112
3.5 mm Headsets	112
Product Safety, Security, Accessibility, and Related Information	113
Safety and Performance Information	113
Power Outage	113
Emergency Response Notification	113
Emergency Response Notification for Phone Application	113
Emergency Response Notification for VPN Networks	114
External Devices	114
Headset Safety	115
Bluetooth Wireless Headset Performance	115
FCC Compliance Statements	115
FCC Part 15.21 Statement	115
FCC Receivers and Class B Digital Statement	116
CE Marking	116
Cryptographic Information	116
Data Backup	117
Accessibility Features	117
Accessibility Settings	117
Install the Screen Reader	117

Enable Haptic Feedback	117
Screen Brightness	118
Text-to-Speech	118
Zoom In or Out	118
Zoom In	118
Zoom Out	118
Additional Information	119
FAQs and Troubleshooting	121
Frequently Asked Questions	121
Troubleshooting Tips	122
Warranty	125
Cisco 90-Day Limited Hardware Warranty Terms	125
Index	127

Preface

This guide describes the Cisco Cius and how to use it. The guide is written for system administrators and users.

The preface covers these topics:

- [Guide Organization](#)
- [Related Documentation](#)
- [Additional Information](#)
- [Obtaining Documentation and Submitting a Service Request](#)

Guide Organization

This guide is organized into these topics:

- [Overview](#)
- [Quick Reference](#)
- [Applications](#)
- [Accessories](#)
- [Product Safety, Security, Accessibility, and Related Information](#)
- [FAQs and Troubleshooting](#)
- [Warranty](#)

Related Documentation

See these documents for additional information about Cisco Cius:

- *Cisco Cius Administration Guide*
- *Cisco Cius Quick Start*
- *Regulatory Compliance and Safety Information for Cisco Cius*
- *Cisco Cius Release Notes*
- *Cisco Cius Wireless LAN Deployment Guide*

Additional Information

You can access the Cisco website at this URL:

<http://www.cisco.com>

Cisco Cius Quick Start, Administration, Deployment, and User Guides:

http://www.cisco.com/en/US/products/ps11156/tsd_products_support_series_home.html

Licensing information:

http://www.cisco.com/en/US/docs/general/warranty/English/EU1KEN_.html

Cisco international websites:

Access international Cisco websites from www.cisco.com by clicking the **Worldwide** link at the top of the web page.

Obtaining Documentation and Submitting a Service Request

For information about obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at this URL:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.

Overview

This chapter outlines the features of Cisco Cius.

The chapter covers these topics:

- [Hardware, page 2](#)
- [Features, page 10](#)

Figure 1 shows the Cisco Cius.

Figure 1 *Cisco Cius*



Hardware

This section provides an overview of Cisco Cius hardware.

Figure 2 shows the front view of Cisco Cius.


Figure 2 Cisco Cius Front View



1	Camera LED	5	Menu key
2	Front-facing camera	6	Home key
3	Light sensor	7	Back key
4	Speaker		

Figure 3 shows the top view of Cisco Cius.

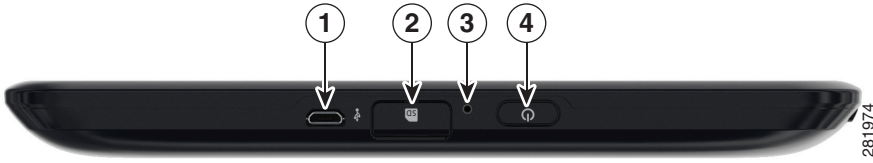 Figure 3 Cisco Cius Top View



1	Micro-USB port	3	Microphone
2	MicroSD card slot	4	Power button

Figure 4 shows the back view of Cisco Cius.


Figure 4 *Cisco Cius Back View*



1	Rear-facing camera		
---	--------------------	--	--

Figure 5 shows the bottom view of Cisco Cius.

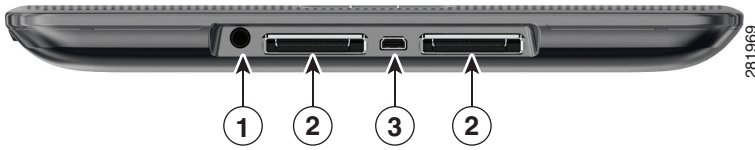 Figure 5 Cisco Cius Bottom View



1	Headset port	3	Micro-HDMI port
2	Docking ports		

Figure 6 shows the left side of Cisco Cius.


Figure 6 Cisco Cius Left Side



1	Mute	3	Volume down
2	Volume up	4	SIM slot

Figure 7 shows the right side of Cisco Cius.

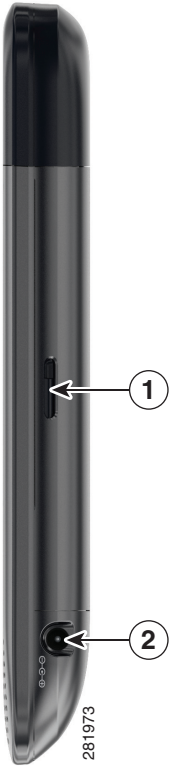 Figure 7 Cisco Cius Right Side




1 Battery release	2 Power port
-------------------	--------------


Power Button

Use the Power button to turn Cisco Cius on or off, to activate Silent mode, or to activate Airplane mode.

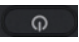
Turn Cisco Cius On

Press Power  at the top of the unit for two or three seconds.

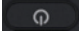
Turn Cisco Cius Off

1. Press and hold Power .
2. Tap Power Off in the dialog box that appears.

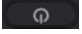
Turn On Silent Mode

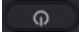1. Press and hold Power .
2. Tap Silent Mode in the dialog box that appears.



Turn Off Silent Mode

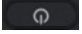1. Press and hold Power .
2. Tap Silent Mode in the dialog box that appears.

Turn On Airplane Mode

1. Press and hold Power .
2. Tap Airplane Mode in the dialog box that appears.

Turn Off Airplane Mode

1. Tap the Applications Menu icon  on the home screen.
2. Tap Settings .
3. Tap Wireless & Networks.
4. Tap Airplane Mode.

Turn Off the Screen

Press Power  at the top of the unit.

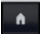
Home Key

Use the Home key to view the home screen, or for multitasking.

View the Home Screen

Press the Home key  to view the home screen.


Multitasking

Press and hold the Home key  to view a list of open and recently used applications.

Menu Key

Some applications include options that you access through the Menu key.


View a Menu

Press Menu  to view a menu for the current application.

Back Key

Some applications allow you to use the Back key to go to a previous page or application.

Go to the Previous Page or Application

Press Back  to go to the previous page or application.

Battery

Cisco Cius uses a removable 4860 mAh battery. The first time that you use Cisco Cius, you must charge the battery for a minimum of 5 hours to ensure battery longevity. You can use Cisco Cius while it is charging.

Insert the Battery

1. Align the metal contacts on the battery with the metal contacts on your Cisco Cius.
2. Slide the battery into place. There is an audible click when the battery is secure.

Charge the Battery

Insert the power cable into the power port on the right side of the unit.

Do not confuse the power port with the headset port on the bottom of the unit.

Remove the Battery

1. Slide the battery release down. You may need to use a pen or a small screwdriver to slide the release.
2. While holding the battery release down, slide the battery out.

Camera LED

The Camera LED is green when the front-facing camera captures video.

Features


This section describes the basic features of Cisco Cius.

Lock Screen

The Lock screen is displayed when Cisco Cius is locked (inactive). The Lock screen displays the date and time, number of recently missed calls, the number of new voice messages, and the number of upcoming events for the next 24 hours.

Figure 8 shows the Lock screen.

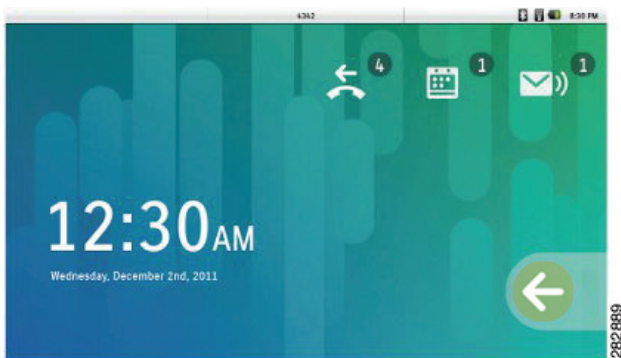 Figure 8 **Lock Screen**





Unlock the Screen



To unlock the screen, slide the arrow at the bottom right corner across to the left side.

Depending on your security settings, Cisco Cius may require you to enter a personal identification number (PIN) or a password to unlock the screen. Note that until the PIN or password is entered on the Unlock screen, you cannot place calls other than emergency calls.

Add a PIN

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Location & Security**.
4. Tap **Set Up Screen Lock**.
5. Tap **PIN**.
6. Enter a PIN and tap **OK**. Your PIN must be at least four digits.
7. Enter your PIN again and tap **OK** to confirm your PIN.

Add a Password

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Location & Security**.
4. Tap **Set Up Screen Lock**.
5. Tap **Password**.
6. Enter a password and tap **OK**. Your password must be at least four characters.
7. Enter your password again and tap **OK** to confirm your password.



Reset a Lost PIN or Password

1. Tap the **Forgot PIN?** or **Forgot Password?** button on the Unlock screen.
2. Select an account on the left side of the screen and enter your account credentials on the right side of the screen.
3. Reset your PIN or password. Your Cisco Cius is now unlocked and your new PIN or password is ready to use.

Place an Emergency Call from the Unlock Screen

Tap the **Emergency Call** button.

Set Screen Timeout

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .

3. Tap **Display**.
4. Tap **Screen Timeout**.
5. Select the length of time that your Cisco Cius can be inactive before the screen locks. Note that your security settings may limit your screen timeout choices.

Setup Assistant

Use the Setup Assistant to set up the following applications:

- Wi-Fi
- Email application
- Chat application
- Cisco WebEx Meeting Center

Setup Assistant runs automatically the first time that you use your Cisco Cius. If you choose not to use Setup Assistant, you can set up these applications through the Settings application. Launch the Settings application from the Applications menu.

Run the Setup Assistant

1. Tap **Start Setup**.
2. Tap **Setup Wi-Fi**.
3. Tap **Wi-Fi** and connect to a wireless network. Depending on your security settings, Cisco Cius may require you to enter a PIN or a password after connecting to a wireless network.
4. Tap **Email** and follow the on-screen instructions.
5. Press the **Back** key.
6. Tap **Chat** and follow the on-screen instructions.
7. Tap **WebEx** and follow the on-screen instructions.

Related Topics

- [Wireless & Networks, page 19](#)
- [Email, page 51](#)
- [Chat, page 56](#)
- [Cisco WebEx Meetings, page 72](#)

Home Screen

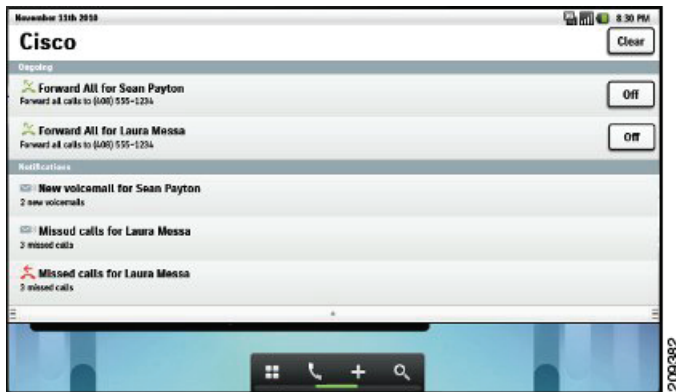 
The Cisco Cius home screen uses a landscape orientation, with a 5 x 9 grid for widgets and shortcuts. Widgets and shortcuts can be placed anywhere on the grid. The home screen displays widgets of different shapes and sizes.

Notifications Bar







The notifications bar is at the top of the screen. The notifications bar includes notifications for applications such as the Phone application, email, and chat, as well as status icons for network connections and battery power.

Figure 9 shows the notifications bar.

Figure 9 **Notifications Bar**



Tap the notifications bar and drag down to see more detailed information about your notifications. The following common status icons can appear on the notifications bar:

-  Battery Charging
-  Battery Discharging
-  Battery Full
-  Battery Low
-  Bluetooth
-  Wi-Fi

Quick Launch Bar

The quick launch bar on the home screen provides links to the Applications menu, the Phone application, the Add to Cius Home Screen menu, and the Google Search application. The green status bar at the bottom of the quick launch bar indicates which of the five work spaces is active.

Figure 10 shows the quick launch bar.


Figure 10 Quick Launch Bar



Related Topic

- [Work Spaces, page 16](#)

Applications Menu

Tap the **Applications Menu** icon  to display the full collection of available applications in a separate applications tray dialog box.

Related Topic

- [Applications, page 19](#)


Phone Application

Tap the **Phone Application** icon  to launch the Phone application.

Related Topic

- [Phone, page 24](#)


Add to Cius Home Screen

Tap the **Add to Cius Home Screen** icon , or tap and hold an open space on the home screen to add shortcuts to applications, widgets, or folders to the current work space or to change the wallpaper on the current work space.

Cisco Cius supports customized Cisco wallpapers, as well as wallpapers that you add.

Cisco Cius also supports live wallpapers. Live wallpapers are animated, interactive wallpapers.

Search

Tap the Search icon  to search the web, applications, your contacts, or all three. You must have an active network connection to search the web.


Related Topic

- [Google Search, page 76](#)


Customize the Home Screen

Add applications, widgets, and folders, or change your wallpaper to customize your home screen.


Add an Application to the Home Screen

1. Tap the Applications Menu icon .
2. Tap and hold an application from the Applications menu.

Add a Widget to the Home Screen

1. Tap the Add to Cius Home Screen icon .
2. Tap Widgets.
3. Select a widget.


Add a Folder to the Home Screen

1. Tap the Add to Cius Home Screen icon .
2. Tap Folders.
3. Select a folder.


Move a Widget or an Icon

1. Tap and hold the widget or icon.
2. Drag and drop the widget or icon to where you want to place it.

Remove a Widget or an Icon from the Home Screen

1. Tap and hold the widget or icon to expose the trash can .
2. Drag and drop the widget or icon into the trash can. The widget or icon is deleted and the trash can disappears.

Change Your Wallpaper


1. Tap the **Add to Cius Home Screen** icon .
2. Tap **Wallpapers**. A horizontal menu appears with the available wallpapers.
3. Select a wallpaper from the horizontal menu to use that wallpaper.

Work Spaces

Five work spaces are available for you to customize. Each work space holds a variety of widgets and shortcuts in any configuration.

The green status bar at the bottom of the quick launch bar indicates which of the five work spaces is active.


Navigate Between Work Spaces

1. Tap and hold the **Applications Menu** icon  on the quick launch bar.
2. Tap a work space in the menu to display that work space.
Or, tap on one of the bottom corners of the current work space to go to the work space to the left or to the right.
Or, swipe left or right on an open space on the home screen to go to the work space to the left or to the right.

On-Screen Keyboard

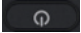

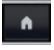




An on-screen keyboard pops up automatically when you select a text input field.

Switch Keyboard Modes

1. To switch between uppercase and lowercase letters, tap the **Shift** button .
2. To switch to numbers and symbols, tap the **?123** button.
3. To switch to more symbols, tap the **ALT** button.
4. To switch back to letters, tap the **ABC** button.

Quick Reference

Keys


-  To turn on your Cius, press **Power**.
-  To view a menu for the current application, press **Menu**.
-  To view the home screen, press **Home**.
-  To go to a previous page, make the on-screen keyboard disappear, or exit an application, press **Back**.
-  To increase the volume, press **Volume Up**.
-  To decrease the volume, press **Volume Down**.
-  To mute the volume, press **Mute**.

Tips and Tricks

Here are some tips to help you familiarize yourself with your Cisco Cius.

Battery

To charge the battery, insert the power cable into the power port on the right side.





The Battery Charging icon  is displayed on the notification bar while the battery is charging.

Lock Screen

The Lock screen displays the number of missed phone calls, upcoming appointments, and new voice messages that you have.



Quick Launch Bar

-  Launch the Applications menu
-  Launch the Phone application
-  Launch the Add to Cius Home Screen menu
-  Launch the Google Search application

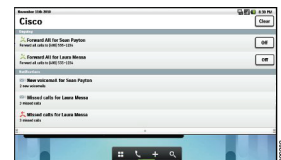 
Notification Bar

The notification bar is at the top of the screen.

Slide the notification bar down to see your notifications.

The notification bar can include notifications for applications, as well as status icons for network connections and battery power.


You can tap a notification for an application such as Phone, Email, or Chat, to open that application.






Home Screen

Cisco Cius home screen has five work spaces that you can customize with widgets and shortcuts.

Navigate Between Work Spaces

- Tap the bottom left or bottom right corner to navigate between work spaces.
- Tap and hold the **Applications menu icon**  to view a menu of all five work spaces. Tap a work space on the menu to go to that work space.

Customize the Home Screen






- To add widgets, shortcuts to applications, or folders to the home screen, or to change the wallpaper on the home screen, tap the **Add to Cius Home Screen icon** , or tap and hold an open space on the home screen.
- To add an application to the home screen, tap the **Applications menu icon** , and then tap and hold an application icon.
- To remove an icon or widget from the home screen, tap and hold an icon or widget on the home screen, and drag it to the trash can  at the bottom of the screen.

Quick Contact Badges



Tap the contact picture of one of your contacts to display a quick contact badge.


From the quick contact badge, you can:

-  Place a call
-  View contact details
-  Send an email message
-  Start a chat
-  Start a Cisco WebEx meeting

Contact Pictures


Contact pictures appear only for contacts that you have added manually, or that you have synced from your Chat application contact list.

To download contact pictures for your email contacts:

1. From the Settings application , tap **Accounts & Sync**.
2. Tap **Manage Accounts**.
3. Select your email account.
4. Tap **Account Settings**.
5. Check **Download Pictures**.


Direct Dial Shortcut

Add a direct dial shortcut to a home screen to use as a speed dial for that contact.

1. Tap the **Add to Cius Home Screen icon** , or tap and hold an open space on the home screen.
2. Tap **Shortcuts**.
3. Tap **Direct Dial**.
4. Select a contact.


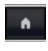

Enable Auto-Rotation

You can enable auto-rotation so that your Cius displays applications properly whether you are holding your Cius horizontally or vertically.

1. From the Settings application , select **Display**.
2. Select **Auto-Rotate Screen**.

Keyboard Shortcuts

When you are using your Cisco Cius with a media station and USB keyboard, you can use these keyboard shortcuts:

-  Menu: **Shift-Ctrl-[**
-  Home: **Shift-Ctrl-]**
-  Back: **Shift-Ctrl-**

When you are using a USB mouse, right-click to make the Menu, Home and Back keys appear on screen.

Applications

This chapter outlines the Cisco Cius applications.

Wireless & Networks



Connect Cisco Cius to a wireless network before launching an Internet application such as the Email or Browser application.

To connect to a wireless network, use the Setup Assistant that runs automatically the first time that you use your Cisco Cius. If you choose not to connect to a wireless network with the Setup Assistant, you can use the Settings application to connect to a wireless network. You can add a total of 4 wireless network profiles.



Related Topic

- [Setup Assistant, page 12](#)

Connect to a Wireless Network



1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Wireless & Networks**.
4. Tap **Wi-Fi Settings**.
5. Tap **Wi-Fi**.
6. Select a wireless network from the list of available networks.
7. Enter your password and tap **Connect**.

Connect to a Hidden Wireless Network



1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Wireless & Networks**.
4. Tap **Wi-Fi Settings**.

5. Tap **Wi-Fi**.
6. Tap **Add Wi-Fi Network**.
7. Enter the Network SSID, select the Security and Frequency Band settings and tap **Save**.
8. Enter your password and tap **Connect**.

Edit a Wireless Network

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Wireless & Networks**.
4. Tap **Wi-Fi Settings**.
5. Tap **Wi-Fi**.
6. Tap and hold a wireless network from the list of available networks.
7. Tap **Modify Network**.



Delete a Wireless Network

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Wireless & Networks**.
4. Tap **Wi-Fi Settings**.
5. Tap **Wi-Fi**.
6. Tap and hold a wireless network from the list of available networks.
7. Tap **Forget Network**.

Web Proxy



Depending on your security settings, you may need to connect to a web proxy to access the Internet. If a VPN is enabled, you cannot use a web proxy with that VPN. Contact your system administrator for more information.

Add a Web Proxy



1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Wireless & Networks**.

4. Tap **Proxy Settings**.
5. Tap **Proxy**.
6. Tap **Add Proxy**.
7. Enter the Web Proxy settings and tap **Save**.

Edit a Web Proxy

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Wireless & Networks**.
4. Tap **Proxy Settings**.
5. Tap and hold a proxy from the list of available proxies.
6. Tap **Modify**.
7. Edit the Web Proxy settings and tap **Save**.



Delete a Web Proxy

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Wireless & Networks**.
4. Tap **Proxy Settings**.
5. Tap and hold a proxy from the list of available proxies.
6. Tap **Delete**.
7. Tap **Yes**.

TFTP

Connect to a TFTP server to receive updates to Cisco Cius firmware. Contact your system administrator for a TFTP server address.

Connect to a TFTP Server

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Wireless & Networks**.
4. Tap **TFTP Server Settings**.
5. Tap **Use Alternate TFTP Server**.

6. Tap TFTP Server1.
7. Enter the TFTP server address and tap OK.

AnyConnect VPN

Your system administrator sets up the AnyConnect VPN application. After the application is set up, connect the Cisco Cius to a secure gateway to access a VPN.

AnyConnect VPN allows you to have secure remote access to corporate resources on your Cisco Cius. For security reasons, it is usually recommended that you connect to a VPN through a wired network connection. A media station is required for a wired network connection.

If your system administrator has set up a VPN connection profile for you with Cisco Unified Communications Manager, it will appear in the VPN Connection list. You cannot edit or delete these VPN connections.

Your system administrator can enable you to create and edit your own VPN connections.

Related Topic

- [Connect Cisco Cius to an HD Media Station, page 103](#)



AutoNetDetect

If your system administrator enables the AutoNetDetect feature for a VPN connection profile set up with Cisco Unified CM, the Phone application will automatically attempt to establish a VPN connection.



Password Persistence

If your system administrator enables the Password Persistence feature for a VPN connection profile set up with Cisco Unified CM, the AnyConnect VPN application will store a previously successful password. You cannot change a working password.



Enable VPN

1. Tap the Applications Menu icon  on the home screen.
2. Tap Settings .
3. Tap Wireless & Networks.
4. Tap VPN Settings.
5. Tap Cisco AnyConnect Secure Mobility Client.



Add a VPN Connection Profile

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Wireless & Networks**.
4. Tap **VPN Settings**.
5. Tap **Add New VPN Connection**.
6. Enter a description of the VPN connection and the server address.
7. Tap **Save**.



Edit a VPN Connection Profile

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Wireless & Networks**.
4. Tap **VPN Settings**.
5. Tap and hold a VPN connection.
6. Tap **Edit Connection**.
7. Edit the connection description or server address.
8. Tap **Save**.

Connect to a VPN



1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Wireless & Networks**.
4. Tap **VPN Settings**.
5. Select a VPN connection.
6. Enter your account credentials.
7. Tap **Connect**.

Disconnect from a VPN

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .

3. Tap **Wireless & Networks**.
4. Tap **VPN Settings**.
5. Tap and hold a VPN connection.
6. Tap **Disconnect**.

Delete a VPN Connection Profile


1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Wireless & Networks**.
4. Tap **VPN Settings**.
5. Tap and hold a VPN connection.
6. Tap **Delete Connection**.


Phone

The Cisco Cius Phone application is an enterprise phone application. Depending on how your system administrator set up your phone application, some features included in this guide may not be available to you. Contact your system administrator for more information.

Figure 11 shows the Phone application.

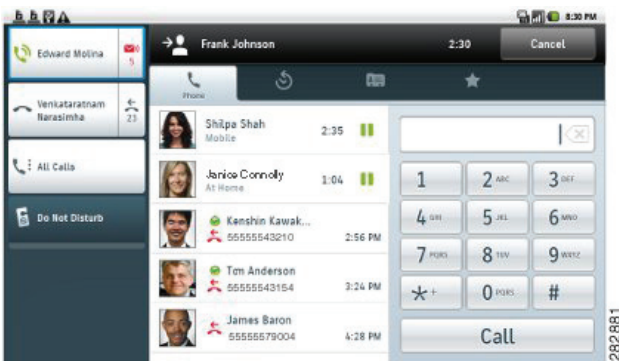 Figure 11 Phone Application



Launch the Phone application from the quick launch bar on the home screen or from the Applications Menu .



Related Topic

- [Cisco Unified CM User Options, page 40](#)

Your Phone Number

When you open the Phone application, your phone number appears on the notifications bar.

To find your phone number when the Phone application is not open:


1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **About Cius**.
4. Tap **Status**. Your phone number is listed under My Phone Number.

Place a Call

1. Enter a phone number.
2. Tap the Call button.

Or, tap an entry on the Recent Call list.

Or, tap the **Phone** icon  next to a Call History entry.

Or, tap the **Phone** icon  next to a Contact or a Favorite.

Place an Emergency Call from the Unlock Screen

Tap the Emergency Call button.

Incoming Calls

Incoming calls appear in a dialog box.

[Figure 12](#) shows an incoming call notification window.


Figure 12 Incoming Call Notification Window



If you are viewing the recent call list when a call comes in, the incoming call is added to the list instead of appearing in a notification window.

Figure 13 shows an incoming call on the recent call list.

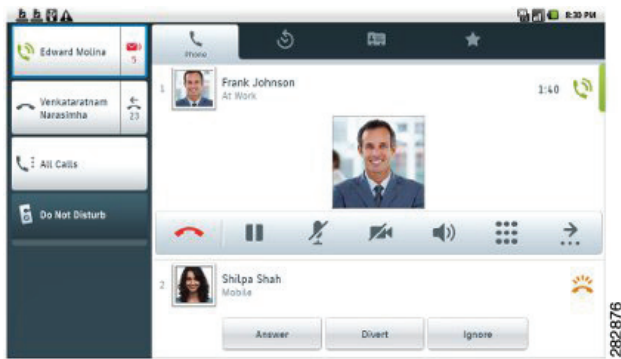 Figure 13 Incoming Call on the Recent Call List



If your Cius screen is locked, the incoming call will appear in an incoming call notification window. Note that while the Cius screen is locked, during a call you will not be able to transfer a call, start a conference call, or navigate to your contacts or Favorites.

Figure 14 shows an incoming call on a locked Cius.

Figure 14 Incoming Call Window for a Locked Cius



Answer a Call

From the incoming call notification window, slide the green **Answer** icon across from the bottom right corner to the left side of the screen.

Or, from the recent call list or incoming call dialog box, tap the **Answer** button.

Ignore a Call

From the incoming call notification window, slide the **Ignore** icon across from the bottom left corner to the right side of the screen.

Or, from the recent call list or incoming call dialog box, tap the **Ignore** button.

Divert a Call

From the recent call list or incoming call dialog box, tap the **Divert** button.

Call Control Bar



A call control bar displays at the bottom of an active audio call in the recent call list.

Figure 15 shows the audio call control bar.

Figure 15 Audio Call Control Bar



View More Call Control Bar Options

Tap the **View More Right** icon  or the **View More Left** icon  on the call control bar.

End a Call

Tap the **End Call** icon  on the call control bar.

Video Calls

The Phone application allows you to send and receive video calls.

Figure 16 shows a video call.

Figure 16 Video Call Screen



View a Video Call in Full Screen Mode

Tap the **Full Screen** icon at the top right of the video to turn on full screen mode.

Figure 17 shows a full screen video call.

Figure 17 Full Screen Video Call



Video Call Control Bar


A call control bar appears at the bottom of an active video call. The video call control bar disappears after a few seconds. Tap the screen to make the call control bar reappear.

Figure 18 shows the video call control bar.

Figure 18 Video Call Control Bar





Mute Your Video Transmission

1. Tap the Video Mute icon  on the video call control bar to mute your video.
2. Tap the Video Mute icon again to turn the Video Mute off.



Automatic Video Transmission

By default, the Phone application automatically transmits video during a video call.

Stop Automatically Transmitting Video

1. Tap the Applications Menu icon  on the home screen.
2. Tap Settings .
3. Tap Call Settings.
4. Uncheck Auto Transmit Video. Depending on your system settings, this option may not be available. Contact your system administrator for more information.

Adjust Video Call Settings

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Call Settings**.
4. Tap **Video Calls**.
5. Select a video call setting. Depending on how your system administrator set up your phone application, some video call settings may not be available to you. Contact your system administrator for more information.



Turn Off Video Calls

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Call Settings**.
4. Tap **Video Calls**.
5. Tap **Off**.

Self-View

Use self-view to preview the video of yourself that you display during video calls.

Show Self-View

1. Press the **Menu** key .
2. Tap **Show Self-View**.
3. Tap **OK** or press the **Back** key  to stop showing self-view. During a video call, self-view will disappear after a few seconds.

Barge

The barge feature allows you to add yourself to nonprivate calls on a shared line. You can convert the call into a conference and add new participants. A call that can be barged will have a red dot to the right of the call line status.

Tap the **Remote Active Call** icon next to the call line status to barge.

Related Topic

- [Shared Lines, page 38](#)

Call Forward All

Call Forward All allows you to forward calls from any line on your phone to another number, or to your Voicemail.


When forwarding calls from your phone, enter the call forward target number exactly as you would dial it from your phone. For example, enter an access code or the area code, if necessary.

Call forwarding is phone-line specific. If a call reaches you on a line on which call forwarding is not enabled, the call will ring as usual.

Your system administrator can set up other call-forward options that do the following:

- Allow calls placed from the call forward target number to your phone to ring through, rather than be forwarded
- Prevent you from creating a call-forward loop or exceeding the maximum number of links in a call forwarding chain

Forward Your Calls

1. Press the **Menu** key .
2. Tap **Forward All**.
3. Select a number to forward calls to. Or, tap the **Voicemail** entry in your **Recent Call** list or call history to forward all calls to Voicemail.

Stop Forwarding Your Calls

Tap **Cancel**.

Conference

Conference allows you to talk simultaneously with multiple parties.

When you are talking on a call, use Conference to dial another party and add them to the call.

Add Another Party to Your Call to Create a Conference


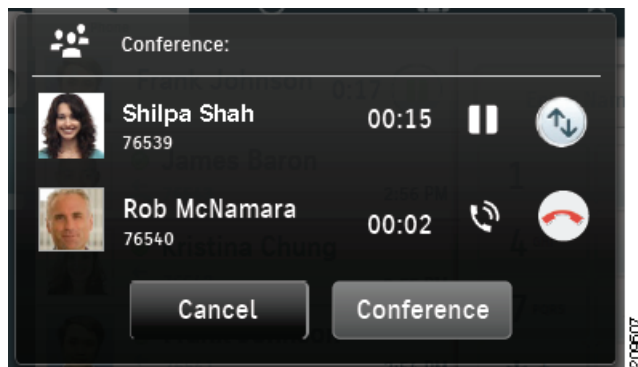 

1. Tap the **Conference** icon  on the call control bar.
2. From the Conference screen, select a contact from the **Recent Call** list on the left side of the screen, select a contact from your call history, select a contact from your contact list or Favorite list, or dial a number using the keypad on the right side of the screen.
3. Tap the **Conference** button in the dialog box that appears.
4. Repeat these steps to add more participants.

Figure 19 shows the conference call dialog box.


Figure 19 Conference Dialog Box



Swap Between Active Calls from the Conference Dialog Box

Tap the Swap icon  .


Contacts

Tap the Contacts tab  to open the Contacts application.

Related Topic

- [Calendar, page 65](#)

View Call Details

During a call, tap the Call Details icon  on the call control bar.

Display the Keypad

Tap the Keypad icon  on the call control bar.

Do Not Disturb

Do Not Disturb (DND) allows you to turn off either of the following:

- The ringer on your phone
- The ringer and any visual notification that you have an incoming call

When DND is enabled, your incoming calls are forwarded to another number, such as your voicemail if your voicemail is set up. The forwarded call is not saved or listed in your call history.


The DND feature affects all the lines on a phone. However, it does not affect 911 calls.

Your system administrator sets up a line button on your phone for DND with the ringer and visual notifications off by default. However, you can change your DND options from your User Options web pages.

Turn DND On and Off

1. Tap the **Do Not Disturb** button to turn on DND.
2. Tap the **Do Not Disturb** button again to turn off DND.

Favorites

Tap the **Favorites** tab  to view your favorite contacts.

Related Topic

- [Mark a Contact as a Favorite, page 48](#)

HD Media Station

The Phone application preserves your calls when you dock or undock your Cius with an HD media station. There is a slight delay before the call audio is reestablished.

Related Topic

- [Connect Cisco Cius to an HD Media Station, page 103](#)


Call History

Tap the **History** tab  to view your call history.

Hold

Hold allows you to put an active call into a held state. Your phone allows one active call at a time; other calls are put on hold.

Put a Call on Hold

1. Tap the **Hold** icon  on the call control bar.
2. Tap the **Hold** icon on the call history to resume the call.

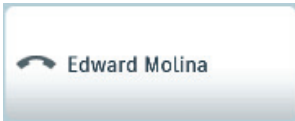 
Put a Call on Hold by Answering a New Call

If you are already on a call and receive a new call, answering the new call puts the first call on hold automatically.








Line Status

Figure 20 shows a line status icon.

Figure 20 *Line Status*




Line status is displayed to the left of your name at the top left of the phone application.

-  Call connected
-  Outgoing call ringing
-  Call on hold
-  Call on hold remotely
-  Call forward on
-  On hook
-  Incoming call



Message Indicator

Figure 21 shows a message indicator icon.

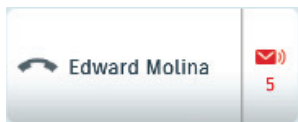 Figure 21 Message Indicator



The message indicator displays to the right of your name at the top left of the phone application.

-  Missed calls
-  Missed voice messages

Missed Calls

Missed call notifications appear on the notifications bar.

Tap a missed call notification to open the phone application.

Related Topic

- [Notifications Bar, page 13](#)

Mobile Connect

Mobile Connect allows you to use your mobile phone to handle calls associated with your Cius Phone application phone number.

When you enable Mobile Connect:

- Your Phone application and remote destinations (your mobile phones) receive calls simultaneously.
- When you answer the call with the Phone application, the remote destinations stop ringing, are disconnected, and display a missed call message.
- When you answer the call on one remote destination, the other remote destinations and Phone application stop ringing and are disconnected, and a missed call message is shown on the other remote destinations.
- When you answer the call on one remote destination and then switch the call to a Cisco Unified device that shares lines, the Cisco Unified devices that share the same line display a Remote In Use message.

To set up Mobile Connect, use the User Options web pages to set up remote destinations and create access lists to allow or block calls from specific phone numbers from being passed to the remote destinations.

Related Topic

- [Visual Voice Mail, page 39](#)

Mute

Mute allows you to block audio input for your handset, headset, and speakerphone, so that you can hear other parties on the call but they cannot hear you.

Mute Your Phone

1. Tap the **Mute** icon  to turn Mute on.
2. Tap the **Mute** icon again to turn Mute off.

On-hook Dialing

On-hook dialing allows you to enter a phone number before getting a dial tone and press the **Call** button to complete the call.

Plus Dialing

Plus dialing allows you to tap and hold the * button for at least 1 second to add a plus “+” sign as the first digit in a phone number for international dialing.

Dialing an International Number

1. Tap and hold the “*” button for at least 1 second. The + sign is entered as the first digit in the phone number. (The corresponding tone stops to indicate that the * has changed to a + sign.)
2. Dial the international number.

Privacy

Privacy allows you to prevent others who share your line from seeing information about your calls.

It applies to all shared lines on your Phone application. If you have multiple shared lines and Privacy is enabled, others cannot view any of your shared lines.

If the phone that shares your line has Privacy enabled, you can make and receive calls using the shared line as usual.

Related Topic



- [Shared Lines, page 38](#)

Recent Call List

The recent call list displays your active, held, incoming, and recent calls.

Tap the **Recent Calls** tab  to view your recent call list.

Set Your Ringtone

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Sound**.
4. Tap **Phone Ringtone**.
5. Select a ringtone and tap **OK**.

Secure and Nonsecure Indication Tone

When a phone is set up as secure (encrypted and trusted), it can be given a “protected” status. After that, if desired, the protected phone can be configured to play an indication tone at the beginning of a call.

Only protected phones hear these secure or nonsecure indication tones. (Nonprotected phones never hear tones.) If the overall call status changes during the call, the indication tone changes accordingly. The protected phone plays the appropriate tone.

A protected phone plays a tone or not under these circumstances:

- When the option to play a tone, “Play Secure Indication Tone option,” is enabled (True):
 - When end-to-end secure media is established and the call status is secure, the Phone application plays the secure indication tone (three long beeps with pauses).
 - When end-to-end nonsecure media is established and the call status is nonsecure, the Phone application plays the nonsecure indication tone (six short beeps with brief pauses). (This capability is a change with this release.)
- When the Play Secure Indication Tone option is disabled, no tone is played.

For more information, contact your system administrator.

Shared Lines

Shared lines allow you to use one phone number for multiple phones.

If you share a line with a coworker, the following options are available:

- When a call comes in on the shared line:
 - Your phone rings.
 - Your coworker’s phone rings and either you or your coworker can answer the call.
- When your coworker has a call on the shared line, the coworker’s call is displayed on your screen (unless your coworker has Privacy enabled).
- If you put a call on hold, your coworker can pick up the call.
- You or the coworker can join a call on the shared line using the Barge feature. Barge converts the call into a conference.

Related Topics

- [Barge, page 30](#)
- [Privacy, page 36](#)

Speed Dial

The speed dial feature allows you to press a button to place a call. Before you can use the speed dial feature, you must set up speed dial on your User Options web pages.

If your system administrator has set up the Line Status feature, you can monitor the status of a speed dial line by using the line status indicators.


Related Topic

- [Cisco Unified CM User Options, page 40](#)

Transfer

Transfer allows you to redirect a connected call from your phone to another number.


Transfer a Call to Another Number

1. Tap the **Transfer** icon  on the call control bar.
2. From the Transfer screen, select a contact from the Recent/Held list on the left side of the screen, select a contact from your Call History, or select a contact from your contact list or Favorite list, or dial a number using the keypad on the right side of the screen.


3. Tap the **Transfer** button in the dialog box that appears.

Figure 22 shows a call transfer dialog box.

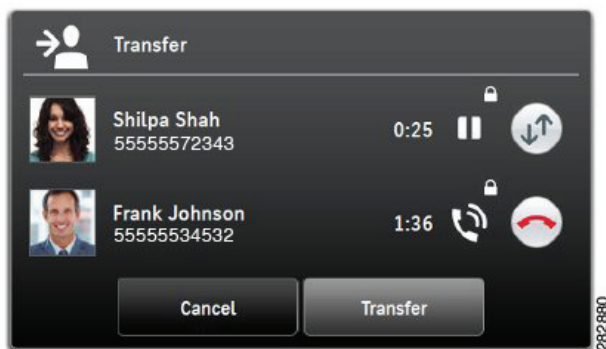 Figure 22 *Transfer Dialog Box*





Swap Between Active Calls from the Transfer Dialog Box

Tap the Swap icon  .


Visual Voice Mail

Visual Voice Mail allows you to access your voice messages from within your Call History.

Set Up Visual Voice Mail



1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings**  .
3. Tap **Accounts & Sync**.
4. Tap **Add Account**.
5. Tap **Cisco Unity Connection Voice Mail Account**.
6. Enter the Visual Voice Mail account credentials and tap **Sign-In**.

Sign In to Visual Voice Mail


1. Tap the **History** icon  .
2. Tap **Messages** in the list of filters on the right side of the screen.

3. Enter your account credentials and tap **Save**.


Listen to a Voice Message

1. Tap the **History** icon .
2. Tap **Messages** in the list of filters on the right side of the screen.
3. Tap the **Play** icon  in a voice message to listen to that voice message.

View Voice Message Details

1. Tap the **History** icon .
2. Tap **Messages** in the list of filters on the right side of the screen.
3. Tap a voice message to view details.

Delete a Voice Message

1. Tap the **History** icon .
2. Tap **Messages** in the list of filters on the right side of the screen.
3. Tap a voice message to view details.
4. Tap the **Delete** button.

Call Waiting

Call Waiting provides a call waiting tone (single beep) to notify you that a new call is ringing on your phone when you are talking on another call.

Cisco Unified CM User Options

You can use a web browser to sign in to your Cisco Unified CM User Options web pages, where you can control features, settings, and services for the Cisco Cius Phone application.

After you have signed in to your User Options web pages, select User Options to access the following:

- Device
- User Settings
- Directory
- Personal Address Book

- Mobility Settings

Sign In and Out of User Options Web Pages

Before you can access any of your user options, such as speed-dial settings or personal address book, you must sign in. When you are finished using the User Options web pages, you must sign out.

In some cases, you can access your user options without having to sign in. For more information, contact your system administrator.

1. Obtain the User Options URL, user ID, and default password (provided by your system administrator).
2. Open a web browser and enter the URL.
3. If prompted to accept security settings, select **Yes** or **Install Certificate**.
4. Enter your user ID in the Username field.
5. Enter your password in the Password field.
6. Select **Login**.

The Cisco Unified CM User Options home page is displayed. From this page you can select User Options to select a device, access user settings, Directory features and your personal address book.

7. To sign out of User Options, select **Logout**.

Device

You can make changes to your Phone application settings from the User Options web pages:

- Lines
- Speed-dial settings

Related Topic

- [Speed Dial, page 38](#)

Select a Device From the User Options Web Pages

1. On your User Options web pages, select **User Options > Device**.
The Device Configuration page displays. Toolbar buttons located at the top of the Device Configuration page are specific to the selected device type.
2. If you have multiple devices assigned to you, select the appropriate device (phone model, Extension Mobility profile, or Remote Destination profile) from the Name drop-down menu.

Customize Do Not Disturb Options

1. On your User Options web pages, select **User Options > Device**.
2. Set the following options:

- Do Not Disturb—Check the check box to enable or disable DND.
- DND Option—Select either None or Ringer Off (to turn off only the ringer).
- DND Incoming Call Alert (applies to either DND option set)—Set the alert to Beep Only, Flash Only, Disable, or select None (to use the Alert setting set up by your system administrator).

Related Topic

- [Do Not Disturb, page 33](#)

Line Settings

Line settings affect a specific phone line (directory number) for your Phone application. Line settings can include call forwarding, audio message indicators, voice-message indicators, and other line-specific settings.

Set Up Call Forwarding for a Line

1. On your User Options web page, select **User Options > Device**.
2. Select a phone from the Name drop-down menu.
3. Select **Line Settings**.
4. If you have more than one directory number (line) assigned to your Phone application, select a line from the Line drop-down menu.
5. In the Incoming Call Forwarding area, select call forwarding settings for various conditions.
6. Select **Save**.

Related Topic

- [Call Forward All, page 31](#)

Change the Audible Voice Message Indicator Setting for a Line

1. On your User Options web page, select **User Options > Device**.
2. Select a phone from the Name drop-down menu.
3. Select **Line Settings**.
4. If you have more than one directory number (line) assigned to your Phone application, select a line from the Line drop-down menu.
5. In the Audible Message Waiting Lamp area, choose from various settings.
6. Select **Save**.

Speed Dial on the Web

Depending on how your Phone application has been set up, you can use speed-dial buttons, which you can set up on your User Options web pages.

Set Up Speed-Dial Buttons

1. On your User Options web page, select **User Options > Device**.
2. Select a phone from the Name drop-down menu.
3. Select **Speed Dials**.
4. In the Speed Dial Settings area, enter a number and label for a speed-dial button for your Phone application.
5. Select **Save**.

User Settings

Your PIN and password allow you to access different features and services. For example, use your PIN to sign in to Cisco Extension Mobility. Use your password to sign in to your User Options web pages and Cisco Web Dialer on your personal computer. For more information, contact your system administrator.

User settings include your browser password, PIN, and language (locale) settings.

Change Your Browser Password

1. On your User Options web page, select **User Options > User Settings**.
2. Enter your Current Password.
3. Enter your New Password.
4. Reenter your new password in the Confirm Password field.
5. Select **Save**.

Change Your PIN

1. On your User Options web page, select **User Options > User Settings**.
2. Enter your Current PIN.
3. Enter your New PIN.
4. Reenter your new PIN in the Confirm PIN field.
5. Select **Save**.

Change the Language for Your User Options Web Pages

1. On your User Options web page, select **User Options > User Settings**.

2. In the User Locale area, select an item from the Locale drop-down list.
3. Select **Save**.

Directory

To get a list of coworkers in your corporate directory, select **User Options > Directory**.

You can access the following Directory features in your web browser:

- Personal Address Book (PAB), which can also be accessed from your Phone application
- Cisco Unified Communications Manager Address Book Synchronizer

Personal Address Book

You can add, delete, or update personal address book entries from the User Options web page.

Add a New PAB Entry

1. On your User Options web page, select **User Options > Personal Address Book**.
2. Select **Add New**.
3. Enter information for the entry.
4. Select **Save**.

Search for a PAB Entry

1. On your User Options web page, select **User Options > Personal Address Book**.
2. Specify search information and select **Find**.

Related Topic

- [Contacts, page 46](#)

Mobility Settings

When using Cisco Mobile Connect, you must add your mobile and other phones that you want to use to make and receive calls using the same directory numbers as your Phone application. These phones are called *remote destinations*. You can also define access lists to restrict or allow calls from certain numbers to be sent to your mobile phone.

Related Topic

- [Mobile Connect, page 35](#)

Add a New Remote Destination

1. On your User Options web page, select **User Options > Mobility Settings > Remote Destinations**.
2. Select **Add New**.
3. Enter the following information:
 - Name—Enter a name for the mobile (or other) phone.
 - Destination Number—Enter your mobile phone number.
4. Select your remote destination profile from the drop-down list box. Your remote destination profile contains the settings that apply to remote destinations that you create.
5. Check the Mobile Phone check box to allow your remote destination to accept a call sent from your Phone application.
6. Check the Enable Mobile Connect check box to allow your remote destination to ring simultaneously with your Phone application.
7. Select one of the following options in the Ring Schedule area (the ring schedule drop-down list boxes include only the access lists that you have created):
 - All the time—Select this option if you do not want to impose day and time restrictions on ringing the remote destination.
 - As specified below—Select this option and select from the following items to set up a ring schedule based on day and time:
 - a. Check a check box for each day of the week you want to allow calls to ring the remote destination.
 - b. For each day, select All Day or select the beginning and ending times from the drop-down lists.
 - c. Select the time zone from the drop-down list box.
8. Select one of these ringing options:
 - Always ring this destination.
 - Ring this destination only if the caller is in the allowed access list that you select.
 - Do not ring this destination if the caller is in the blocked access list that you select.
9. Select **Save**.

Create an Access List

1. On your User Options web page, select **User Options > Mobility Settings > Access Lists**.
2. Select **Add New**.
3. Enter a name to identify the access list and a description (optional).
4. Select whether the access list will allow or block specified calls.
5. Select **Save**.
6. Select **Add Member** to add phone numbers or filters to the list.

7. Select an option from the Filter Mask drop-down list box. You can filter a directory number, calls with restricted caller ID (Not Available), or calls with anonymous caller ID (Private).
8. If you select a directory number from the Filter Mask drop-down list box, enter a phone number or filter in the DN Mask field. You can use the following wild cards to define a filter:
 - X (upper or lower case)—Matches a single digit. For example, 408555123X matches any number between 4085551230 and 4085551239.
 - !—Matches any number of digits. For example, 408! matches any number that starts with 408.
 - #—Used as a single digit for exact match.
9. To add this member to the access list, select **Save**.
10. To save the access list, select **Save**.

Contacts

Use the Cisco Cius Contacts application to store, sort, and search your contacts. The Contacts application is a standalone application but is also integrated into other applications, such as the Phone application and Email application.


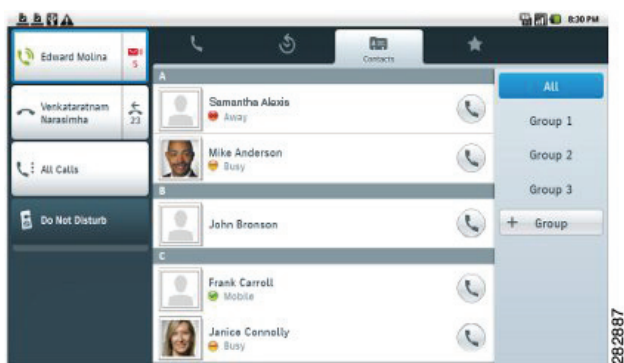 
Launch the Contacts application from the Applications menu .

Figure 23 shows the Contacts application.

Figure 23 *Contacts Application*




Contact Details


Tap an entry in your contact list to view details for that contact. From the contact details screen, place a call, start a chat, start a WebEx meeting, or send an email message to that contact.

Figure 24 shows a contact card.

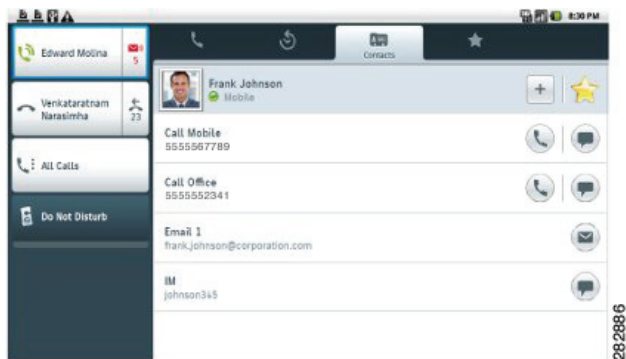 
Figure 24 Contact Card




Add a Contact

1. Press the Menu key .
2. Tap New Contact.
3. Enter the contact name.
4. Enter the contact information.


Edit a Contact

1. Select a contact.
2. Press the Menu key .
3. Tap Edit Contact.
4. Edit the contact information.
5. Tap Done.

Remove a Contact

1. Select a contact.
2. Press the Menu key .
3. Tap Remove Contact.
4. Tap OK.

Mark a Contact as a Favorite

1. Select a contact.
2. Tap the Favorite icon .
3. Tap the Favorite icon again to unmark the contact as a favorite.

Add a Group

1. Tap + Group.
2. Enter the name of the group.
3. Tap OK.

Delete a Group

1. Select a group.
2. Tap Delete Group.
3. Tap Delete.

Add a Contact to a Group

1. Select a group.
2. Tap New Contact.
3. Select a contact.
4. Tap OK.


Contact Icons

Use a contact icon to open the Quick Contact Badge to communicate with your contacts. Note that other options may be available on the quick contact badge, depending upon which applications you have installed.


[Figure 25](#) shows a Quick Contact Badge.

Figure 25 Quick Contact Badge


Call a Contact

1. Tap and hold the contact icon to open the Quick Contact Badge.
2. Tap the **Phone** icon .


View Contact Details

1. Tap and hold the contact icon to open the Quick Contact Badge.
2. Tap the **Contact Details** icon .


Send an Email Message

1. Tap and hold the contact icon to open the Quick Contact Badge.
2. Tap the **Email** icon .

Start a Conversation

1. Tap and hold the contact icon to open the Quick Contact Badge.
2. Tap the **Chat** icon .

Start a WebEx Meeting

1. Tap and hold the contact icon to open the Quick Contact Badge.
2. Tap the **WebEx** icon .

Search

While your Cisco Cius is connected to a network, use the Contacts application to search for contacts in three places:

- Your local Android contacts
- A Microsoft Exchange Global Address List (GAL)
- Cisco Unified Communications Manager database

By default, the Contacts application searches your local contacts. If the minimum number of contacts is not found, the search queries the Cisco Unified CM database. Contacts that appear in both your local contacts and Cisco Unified CM database are merged, and your local contact details show the merged information.


Cisco Unified CM database search results that are not in your local contacts are displayed in their own block under the list of local contacts.

The Cisco Unified CM database is searched for first and last names only.


The Exchange Global Address List is searched only if an ActiveSync account is set up and you enter at least three characters in the search field.

Use the Contacts application to sync your local Android contacts with other services, such as a Google account or a Facebook account.


Search Your Contacts

1. Press the Menu key .
2. Tap Search.

Import Contacts

1. Press the Menu key .
2. Tap **Import/Export**.
3. Tap **Import from SD card**.

Export Contacts

1. Press the Menu key .
2. Tap **Import/Export**.
3. Tap **Export to SD card**.

Availability

Availability is displayed when you are signed in to the Cisco Unified Presence application through the Chat application or the Cisco WebEx Meetings application. Availability shows the status of local contacts.




Email

The Email application allows you to manage multiple email accounts. Use the Email application to view individual email account inboxes or a combined inbox. The Email application supports POP3, IMAP and Exchange email accounts.

Use the Email application to add and manage multiple email accounts, including multiple Exchange accounts on different servers.

Email accounts can use ActiveSync for the Calendar and Contacts applications.

Launch the Email application from the Applications menu .

Settings



The first time that you open the Email application, you are taken to the Settings page to configure the account credentials (server and username, password, incoming server address, check box for Secure Connections and Accept all SSL certificates), unless you already entered the credentials using the Setup Assistant or the Settings application.

If you choose not to set up the account credentials right away, use the Settings application to enter the credentials later.

Related Topic

- [Setup Assistant, page 12](#)

Add an Email Account

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Accounts & Sync**.
4. Tap **Add Account**.
5. Tap **Corporate**.
6. Enter the email account credentials.

Enter all credentials before you save account settings. The application tries to authenticate credentials before saving and prompts you to try again when you enter incorrect information.


The Email shares account settings with the Calendar application; either application initiates the account setup.

Inbox

Accounts are listed in the tab on the left side, followed by a summary of folders with new messages. Folders are listed in the right side tab.

Figure 26 shows a combined inbox.

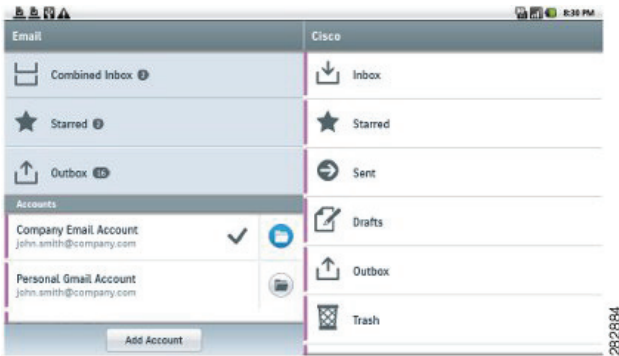 
Figure 26 Combined Inbox Screen



View email messages from an individual or a combined inbox. While an email message is open, the inbox is displayed in the left tab.


Figure 27 shows an email message.

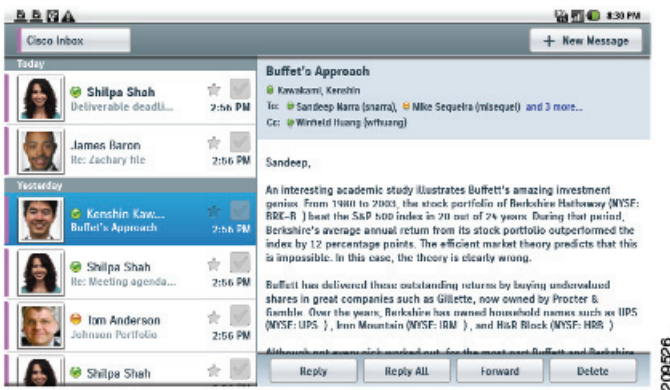 Figure 27 Email Message Screen



Tap the Mailbox button at top left of the email message screen to return to the mailbox.

Refresh Your Inbox


1. Press the Menu key .
2. Tap Refresh.

Send an Email Message

1. Tap the + New Message button.
2. Use the on-screen keyboard to enter the email address, enter the subject, and compose the message.
3. Tap the Send button.

Figure 28 shows an email message being composed.

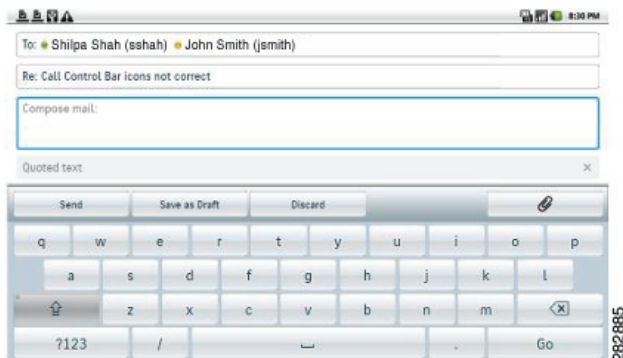 Figure 28 Composing an Email Message



Save an Email Message Draft

1. Tap the + New Message button.
2. Use the on-screen keyboard to enter the email address, enter the subject, and compose the message.
3. Tap the Save as draft button.

Reply to an Email Message

1. Tap the Reply button or the Reply all button.
2. Use the on-screen keyboard to compose the message.
3. Tap the Send button.


Forward an Email Message

1. Tap the **Forward** button.
2. Use the on-screen keyboard to enter the email address.
3. Tap the **Send** button.

Add an Attachment to an Email Message

1. Tap the **Attach** button.
2. Select a file. The maximum email attachment size is 5MB.

Add a CC or BCC Recipient

1. Press the **Menu** key .
2. Tap **Add Cc/Bcc**.
3. Use the on-screen keyboard to enter the email address in the Cc or Bcc field.


Delete an Email Message

Tap the **Delete** button.

Delete Multiple Email Messages

1. Check the email messages.
2. Tap the **Delete** button.

Mark an Email Message as a Favorite

Tap the **Favorite** icon .

Mark Multiple Email Messages as Favorites

1. Check the email messages.
2. Tap the **Star** button.


Mark an Email Message as a New Message

1. Check the email message.
2. Tap **Mark Unread**.


Mark Multiple Email Messages as New Messages

1. Check the email messages.
2. Tap **Mark Unread**.


Add a Signature to Your Email Messages

1. Press the **Menu** key .
2. Tap **Account Settings**.
3. Tap **Signature**.
4. Enter your signature and tap **OK**. Your signature appears on any new email message that you compose. Your signature does not appear when you reply to a message.


Set Your Email Check Frequency

1. Press the **Menu** key .
2. Tap **Account Settings**.
3. Tap **Email Check Frequency**.
4. Select a frequency.

Select Your Ringtone

1. Press the **Menu** key .
2. Tap **Account Settings**.
3. Tap **Select Ringtone**.
4. Select a ringtone and tap **OK**.


Edit Your Vibrate Settings

1. Press the **Menu** key .
2. Tap **Account Settings**.

3. Tap Vibrate.

Chat

Use the Chat application to send and receive instant messages, to update your availability, and to add and remove contacts. You receive chat messages and presence updates while the Chat application is minimized or out of focus.

Launch the Chat application from the Applications menu .

Set Up an Account

The first time that you open the Chat application, you are taken to the Settings page to configure your account credentials, unless you already entered the credentials using the Setup Assistant or the Settings application.



If you choose not to set up the account credentials in the Setup Assistant, you will be prompted to do so when you first launch the Chat application.

Related Topic

- [Setup Assistant, page 12](#)

Add a Chat Account

Enter all credentials before you save account settings. The application tries to authenticate credentials before saving and prompts you to try again when you enter incorrect information.

1. Tap the Applications Menu icon  on the home screen.
2. Tap Settings .
3. Tap Accounts & Sync.
4. Tap Add Account.
5. Tap Cisco Jabber IM.
6. Enter the chat account credentials.

Signing In

An automatic sign-in option for the Chat application is enabled by default. The Chat application starts automatically when Cisco Cius is turned on, unless you sign out of the Chat application.


If you are not signed in to the Chat application, the application will try to sign you in automatically when the application is launched. If the sign-in succeeds, the Chat Contacts screen is displayed. If the sign-in does not succeed, you will be prompted to reenter your account credentials.

Contacts

The Contacts application is integrated with the Chat application.

Figure 29 shows the Chat contacts screen.

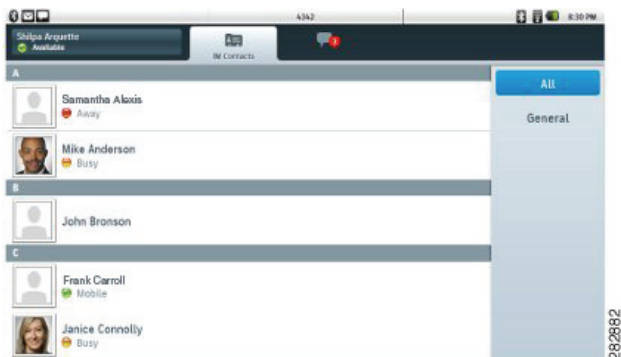 
Figure 29 Chat Contacts



Related Topic

- [Contacts, page 46](#)


Add a Chat Contact

1. Press the Menu key .
2. Tap Add Contact.


Remove a Chat Contact

1. Tap and hold a contact on the Contacts screen, or in an active conversation.
2. Tap Remove Contact from Chat.

Show Offline Contacts

1. Press the Menu key .
2. Tap Show Offline Contacts.


View Chat Contact Details

1. Tap the contact icon to open the Quick Contact Badge.
2. Tap the Contact Details icon .

Or:

1. Tap and hold a contact on the Contacts screen, or in an active conversation.
2. Tap View Chat Contact.


Start a Conversation with a Chat Contact

1. Tap and hold the contact icon to open the Quick Contact Badge.
2. Tap the Chat icon .

Or:

1. Tap and hold a contact on the Contacts screen, or in an active conversation.
2. Tap Chat.


Call a Chat Contact

1. Tap and hold the contact icon to open the Quick Contact Badge.
2. Tap the Phone icon .

Or:

1. Tap and hold a contact on the Contacts screen, or in an active conversation.
2. Tap Call.


Start a WebEx Meeting with a Chat Contact

1. Tap and hold the contact icon to open the Quick Contact Badge.
2. Tap the WebEx icon .

Or:

1. Tap and hold a contact on the Contacts screen, or in an active conversation.
2. Tap Start WebEx Meeting.

Send an Email Message to a Chat Contact

1. Tap and hold the contact icon to open the Quick Contact Badge.
2. Tap the Email icon .

Or:

1. Tap and hold a contact on the Contacts screen, or in an active conversation.

2. Tap **Send Email**.

Unsynced Contacts

You can use the Chat application to communicate with unsynced contacts. Unsynced contacts are contacts that you have not added to your chat contacts.

Add an Unsynced Contact to Your Chat Contacts

1. Tap and hold the contact icon.
2. Tap **Add** in the Contact Details dialog box.

Start a Conversation with an Unsynced Contact

1. Tap and hold the contact icon.
2. Tap the **Chat** icon on the Contact Details dialog box.

Or:

1. Tap and hold a contact on the Contacts screen, or in an active conversation.
2. Tap **Chat**.

Call an Unsynced Contact

1. Tap and hold the contact icon.
2. Tap a **Phone** icon on the Contact Details dialog box.

Or:

1. Tap and hold a contact on the Contacts screen, or in an active conversation.
2. Tap **Call**.

Start a WebEx Meeting with an Unsynced Contact

1. Tap and hold the contact icon.
2. Tap the **WebEx** icon on the Contact Details dialog box.

Or:

1. Tap and hold a contact on the Contacts screen, or in an active conversation.
2. Tap **Start WebEx Meeting**.

Send an Email Message to an Unsynced Contact

1. Tap and hold the contact icon.

2. Tap an **Email** icon on the Contact Details dialog box.


Or:

1. Tap and hold a contact on the Contacts screen, or in an active conversation.
2. Tap **View Chat Contact**.

Contact Requests

While you are signed in to the Chat application, you will receive a notification in the notifications bar if you receive a new contact request.


View Your Contact Requests

1. Press the Menu key .
2. Tap **Contact Requests**.
3. Tap **Allow** or **Deny**.
4. Tap **Confirm**.

Conversations

Figure 30 shows an active conversation.

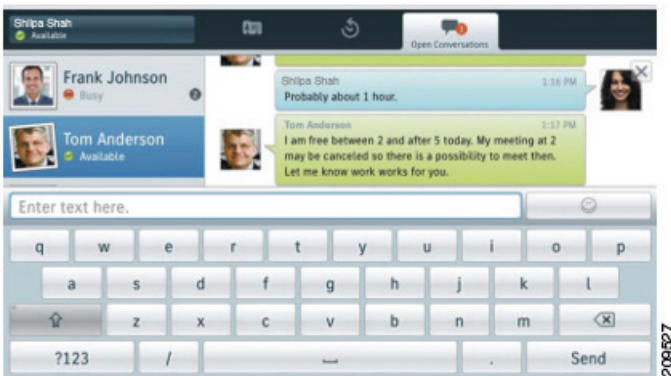 Figure 30 Active Conversation




The chat opens in the Active Conversations tab on the right side of the screen. Use the on-screen keyboard to type your messages.

While you are viewing an active conversation, a scrollable list of your active conversations displays on the left side of the screen. Select a conversation to view it.

Start a Conversation

Tap a contact from your contact list.

End a Conversation

Tap the Close icon  at the top right of the conversation.


Availability

Tap the top left of the screen to set your status to one of the following:

- Available
- Away
- Do Not Disturb
- Custom

Figure 31 shows the status options.

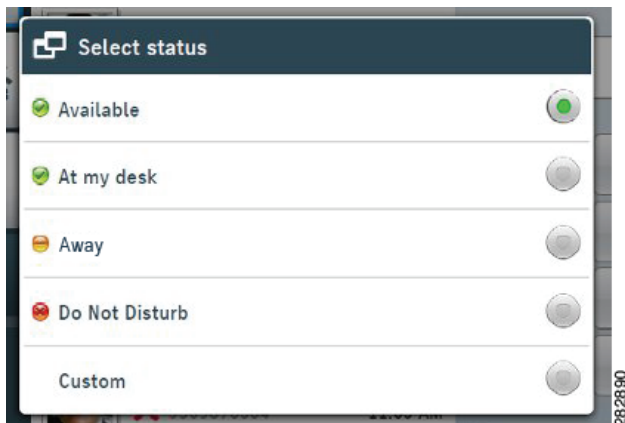 Figure 31 Status Options



Add a Custom Status

1. Tap your status at the top left of the screen.
2. Tap Custom.

3. Select an availability for the status.
4. Enter the text for your status.
5. Tap OK.

Delete a Custom Status

1. Tap your status at the top left of the screen.
2. Tap and hold a custom status.
3. Tap Delete.

Emoticons

The Chat application includes emoticons that you can use in conversation.

Insert an Emoticon into a Conversation

1. Tap the Emoticon icon at the right side of the text entry box.
2. Tap an emoticon to insert it into the conversation.

Links

The Chat application supports links in conversations.

Open a URL

Tap a URL in a conversation to open that website in the Browser application.

Email Address

Tap an email address in a conversation to open a new message in the Email application, with that email address in the To field.

Phone Number

Tap a phone number in a conversation to launch the Phone application with that phone number on the call line.

WebEx

Tap a WebEx link in a conversation to join a WebEx meeting.

Search

Use the search function to search your chat contacts and your corporate directory.

Add a Search Result to Your Chat Contacts

1. Tap a contact icon from the search results.
2. Tap **Add**.
3. Select a group for the contact.
4. Tap **Close**.


Start a Conversation with a Search Result

Tap on a search result to start a conversation with that contact.


Settings

The Chat application settings allow you to set up your auto-sign-in option and to edit your chat account information.


Set Your Profile Picture

1. Press the **Menu** key .
2. Tap **Account Settings**.
3. Tap **Select Profile Picture**.
4. Tap **Take Photo** to launch the Camera application and take a picture. Or, tap **Select Photo from Gallery** to launch the Gallery application and select a picture.


Remove a Profile Picture

1. Press the **Menu** key .
2. Tap **Account Settings**.
3. Tap **Select Profile Picture**.
4. Tap **Remove Profile Picture**.


Enable Status Bar Notifications

1. Press the Menu key .
2. Tap **Account Settings**.
3. Tap **Status Bar Notifications**.


Enable Audio Notifications

1. Press the Menu key .
2. Tap **Account Settings**.
3. Tap **Audio Notifications**.


Enable In-Chat Audio Notifications

1. Press the Menu key .
2. Tap **Account Settings**.
3. Tap **In Chat Audio Notifications**.

Set Your Ringtone


1. Press the Menu key .
2. Tap **Account Settings**.
3. Tap **Select Ringtone**.
4. Select a ringtone.

Sign Out of Chat

1. Press the Menu key .
2. Tap **Sign Out**.

Calendar

The Cisco Cius Calendar application includes an integrated Cisco WebEx Meeting Center application. Calendar reminders appear on the notifications bar.


Launch the Calendar application from the Applications menu .

Tap the 1 (day), 7 (week), or 31 (month) tab to change your calendar view. Tap the Today button to return to the Day view of the current day.

Upcoming appointments are listed on the right side of the screen.

Figure 32 shows the Calendar week view.

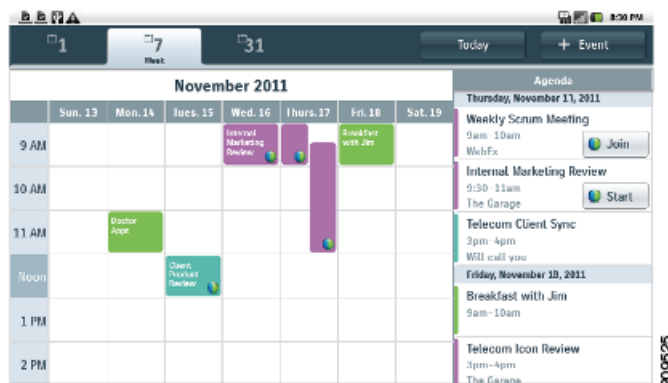 Figure 32 Calendar Week View



Set Up an Account

The Calendar application shares account settings with the Email application. If your email account is already set up, you do not need to enter that account information again for the Calendar application.

The first time that you open the Calendar application, you are taken to the Settings page to configure your account credentials, unless you already entered the credentials using the Setup Assistant or the Settings application.

If you choose not to set up the account credentials right away, use the Settings application to enter the credentials later.

On first use, you are prompted to sign in to Cisco WebEx Meetings, where you must enter a valid WebEx account user ID and password.



Use the Calendar application to set up multiple calendar accounts. ActiveSync can be set up with Google, Yahoo, Hotmail, and other accounts.

Use the Calendar application to sync your calendar events with Microsoft Outlook and Microsoft Exchange.

Related Topic

- [Setup Assistant, page 12](#)

Add a Calendar Account

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Accounts & Sync**.
4. Tap **Add Account**.
5. Tap **Corporate** or **Google**.
6. Enter the calendar account credentials.

Enter all credentials before you save account settings. The application tries to authenticate credentials before saving and prompts you to try again when you enter incorrect information.

Add a Calendar Event

1. Tap the **+ Event** button at the top right of the calendar.
2. Use the on-screen keyboard to enter the details of the event on the Add Event screen.
3. Tap the **Done** button.

Your event is displayed in the Day view for the date of the event.

[Figure 33](#) shows the Add Event screen.

Figure 33 Add Event Screen

The screenshot shows a mobile application interface for adding an event. The top status bar displays signal strength, Wi-Fi, and the time 2:30 PM. The interface is split into two columns.

Left Column (Event Details):

- What:** A text field containing "Warwick Team Project".
- From:** A date and time selector showing "Mon, October 25, 2010" at "4:30PM". An "All Day" checkbox is present and unchecked.
- To:** A date and time selector showing "Mon, October 25, 2010" at "12:30PM".
- Where:** A text field containing "My Office".
- Calendar:** A dropdown menu currently set to "Mine".
- Repetition:** A section header for repeating events.

Right Column (Event Content):

- Description:** A text area containing "Warwick Project Progress and Development Meeting".
- Guests:** A text area containing "Email addresses".

A vertical copyright notice "© 2011 Cisco" is visible on the right side of the screen.

Edit an Event

1. Tap and hold an event.
2. Tap Edit Event.
3. Edit the event.
4. Uncheck the WebEx check box on the Edit Event screen if you do not wish to make a WebEx event.
5. Tap Done.

Delete an Event

1. Tap and hold an event.
2. Tap Delete Event.
3. Tap OK.

Start a Scheduled WebEx Meeting

Tap the Start button next to the event.


Join a Scheduled WebEx Meeting

Tap the Join button next to the event.


Settings

The Calendar application allows you to edit your settings for declined events, alerts and notifications, and your default reminder time.


Hide Declined Events

1. Press the Menu key .
2. Tap **Settings**.
3. Tap **Hide Declined Events**.


Set Alerts and Notifications

1. Press the Menu key .
2. Tap **Settings**.
3. Tap **Set Alerts & Notifications**.


Select Your Ringtone

1. Press the Menu key .
2. Tap **Settings**.
3. Tap **Select Ringtone**.
4. Select a ringtone and tap **OK**.

Edit Your Vibrate Settings

1. Press the Menu key .
2. Tap **Settings**.
3. Tap **Vibrate**.

Set Your Default Reminder Time

1. Press the Menu key .
2. Tap **Settings**.
3. Tap **Default Reminder Time**.

Calendar Widget

Use the Calendar widget to display your upcoming events on your home screen.


Related Topic

- [Add to Cius Home Screen, page 14](#)



Unified Inbox

The Unified Inbox application lets you manage all communications at a glance.

Launch the Unified Inbox application from the **Applications** menu .

The Unified Inbox application has two display modes:

- Contacts View
- Events View

Contacts View

In Contacts View, the left tab contains a scrollable contact list, sorted alphabetically. Communications with a contact are displayed in three scrollable, horizontal panels:


- Email messages are displayed in the top panel.
- Upcoming events with the contact are displayed in the middle panel.
- Missed calls are displayed in the bottom panel.

You can change the order of the panels.

View Communications with a Contact

Tap a contact photo to view communications with that contact.

Search the Contact List

1. Tap the Menu key .
2. Tap Search.

View an Email Message

Tap an email message to view it.

If the message is part of a thread, the other messages appear in the tab on the left. You can select a message from that tab to display its contents. You can also swipe an email message to the left or right to navigate to the next (left) or the previous (right) email message.


View Event Details

Tap an event to view the event details. The event information is displayed on the left, and the participants are displayed on the right.


Join a WebEx Meeting

Tap **Join** if you are viewing an event that is a WebEx meeting that is about to start.

Reorder the Panels

1. Press the **Menu** key .
2. Tap **Reorder Panels**.
3. Drag a panel up or down to change its position.
4. Tap **Close**.

Refresh Application Data

1. Press the **Menu** key .
2. Tap **Refresh**.

Events View

In Events View, the left tab contains a scrollable list of upcoming events. Email messages and contacts associated with an event are displayed in two horizontal panels:

- Email
- Contacts

You can change the order of the panels.

View Event Details

1. Tap and hold an event.


2. Tap View Event Details.

View an Email Message


Tap an email message to view it.

If the message is part of a thread, the other messages appear in the tab on the left. You can select a message from that tab to display its contents. You can also swipe an email message to the left or right to navigate to the next (left) or the previous (right) email message.

Reorder the Panels

1. Press the Menu key .
2. Tap Reorder Panels.
3. Drag a panel up or down to change its position.
4. Tap Close.


Refresh Application Data

1. Press the Menu key .
2. Tap Refresh.

View Communications with a Contact

Tap a contact photo to view communications with that contact.


Search the Contact List

1. Tap the Menu key .
2. Tap Search.


Contact Icons

Use a contact icon to access other ways to communicate with your contacts.


Start a Conversation

1. Tap and hold the contact icon to open the Quick Contact Badge.
2. Tap the Chat icon .


Call a Contact

1. Tap and hold the contact icon to open the Quick Contact Badge.
2. Tap the Phone icon .

Start a WebEx Meeting

1. Tap and hold the contact icon to open the Quick Contact Badge.
2. Tap the WebEx icon .

Send an Email Message

1. Tap and hold the contact icon to open the Quick Contact Badge.
2. Tap the Email icon .

Unified Inbox Widget

The Unified Inbox widget shows the number of new voice messages, missed calls, and upcoming events, and shows pictures of your newest contacts. The bigger the picture, the more recent the contact. The type of communication is not shown with the contact picture.

Related Topic

- [Add to Cius Home Screen, page 14](#)



Cisco WebEx Meetings

Cisco WebEx Meetings is a standalone application, but it is also integrated into the Calendar, Phone, Chat, and Contacts applications.


During a WebEx meeting, participants can join the audio conference, see who is in the meeting, view shared presentations, and chat with everyone or privately. A popup at the bottom of the screen identifies the current speaker.


Note that you cannot share your desktop or a presentation in a WebEx meeting from the Cisco Cius. Video is not sent from your Cius to a WebEx meeting.

The meeting host can drag and drop the WebEx ball during a meeting to change presenters and mute or unmute attendees. The host has full control of the meeting.

[Figure 34](#) shows a WebEx meeting.

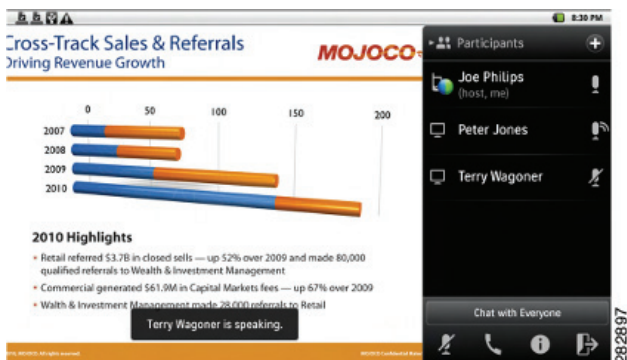 Figure 34 WebEx Meeting



Launch the Cisco WebEx Meetings application from the Applications menu .

Start an Instant WebEx Meeting

1. Tap the **Instant Meeting** button.
2. The Instant Meeting dialog box appears. You can optionally set the meeting topic and the meeting password and invite participants, or you can accept the default values. Note that some meeting sites require you to set a meeting password.
3. Tap **Start Meeting**.

Schedule a New WebEx Meeting

Use the Calendar application to schedule a WebEx meeting.

Related Topic


- [Add a Calendar Event, page 66](#)

Start a Scheduled WebEx Meeting

Tap the **Start** button next to the event in the WebEx application.

Figure 35 shows a WebEx meeting detail view.

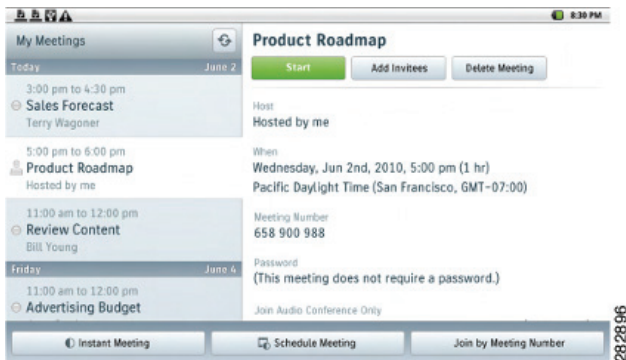 Figure 35 Meeting Detail View





Join a Scheduled WebEx Meeting

When it is time to join a meeting, the Join button on the meeting detail view will turn green. Tap the **Join** button next to the event in the WebEx application or the Calendar application.

Join a WebEx Meeting by Meeting Number

1. Tap **Join by Meeting Number**.
2. Enter the meeting number and your name. Enter the meeting password if it is required.
3. Tap **Join Meeting**.

Start an Unscheduled WebEx Meeting

1. Launch the Contacts application from the Applications menu .
2. Tap a contact icon to open the Quick Contact Badge.
3. Tap the WebEx icon  in the menu that appears.

4. You are prompted to enter the meeting topic, set the meeting password, and invite others by typing their email addresses or selecting contacts from a drop-down contacts menu on the Instant Meeting screen.
5. Tap **Start Meeting**.

You can invite more contacts into a meeting from within the WebEx meeting.

You and your invited contacts receive an email invitation. The email message contains information about the WebEx meeting, including a link to join it and enter the password.


Invite More Participants to a WebEx Meeting

1. If you are the host of a WebEx meeting, tap **Add Invitee** on the meeting detail view.
2. Select contacts to invite to the meeting.


Invite More Participants During a WebEx Meeting

1. If you are the host of a WebEx meeting, tap **Add Invitee**.
2. Select contacts to invite to the meeting.

Invite Participants on a Phone Call into a WebEx Meeting

1. Tap the contact icon that displays during the phone call to open the Quick Contact Badge.
2. Tap **WebEx**  in the menu that appears.

Invite Participants in a Chat into a WebEx Meeting

1. Tap the contact icon that displays during the chat to open the Quick Contact Badge.
2. Tap **WebEx**  in the menu that appears.

Cisco WebEx Meetings Widget

Use the Cisco WebEx Meetings widget to display, schedule, and start WebEx meetings on your home screen.



Related Topic

- [Add to Cius Home Screen, page 14](#)



Google Search

Use the Google Search application to search the Internet, your files, or your contacts.

Launch the Google Search application from the quick launch bar on the home screen  or from the Applications menu .

Search the Internet

1. Tap the **Search** icon to the left of the search bar.
2. Tap the **Internet** icon.
3. Type your search query into the search bar.
4. Tap **Go**.



Search for Applications

1. Tap the **Search** icon to the left of the search bar.
2. Tap the **Applications** icon.
3. Type your search query into the search bar.
4. Tap **Go**.

Search Your Contacts

1. Tap the **Search** icon to the left of the search bar.
2. Tap the **Contacts** icon.
3. Type your search query into the search bar.
4. Tap **Go**.

Add More Search Options

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Search**.
4. Tap **Searchable Items**.
5. Select other search options. These options appear in the menu when you tap the Search icon in the Search application.

Search Widget

Use the Search widget to search from your home screen.

Related Topic


- [Add to Cius Home Screen, page 14](#)



Browser

The on-screen keyboard pops up automatically when you select a text input field. The Browser application includes an autocomplete function.


Most sites default to a mobile version if there is a mobile version of the site available. If a website offers a link to a desktop mode, tap the link to select the desktop mode. The desktop mode may offer a better site layout for the Cisco Cius Browser.

Launch the Browser application from the Applications menu .


View a Website

1. Tap the address bar.
2. Enter the URL of the website using the on-screen keyboard.


Open a New Window

1. Press the Menu key .
2. Tap New Window.

View Open Windows

1. Press the Menu key .
2. Tap Windows.


View Your Bookmarks

1. Press the **Menu** key .
2. Tap the **Bookmarks** button.


Bookmark a Website

1. Press the **Menu** key .
2. Tap the **Bookmarks** button.
3. Tap the first entry to add it to your bookmarks.


Open a Bookmark

1. Press the **Menu** key .
2. Tap the **Bookmarks** button.
3. Tap a bookmark.

Open a Bookmark in a New Window


1. Press the **Menu** key .
2. Tap the **Bookmarks** button.
3. Tap and hold a bookmark.
4. Tap **Open in New Window**.

Edit a Bookmark


1. Press the **Menu** key .
2. Tap the **Bookmarks** button.
3. Tap and hold a bookmark.
4. Tap **Edit Bookmark**.

5. Edit the name or URL for the bookmark.
6. Tap OK.


Delete a Bookmark

1. Press the Menu key .
2. Tap the **Bookmarks** button.
3. Tap and hold a bookmark.
4. Tap **Delete Bookmark**.


Add a Shortcut to the Home Screen

1. Press the Menu key .
2. Tap the **Bookmarks** button.
3. Tap and hold a bookmark.
4. Tap **Add Shortcut to Home**.


Share a Link

1. Press the Menu key .
2. Tap the **Bookmarks** button.
3. Tap and hold a bookmark.
4. Tap **Share Link**.
5. Select an application to share the link.


Copy a Link URL

1. Press the Menu key .
2. Tap the **Bookmarks** button.
3. Tap and hold a bookmark.
4. Tap **Copy Link URL**.


Set a Link as Your Homepage

1. Press the **Menu** key .
2. Tap the **Bookmarks** button.
3. Tap and hold a bookmark.
4. Tap **Set as Homepage**.


View Your Most Visited Websites

1. Press the **Menu** key .
2. Tap the **Bookmarks** button.
3. Tap **Most Visited**.


View Your Browser History

1. Press the **Menu** key .
2. Tap the **Bookmarks** button.
3. Tap **History**.


Refresh a Page

1. Press the **Menu** key .
2. Tap **Refresh**.


Search a Page

1. Press the **Menu** key .
2. Tap **More**.
3. Tap **Find on Page**.
4. Enter your search query.
5. Tap **Done**.

View Download History


1. Press the Menu key .
2. Tap **More**.
3. Tap **Downloads**.

Edit Browser Settings

1. Press the Menu key .
2. Tap **More**.
3. Tap **Settings**.

Quickoffice

Use Quickoffice to open and save Microsoft Word documents, Microsoft Excel spreadsheets, Microsoft PowerPoint presentations, and PDF documents.

Launch the Quickoffice application from the Applications menu .

Open a Word Document

1. Tap **Quickword**.
2. Tap **Recent Documents** and select a file, or tap **SD Card** and navigate to your file.

Open a Spreadsheet

1. Tap **Quicksheet**.
2. Tap **Recent Documents** and select a file, or tap **SD Card** and navigate to your file.

Open a Presentation


1. Tap **Quickpoint**.
2. Tap **Recent Documents** and select a file, or tap **SD Card** and navigate to your file.

Open a PDF Document

1. Tap QuickPDF.
2. Tap Recent Documents and select a file, or tap SD Card and navigate to your file.

Save a File

Save a file that you have opened from an email attachment or a website.

1. Press the Menu key .
2. Tap the Document icon on the left.
3. Tap Save.



Camera

Use the Camera application to take pictures and record videos.


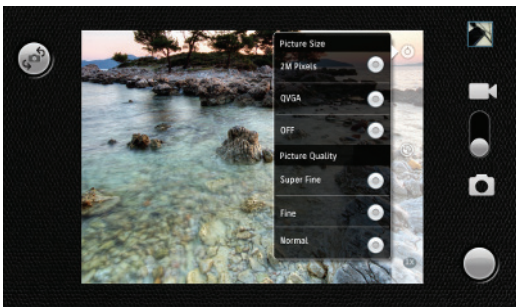 
Launch the Camera application from the Applications menu .

Figure 36 shows the Camera application.

Figure 36 Camera Application



The picture in the top right corner is a thumbnail of your most recent picture or video.

Switch Between Picture and Video

Tap and slide the camera selection icon up or down to switch between picture and video mode.

Switch Cameras

Tap the top left icon to switch between front (1 megapixel) and rear (5 megapixel) cameras.

Pictures

Use the Camera application to take pictures.

Take a Picture

Tap the **Shutter** icon at the bottom right to take a picture.

Adjust the Picture Size

1. Tap the **Settings** icon in the top right of the picture frame.
2. Select a picture size.

Change the Exposure

1. Tap the **Settings** icon in the top right of the picture frame.
2. Select an exposure.

Change Color Effects

1. Tap the **Settings** icon in the top right of the picture frame.
2. Select a color effect.

Restore Default Camera Settings

1. Tap the **Settings** icon in the top right of the picture frame.
2. Tap **Restore to Defaults**.

Enable Location Data

Enable the Global Positioning (GPS) feature to add location data to your pictures.

1. Tap the **Location** icon at the bottom left of the picture frame.
2. Tap **On**.

Disable Location Data

1. Tap the **Location** icon at the bottom left of the picture frame.

2. Tap Off.

Videos

Use the Camera application to record videos.

Record a Video

1. Tap the **Record** icon at the bottom right to start recording.
2. Tap the **Stop** icon at the bottom right to stop recording.

Change the Exposure

1. Tap the **Settings** icon in the top right of the picture frame.
2. Select an exposure.

Change Color Effects

1. Tap the **Settings** icon in the top right of the video frame.
2. Select a color effect.

Restore Default Camera Settings

1. Tap the **Settings** icon in the top right of the video frame.
2. Tap **Restore to Defaults**.

Adjust the Video Quality


1. Tap the **Video Quality** icon in the bottom right of the video frame.
2. Select a video quality.

Gallery

Use the gallery to view and share your pictures and videos.

Table 1 **Gallery Supported File Types**

	Name	Encoder	Decoder	Details	Container Format
Picture	JPEG	X	X	Base + Progressive	
	GIF		X		
	PNG	X	X		
	BMP		X		
Video	H.263		X		3GPP (.3gp)
	H.264	X	X		3GPP (.3gp) MPEG-4 (.mp4)
	MPEG4 Simple Profile		X		3GPP (.3gp)

Launch the Gallery application from the Applications menu .

Albums

The gallery opens with a view of different albums. There is an icon to launch the camera application in the top right corner.

View an Album

Tap an album to view it.

Switch Album Views

There are two album views: folder view and grid view.

Tap the icon in the top right corner of an album to switch views.

Select All Items in an Album

1. Tap and hold a picture or a video in an album.
2. Tap **Select All**.

Pictures

Use the Gallery application to view, edit and share pictures.


View a Picture

Tap a picture in an album to view the picture.


View a Slideshow

1. Tap the first picture in the album.
2. Tap **Slideshow**.


Share a Picture

1. Tap a picture.
2. Press the **Menu** key .
3. Tap **Share**.
4. Select an application to share the picture.


Delete a Picture

1. Tap a picture.
2. Press the **Menu** key .
3. Tap **Delete**.


Rotate a Picture

1. Tap a picture.
2. Press the **Menu** key .
3. Tap **More**.
4. Tap **Rotate Left** or **Rotate Right**.


Set a Picture as Wallpaper

1. Tap a picture.
2. Press the Menu key .
3. Tap More.
4. Tap Set As.
5. Tap Wallpaper.


Set a Picture as a Contact Icon

1. Tap a picture.
2. Press the Menu key .
3. Tap More.
4. Tap Set as.
5. Tap Contact Icon.
6. Select a contact.
7. Drag the orange square to the part of the picture to use and tap Save.

Crop a Picture

1. Tap a picture.
2. Press the Menu key .
3. Tap More.
4. Tap Crop.
5. Drag the orange square to the part of the picture to use and tap Save.

View Picture Details

1. Tap a picture.
2. Press the Menu key .
3. Tap More.
4. Tap Details.

Picture Frame Widget

Use the Picture frame widget to display a picture from your Gallery in a frame on your home screen.

Related Topic

- [Add to Cius Home Screen, page 14](#)

Videos

Use the Gallery application to view, edit, and share videos.

View a Video

Tap a video in an album to view the video.

Delete a Video

1. Tap and hold a video in an album.
2. Tap **Delete**.
3. Tap **Confirm Delete**.

Share a Video

1. Tap and hold a video in an album.
2. Tap **Share**.
3. Select an application to share the video.


View Video Details

1. Tap and hold a video in an album.
2. Tap **More**.
3. Tap **Details**.



Music

Use the music player to listen to audio files.

Launch the Music application from the Applications menu .

The following table lists the supported file types for the music player:

Table 2 Music Player Supported File Types

Name	Encoder	Decoder	Details	Container Format
AAC LC/TP		X	Mono/Stereo	3GPP (.3gp) and MPEG-4 (.mp4, .m4a) No support for raw AAC (.aac)
HE-AACv1 (AAC+)		X	Bit rate < 160 kbps Sample Rate 8-48 kHz	
HE-AACv2 (enhanced AAC+)		X		
AMR-NB	X	X	4.75-12.2 kbps Sample Rate 8 kHz	3GPP (.3gp)
AMR-WB		X	9 rates from 6.60 to 23.85 kbps Sample Rate 16 kHz	3GPP (.3gp)
MP3		X	Mono/Stereo 8-320 kbps Constant bit rate (cbr) or variable bit rate (vbr)	MP3 (.mp3)
MIDI		X	MIDI Type 0 and 1 DLS Version 1 and 2 XMF and Mobile XMF Support for ringtone formats RTTTTL/RTX, OTA, and iMelody	Type 0 and 1 (.mid, .xmf, .mxmf) RTTTTL/RTX (.rtttl, .rtx) OTA (.ota) iMelody (.imy)
Ogg Vorbis		X		OGG (.ogg)
PCM		X	8 and 16 bit linear PCM	WAVE (.wav)

The music player has different tab views to sort your audio file collection:

- Artists
- Albums
- Songs
- Playlists
- Now Playing

Songs

Use the music player to play and delete songs.

Play a Song

1. Tap and hold a song.
2. Tap **Play**.

Delete a Song

1. Tap and hold a song.
2. Tap **Delete**.

Use a Song as a Ringtone

1. Tap and hold a song.
2. Tap **Use as Phone Ringtone**.

Playlists

Use the Music Player application to create and edit playlists. You cannot import playlists from other devices.

Add a Song to a Playlist

1. Tap and hold a song.
2. Tap **Add to Playlist**.

Remove a Song from a Playlist

1. Tap and hold a song.
2. Tap **Remove from playlist**.

Play a Playlist

1. Tap and hold a playlist.
2. Tap **Play**.

Rename a Playlist

1. Tap and hold a playlist.
2. Tap **Rename**.

Delete a Playlist

1. Tap and hold a playlist.
2. Tap **Delete**.

Edit the Recently Added Playlist

1. Tap and hold the **Recently Added** playlist.
2. Tap **Edit**.
3. Select the length of time and tap **Done**.

Music Widget


Use the Music widget to control the Music application on your home screen.

Related Topic

- [Add to Cius Home Screen, page 14](#)

Clock

The Clock application displays the time and the date. If you are charging the battery, the Clock application displays the battery life. The Clock application also allows you to set alarms, view a slideshow of your pictures, and access the Music Player application.

Launch the Clock application for the Applications menu .

Set an Alarm

1. Tap the **Alarm** icon.
2. Tap **Add Alarm**.
3. Enter the time and other alarm details.
4. Tap **Done**.

Edit an Alarm

1. Tap the **Alarm** icon.
2. Select an alarm.
3. Edit the time or other alarm details.
4. Tap **Done**.

Delete an Alarm

1. Tap the **Alarm** icon.
2. Tap **Add Alarm**.
3. Tap **Delete**.

View a Slideshow

Tap the **Slideshow** icon.

Open the Music Player application

Tap the **Music Player** icon.

Related Topic

- [Music, page 88](#)

Analog Clock Widget


Use the **Analog Clock** widget to display an analog clock on your home screen.

Related Topic

- [Add to Cius Home Screen, page 14](#)

Sound Recorder

Use the **Sound Recorder** application to record sounds.

Launch the **Sound Recorder** application from the **Applications** menu .

Record

1. Tap the **Record** icon.
2. Tap the **Stop** icon when you are finished recording.
3. Tap **Use This Recording**.

Play Back a Recording

Tap the **Play** icon.

Desktop Virtualization

For users who adopt Virtual Desktop Infrastructure (VDI), Cisco Cius supports third-party virtual desktop clients from leading third-party vendors:

- Citrix
- VMware
- Wyse

These desktop virtualization clients are available from Cisco AppHQ and have been optimized to run on Cisco Cius. Do not download generic versions of these applications from other application repositories.

Desktop virtualization technologies may offer a degraded level of performance when remotely accessing audio, video and interactive multimedia resources. Unlike other desktop virtualization endpoints, Cisco Cius features a local voice and video media plane which enables Cius to connect to media traffic through the device itself and outside of the remote desktop display protocol. For example, two Cisco Cius users in the same branch can call each other using Cisco Unified Personal Communicator running on their remote virtual desktop and, while the control (signaling) plane resides in the data center, the audio and video connection between the users never leaves the branch. The branch network applies packet prioritization to the RTP flow, and the two Cius connect directly to each other without the need for the voice to traverse the WAN twice to reach the data center. This delivers the best quality experience for audio and video collaboration without inflating the bandwidth consumption over the WAN.

The desktop virtualization experience on Cius includes keyboard and mouse support when the Cius is docked in the HD media station. However, the desktop virtualization clients retain the touch-mode behavior, and some keyboard and mouse actions may differ from a typical Microsoft Windows experience. For a description of supported keyboard shortcuts and mouse actions, refer to the [USB Keyboard and Mouse](#) section of this guide.

For additional information about Citrix Receiver, VMware View Client, and Wyse PocketCloud Pro, see the product description for each application in Cisco AppHQ.

Related Topics

- [Cisco AppHQ](#), page 96
- [USB Keyboard and Mouse](#), page 105



Google Mobile Services

Cisco Cius includes these Google Mobile Services applications:

- Gmail
- Google Search
- Latitude
- Maps
- Market
- Navigation
- News & Weather
- Places
- Talk
- YouTube

You need a Google account to access some features of these applications.

Add a Google Account

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Accounts & Sync**.
4. Tap **Add Account**.
5. Tap **Google**.
6. Enter your Google account credentials.

Gmail

Use the Gmail application to send and receive email with your Gmail account.

Google Search

Use the Google Search application to search the web, the Android Market, and your contacts.

Related Topic

- [Google Search, page 76](#)

Latitude

Use the Latitude application to share your location and to view the locations of your contacts with Google Maps. Note that to view the location of a contact, that contact must choose to share their location with Latitude.

Maps

Use the Maps application to view Google Maps and to get directions.

Market

Use the Market application to search for and install applications from the Android Market.

Related Topic

- [Android Market, page 98](#)

Navigation

Use the Navigation application to get GPS navigation directions.

News & Weather

Use the News & Weather application to read the news and to get local weather information.

Places

Use the Places application to search for nearby restaurants, gas stations, ATMs, and attractions.

Talk

Use the Talk application to chat with your Google contacts.

YouTube

Use the YouTube application to watch and upload YouTube videos.

More Applications


Use Cisco AppHQ, Android Market or UCM App to find and add applications to Cisco Cius. Depending on your security settings, Cisco AppHQ, Android Market and UCM App may not be available.

Cisco Cius supports applications from Cisco AppHQ, the Android Market or UCM App. Cisco cannot guarantee that an application that is downloaded from a third-party site will work.

Cisco AppHQ


Use the Cisco AppHQ application to subscribe to, or unsubscribe from, applications that are made available to you through the Cisco Unified Communications Manager. For more information about available applications, contact your system administrator.

Sign In


1. Launch the Cisco AppHQ from the Applications menu .
2. Enter your password.
3. Tap **Sign-In**.

[Figure 37](#) shows the Cisco AppHQ application.

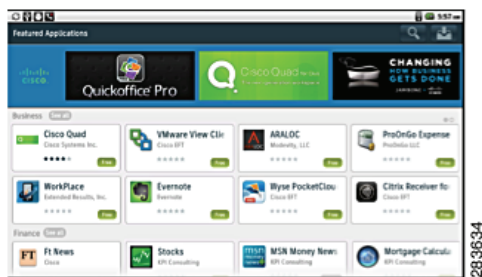 
Figure 37 Cisco AppHQ



View Featured Applications

1. Press the Menu key .
2. Tap Featured.

View a Category

1. Press the Menu key .
2. Tap Categories.
3. Select a category.

Search Applications

Tap the Search icon at the top right to search for applications.

View Application Downloads


Tap the Downloads icon at the top right to view your downloads.

View Application Details

Tap an application to view the Application Details screen.

Figure 38 shows the Application Details screen.

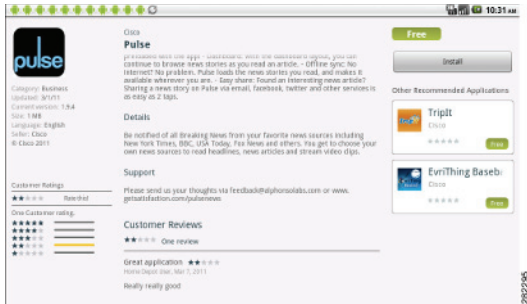 Figure 38 Application Details Screen



Download an Application

1. Tap an application to view the Application Details screen.
2. Tap the Install button.

Remove an Application

1. Tap an application to view the Application Details screen.
2. Tap the Uninstall button.

Exit

To exit the Cisco AppHQ application, press the **Home** key . Exiting the application does not sign you out.

Android Market

If your system administrator has enabled access to the Android Market, additional applications are available from the Market application. You need a Google account to purchase or install applications from the Android Market.

Market Widget

Use the Market widget to access the Android Market from your home screen.



Related Topic

- [Add to Cius Home Screen, page 14](#)



Use the UCM app to install or remove applications that are provisioned for your Cius by your system administrator. Depending on your system settings, you may not be able to remove applications that are provisioned by your system administrator. Contact your system administrator for more information.

Remove an Application

1. Tap the **Applications Menu** icon  on the Home screen.
2. Tap **Settings** .
3. Tap **Applications**.
4. Tap **Manage Applications**.
5. Tap an application in one of the application lists.
6. Tap **Uninstall**.
7. Tap **OK**.

Accessories

HD Media Station

An HD media station extends the capabilities of Cisco Cius. Media stations feature an adjustable foot stand, three USB ports for adding external devices such as a USB keyboard or a mouse, two Gigabit Ethernet ports, an audio jack, and a DisplayPort connection for connecting to an external monitor. Connecting your Cisco Cius to the media station also charges the Cius battery.



Caution

You can adjust the foot stand of the HD Media Station to adjust the viewing angle. If you adjust the viewing angle of the media station, be sure to hold the Cisco Cius securely while doing so. Otherwise the Cisco Cius could fall out and become damaged.



Caution

When connecting cables to the HD media station, route all cables through the middle of the media station foot stand.

Figure 39 shows the front of the HD media station.


Figure 39 HD Media Station, Front View



1	Handset	5	Speaker button
2	Speaker	6	Volume button
3	USB port	7	Mute button
4	Docking ports		

Figure 40 shows the back view of the HD media station.

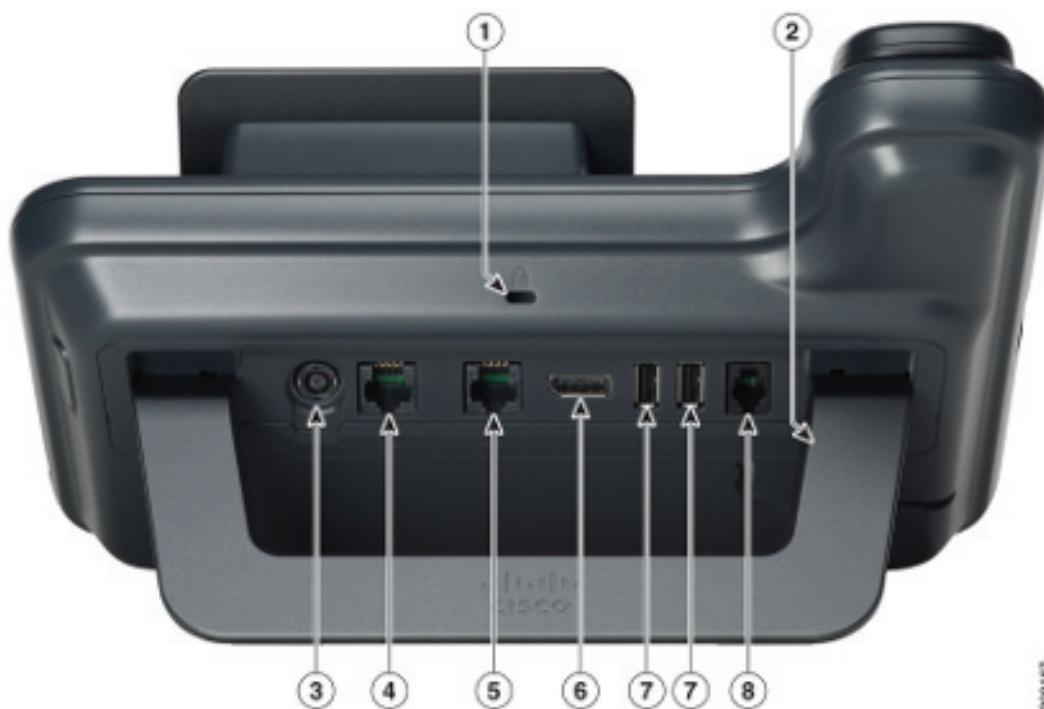 Figure 40 HD Media Station, Back View



1	Antitheft security lock connector (lock optional)	5	Computer port
2	Foot stand	6	Single-mode DisplayPort connection
3	AC power wall plug	7	USB ports
4	Network port	8	Handset connection

Connect Cisco Cius to an HD Media Station

1. Align the docking ports on the Cisco Cius with the ports on the media station.
2. Insert the Cisco Cius.

Power Cisco Cius Through the Power Port

1. Insert the power cable into the HD media station AC power wall plug.
2. Connect your Cius to the media station.

Power Cisco Cius Through PoE+

1. Insert one end of an Ethernet cable into the media station network port.
2. Insert the other end of the Ethernet cable into an Ethernet port on a PoE+ enabled Ethernet switch.
3. Connect your Cius to the media station.

Launch the Phone Application

Lift the handset or press the **Speaker** button to launch the Phone application.

Related Topic

- [Phone, page 24](#)

Answer a Call

Lift the handset or press the **Speaker** button to answer a call.

Docking and Undocking During a Call

The Phone application preserves your calls when you dock or undock your Cius with an HD media station. There is a slight delay before the call audio is reestablished.

Start a Speakerphone Call

1. Press the **Speaker** button.
2. Enter the phone number or select a contact.
3. Tap **Call**.

Switch to a Speakerphone Call

With the handset off the hook, press the **Speaker** button to switch to a speakerphone call. To switch back to a handset call, place the handset on hook and lift the handset again.

End a Speakerphone Call

Press the **Speaker** button during a speakerphone call to end that call.

Adjust the Ringer Volume

Press the **Volume** button to adjust the phone ringer volume up or down.

USB Accessories

Each available Cisco Cius HD media station features three USB ports: two on the back, and one on the right side.

The USB ports allow you to use any of the following accessories:


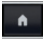

- USB keyboard
- USB mouse
- USB memory stick
- USB-powered hub
- USB serial console cable

USB Keyboard and Mouse





Not every USB keyboard or mouse works with Cisco Cius. However, most USB keyboards that are human interface device (HID) compliant will work correctly. Since all USB hubs need to be powered, keyboards that include one or more hubs are not allowed on Cius, because they contain a non-powered hub.

Cisco Cius Key Shortcuts









The following keyboard shortcuts are available for Cius:

-  Menu: **Shift-Ctrl-[**
-  Home: **Shift-Ctrl-]**
- Press and hold **Shift-Ctrl-]** to view a list of open and recently used applications.
-  Back: **Shift-Ctrl-**

Typing Shortcuts



- **Alt + Spacebar:** Insert a special character
- **Menu  + X:** Cut text (cuts all text on-screen unless specific characters are highlighted)
- **Menu  + C:** Copy text to clipboard (copies all text on-screen unless specific characters are highlighted)
- **Menu  + V:** Paste text from clipboard
- **Menu  + A:** Select all text in the current field

Browser Shortcuts

- **Spacebar:** Page down
- **Shift + Spacebar:** Page up
- **Menu  + I:** Zoom in
- **Menu  + O:** Zoom out
- **Menu  + J:** Go back a page
- **Menu  + K:** Go forward a page
- **Menu  + R:** Refresh current page
- **Menu  + F:** Find on page
- **Menu  + B:** Open bookmarks
- **Menu  + S:** Open social network sharing menu

Gmail Shortcuts

- **F:** Forward current message (works only while viewing a message)
- **R:** Reply to current message (works only while viewing a message)
- **A:** Reply-all to current message (works only while viewing a message)
- **Y:** Archive message

- **Menu**  + **U**: Refresh inbox
- **Menu**  + **C**: Compose new email message
- **Enter**: Open an email message

Mouse Actions

The following mouse actions are available for Cisco Cius:

- **Click**: tap
- **Right-click**: display the **Menu** , **Home**  and **Back**  keys on screen

Note that right-clicking in a desktop virtualization application may display a context-sensitive menu, rather than display the Menu, Home and Back keys.

- **Scroll**: Use the mouse scroll wheel to move the highlight or focus to a different item on the screen

VDI Shortcuts

The keyboard shortcuts and mouse actions available in virtual desktop clients differ from those for other Cius applications.

Keyboard Shortcuts

Control key meta-state (combination keys), Num Lock, and Caps Lock state are not currently supported by many of the virtual desktop clients on Android. For a description of what shortcuts are supported, please see the product description for each application.

Mouse Shortcuts

The Cius platform maps the mouse events into touch screen input and the VDI clients usually map the touch screen input to customary Android actions, resulting in the following behavior:

- **Click**: tap
- **Click and drag**: Scroll up and down, or left and right, on the remote desktop
- **Click, hold and drag**: Move windows, scroll bar handles and other objects on the remote desktop

USB Memory Stick

Insert a USB memory stick into a USB port to expand the available disk space of the Cisco Cius. The USB memory stick is mounted at `/sdcard/external/usb-sda1`.

USB-Powered Hub

Use a USB-powered hub to expand the number of available USB ports. USB-powered hubs allow you to connect up to five USB accessories to each USB port.

USB Console Cable

A USB console cable is typically used only for debugging by a system administrator.

For more information about how to use a USB console cable, contact your system administrator.

Micro-USB Port

Use the micro-USB port on top of Cisco Cius for USB storage or for Android Debug Bridge (ADB) access. You cannot attach other accessories to the micro-USB port.

Turn On USB Storage

1. Use a micro-USB cable to connect your Cius to a computer.
2. Drag down the notifications bar.
3. Tap **USB Connected**.
4. Tap the **Turn On USB Storage** button.
5. Tap **OK**.

Turn Off USB Storage



1. Drag down the notifications bar.
2. Tap **Turn Off USB Storage**.
3. Tap the **Turn Off USB Storage** button.

MicroSD Card Slot



Insert a microSD card into the microSD card slot to expand the available disk space of the Cisco Cius.

Mount a MicroSD Card

1. Insert a microSD card into the microSD card slot.

2. Tap the **Applications Menu** icon  on the home screen.
3. Tap **Settings** .
4. Tap **SD Card & Phone Storage**.
5. Tap **Mount SD Card**. The microSD card is mounted at /sdcard/external/SDCARD.

Format a MicroSD Card

1. Insert a microSD card into the microSD card slot.
2. Tap the **Applications Menu** icon  on the home screen.
3. Tap **Settings** .
4. Tap **SD Card & Phone Storage**.
5. Tap **Format SD Card**.

Connecting to a Monitor

Connect Cisco Cius to a monitor by inserting one end of an HDMI cable into the micro-HDMI port and the other end into a monitor HDMI port.

Connect Cisco Cius to a monitor through an HD media station by inserting one end of a DisplayPort cable into the DisplayPort connection and the other end into a monitor DisplayPort connection.




Caution

When connecting cables to the HD media station, route all cables through the middle of the media station foot stand. When connecting a DisplayPort cable to the media station, do not use the lowest two levels of the foot stand because the cable connector may come into contact with the desk. This can cause damage to the cable connector and can result in an unbalanced media station.

Your Cius screen is displayed on an external monitor at a resolution of 1024x600 pixels.

If Cisco Cius enters sleep mode, the monitor enters sleep mode, too.

Edit HDMI Settings

1. Connect your Cisco Cius to a monitor.
2. Tap the **Applications Menu** icon  on the home screen.
3. Tap **HDMI**.
4. Edit your HDMI settings.

VDI

Some applications on a remote desktop are designed for a larger screen size. To avoid cutting off part of an application in a virtual desktop client, it is recommended that you set the remote desktop to a larger screen size than 1024x600.

For more information about VDI application settings, please see the product description for each application.

Bluetooth

Cisco Cius supports Bluetooth 2.1+EDR, with headsets that support Hands-Free Profile (HFP) for voice communications and Advanced Audio Distribution Profile (A2DP) for streaming audio. Cisco Cius also supports Object Push Profile (OPP) for generic file exchange over Bluetooth.

Bluetooth HFP support offers the following features:


- Ring
- Answer a Call
- End a Call
- Volume Control
- Last Number Redial
- Call Waiting
- Divert/Reject
- Three-Way Calling
 - Hold and Accept
 - Release and Accept
- Speed Dial


Bluetooth A2DP support allows for the uni-directional transfer of an audio stream to other Bluetooth-enabled devices, such as a stereo headset or a car audio system.

You can use a Bluetooth device up to 30 feet (10 meters) away from your Cisco Cius. However, for best performance, it is recommended that you use Bluetooth devices within 10 feet (3 meters) of the Cisco Cius.



Enabling Bluetooth may degrade your Cius wireless connection. For improved wireless network performance, disable Bluetooth when it is not in use, or use the 5GHz band for your wireless network connection.

Enable Bluetooth

1. Tap the **Applications Menu** icon  on the home screen.

2. Tap **Settings**  .
3. Tap **Wireless & Networks**.
4. Tap **Bluetooth**.

Edit Bluetooth Settings

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings**  .
3. Tap **Wireless & Networks**.
4. Tap **Bluetooth Settings**.

Scan for Bluetooth Devices

Tap **Scan for Devices** if devices do not appear in the Bluetooth devices submenu.

Pair a Bluetooth Device

1. Tap **Bluetooth** in the Bluetooth Settings menu.
2. Select the device to pair from the Bluetooth devices submenu.
3. Cisco Cius attempts to connect with the paired device with the PIN code 0000.
If pairing is unsuccessful, Cisco Cius prompts you for a PIN code.
4. When the device connects, the status under the device name in the Bluetooth devices submenu shows that the device is connected.


Unpair a Bluetooth Device


1. Tap and hold a device in the Bluetooth devices submenu.
2. Tap **Unpair**.

Make the Cius Discoverable

Tap **Discoverable**. Your Cius will be discoverable for 120 seconds.

Set Your Bluetooth Device Name

1. Tap the **Applications Menu** icon  on the home screen.

2. Tap **Settings**  .
3. Tap **Wireless & Networks**.
4. Tap **Bluetooth Settings**.
5. Tap **Bluetooth**.
6. Tap **Device Name**.
7. Enter a device name and tap **OK**.

Sharing Files

1. Pair your Cius with another Bluetooth enabled device.
2. Select a file to share. For example, you can share a photo from the Gallery application, or a contact from the Contact application.
3. Select **Bluetooth** from the Share menu.

Disconnect a Bluetooth Device

1. Tap and hold device in the Bluetooth devices submenu.
2. Tap **Disconnect**.

Disconnect and Unpair a Bluetooth Device

1. Tap and hold a device in the Bluetooth devices submenu.
2. Tap **Disconnect and Unpair**.

3.5 mm Headsets

You can plug a 3.5 mm headset into the headset port at the bottom of your Cisco Cius.

You can plug a 3.5 mm headset into the headset port on the HD media station, and use the headset for phone calls. The headset port is the top port on the left side of the HD media station.

You can plug a 3.5 mm headset into the lineout port on the HD media station, and use the headset to listen to media. The lineout port is the bottom port on the left side of the HD media station.

Note that the headset and lineout ports on the HD media station are two distinct ports. Cisco Cius does not support two-prong headsets.

Product Safety, Security, Accessibility, and Related Information

Safety and Performance Information

Power outages and other devices can affect your Cisco Cius.

Power Outage

Your access to emergency services through the phone application is dependent on the phone being connected to a network. If there is an interruption in the power supply for your router, Service and Emergency Calling Service dialing will not function until power is restored. In the case of a power failure or disruption, you may need to reset or reconfigure equipment before using the Service or Emergency Calling Service dialing.

Emergency Response Notification

The text of the Emergency Response Notification displays the first time that you open the Phone application on your Cius and also when you select an existing VPN network or add a new VPN network.

- [Emergency Response Notification for Phone Application, page 113](#)
- [Emergency Response Notification for VPN Networks, page 114](#)

Emergency Response Notification for Phone Application

When you open the Phone application on your Cisco Cius for the first time, the Emergency Response Notification dialog alerts you that your ability to dial emergency numbers may be hindered because you are using a VoIP network.

This dialog requires that you check the “I acknowledge this information” check box and click **OK** in order to dismiss the dialog. After the initial acceptance, the dialog will reappear only if you perform a factory reset of your device or the system administrator performs a remote wipe of your device.

The text of the Emergency Response Notification dialog for the Phone application follows here:

Dialing emergency numbers (for example, 911 or 112) may not work on an enterprise-class IP telephony network like that used for Cisco Cius. Correct location information may not be passed on to emergency responders. Your network administrator can advise you about the capabilities of your network, including the dialing sequence that you will need to use when on or off the enterprise premises.

Emergency Response Notification for VPN Networks

Whenever you choose to connect to an existing VPN network or choose the option to Add a New VPN Connection, a dialog displays to warn about the potential disruption of emergency response numbers. You can proceed to the VPN connection step by pressing **OK**. You can dismiss the dialog and cancel the connection by pressing the **Back** button on your device.

The text of the Emergency Response Notification dialog for VPN networks follows here:

CAUTION — Emergency response numbers (for example, 911 or 112) may not work on software telephony clients. Your exact location and the appropriate emergency response agency may not be easily identified. Some countries restrict use of VoIP software via VPN over the Internet, including: UAE, Saudi Arabia, Pakistan, Lebanon, Jordan, Egypt, Oman, Qatar, Yemen, Algeria, and Kuwait.

External Devices

Cisco recommends using good-quality external devices (such as headsets) that are shielded against unwanted radio frequency (RF) and audio frequency (AF) signals.

Depending on the quality of these devices and their proximity to other devices such as mobile phones or two-way radios, some audio noise may still occur. In these cases, Cisco recommends that you take one or more of these actions:

- Move the external device away from the source of the RF or AF signals.
- Route the external device cables away from the source of the RF or AF signals.
- Use shielded cables for the external device, or use cables with a better shield and connector.
- Shorten the length of the external device cable.
- Apply ferrites or other such devices on the cables for the external device.

Cisco cannot guarantee the performance of the system because Cisco has no control over the quality of external devices, cables, and connectors. The system will perform adequately when suitable devices are attached using good-quality cables and connectors.



Caution

In European Union countries, use only external speakers, microphones, and headsets that are fully compliant with the EMC Directive [89/336/EC].

Headset Safety

When using a headset, set the Cius volume to a safe level. Permanent hearing loss or damage may occur if headsets are used at high volume.

Do not use a headset at high volume to block out other noise. Lower the volume if you cannot hear people speaking near you.

If you experience ringing in your ears, muffled voices, or other signs of hearing loss or damage, stop using your headset and have your hearing checked.

Avoid using a headset while operating a vehicle. Using a headset while operating a vehicle can be distracting and dangerous, and is illegal in some areas. Likewise, avoid using a headset while performing any activity that requires your undivided attention.

Bluetooth Wireless Headset Performance

Cisco Cius supports Bluetooth Class 2 technology when the headsets support Bluetooth. Bluetooth enables low-bandwidth wireless connections within a range of 30 feet (10 meters). The best performance is in the 3- to 6-foot (1- to 2-meter) range. You can connect up to five headsets, but only the last one connected is used as the default.

Because there can be potential interference issues, it is recommended that you move 802.11b/g devices, Bluetooth devices, microwave ovens, and large metal objects away from the wireless headset.

For a Bluetooth wireless headset to work, it does not need to be within direct line-of-sight of the phone. Some barriers, such as walls or doors, and interference from other electronic devices can affect the Bluetooth connection.

FCC Compliance Statements

The Federal Communications Commission requires compliance statements for the following:

- FCC Part 15.21
- FCC Receivers and Class B Digital

FCC Part 15.21 Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Receivers and Class B Digital Statement

This product has been tested and complies with the specifications for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which is found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment or devices
- Connect the equipment to an outlet other than the receiver's
- Consult a dealer or an experienced radio/TV technician for assistance

CE Marking

For Cisco Cius, the following CE mark and class-2 identifier are affixed to the equipment and packaging:



EU Authorized Representative:
Edgard Vangeel
Cisco Systems Belgium
De Kleetlaan 6A
B 1831 Diegem
Belgium

330263

Cryptographic Information



NOTICE

This product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer, and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute, or use encryption. Importers, exporters, distributors, and users are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return this product immediately.

A summary of U.S. laws governing Cisco cryptographic products may be found at http://www.cisco.com/web/about/doing_business/legal/global_export_trade/general_export_contract_compliance.html.

If you require further assistance concerning the exporting of these products, please contact us by sending email to export@cisco.com.



Data Backup

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Privacy**.
4. Tap **Back Up My Data**.



Accessibility Features

Cisco Cius provides accessibility features for the vision impaired, the blind, and the hearing and mobility impaired.

Accessibility Settings

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Accessibility**.



Install the Screen Reader

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Accessibility**.
4. Tap **OK** when prompted to install the screen reader. Note that this requires an Android Market account.

Related Topic



- [Android Market, page 98](#)

Enable Haptic Feedback



1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .

3. Tap **Sound**.
4. Tap **Haptic Feedback**.

Screen Brightness

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Display**.
4. Tap **Brightness**.
5. Slide the bar left to lower the brightness or right to increase the brightness.
6. Tap **OK**.

Text-to-Speech

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **Voice Input & Output**.
4. Tap **Text-to-Speech Settings**.
5. Tap **Install Voice Data**.
6. Install the speech synthesis application. Note that this requires an Android Market account.

Related Topic

- [Android Market, page 98](#)

Zoom In or Out

Many applications allow you to zoom in or out.

Zoom In

1. Put two fingers on the Cisco Cius screen.
2. Move your fingers away from each other, in any direction.

Zoom Out

1. Put two fingers on the Cisco Cius screen.
2. Move your fingers toward each other.

Additional Information

- You can access the Cisco website at this URL:
<http://www.cisco.com/>
- Cisco Cius quick start guides and end-user guides:
http://www.cisco.com/en/US/products/ps11156/tsd_products_support_series_home.html
- Licensing information:
http://cisco.com/en/US/products/ps11156/products_licensing_information_listing.html
- Cisco international websites:
Access international Cisco websites from www.cisco.com by clicking the **Worldwide** link at the top of the web page.
- Cisco and the Environment:
<http://www.cisco.com/go/ptrdocs>
- Regulatory Compliance and Safety Information (RCSI) for Cisco Cius:
<http://www.cisco.com/go/rcsi-cius>

FAQs and Troubleshooting

This chapter provides answers to frequently asked questions and tips for troubleshooting your Cisco Cius.

Frequently Asked Questions

Q. My Cius is plugged in to charge, but it won't turn on. What do I do?

A. If the battery was completely discharged, you may have to plug in your Cius and wait 5 or 10 minutes before you can turn it on.

Q. Why can't I see all of my applications in the Applications menu?


A. The Applications menu can display only 45 applications. Try scrolling up or down to see more applications. If you still don't see your application, try using the Search application to search for it.

Q. I have entered my credentials for an application and it won't sign me in. Why?

A. Some applications won't tell you if you have entered your password incorrectly. Try reentering your credentials. Check the Show Password option if it is available, so that you can see your password as you are typing it.



Q. I downloaded a file. Where did it go?

A. To see your downloaded files, in the Browser application:

1. Press the **Menu** key .
2. Tap **More**.
3. Tap **Downloads**.

Q. How do I perform a factory reset?



A. To perform a factory reset:

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .

3. Tap **Privacy**.
4. Tap **Factory Data Reset**.
5. Tap **Reset Phone**.

Q. How do I report a problem?

A. Use the problem report tool:

1. Tap the **Applications Menu** icon  on the home screen.
2. Tap **Settings** .
3. Tap **About Cius**.
4. Tap **Cius Problem Report Tool**.
5. Select the date and time that the problem occurred, and which applications exhibit the problem.
6. Tap **Problem Description** and enter a description of the problem.
7. Tap **Customer Support Email Address** and enter a customer support email address. If you do not have a customer support email address, contact your system administrator.
8. Tap **Create Email Report**.

Troubleshooting Tips

Problem: The phone is not registered.

The Phone application or the Notifications bar shows that the phone is not registered.

Possible Cause

Your Cisco Cius is not connected to a network.

Your Cisco Cius is not set up to connect to a TFTP server.

Solution

1. Make sure that you are connected to a network.
2. Contact your system administrator to make sure that the TFTP server is set up properly.

Related Topics

- [Notifications Bar, page 13](#)
- [Phone, page 24](#)
- [Wireless & Networks, page 19](#)

Problem: The chat application will not sign in.

The chat application will not automatically sign in to your account.

Possible Cause

The connection to the Cisco Unified Presence or WebEx Connect server is not available.

Solution

Check to make sure that you are connected to a network.

Related Topic

- [Chat, page 56](#)

Problem: The Presence service is unavailable.

You are not receiving status notifications, and availability is not displayed in applications that support the Presence service.

Possible Cause

The Chat application is not running.

Solution

Launch the Chat application and sign in.

Problem: Meetings do not appear in the WebEx application.

Some of your meetings do not appear in the WebEx application.

Possible Cause

If a WebEx meeting invitation was forwarded to you, rather than sent to you directly, it will appear in your Calendar application, but not in your WebEx application.

Solution

Ask the meeting host to edit the meeting and add you as a participant.

Possible Cause

You have not registered an account with the WebEx site where the meeting is hosted, or you have not signed in to the Cisco WebEx Meetings application with that account.

Solution

Register an account with the WebEx site where the meeting is hosted, or sign in to the Cisco WebEx Meetings application with that account.

Related Topics

- [Calendar, page 65](#)
- [Cisco WebEx Meetings, page 72](#)

Problem: Cannot connect to a wireless network.

You cannot connect your Cisco Cius to a wireless network.

Possible Cause

Your account credentials are incorrect.

Solution

Reenter your account credentials.

Related Topic

[Wireless & Networks, page 19](#)

Warranty

Cisco 90-Day Limited Hardware Warranty Terms

Special terms apply to your hardware warranty and various services that you can use during the warranty period. Your formal Warranty Statement, including the warranties and license agreements that apply to Cisco software, is available on Cisco.com at the following URL:

http://www.cisco.com/en/US/docs/general/warranty/English/901DEN__.html

Index

A

access list, create [45](#)
Accessibility [117](#)
add
 PAB entry [44](#)
airplane mode [8](#)
Android Market [98](#)
applications
 Android Market [98](#)
 Browser [77](#)
 Calendar [65](#)
 Camera [82](#)
 Chat [56](#)
 Cisco AppHQ [96](#)
 Cisco WebEx Meetings [72](#)
 Clock [91](#)
 Contacts [46](#)
 Desktop Virtualization [93](#)
 Email [51](#)
 Gallery [85](#)
 Google Mobile Services [94](#)
 Gmail [94](#)
 Latitude [95](#)
 Maps [95](#)
 Navigation [95](#)
 News & Weather [95](#)
 Places [95](#)

 Talk [96](#)
 YouTube [96](#)
Google Search [76](#)
Music [88](#)
Phone [24](#)
Quickoffice [81](#)
UCM app [99](#)
Unified Inbox [69](#)
Applications menu [14](#)
audible message indicator. *See* message indicators
Availability [61](#)

B

Back key [9](#)
Barge [30](#)
battery [9](#)
Bluetooth [110](#)
browser password, change [43](#)

C

calendar [65](#)
call control bar [27](#)
Call Forward All [31](#)
calling features
 Barge [30](#)

- Call Forward All **31**
- Conference **31**
- DND
- Hold **34**
- Line Status **34**
- Message Indicator **35**
- Privacy **36**
- Shared Lines **38**
- Speed Dial **38**
- Transfer **38**
- camera **82**
 - pictures **83**
 - video **84**
- CE marking **116**
- change
 - browser password **43**
 - language
 - User Options web pages **43**
 - locale
 - User Options web pages **43**
 - PIN **43**
- chat **56**
- Cisco AppHQ **96**
- Cisco Mobile Connect. *See* Mobile Connect
- Cisco WebEx Meetings **72**
- clock **91**
- compliance **115**
- Conference
 - using **31**
- contacts **46**
- create
 - access list for Mobile Connect **45**
- cryptographic information **116**

D

- data backup **117**
- desktop virtualization **93**
- DND
 - customize **41**
 - turn on and off **33**
- Do Not Disturb. *See* DND

E

- email **51**
- emergency response **113**
- external devices
 - caution **114**
 - information **114**

G

- gallery **85**
- Google Mobile Services **94**

H

- haptic feedback **117**
- hardware **2**
- HDMI **109**
- headset **112**
 - safety **115**
- Hold
 - and Resume **34**
 - to answer a new call **34**
- home screen **13**
 - customize **15**

work spaces **16**

K

keyboard

on-screen **16**

USB **105**

L

language

change for user options web pages **43**

line

settings

DND **41**

voice message indicator **42**

locale

change for user options web pages **43**

Lock screen **10**

M

media station **101**

Menu key **9**

message indicators

audible, change **42**

microSD **108**

Mobile Connect

create access list **45**

monitor **109**

multitasking **9**

music player **88**

N

notifications bar **13**

P

PAB

add **44**

search **44**

Password **11**

resetting **11**

password. *See* browser password

personal address book. *See* PAB

personal identification number. *See* PIN

phone **24**

voicemail **39**

pictures **83**

PIN **11**

resetting **11**

PIN, change **43**

power **7**

power outage **113**

Q

quick contact badge **48**

quick launch bar **14**

Quickoffice **81**

S

safety and performance

external devices **114**

power outage **113**

- screen brightness [118](#)
- screen reader [117](#)
- screen timeout [11](#)
- search [76](#)
 - PAB [44](#)
- set up
 - speed-dial buttons [43](#)
 - speed-dial codes [43](#)
- settings, user options [43](#)
- Setup wizard [10](#)
- shared lines
 - barge [30](#)
 - description [38](#)
- silent mode [8](#)
- Speed Dial
 - buttons [43](#)
 - description [38](#)
 - set up [43](#)
 - codes
 - description [38](#)
 - set up [43](#)

T

- text-to-speech [118](#)
- Transfer
 - description [38](#)
 - using [38](#)
- troubleshooting [122](#)
- turn on and off
 - DND [33](#)

U

- unified inbox [69](#)
- USB accessories [105](#)
- user options
 - device
 - speed dial [43](#)
 - mobility [44](#)
 - create access list [45](#)
 - PAB [44](#)
 - add entry [44](#)
 - search for entry [44](#)
 - user settings [43](#)
 - change browser password [43](#)
 - change PIN [43](#)
 - change user options web pages language [43](#)
- user settings. *See* user options

V

- videos [84](#)
- VPN [22](#)

W

- warranty information [125](#)
- web browser [77](#)
- web proxy [20](#)
- wireless network [19](#)



Americas Headquarters
Cisco Systems, Inc.
San Jose, CA

Asia Pacific Headquarters
Cisco Systems (USA) Pte. Ltd.
Singapore

Europe Headquarters
Cisco Systems International BV
Amsterdam, The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the
Cisco Website at www.cisco.com/go/offices.

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

© 2011 Cisco Systems, Inc. All rights reserved.



® The Bluetooth word mark and logo are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Cisco Systems, Inc., is under license.