



MOTOROLA **MILESTONE™ 2**
with MOTOBLUR™

MOTOROLA. **GET READY.**

Congratulations

MOTOROLA MILESTONE™2 with MOTOBLUR™

MOTOROLA MILESTONE™2 with MOTOBLUR™ gives you a high quality imaging, video and multimedia experience. Your new phone also syncs feeds, messages, emails, photos and much more—from sources like Facebook™, Twitter, MySpace, Gmail™ and your email at work—and serves them all up just the way you want them.

- Stream and store multimedia on any DLNA™ Certified device in your home network. No memory cards to swap, no cables to attach.
- Syncs your favourite social networking sites—all your messages, all the latest updates—so you can stay connected, right from your home screen.

Caution: Before assembling, charging or using your phone for the first time, please read the important legal and safety information packaged with your product.

Note: Certain apps and features may not be available in all countries.

More

 
- **Answers:** Touch  > **Help centre.**

You can also flick your home screen left or right to see the Tips & tricks widget.


- **Updates:** Phone updates, PC software, online help and more at motorola.com.
- **MOTOBLUR:** After you create a MOTOBLUR account, open it at www.motorola.com/mymotoblur.
- **Accessories:** Find accessories for your phone at www.motorola.com/products.

Your phone

the important keys & connectors

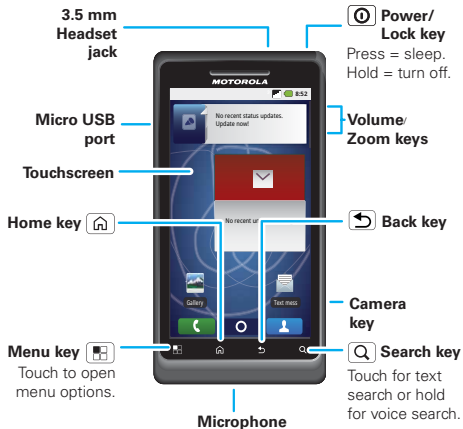

 When you open or turn your phone on, the screen adjusts for you.

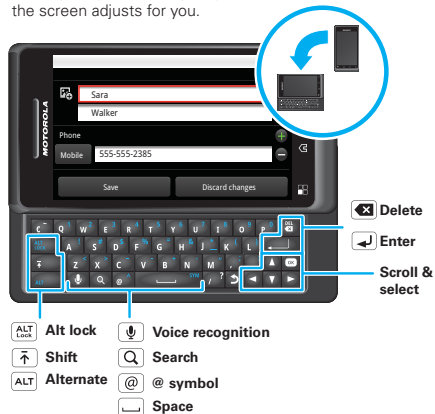

Contents

Let's go	3
Touchscreen & keys	5
Home screen	8
Social networking	11
Calls	13
Contacts	16
Text entry	19
Messaging	22
Web	25
Location	27
YouTube™	31
Apps for all	32
Bluetooth™ wireless	34
Wi-Fi™	35
Digital living	37
Tips & tricks	39
Personalise	40
Photos & videos	42
Music	46
Memory card & file transfer	51
Tools	53
Management	54
Security	55
Troubleshooting	58
Safety, regulatory & legal	55

Let's go

let's get you up and running

Assemble & charge

1 SIM in



 
2 microSD in (may already be inserted)



3 Battery in



4 Cover on

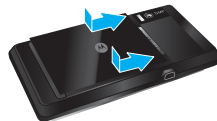

5 Charge up




Caution: Please read “Battery use & safety” on page 59.

Tip: To save battery life, see “Battery tips” on page 39.

 
Set up & go

Create or log into a MOTOBLUR account to get your contacts, email, messages and status information, for all accounts, all in one place, all the time. There’s more in “Your MOTOBLUR account” on page 11.


Registration is secure and should only take a few minutes:

- 1 Press and hold Power/Lock  on top of your phone to turn it on.
- 2 Select a language.
- 3 Register or log in.

If you have not created a MOTOBLUR account, you’ll need to register: enter your name, your current email address (where MOTOBLUR can send account information) and a new MOTOBLUR account password.

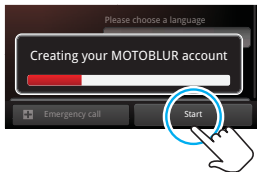

4 Add your accounts to MOTOBLUR.

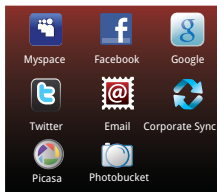 

To add an account, touch it. Then, enter the user name or email and password that you set up on that account.

Tip: For more, or to add accounts anytime, go to “Add accounts” on page 11.

Note: This phone supports data-intensive apps and services. It is strongly recommended that you purchase a data plan that meets your needs. Contact your service provider for details.

Wi-Fi™ connect

If you want to use a Wi-Fi network for even faster Internet access, touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi settings**.

Cool content & more

Browse and download thousands of the coolest apps on the planet from Android Market™, see “Apps for all” on page 32.

Your phone comes with a microSD memory card installed—you can fill it with photos, videos and music from your computer using “Memory card” on page 51.

Touchscreen & keys

a few essentials

Touch tips


Here are some tips on how to navigate around your phone.

 
Touch

To choose an icon or option, *touch* it.




Touch & hold


To open special options, *touch and hold* an icon or other item. Try it: On the home screen, touch  **Contacts**, then touch and hold a contact to open options.

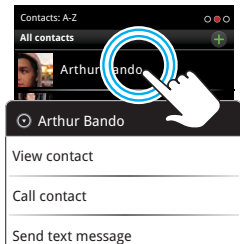

Drag

To scroll through a list or move slowly, *drag* across the touchscreen. Try it: on the home screen, touch  **Contacts**, then drag your **Contacts** list up or down.

 Tip: When you drag or flick a list, a *scroll bar* appears on the right. Drag the scroll bar to move the list to a letter A – Z.

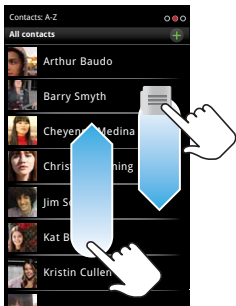

Flick

 
To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

Tip: When you flick a long list, touch the screen to stop it from scrolling.

Pinch-to-zoom

Get a closer look at maps, webpages or photos. To zoom in, *touch* the screen with two fingers and then slide them apart. To zoom out, *drag* your fingers together.

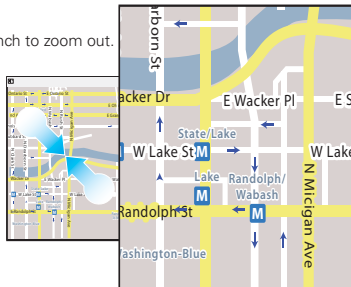

Pinch to zoom out.






Key tips

Menu, home, back & search





Touch Home  to close any menu or app and return to the home screen. On the home screen, touch and hold Home  to show the last few apps you used, then touch an app to open it.

Touch Search  for text search, or touch and hold for voice search.



Touch Menu  to open menu options, or touch Back  to go back.

Sleep & wake up


To save your battery, prevent accidental touches or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing Power/Lock .

To wake up the touchscreen, just press Power/Lock , or open the phone.

To change how long your phone waits before the screen goes to sleep automatically, touch Menu  > **Settings** > **Display** > **Screen timeout**.

Tip: To make the screen lock when it goes to sleep, use “Screen lock” on page 56. To unlock the screen, press Power/Lock  or open the phone. Then drag  to the right.

Power/Lock key menu

Press and hold Power/Lock  to open the Power/Lock key menu, where you can turn off the phone (**Power off**), or turn **Flight mode** or **Silent mode** on or off.



Adjust volume


Press the volume keys to change the ring volume (on the home screen) or the earpiece volume (during a call).

When playing music or video files, press the volume keys to adjust media volume.



Rotate the screen

When you rotate the phone, the touchscreen can rotate to stay right-side up:

Find it: Menu  > **Settings** > **Display** > **Auto-rotate screen**

Quick tips


If you're not sure what to do next, try one of these:

To...


Get the details—Open a text message, see details for a contact or open items in other lists.


Touch the message, contact or item.

To...

See screen menu—Open a menu for the current screen. Touch Menu .

See item options—Open an options menu (if available) for an item on the screen. Touch & hold the item.


Start again—Go back to the home screen. Touch Home .

 
Wake up your phone—Turn on a sleeping phone. Press Power/Lock  or open the touchscreen.

Home screen

quick access to the things you need most

Quick start: Home screen

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or touch Home  from a menu. It's basically like this:

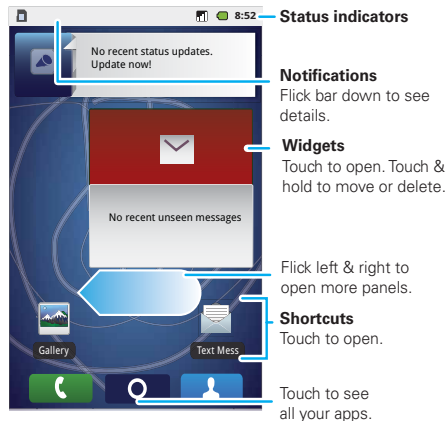


Note: Your home screen might look a little different.

You can flick the home screen left and right to see more panels, seven in all. You'll have plenty of room for adding shortcuts, widgets and more.

Widgets

 A *widget* is small app on the home screen that typically displays information such as weather, news and social networking updates. You can add a widget, such as a clock, music player or a calendar that shows upcoming appointments. To open a widget, touch it.


To add a widget, touch an empty spot on the home screen. (You can also touch Menu  > **Add** >

Motorola widgets or **Downloaded widgets**.) If your home screen is full, you won't see the Add option. You'll need to move or delete widgets or shortcuts to make room.

You can change the size of some widgets. Just touch and hold the widget. When the widget's outline turns white, drag one of the corners to make it the size you want.


Note: If you install apps from Android Market that have widgets, touch and hold the home screen, then select a widget to add to the home screen.

Shortcuts

To add shortcuts to the home screen, open the app menu, then touch and hold the shortcut you want. It will be added to the home screen. Or, touch Menu  > **Add** > **Shortcuts**.

App menu



Quick start: App menu

The app menu shows you all of your applications. To open it from the home screen, touch .

Flick up and down to see all of your apps. Any new apps that you download (see page "Android Market™" on page 32) are added to the app menu.



To close the app menu, touch Home  or Back .

 
Recent apps

Touch and hold Home  to see the last few apps you used, then touch the app you want. Touch Home  to return to the home screen.



Search

 
To search, touch Search  on the front of the phone, or press Search  on the keyboard.

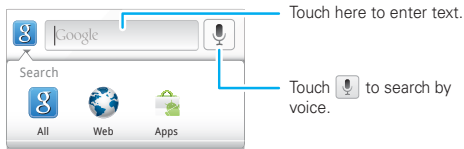







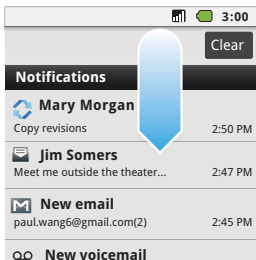









Phone status & notifications

The status bar at the top of the screen contains icons that tell you about messages and phone status. To view your notifications, touch the status bar and drag it down.

Icons on the right tell you about the phone's status:



	Bluetooth™ active		network (full signal)
	GPS active		network (roaming)
	Wi-Fi™ active		3G (fastest data)
	downloading		flight mode
	vibrate		sync active
	silent		alarm set
	mute call		battery (charging)
	speakerphone active		battery (full charge)

Tip: To see today's date, touch and hold the status bar at the top of the screen.

Social networking

my life, your life

Your MOTOBLUR account

The first time you turned on your phone, you registered for a MOTOBLUR account that manages your messages, contacts and more (“Set up & go” on page 4). You can log into this account from a computer to upload contacts, reset your password, get help or even locate your phone:

www.motorola.com/mymotoblur

What is MOTOBLUR?

MOTOROLA **MILESTONE 2** with MOTOBLUR is a phone with social skills.

Now, the only service that can sync all your friends, emails, messages and Facebook™, MySpace, Twitter feeds and happenings with continuous updates and back-ups, along with the ability to remotely locate and wipe your phone if it is ever lost or stolen, just got better.

Introducing the latest MOTOBLUR. MOTOBLUR offers new features that give you more control, including customisable filters that let you view your messages and happenings any way you like, the ability to move and resize preloaded widgets and new ways to manage your Battery Life and data consumption.

Update your status

After you add a social networking account, you can update and see your current status in the **Social networking** and **Social status** widgets on your home screen.

To update your status, just touch your **Social networking** or **Social status** widget and enter text. If you have more than one account, you can use the pull-down menu to limit which accounts are updated. If you don't see a **Social networking** or **Social status** widget, flick your home screen left or right to check all panels.

To add a **Social networking** or **Social status** widget:

- 1 Touch and hold an empty spot on your home screen to open the **Add to Home screen** menu.
- 2 Touch **Motorola widgets > Social networking** or **Social status**. The widget appears in the empty spot and will show your status the next time your phone updates from the network.

Add accounts

If you skipped setting up a MOTOBLUR account when you first turned on your phone, you'll need to set up a MOTOBLUR account before you can add other accounts. From your home screen, touch **Set up your Blur account** and follow the steps in “Set up & go” on page 4.

Note: You can add your **Facebook**, **MySpace**, **Twitter** or other accounts to your phone. If you don't have accounts, you can visit their websites to set them up.

Find it: Menu  > **Settings** > **Accounts** > **Add account**

To sign into your account, use the username or email address and password that you set up on that account (the same as on your PC).

When you sign into social networking accounts, you'll see your friends and contacts in your **Contacts** list, and your status and updates can appear in **Social networking** and **Social status** widgets.

Note: Twitter and MySpace messages will always appear as "read" on your phone, but your phone notifies you when you receive a new message. MySpace marks your messages as "read" online.

For email accounts, see "Messaging" on page 22.

Tip: To download updates faster, use "Wi-Fi™" on page 35.


View account updates & features

After you add a social networking account, you can see and respond to friends' updates with the **Social networking** and **Social status** widgets on your home screen. If you don't see one, set one up in "Widgets" on page 9.

When you touch the **Social networking** or **Social status** widgets to open an update, you can touch the social network's icon to open its website.

Note: Your network or other factors might affect the speed of widget updates.

Edit & delete accounts

Find it: Menu  > **Settings** > **Accounts**

Touch and hold an account, then touch **Open account** to edit it or touch **Remove account** to remove it (along with its contacts and messages).

Note: You can't delete your MOTOBLUR or Google™ accounts. They are locked when you set them up.

Restore accounts


You can restore accounts by logging into MOTOBLUR with your MOTOBLUR username and password (see "Set up & go" on page 4).

 
Calls

it's good to talk


Quick start: Calls

Dialling options

From the home screen, touch  **Dialler**.

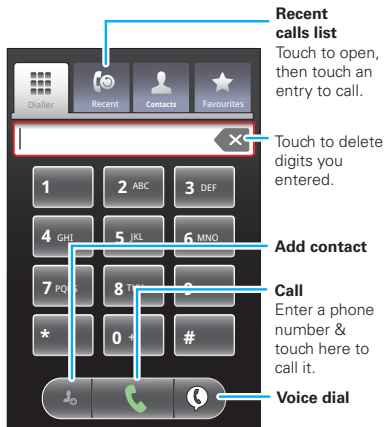


In-call options

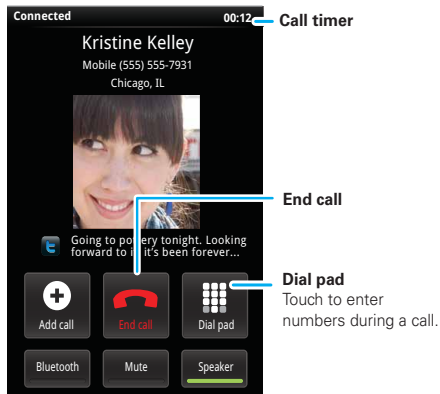 

During a call:

 

- To use a Bluetooth™ device, touch **Bluetooth**. (The device must be turned on and previously paired—see “Connect new devices” on page 34.)
- To mute a call, touch **Mute**.
- To use the speakerphone, touch **Speaker**.


Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Tip: You can touch Home  or Back  to leave the active call display. To reopen it, touch Home  >  **Dialler**.

Make, answer & end calls

To make a call, touch  **Dialler**, enter a number, then touch .

To answer a call, touch  or drag  to the right.


To end a call, touch .

To ignore a call, touch **Ignore** or drag  to the left.


Note: Your phone includes a proximity sensor. When you hold the phone to your ear, the display goes dark to prevent accidental touches. When you move your phone away from your ear, the display lights up again.

Recent calls

Find it:  **Dialler** > **Recent**

- To call a number, touch it.
- To send a text message, create a contact, view a contact or other options, touch and hold an entry.
- To clear the list, touch Menu  > **Clear list**.

Frequent calls


Find it:  **Dialler** > **Recent** or **Favourites**

- To call a number, touch it.
- To send a text message, view a contact or other options, touch and hold an entry.

Conference calls


To start a conference call, call the first number. After the call connects, touch **Add call**. Dial the next number, or select it from contacts or favourites. When the next number answers, touch **Merge calls**.

Your phone number


Find it: Menu  > **Settings** > **About phone** > **Status** > **My phone number**

Call forwarding & waiting

You can forward calls all the time, or only when your phone is busy, unanswered or unreachable (not on the network):

Find it: Menu  > **Settings** > **Call settings** > **Call forwarding**

When you're on a call and a second call comes in, **Call waiting** lets you answer it by tapping **Answer**. You can turn off **Call waiting** to send second calls straight to your voicemail:

Find it: Menu  > **Settings** > **Call settings**
> **Additional settings** > **Call waiting**

Restrict outgoing calls



To restrict your phone so that it can only dial a few numbers:

Find it: Menu  > **Settings** > **Call settings** > **Fixed dialling number**

- To turn fixed dialling on, tap **FDN disabled**.
- To add or delete the allowed numbers, tap **Manage FDN list**.

Emergency calls

Note: Your service provider has programmed one or more emergency phone numbers into your phone (such as 999 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes it may not be possible to place an emergency call due to network, environmental or interference issues.

- 1 Touch  **Dialler** (if your phone is locked, touch **Emergency call**).
- 2 Enter the emergency number.
- 3 Touch  to call the emergency number.

 
Note: Your mobile device can use GPS and AGPS signals to help emergency services find you. See "GPS & AGPS" in your legal and safety information.

Contacts


contacts like you've never had before

Quick start: Contacts

Find it:  **Contacts**

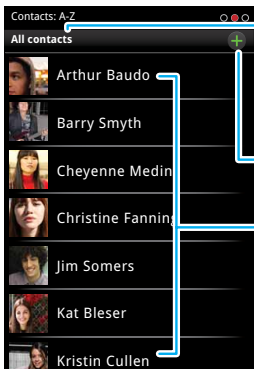

Group

Touch menu  to choose which group to show.

Create contacts

Contacts list

Touch - open.
Touch & hold - call, text & more.
Drag left/right - views (History, A-Z, Status).

Tip: To search the list, open your phone, then type a name. When you flick or drag the list, drag the scroll bar that appears to move the list faster.

Call or email contacts

Find it:  **Contacts**


View contact, Call contact, Send text message, Send email and more, touch and hold the contact.

View & use contacts




With a MOTOROLA **MILESTONE 2** with MOTOBLUR, you'll know what everybody's up to and when. Every time you pick up a call, check a message or look up a friend's contact info, you'll not only see their name and number, but their social network status and smiling face, too.

Find it:  **Contacts**

- To find a contact, type the contact name.

Tip: To search the list, open your phone (or touch and hold Menu  to open a touchscreen keypad), then type a name. When you flick or drag this list, a scroll button appears on the right. Drag the scroll button to move the list faster.


Touch a contact to open its details. While viewing details, you can start a call or message by touching a phone number or other info. Flick the screen left or right to see **Social networking** updates or **History**.

Tip: To change which account provides the pictures for your **Contacts**, from the home screen touch  >  **Accounts** > Menu  > **Picture source**.

- To change which group of contacts is shown (**All**, **Facebook** and so on), touch the filter name at the top.
- To change how you view the list of contacts, flick left or right at the bottom of the screen to select **History** (recently used), **A-Z** (list without status), or **Status** (list with status).

Edit or delete contacts


Find it:  **Contacts**

Touch the contact, then touch Menu  > **Edit** or **Delete**.



Link contacts

You might have two **Contacts** for the same person, such as a friend with two email addresses. To combine these two contacts:

Find it:  **Contacts**


Touch a contact to open it, then touch Menu  > **Link contact** and touch the second entry. Your social networking account remembers this connection.

Create contacts

Find it:  **Contacts** > Menu  > **Add contact**

Slide out the keyboard or touch any entry area to open the touchscreen keyboard.

When you're finished, touch **Save**.



Where are contacts saved? Your phone saves new contacts in its memory, your MOTOBLUR account and other accounts you select: In **Contacts**, touch Menu  > **More > Settings** to choose which accounts get updated. New contacts won't be on your SIM card, but they will download to any new MOTOBLUR phone when you log into your MOTOBLUR account.

Synchronise contacts

When you change one of your **Contacts**, your phone automatically updates your MOTOBLUR account online. Also, your phone updates your **Contacts** and MOTOBLUR account whenever you change a friend in your social networking accounts.

So, you don't have to do anything to synchronise your **Contacts** with your other accounts! MOTOBLUR takes care of it for you.

Groups

Find it:  **Contacts** > Menu  > **Display group**

You can put your **Contacts** into groups that you create (like "friends", "family" or "work"). You can then find contacts faster by showing one group at a time.

Transfer contacts

Get all your contacts, all in one place. Here's a few helpful hints:

- Use MOTOBLUR

When you create a MOTOBLUR account, all your contacts from the online accounts you add (like Gmail, Facebook etc.) are automatically downloaded to your phone.

If you already have a MOTOBLUR account, just sign in on your new Motorola phone and all of your contacts will be reloaded.

To add an email or social networking account to MOTOBLUR, see "Add accounts" on page 11.

- Use Gmail

All your Gmail contacts will be automatically synced to your phone. Various computer applications for mobile phones and email accounts allow you to export your contacts as a ".CSV" file. You can then use Gmail to import the file. For more details, go to www.motorola.com/transfercontacts or log in to your Gmail account on your computer and select "Help".

- Use a SIM


You can transfer contacts from your old phone to your new Motorola phone using your SIM card—see "Transfer contacts using your SIM" on page 18.

- More



There are other methods and tools to help you at www.motorola.com/transfercontacts.

Transfer contacts using your SIM

- 1 On your old phone, copy all the contacts you want to your SIM card.

Tip: For Motorola Android phones, touch  > **Manage SIM card** > **Export contacts** to save your contacts to your SIM card.


- 2 Insert your SIM card in your new phone, see "Assemble & charge" on page 3.

- 3 Import the contacts from your SIM card, touch  **Contacts**, then press Menu  > **Settings** > **Import from SIM card**.

Link contacts

You might have two or more **Contacts** for the same person, maybe a Facebook friend who is also stored on your SIM card, or one friend with two email addresses. To combine these contacts:



Find it:  **Contacts**

Touch a contact to open it, then press Menu  > **Link contact** and touch the second entry.

 
Text entry

keys when you need them


Keyboards

You can slide your phone open to use its keyboard, or you can open a keyboard on your screen by touching a text field or touching and holding Menu . To close the keyboard, touch Back .

Different keyboards open for different text entry screens. For example, this keyboard opens when you create an email message:

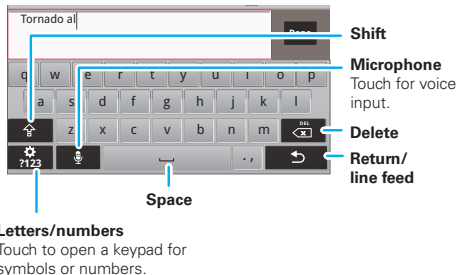

Voice recognition

To use voice recognition, touch , then speak the recipient's name or voice input.

Tip: Speak naturally but clearly. Use the microphone in a similar way to the speakerphone, so there's no need to shout or hold the phone close to your mouth.

Input methods

To select an input method, touch and hold a text entry area on the screen to open the **Edit text** menu. Touch **Input method**, then touch the method you want:

Swype™ text entry


Swype lets you enter words with one continuous motion. To enter a word, just drag your finger over the letters in the word.








Tips:

- To enter apostrophes in common words (like “I’ll”), drag through the **n** as though it was an apostrophe.
- To enter several symbols, touch **SYM**.
- To correct a word, double-tap it. Swype shows a small menu of other word options. Swype might also show a menu if it can’t guess your word.
- If Swype doesn’t know a word, you can still touch the letter keys to enter it. Swype remembers, so next time you can just drag over the letters.


Multi-touch keyboard

Enter text a letter at a time. As you type, your phone suggests words from your dictionary and chosen language. Your phone also automatically enters apostrophes in some words, like “dont”. You can also touch two keys at the same time, such as Shift  with a letter.

Typing tips

To...	
Enter alternative characters	From the number keyboard, touch Alternative  . Touch again to return to numbers.
Enter one capital letter	Touch Shift  .
Enter only capital letters, until you touch Shift 	Touch Shift  twice. Touch again to revert to lowercase.
Cut or Copy selected text	Touch and hold text, then touch Cut or Copy .
Paste cut or copied text	Touch and hold location to paste then touch Paste .
Delete a character (hold to delete more)	Touch Delete  .

To change your text entry settings and see the dictionary of terms you’ve used, from the home

screen, touch Menu  > **Settings > Language & keyboard.**

Text input settings

Find it: Menu  > **Settings > Language & keyboard**

 
- To edit your dictionary, touch **User dictionary.**
- To change the language and the style for your touchscreen keyboard, touch **Select locale.**
- To change input method and settings, touch **Swype** or **Multi-touch keyboard** (see “Input methods” on page 20).

Messaging

sometimes it's best to text or IM or email . . .

Quick start: Messaging

Find it:  >  **Messaging > Universal inbox**

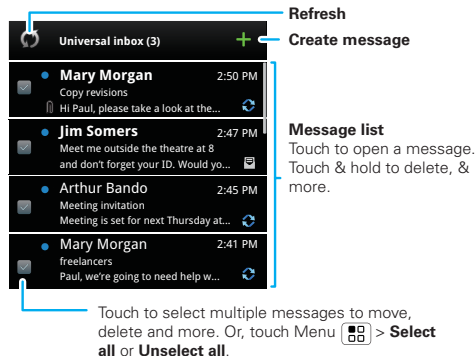

Tip: To see more messages, flick or drag up.

Read & reply to messages

Find it:  >  **Messaging > Universal inbox**

Note: **Universal inbox** shows all of your messages together—text, email and social networking messages. To show only one type of message, touch a message account type instead of **Universal inbox**.

- To open a text message or social networking message and all of its replies, touch it.
- To respond to a message, just open it and enter your response in the text box at the bottom.

To forward a text message, touch and hold a message in the conversation, then touch **Forward message**.

For email, touch  to choose a reply or forward option.




- To open options, touch and hold a message.

Tip: Try the **Messages** widget in “Widgets” on page 9.


Create messages

Find it:  >  **Messaging**
> 



Choose a message type, such as **Text messaging** or **Facebook**. Then enter the recipient and message. In text messages and emails, touch Menu  for options like **Insert...** or **Attach files**.

Send & receive attachments



To send a file in a message, open a new message and touch Menu  > **Insert**.

When you receive a message with an attachment, open the message and touch the file name to download it. Then, touch the name again to open it. Some file formats can be converted to HTML for faster viewing, and your phone will show **Get HTML version**.

While viewing the attachment, touch it to save it, share it and more.

Tip: To send and receive large attachments faster, use a Wi-Fi™ connection, in “Wi-Fi™” on page 35.

Set up messaging




To add email accounts, touch  >  **Accounts**
> **Add account**.

- **Corporate sync** is for Exchange server work email accounts. Enter details from your IT administrator.

Tip: You might need to enter your domain name with your username (like *domain/username*).

- **Email** is for most personal email accounts. For account details, contact the account provider.

Note: While you are using a Wi-Fi network, you cannot access **Yahoo Mail** accounts. You can still use your browser to see these accounts at mail.yahoo.com.



To change your settings, touch  >  **Messaging**
> Menu , then touch:

- **Manage accounts** to add or remove an account.
- **Edit universal inbox** to choose which accounts show messages in the **Universal inbox**.
- **Messaging settings** to set the notification for each account type (along with other preferences, for email).

Tip: For social network accounts, see “Add accounts” on page 11.





Email

The first time you turned on your phone (see page 4), you logged in to your Gmail™ account. You can add any other email account that you set up.

To add other email accounts to your **Messaging** widget and **Universal inbox**, touch  >  **Messaging**
> Menu , then touch **Manage accounts** > **Add account**. On the **Setup accounts** screen, touch **Email** and enter your email account information.

Instant messages

To send and receive instant messages, you can use an instant messaging app or your browser. Your device comes preloaded with Google Talk™. You can also download an instant messaging app from the Android Market™:


- To download and use an instant messaging app, touch  >  **Market** > **Apps**
> **Communication**, then choose an app for your provider. Once you download the app, you'll see it in “App menu” on page 9.
- If you don't see an app for your IM provider, you can use your web browser. Touch Home  >  **Browser**, then enter your provider's website. Once you're there, follow the link to sign in.

Note: Your IM options will depend on your IM provider. To browse instant messaging apps from your computer, go to www.android.com/market.




Google Talk™

Your phone comes with Google Talk™, so you can send and receive instant messages. Google Talk lets you chat with other Google Talk users on phones or on the web.

Find it:  >  **Talk**

Touch Menu  to see a list of your Google Talk friends and send invitations to add new friends. To find out more visit www.google.com/talk.

Vicemail

When you have a new voicemail,  shows at the top of your screen. To hear the voicemail, touch  **Dialer**, then touch .

 
If you need to change your voicemail number, on the home screen touch Menu  > **Settings** > **Call settings** > **Voicemail settings**.

Web

surf the web with your phone

Quick start: Browser

Find it:  >  **Browser**

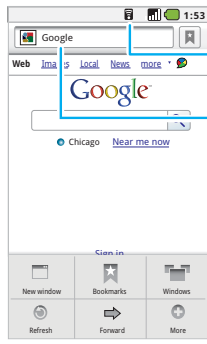


Connection

Over the air:
Mobile network: **G. E.** 
Wi-Fi: 

Web address

Touch to enter a URL.


Touch Menu  for browser options.

Note: If you can't connect, contact your service provider.

Connect

 
Your phone uses the mobile phone network (over the air) or a Wi-Fi connection to automatically access the web.

Note: Your service provider may charge you to surf the web or download data.


To use a wireless network, touch Menu  > **Settings** > **Wireless & networks**. Touch **Wi-Fi** to turn it on and touch **Wi-Fi settings** to search for nearby wireless networks. Touch a network to connect.

Select links

When you touch a link, your phone outlines it and goes to that page. If you touch and hold the link, your phone shows options, like **Open in new window** or **Bookmark link**.




See options

Touch Menu  to see browser options:




options	
New window	Open a new browser window.
Bookmarks	See your bookmarks.
Windows	View the browser windows that are currently open.
Refresh	Reloads the current page.

options	
Back/Forward	Navigate to previously viewed pages.
More	More browser options and settings.

Download apps




Warning: Apps downloaded from unknown sources can include spyware, phishing or viruses that affect your phone, phone performance and personal data. For security, download apps only from trusted sites like  **Market**.



To download apps:

- 1 If you want to download apps from any webpage, press Menu  > **Settings** > **Applications** > **Unknown sources**.
- 2 To launch the browser, touch  >  **Browser**.
- 3 Find the app you want to download and touch the download link.

Note: Downloaded apps are stored in your phone's memory.

Manage your downloads

To view files or apps you've downloaded, touch  >  **Browser** >  > **More** > **Downloads**.

To clear your download history, press Menu  > **Clear list**. To cancel, press Menu  > **Cancel all downloads**.

Location

throw away you maps

Navigation™

Your phone comes with Google Maps Navigation™, a navigation system with voice guidance that shows you the way.

Find it:  >  **Navigation**

Turn-by-turn directions. You'll never wonder where to turn.

3D lane guidance. Preview your route and destination. You can look around to see landmarks and turns.

Connected navigation. Get live traffic reports and alerts. Select alternative routes.

Note: Availability may vary by market.

Navigation linked to contacts. Store an address or location information and you're two touches away from seeing it on a map.

For step-by-step instructions, go to <http://www.google.com/mobile/navigation/>.

 
Google Maps™

Note: Google apps™ are not available with all service providers. For details, ask your service provider.

Quick start: Maps


Where am I? What's around here? Don't worry—let Google Maps™ help you explore your surroundings and find what you're looking for.

Find it:  >  **Maps**

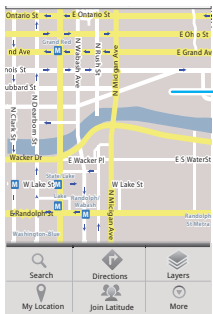

Map view

Drag or flick to scroll.

Touch Menu  for options.

Note: The map image you see may be a little different.



Set your location sources

Set your phone to determine your location using GPS satellite signals (highly accurate, but uses battery power) or using the mobile network (less accurate, but conserves battery power).



To set your location, touch Menu  > **Settings** > **Location & security** > **Use GPS satellites** and/or **Use wireless networks**.

Find your location

Note: Don't forget to set your location sources.

From the main Map screen, touch Menu  > **My Location**. Your location is shown on the map as . The bigger the circle, the less accurate the location.

Find any location





- 1 Touch Menu  > **Search**.
- 2 Enter text in the search box, such as an address, business or city, then touch .

Tip: If it's an address you have visited before, select from the list shown.


- 3 Touch the search box to view all the results, then touch the one you want.

Get directions

Find your way with turn-by-turn directions. You can even have them spoken so you can keep your eye on the road.

- 1 Touch Menu  > **Directions**.
- 2 Enter a starting point address or touch  and select **My current location**, **Contacts** or **Points on map**.
- 3 Enter an end point address or touch  and select **Contacts** or **Points on map**.
- 4 Select your mode of transport (car, public transport or walking), then touch **Go**. Your directions are shown as a list. To view your directions on a map, touch **Show on map**.
- 5 When you have finished, touch Menu  > **More** > **Clear map**.

Select map mode

Touch Menu  > **Layers** to select from **Traffic**, **Satellite**, **Latitude**, or recent searches, viewed positions or directions.

Touch Menu  > **Layers** > **More layers** to select from **My maps**, **Wikipedia** or **Transit lines**.

Touch **Clear map** to clear your selections.

Map view

Shows a map, complete with names of streets, rivers, lakes, mountains and borders. This is the default view.

Satellite view

Shows map on top of aerial photo.

Traffic view


If available in your area, real-time traffic conditions are shown on the roads as colour-coded lines.

Latitude™

where are your friends & family?

Join Latitude


Keep track of where your friends and family are on Google Maps™. Plan to meet up, check that your parents got home safely or just stay in touch.

Don't worry, your location is not shared unless you agree to it. You need to join Latitude, and then invite your friends to view your location or accept their invitations. When using Maps (in any mode except in Street View), touch Menu  > **Join Latitude**. Read the privacy policy and if you agree with it, touch **Agree & share**.

Add & remove friends

Find it:  >  **Maps** > Menu  > **Latitude**

To add friends:

- 1 Touch Menu  > **Add friends**.
- 2 Touch **Select from contacts**, then touch a contact. Or, touch **Add via email address**, then enter an email address.
- 3 Touch **Add friends**.

If your friends already use Latitude, they'll receive an email request and a notification. If they have not yet joined Latitude, they'll receive an email request that invites them to sign in to Latitude with their Google account.

To remove friends:



- 1 Touch Menu  > **Latitude** to show your friends list, then touch a friend in your list.
- 2 Touch **Remove this friend**.

Share location



When you receive a request to share location details you can choose to:

- **Accept and share back**—See your friend's location, and your friend can see yours.
- **Accept, but hide my location**—See your friend's location, but they can't see yours.
- **Don't accept**—Location information is not shared between you and your friend.

Hide your location

 
To hide your location from a friend, touch Menu  > **Latitude** to show your friends list. Touch your contact name, then touch Menu  > **Edit privacy settings** > **Hide your location**.

Turn off Latitude

Touch Menu  > **Latitude** to show a friends list. Touch Menu  > **Edit privacy settings** > **Turn off Latitude**.


Quick start: YouTube

Find it:  >  YouTube

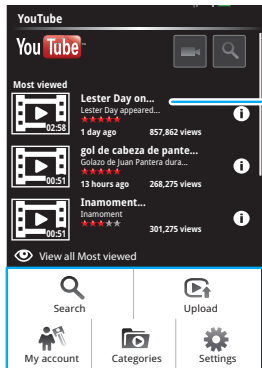

Categories



Touch a video to play.

Touch  to show options.

The YouTube user-generated content website lets you share videos with YouTube users everywhere. You don't need a YouTube account to browse and view videos.


Note: If you don't have a YouTube account, visit www.youtube.com to find out more. To create an account or sign in, go to "Your account" on page 32.

Watch videos

See popular video categories, like **Featured**, **Most viewed**, and **Top rated**. Touch a category, then touch the video to start playing it. To see more video categories, touch Menu  > **Categories**. To see a video in high quality, touch Menu  > **Settings** > **High quality video**.


Search for videos

Find it:  >  YouTube > Menu  > **Search**

Enter text, then touch **Search**. To clear your search history, touch Menu  > **Settings** > **Clear search history**.

Share videos

Send someone a link to a video that you are watching.

- 1 Touch the video to select it.
- 2 Touch menu  > **Share**.
- 3 Choose how you want to share—like **Bluetooth**, **Email**, **Text messaging** and more.
- 4 Touch **Send**.

Your account

Log in or create account

Find it:  >  **YouTube** > Menu  > **My account**

1 To create your YouTube account, touch the “Don’t have a YouTube account? Touch here to create one” link.

If you already have a YouTube account, enter your username and password and touch **Sign in**.

2 For a new account, enter a username and complete the fields, then touch **I accept**.

Upload videos

Find it:  >  **YouTube** > Menu  > **Upload**

1 Touch the video you want to upload. You can change the video title, description, set access rights and add tags.


2 Touch **Upload**.

Apps for all


get the app you want

Android Market™

Find it:  >  **Market**

Get all the fun games and cool apps you want! Android Market provides access to applications from developers worldwide, so you can find the app you want. If you need help or have questions about Android Market, press Menu  > **Help**.

Browse & install apps

Tip: Choose your apps and updates carefully, from trusted sites like  **Market**, as some may impact your phone’s performance—see “Choose carefully” on page 33.

Find it:  >  **Market**

Select a category or touch Search  to find the app you want. Then, touch **Install** (if app is free) or **Buy**.

 
When installing an app, make sure you read the alerts that tell you what information the app will access. If you don’t want the app to have access to this information, cancel the installation.

Manage & restore apps


Find it:  >  **Market** > **Downloads**

There are lots of apps available and many are free. So you might find that you have downloaded and installed lots of apps on your phone. That's fine, but you may want to uninstall apps that you no longer use.

To uninstall, touch an app in the list and then touch **Uninstall**.


If you have trouble removing an app, turn off your phone, then press and hold the  key while you turn on your phone. Your screen will show **Safe mode** in the lower left-hand corner, and you can remove the app.

To restore an app, touch the app in the list—the **Downloads** list shows previously installed apps.

For other app management features, including clearing app data and cache, press Menu  > **Settings** > **Applications** > **Manage applications**, then touch an app in the list.

Choose carefully

Apps are great. There's something for everyone. Play, communicate, work or just for fun. But remember, choose your apps carefully. Here's a few tips to help:

- To help prevent spyware, phishing or viruses affecting your phone or privacy, use apps from trusted sites, like  **Market**.

 
- In **Market**, check the apps' ratings and comments before installing. This will help you choose the best ones for you.
- If you doubt the safety of an app, don't install it.
- Like all apps, downloaded apps will use up memory, data, battery and processing power—some more than others. For example, a simple settings widget will use less than a streaming music player app. After installing an app, if you're not happy with how much memory, data, battery or processing power it's using, uninstall it. You can always install it again later.

Bluetooth™ wireless

lose the wires and go wireless

Quick start: Bluetooth wireless

Find it: Menu  > **Settings** > **Wireless & networks** > **Bluetooth settings**

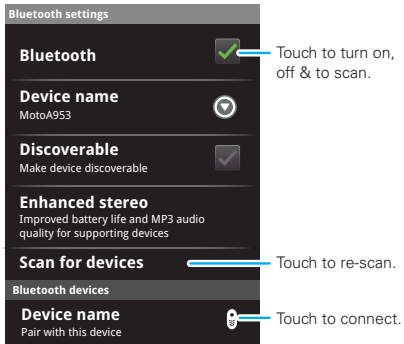

Touch to turn on, off & to scan.

Touch to re-scan.

Touch to connect.

Note: Your phone's Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Bluetooth features in France unless you are indoors.

Turn Bluetooth power on or off

Find it: Menu  > **Settings** > **Wireless & networks** > **Bluetooth**

Note: To extend battery life, turn Bluetooth power off when not in use.


Connect new devices

Note: This feature requires an optional accessory.

To connect with a new device, you need to pair with it. You only need to do this once for each device—to connect again, just turn on the device.


- 1 Make sure the device you are pairing with is in discoverable mode.

Note: Refer to the guide that came with the device for details.

- 2 Touch Menu  > **Settings** > **Wireless & networks** > **Bluetooth settings**.

- 3 Touch **Bluetooth** to turn on and scan. If Bluetooth power is already on, touch **Scan for devices**.

- 4 Touch a device to connect.

- 5 If necessary, touch **OK**, or enter the device passkey (like **0000**) to connect to the device. When the device is connected, the Bluetooth indicator  appears in the status bar.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Note: The Bluetooth enhanced audio setting is not recommended for older Bluetooth headsets as it may not deliver acceptable sound quality.

Reconnect devices

To reconnect your phone to a paired device automatically, simply turn on the device.

To manually reconnect your phone with a paired device, touch the device name in the **Bluetooth devices** list.

Disconnect devices

To disconnect your phone from a paired device automatically, simply turn off the device.

To manually disconnect your phone from a paired device, touch the device name in the devices list, then touch Menu  > **Disconnect**.

Edit properties

Touch Menu  > **Settings** > **Wireless & networks** > **Bluetooth settings** > **Device name**. Enter a name and touch **OK**.

Wi-Fi™

 
home, office or hotspot

Quick start: Wi-Fi


Find it: Menu  > **Settings** > **Wireless & networks** > **Wi-Fi settings**

Note: Your phone's Wi-Fi features and power levels are not permitted for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Wi-Fi features in France unless you are indoors.

Use a wireless network for fast Internet access and to download data.

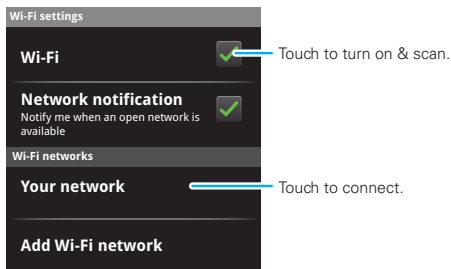


Turn Wi-Fi on or off


Find it: Touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi**

Note: To extend battery life, turn off Wi-Fi power when not in use.

Wi-Fi search & connect


To find networks in your range:

1 Touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi settings**.

2 Touch **Wi-Fi** to turn on and scan. If Wi-Fi is already on, touch Menu  > **Scan**. Your phone lists the networks it finds within range.

Tip: To see your phone's MAC address or other Wi-Fi details, touch Menu  > **Advanced**.

3 Touch a network to connect.

4 If necessary, enter **Network SSID**, **Security** and **Wireless password**, and touch **Connect**. When your phone is connected to the network, the wireless indicator  appears in the status bar.

Tip: When you are in range and Wi-Fi is on, you will automatically reconnect to available networks you've connected to before.

Wi-Fi hotspot




Note: You need to subscribe to the Wi-Fi hotspot service to use this feature. Contact your service provider.

You can set up your phone as a Wi-Fi hotspot to provide portable, convenient Internet access to other Wi-Fi enabled devices.

Setup

Protect your network, add security to your Wi-Fi hotspot:

Note: Risks can be associated with connecting to the public Internet. Your phone allows you to create a 3G Mobile Hotspot, which may be accessible to unauthorised users. It is highly recommended that you use a password and/or other steps to protect your phone from unauthorised access.

Find it:  >  **3G Mobile Hotspot** >  > **Advanced** > **WiFi AP mode**

Touch a setting to modify it:

- **SSID**—Enter a unique name for your hotspot and touch **Next**.
- **Security**—Select the type of security you want and touch **Save**: **WEP**, **WPA** or **WPA2**. Enter a unique password. Other users can access your Wi-Fi hotspot only if they enter the correct password.

Note: **WEP** is the weakest option because it is highly vulnerable to hacking. **WPA2** is recommended by IEEE.

- **Channel**—Select a channel that minimises potential interference. You may need to try different channels after your hotspot has been active for a time.


Touch **Save** when the settings are complete.

Activate hotspot

Find it:  >  **3G Mobile Hotspot > Tap to start mobile hotspot service**

When your Wi-Fi hotspot is active, other Wi-Fi enabled devices can connect by entering your hotspot's **SSID**, selecting a **Security** type and entering the correct **Wireless password**.

If you can't activate the Wi-Fi hotspot:

- 1 Contact your service provider for the Access Point Name (APN) settings.
- 2 Touch Menu  > **Settings > Wireless & networks > Mobile networks > Access point names > service provider**, then enter the settings from your service provider.
- 3 Touch **APN type**, then enter **dun** (all lowercase) and touch **OK**.

Digital living

connect and enjoy

Note: Copyright—do you have the right? Always follow the rules. See "Content copyright" in your legal and safety information.

Media share

Media share gives you an easy way to share your media content—photos, videos and tunes—with friends and family.

Share your media via DLNA devices: The **Media share** wizard guides you through the easy setup steps.

Swap photos & videos: Share any photos or videos on your phone, even the ones you created.

More tunes: Enjoy favourites from your phone playlist on your sound system at home. Or get music from your portable music player and add it to your phone's music library.

Connect

You need to be connected to a Wi-Fi network or another device:

- Connect to your computer with a USB cable (see "Connect through a USB cable" on page 52).
- Connect to a Wi-Fi network or use your own Wi-Fi hotspot (see "Wi-Fi™" on page 35).

Media share will lead you the rest of the way.

Your Media share world

Note: If you're using a Wi-Fi connection, you must allow access to other devices to download media from your phone and to share your files. If you want to access media files on other devices, they must allow access.



To use **Media share**, touch  >  **Media share**. Then select the **Media share** feature you want to use.

 
- **Share media**—Allow other devices to access media files on your phone. Without downloading any media from your phone, other people can view your pictures or videos or play your songs on their own devices.
- **Sync media**—Sync the media files on your phone with other devices.
- **Copy media**—Copy a picture from one phone to another.
- **Play media**—Select media for playback on another device in a Wi-Fi network.

Share using DLNA

DLNA lets you expand the ways you can enjoy your photos and videos on a DLNA Certified computer, TV or monitor, using your own Wi-Fi network.





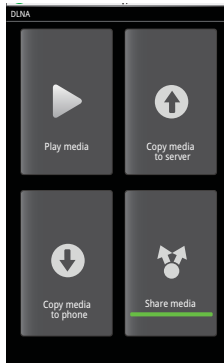



Make sure your phone is connected to an active Wi-Fi network and has access to a DLNA Certified device.

- 1 Touch  >  **DLNA**.
- 2 Touch **Play media**, **Copy media to server**, **Copy media to phone** or **Share media**. Then follow the instructions you see on your phone.




Tips & tricks

a few handy hints





To...	
Return to the home screen	Touch Home  .
See recently dialled numbers	Touch  Dialler > Recent .
Search	Touch Search  .
Sleep/wake your phone	Press Power/Lock  .
Set screen timeout	Touch Menu  > Settings > Display > Screen timeout .
Show last few apps used	Touch and hold Home  .
Turn sound on/off	Press and hold Power/Lock  > Silent mode .
Turn flight mode on/off	Press and hold Power/Lock  > Flight mode .

Battery tips

Your phone is like a small computer, giving you a lot of information and apps, at 3G speed, with a touch display! Depending on what you use, that can take a lot of power.

To start getting the most out of your battery, touch Menu  > **Settings** > **Battery manager** > **Battery mode**. Choose **Performance mode** for constant data transfer and battery use, **Maximum battery saver** when your battery is low.

Want to extend your battery life? Try these:

- To select a battery profile that suits your phone use, touch Menu  > **Settings** > **Battery manager**.
- To turn off automatic applications sync, touch Menu  > **Settings** > **Data manager** > **Data delivery**.
- To turn off Bluetooth power, touch Menu  > **Settings** > **Wireless & networks** > **Bluetooth**.
- To turn off Wi-Fi™, touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi**.

Personalise


add your personal touch

Widgets


Create widgets



- 1 Find an empty spot on your home screen where you want to add a widget. You can flick left or right to open other panels on your home screen.
- 2 Touch and hold the empty spot until you see the **Add to home screen** menu.
- 3 Touch **Motorola widgets** or **Downloaded widgets**.
- 4 Touch the type of widget. If necessary, enter the widget settings.

Set up widgets

You can customise some widgets. Touch a widget to open it, then touch Menu .

You may already have several useful widgets on your home screen:

- **Messages:** Change the widget name or choose how long it shows new messages. To add email accounts, “Set up messaging” on page 23.
- **Music:** Set this widget to an artist, album, song, playlist or just touch Menu  > **Party shuffle**. There’s more about “Music” on page 46.

- **News:** Change the widget name, choose how long it shows new stories or choose a news source. To choose a source, touch , then choose preset **Bundles** or **Channels** or choose **Custom** to enter a URL for a **Webpage** or an **RSS feed**.
- **Weather:** Change temperature units or add locations. To add locations, touch , enter a city and touch **Search**. When you open the weather widget, flick left to see other locations you have added.

Ringtones

To personalise your ringtones:

Find it: Menu  > **Settings** > **Sound** > **Phone ringtone** or **Notification ringtone**

To set your vibrate options:




Find it: Menu  > **Settings** > **Sound** > **Vibrate**

Wallpaper




To apply a new wallpaper:

- 1 Touch and hold an empty spot on your home screen.
- 2 Touch **Wallpapers**.
- 3 Touch **Live Wallpapers**, **Media gallery** or **Wallpapers** and choose a wallpaper.

Sounds

- To set volume for media and videos, touch Menu  > **Settings** > **Sound** > **Volume**.
- To play tones when using dial pad, touch Menu  > **Settings** > **Sound** > **Audible touch tones**.
- To play sound on a screen selection, touch Menu  > **Settings** > **Sound** > **Audible selection**.

Display settings

- To set display brightness, touch Menu  > **Settings** > **Display** > **Brightness**.
- To set orientation, touch Menu  > **Settings** > **Display** > **Auto-rotate screen**.
- To set animation, touch Menu  > **Settings** > **Display** > **Animation**.

Note: Some apps are designed so that your phone can "animate" them by rotating, fading, moving and stretching one or more images.

Quick launch shortcuts

You can add shortcuts directly to the home screen by touching and holding an empty spot on the home screen, touching **Shortcuts** and selecting a shortcut.

Date & time

Set date, time, time zone and formats:

Find it: Menu  > **Settings** > **Date & time**

Language & region

Set your menu language and region:

Find it: Menu  > **Settings** > **Language & keyboard** > **Select locale**

Photos & videos



see it, capture it, share it!

 
Photos

Take & share photos

Take that family photo and post it online for everyone to see.

Find it: Press the Camera key .

Tip: You can also touch  >  **Camera**.

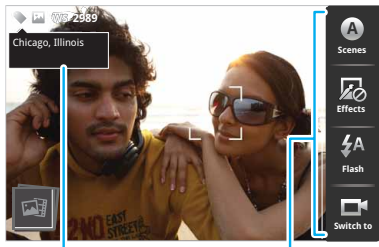


Tag photos with your location.

Photo capture settings

Adjust for greater creative control.

Note: Photos are stored on your microSD memory card. **Picture resolution** is **widescreen** or **5MP**, unless you change it.

To take the photo, press the Camera key  halfway to lock the focus, then press all the way to take the photo.

The photo you've just taken is shown on the screen. Touch the photo, then:

- To **set** the photo as a wallpaper, contact photo or social network photo, touch **Set as**.
- To **send** the photo in a message or post it online, touch **Share**. For more info on sharing your photos, see "Share photos & videos" on page 45.
- To **delete** the photo, touch **Delete**.
- To **upload** the photo to the web, touch **Quick upload**.


Photo options

You can make adjustments to optimise your shot. Touch a button on the right side of the screen to make changes (touch the screen to turn on the buttons if necessary):

- **Scenes**—Adjust for better image capture in different environments: **Auto**, **Portrait**, **Landscape**, **Sport** and more. Touch the screen when finished to return to the viewfinder.

- **Effects**—Change photo look: **Normal**, **Negative**, **Black and white** and more.
- **Flash**—Set **Flash on**, **Flash off** or **Auto flash**.
- **Switch to**—Toggle between photo and camcorder modes.

Camera settings

In the viewfinder, touch Menu  > **Settings** to open the camera menu and adjust these settings:

 
- **Picture resolution**—Adjust for optimal resolution for widescreen TV, or different sizes.
- **Quick upload album**—Automatically upload photos to accounts you select, such as **Facebook**, **MySpace**, **Photobucket** and more.
- **Review time**—How long your phone displays a new photo before returning to the viewfinder.
- **Face detection**— Detects a face in the viewfinder and adjusts image quality accordingly.

Videos

Record & share videos

Find it:  >  **Camcorder**

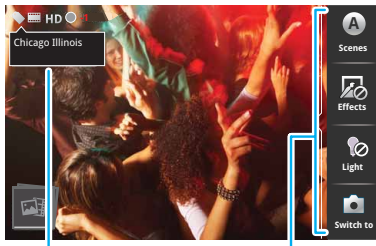

Note: To get the clearest videos, wipe the lens clean with a soft, dry cloth before you record a video.




Tag videos with your location.

Video capture settings

Adjust for greater creative control.

To record the video, press the Camera key . To stop the video recording, press the Camera key  again.

The video you've just taken is shown on the screen. Touch the video, then:

- To **send** the video in a message or post it online, touch **Share**. For more info on sharing your videos, see "Share photos & videos" on page 45.
- To **play** the video, touch .
- To **delete** the video, touch **Delete**.

Video options

You can make adjustments to optimise your video. Touch one of the buttons on the right side of the viewfinder to make changes (you may need to touch the screen to make the buttons appear):

 
- **Scenes**—Adjust for better video capture in different environments: **Auto** and **Night**.
- **Effects**—Change video look: **Normal**, **Negative**, **Black and white** and more.
- **Light**—Turn a light on or off to adjust for the lighting where you are recording.
- **Switch to**—Toggle between camcorder and camera.

Camcorder settings

In the viewfinder, touch Menu  > **Settings** to open the camcorder menu and adjust these settings: **Video Resolution**, **Review time**, **Shutter animation** and more.

View photos & videos

Find it:  >  **Gallery**

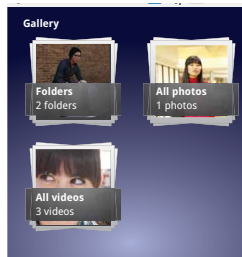

Touch a folder to display all of its photos or videos. option for the photos or videos you want to access.



- **Camera roll**—All of the captured photos and videos on your phone.
- **My tags**—Photos and videos grouped by tag.
- **Folders**—Photos and videos grouped by the folders where they're saved.
- **All photos**—All photos, no groupings.
- **All videos**—All videos, no groupings.

Note: To see the controls while the video is playing, touch the display.

View photos & videos

Tip: Turn the phone sideways for a widescreen view.

The **Gallery** first displays photos and videos as thumbnails. Scroll through the thumbnails by flicking them up or down. Touch a thumbnail to select it for viewing or playback.

When you select a thumbnail, it is enlarged to normal viewing size. Videos are paused at the beginning. Touch the play  and pause  buttons on the screen to control video playback.

Note: To see the buttons while the video is playing, touch the display.

Share photos & videos

Find it:  >  **Gallery**

To send your photo in a message or post it online:

- 1 Select an image.
- 2 Touch and hold a photo or video, then touch **Share**.
- 3 Choose how you want to share—like **Bluetooth**, **Email**, **Text messaging** and more.

Manage photos & videos

Find it:  >  **Gallery**

- 1 Select an image.

- 2 Touch and hold a photo or video, then select **Quick upload**, **Share**, **Edit**, **Delete** or **More (Set as)**.

Tip: To copy photos to/from a computer, go to “View & transfer files” on page 51.

 
Music

when music is what you need...

Your music community

Listen to the radio, watch videos, read music news and more.

Find it:  >  **Music**

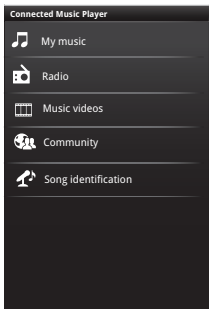

My music. Listen to your tunes.


Radio. Surf the airwaves for fresh music. There's something for everyone. You need a headset for FM radio. Check out SHOUTcast™ Radio for music from all generations and types.

Music videos. Watch videos from YouTube™, pre-recorded TV programmes and your own videos.

Community. Find songs, see what people are listening to all around the world and see what's hot on the music charts.

Song identification. Get information about a song that is playing. Select **Tell me what is playing** and hold your phone close to the source of the music.

 
Note: Recognition will not take place if the music is from a live concert or a musical performance in which digital recording is not even.


Configuration data. Some features in Connected Music Player, such as Music videos and news, Community, Song identification and Song lyrics, require data traffic. Set the data mode: Tap Menu  > **Settings** > **Data usage**.


Quick start: Music

Touch, touch, play—instant music. Just open your music library, then select what you want to play.

Find it:  >  Music

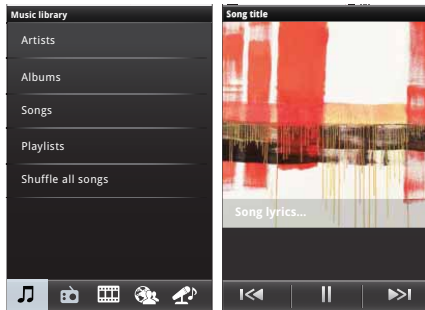

Tip: When a song is playing, you can add it to a playlist by touching Menu  > **More** > **Add to playlist**.


To listen to music during a flight, turn off all your network and wireless connections: press and hold Power/Lock  > **Flight mode**.

Set up music

What music transfer tools do I need?

To put music on your PC and then load it on your phone, you need:

- Microsoft™ Windows™ PC or Apple™ Macintosh™.
- a USB data cable.
- Memory card. Your music is stored on your memory card. Your phone supports removable microSD memory cards up to 32 GB capacity. To make sure your memory card is installed, go to “Assemble & charge” on page 3.

Tip: To see the available memory on your memory card, from the home screen, touch Menu  > **Settings** > **SD card & phone storage**.

What music file formats can I play?

Your phone can play many types of files: MP3, M4A, AAC, ACC+, MIDI, WAV and OGG Vorbis.

Note: Your phone does not support any DRM protected files.

What headphones can I use?

Your phone has a 3.5 mm headset jack for wired stereo listening. You can go wireless with Bluetooth™ stereo headphones or speakers (see “Bluetooth™ wireless” on page 34).

Get music

Rip a CD

Not literally. If you're new to digital music transfer, this means transferring music from a music CD to your PC.

To rip a music CD on your PC, you can use Microsoft™ Windows™ Media Player. You can download Windows Media Player from www.microsoft.com.


- 1 On your PC, open Windows Media Player.
- 2 Insert a music CD into the PC's CD ROM drive.
Note: Make sure you change the format to MP3 in "Rip > Format > Rip settings."
- 3 In the Windows Media Player window, click on the "Rip" tab.
- 4 Highlight the songs you want to import, and click "Start rip."

The songs are imported to the Windows Media Player Library.

Transfer using Windows Media Player

Transfer music files from a PC to your memory card.

Note: Copyright—do you have the right? Always follow the rules. See "Content copyright" in your legal and safety information.

- 1 With a memory card inserted and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your PC. Your phone should show  in the status bar.

Note: Your phone supports Microsoft™ Windows™ XP, Windows Vista™ and Apple™ Macintosh™. Other operating systems may not be compatible.

- 2 Your phone shows a USB connection dialogue. Touch **USB Drive**. You can't use the files on your memory card while it is connected.
- 3 On your PC, open Windows Media Player.
- 4 On the "Sync" tab, select "More options." Under "Device," select your phone.
- 5 Select "Properties," check the "Create folder hierarchy on device" box, and click "OK."
- 6 Drag your music files over to the "Sync list" and press "Start sync."

Transfer using USB

 
To use a USB cable, see "Memory card & file transfer" on page 51.

Play music

Music library

Open your music library, then select what you want to play.


Find it:  >  **Music** > **My music**

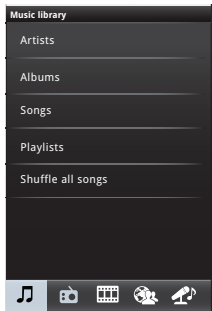

Categories

 
Touch to list songs or playlists.

Touch for **Radio**, **Music videos**, **Community** or **Song identification**.




Your music is stored by artists, albums, songs and playlists. Touch a category, then touch the song or playlist you want to play. Touch **Shuffle all songs** to randomly play all your songs, or touch Search  to look for a song.



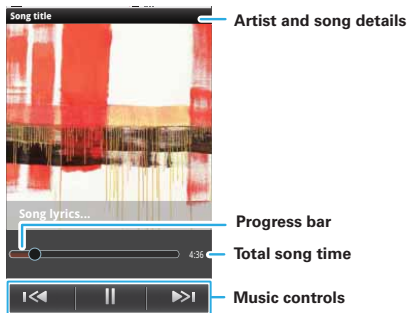

Music player

Just touch a song or playlist to get going.





Music player controls


controls	
play/pause	Touch  .
previous/next	Touch  .
volume	Press the side volume keys.
display lyrics	Touch Menu  > More > Settings > Display lyrics .

controls	
send blip	Love this song or hate it? Let your friends know. Touch Menu  > Send blip.
add to playlist	Touch Menu  > More > Add to playlist.
use as ringtone	Touch Menu  > More > Set as ringtone.
delete	Touch Menu  > More > Delete.

Hide, wake, turn off


Touch Home  to use another app. Your music will continue to play.

When you see  in the status bar a song is playing, flick down to see details. Touch the song to return to the music controls.

To turn off your music touch .

Playlists

To add a song from the music library to a playlist, touch and hold the song then touch **Add to playlist**. Choose an existing playlist, or touch **New playlist** to create a new playlist.

To add a song to the playlist you're playing, touch Menu  > **More > Add to playlist** in the music player.

To edit, delete and rename playlists, touch and hold the playlist in the music library.

FM Radio

Plug in a 3.5 mm headset and surf the airwaves for fresh music.

Find it:  >  **Music > Radio**

Memory card & file transfer

copy photos, music and more to your phone

Memory card

Note: You need the memory card installed for some features on your phone, such as **Camera**.


Delete or share files on your phone

Find it:  >  **Files > Phone files**

Touch a file or folder to open, then touch and hold a file to **Delete** or **Share**.

Remove or format your memory card

Note: Do not remove your memory card while your phone is using it or writing files to it.

Before you remove or format your memory card you need to unmount it. Touch Menu  > **Settings > SD card & storage > Unmount SD card**.

To format your memory card, touch **Format SD card**.

Warning: All data on your memory card will be deleted.

View & transfer files

Your can use Motorola Phone Portal (MPP) to connect your phone and computer with a cable or a Wi-Fi network.

When you connect your phone or type the MPP URL into your computer's browser, you'll see the MPP home screen.

Open your recent activity (**Home**), **Contacts**, **Photos**, **Settings**, **File manager** or **Support**.

Open details about your phone's network signal, battery or memory.



Show **All** recent activity, or only your **SMS** (text messages) or **Calls**.

Choose your language.

 
Note: MPP works best with Internet Explorer 7 or newer, with JavaScript and cookies enabled.

Connect through a Wi-Fi network

Note: Most public Wi-Fi networks (like the ones at coffee shops) don't let devices connect to each other. In that case, you need a USB cable connection.


1 Touch  >  **Phone portal.**

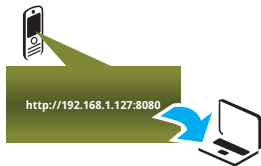

2 If your phone is connected to a Wi-Fi network, it shows an MPP URL. Use a computer on the same network to enter the URL in a browser. It opens the MPP home screen!



Tip: When your phone's Wi-Fi is on, it automatically reconnects to nearby networks it has used. To turn Wi-Fi on or off, touch Menu  > **Settings** > **Wireless & networks** > **Wi-Fi.**

 
If your phone is not connected to a Wi-Fi network, it asks you to connect. Touch **OK** to open the Wi-Fi settings screen, then turn on **Wi-Fi** and touch a network to connect.

For network passwords, ask other network users or administrators. For your phone's MAC address and Wi-Fi details, touch Menu  > **Advanced.**


When your phone is connected ( appears in the status bar), touch Back  to close the settings. Soon, MPP shows an URL at the bottom of your screen. Using a computer on the same Wi-Fi network, just type the URL into the browser to open the MPP home screen!


Connect through a USB cable

1 Turn on your phone and computer and connect them with a USB-to-micro USB cable.

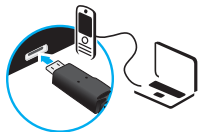

Your computer might guide you through installing Motorola drivers.

2 Once your computer has the correct Motorola drivers, it opens the MPP home page in your browser. A Motorola icon  appears in your task bar, in the lower right of your computer screen.

If you have Motorola Media Link, it will launch instead of MPP. To use MPP, right-click  in your task bar, select "when the phone connects, launch" and choose MPP. Disconnect and reconnect your phone to launch MPP.


Tools

stay on top of things

 
Alarm clock

Find it:  >  **Alarm & timer**

To turn on an alarm, touch the tick box. When an alarm sounds, drag **Dismiss** to turn it off or touch the screen to snooze.


To add an alarm, touch Menu  > **Add alarm**, then enter alarm details.

To enable or disable an alarm, touch the tick box.

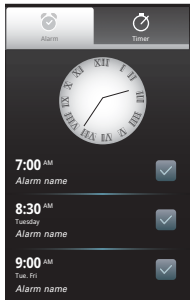


Calendar

Find it:  >  **Calendar**

Your calendar events can be viewed in different ways: Touch Menu  > **Agenda**, **Day** or **Week**. When you highlight an event, more details appear.



Add calendar events

From any view, touch Menu  > **More** > **New event**. Enter the event start time and other details. You can even set a reminder so you don't forget about the event. (When you set the reminder time to **0 minutes**, it plays at the event start time.)

Tip: Reminders will play only if you've selected a notification ringtone (see "Ringtones" on page 40).

When you finish entering event details, touch **Save**.

Manage calendar events



To edit an event, touch and hold it, then touch **Edit event**. When you're done, touch **Save**.

To delete an event, touch and hold it, then touch **Delete event**.

To go to today, touch Menu  > **Today**.

Calculator

Find it:  >  **Calculator**

Your calculator has basic and advanced views. To change views, touch Menu  > **Advanced panel/Basic panel**. To clear history, touch Menu  > **Clear history**.

Management


stay in control

Wireless manager

Find it: Menu  > **Settings** > **Wireless & networks**

Manage all your wireless connections: Wi-Fi™, Bluetooth™, flight mode & mobile networks (“Network” on page 54).

Flight mode

Use flight mode to turn all your wireless connections off—useful when flying. Press Power/Lock  > **Flight mode**.

Note: When you select flight mode, all wireless services are disabled. You can then turn Wi-Fi and/or Bluetooth back on, if permitted by your airline. Other wireless voice and data services (such as calls and text messages) remain off in flight mode. Emergency calls to your region’s emergency number (e.g. 999) can still made.

Update my phone

Stay up-to-date with the latest software for your phone. You can check, download and install updates using your phone or your computer:

- Using your phone:

You may get an automatic notification of an available update on your phone. Follow the instructions to download and install.

To manually check for updates, touch Menu  > **Settings** > **About phone** > **System updates**.


Your phone downloads any updates over your mobile network. Remember, these updates can be quite large (25 MB or more) and may not be available in all countries. If you don’t have an unlimited data plan, or mobile network updates are not available in your country, you can update using a computer.

- Using your computer:

On your computer, go to motorola.com/mymilestone2 and check the “Software” links. If an update is available, simply follow the installation instructions.

Network

You shouldn’t need to change any network settings. Contact your service provider for help.

Touch Menu  > **Settings** > **Wireless & networks** > **Mobile networks** to show options for roaming networks, network selection, operator selection and access point names.

 
Note: To make any call, including an emergency call, the network setting for your phone must be the same as the local wireless network. For example, in Europe, set the phone's network to GSM.

Security

help keep your phone safe

Quick start: Security

Find it: Menu  > **Settings** > **Location & security**

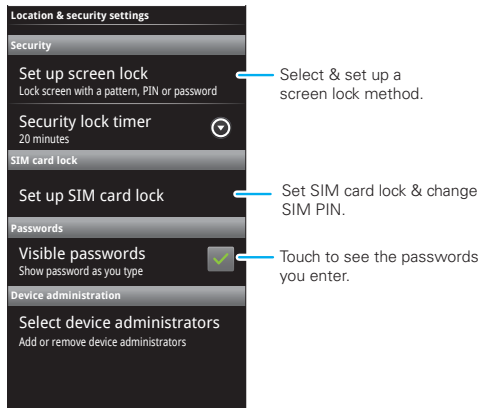




You can set a pattern, PIN or password to prevent unauthorised access to your device.

Screen lock


Note: You can make emergency calls on a locked phone (“Contacts” on page 16). A locked phone still rings, but you need to unlock it to answer.

Lock the screen in the following ways:

- Press Power/Lock .
- Let the screen time out (don't press anything).
- Switch the power off.

To unlock the screen, press Power/Lock . Then drag  to the right.


Lock pattern

To set the lock pattern, touch Menu  > **Settings** > **Location & security** > **Set up screen lock** > **Pattern**.

Follow the instructions to draw your lock pattern.

When prompted, draw the pattern to unlock the phone.


Passcode lock

To set the passcode, touch Menu  > **Settings** > **Location & security** > **Set up screen lock** > **Password**.

Enter password, then confirm it.

When prompted, enter the password to unlock the phone.


Forgotten your pattern or passcode?

In the **password** unlock screen, from the home screen, touch Menu  > **Forgot passcode?** to unlock your phone with your MOTOBLUR email address and MOTOBLUR password, or follow the onscreen instructions.

In the **pattern** unlock screen, after you enter an incorrect pattern five times, you can touch **Forgot passcode?** to unlock your phone with your MOTOBLUR email address and MOTOBLUR password.


Lock your SIM

Enable SIM PIN

To lock your SIM (the next time you power up the phone you will need to enter your SIM PIN), from the home screen, touch Menu  > **Settings** > **Location & security** > **Set up SIM card lock** > **Lock SIM card**. Enter your SIM PIN code.

Caution: If you enter an incorrect PIN code three times, your phone locks your SIM card and asks for your PIN unlock code. Contact your service provider.

Change SIM PIN


From the home screen, touch Menu  > **Settings** > **Location & security** > **Set up SIM card lock** > **Change SIM PIN**.

PUK code

To unlock your SIM PIN, you need to enter your PIN unlock code (PUK code) when prompted.

Note: Your PUK code is supplied by your service provider.

Reset

To reset your phone to factory settings and erase all the data on your phone, touch Menu  > **Settings** > **Privacy** > **Factory data reset** > **Reset phone**.

Warning: All downloaded apps and user data on your phone will be deleted. Data on your memory card will not be deleted.

Lost, stolen, broken, cleared

Don't you just hate it when your life is on your phone and it all goes wrong? Lose it, break it, reset it, or even worse—stolen! Relax, MOTOBLUR can help find your phone, clear it (if you need to) and best of all, restore all your stuff.

Track your phone

To locate your phone:

- 1 Log into your MOTOBLUR account:
www.motorola.com/mymotoblur.

- 2 On the phone profile page, follow the link to locate your phone.

MOTOBLUR locates your phone using GPS and AGPS (see “GPS & AGPS” on page 63).

Remote clear

To wipe your phone data:

- 1 Log into your MOTOBLUR account:
www.motorola.com/mymotoblur.
- 2 On the phone profile page, follow the link to delete data.

Warning: All downloaded apps and user data on your phone will be deleted. Data on your memory card will not be deleted.

Restore your phone

If you lose your phone don't worry, your contacts are backed-up on MOTOBLUR.

If you get your next MOTOBLUR product, just log into your existing MOTOBLUR account on your phone to recover all your stuff automatically.

To recover your Android Market apps, see “Manage & restore apps” on page 32.

Troubleshooting

we're here to help

Crash recovery

In the unlikely event that your phone stops responding to touches and key presses, try a quick reset. Remove the back cover and battery (“Assemble & charge” on page 3), then replace them and switch your phone on as usual.

Safety, regulatory & legal

Battery use & safety

Important: Handle and store batteries properly to avoid injury or damage.

Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

DON'Ts

- **Don't disassemble, crush, puncture, shred or otherwise attempt to change the form of your battery.**
- **Don't let the mobile device or battery come into contact with water.***
Water can get into the mobile device's circuits, leading to corrosion. If the mobile device and/or battery get wet, get them checked by your service provider or contact Motorola, even if they appear to be working properly.*
- **Don't allow the battery to touch metal objects.** If metal objects, such as jewellery, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your mobile device or battery near a heat source.*** Excessive heat can damage the mobile device or the battery. High temperatures can cause the battery to swell, leak or malfunction. Therefore:
- **Don't dry a wet or damp battery with an appliance or heat source**, such as a hair dryer or microwave oven.

DOs

- **Do avoid leaving your mobile device in your car in high temperatures.***
- **Do avoid dropping the battery or mobile device.*** Dropping these items, especially on a hard surface, can potentially cause damage.*
- **Do contact your service provider or Motorola if your mobile device or battery has been damaged by being dropped or by high temperatures.**

* **Note:** Always make sure that the battery compartment is closed and secure to avoid direct exposure of the battery to any of these conditions.

Important: Use Motorola Original products for quality assurance and safeguards. To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection),

Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola original" hologram.

Motorola recommends that you always use Motorola-branded batteries and chargers. Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid battery** or **Unable to charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram;
- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and try charging it again;
- If the message remains, contact a Motorola authorised service centre.

Important: Motorola's warranty does not cover damage to the mobile device caused by non-Motorola batteries and/or chargers.

Warning: Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage or other hazard.

Proper and safe battery disposal and recycling: Proper battery disposal is not only important for safety, it also benefits the environment. Consumers may recycle their used batteries in many retail or service provider locations. Additional information on proper disposal and recycling may be found on the web:

- www.motorola.com/recycling
- www.rbrg.org/call2recycle/ (in English only)

Disposal: Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling centre or national recycling organisations for more information on how to dispose of batteries.



Warning: Never dispose of batteries in a fire because they may explode.

Battery charging

Notes for charging your product's battery:

- When charging your battery, keep it near room temperature. Never expose batteries to temperatures below 0°C (32°F) or above 45°C (113°F) when charging.
- New batteries are not fully charged.
- New batteries or batteries stored for a long time may take more time to charge.

- Motorola batteries and charging systems have circuitry that protects the battery from damage from overcharging.

Driving precautions

Responsible and safe driving is your primary responsibility when behind the wheel of a vehicle. Using a mobile device or accessory for a call or other application while driving may cause distraction. Using a mobile device or accessory may be prohibited or restricted in certain areas, always obey the laws and regulations on the use of these products.

While driving, NEVER:

- Type or read texts.
- Enter or review written data.
- Surf the web.
- Input navigation information.
- Perform any other functions that divert your attention from driving.

While driving, ALWAYS:

- Keep your eyes on the road.
- Use a hands-free device if available or required by law in your area.
- Enter destination information into a navigation device **before** driving.
- Use voice activated features (such as voice dial) and speaking features (such as audible directions), if available.
- Obey all local laws and regulations for the use of mobile devices and accessories in the vehicle.
- End your call or other task if you cannot concentrate on driving.

Remember to follow the "Smart practices while driving" in this guide and at www.motorola.com/callsmart (in English only).

Seizures/blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing videos or games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing videos or games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour and stop use if you are tired.

Caution about high volume usage

Warning: Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected.



To protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our website at direct.motorola.com/hellomoto/nss/AcousticSafety.asp (in English only).

Repetitive motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a doctor.

[Nov0109]

Small children

Keep your mobile device and its accessories away from small children.

These products are not toys and may be hazardous to small children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

Glass parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre.

Operational warnings

Obey all posted signs when using mobile devices in public areas.




Potentially explosive atmospheres




Areas with potentially explosive atmospheres are often, but not always, posted and can include fuelling areas, such as below decks on boats, fuel or chemical transfer or storage facilities or areas where the air contains chemicals or particles, such as grain dust or metal powders.

When you are in such an area, turn off your mobile device and do not remove, install or charge batteries. In such areas, sparks can occur and cause an explosion* or fire.

Symbol key

Your battery, charger or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.

Symbol	Definition
	Do not dispose of your battery or mobile device with your household waste. See "Recycling" for more information.
	For indoor use only.
	Listening at full volume to music or voice through a headset may damage your hearing.

Radio frequency (RF) energy

Exposure to RF energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate using your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

RF energy operational precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions:

- When placing or receiving a phone call, hold your mobile device just like you would a landline phone.
- If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimetres (1 inch) from your body when transmitting.

- Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our website at: www.motorola.com.

RF energy interference/compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed or otherwise configured for RF energy compatibility. In some circumstances, your mobile device may cause interference with other devices.

Follow instructions to avoid interference problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers a flight mode or similar feature, consult airline staff about using it in-flight.

Implantable medical devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your doctor before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimetres (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimise the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your health care provider.

Specific absorption rate (ICNIRP)

Your model wireless phone meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health, and to account for any variations in measurements. The guidelines use a unit of measurement known as the specific absorption rate (SAR). The ICNIRP SAR limit for mobile devices used by the general public is 2 watts per kilogram (W/kg), and the highest SAR value for this mobile device when tested at the ear is 0,64 W/kg. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this guide. In this case, the highest tested SAR value is 0,72 W/kg. The tests are carried out in accordance with international guidelines for testing. The SAR information includes the Motorola testing protocol, assessment procedure and measurement uncertainty range for this product. As SAR is measured utilising the mobile device's highest transmitting power, the actual SAR of this mobile device while operating is typically below that indicated above. This is due to automatic changes to the power level of the mobile device to ensure it only uses the minimum level required to reach the network. While there may be differences between the SAR levels of various mobile devices and at various positions, they meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organisation has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure, then you can do so by limiting the length of calls or using a hands-free device to keep the mobile device away from the head and body.

Additional Information can be found on the websites of the World Health Organisation (<http://www.who.int/emf>) or Motorola Mobility, Inc. (<http://www.motorola.com/rfhealth>).

Information from the World Health Organisation

"Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using hands-free devices to keep mobile phones away from your head and body."

Source: WHO fact sheet 193

 
Further information: <http://www.who.int/peh-emf>

European Union directives conformance statement

CE 0168  [Only indoor use allowed in France for Bluetooth and/or Wi-Fi]

Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of directive 1999/5/EC
- All other relevant EU directives

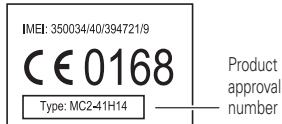

The above gives an example of a typical product approval number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product approval number from your product's label in the "Search" bar on the website.

FCC notice to users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo and/or an FCC ID in the format FCC ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

GPS & AGPS

Your mobile device can use *Global Positioning System* (GPS) signals for location-based applications. GPS uses satellites controlled by the U.S. government that are subject to changes implemented in accordance with the Department of Defense policy and the Federal Radio Navigation Plan. These changes may affect the performance of location technology on your mobile device.

Your mobile device can also use *Assisted Global Positioning System* (AGPS), which obtains information from the mobile network to improve GPS performance. AGPS uses your wireless service provider's network and therefore airtime, data charges and/or additional charges may apply in accordance with your service plan. Contact your wireless service provider for details.

Your location

Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile devices that are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola and other third parties providing services.

Emergency calls

When you make an emergency call, the mobile network may activate the AGPS technology in your mobile device to tell the emergency responders your approximate location.

AGPS has limitations and **might not work in your area**. Therefore:

- Always tell the emergency responder your location to the best of your ability; and
- Remain on the phone for as long as the emergency responder instructs you.

Performance tips

- Go outside and away from underground locations, covered vehicles, structures with metal or concrete roofs, tall buildings and foliage. Indoor performance might improve if you move closer to windows, but some window sun shielding films can block satellite signals.
- Move away from radios, entertainment equipment and other electronic devices.

Navigation

When using navigation features, note that mapping information, directions and other navigational data may contain inaccurate or incomplete data. In some countries, complete information may not be available. Therefore, you should visually

confirm that the navigational instructions are consistent with what you see. All drivers should pay attention to road conditions, closures, traffic and all other factors that may impact driving. Always obey posted road signs.

Smart practices while driving

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas—for example, hands-free use only may be required. Go to www.motorola.com/callsmart (in English only) for more information.

Your mobile device lets you communicate by voice and data, almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial, redial and voice dial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a hands-free device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola original hands-free accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- **Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.

- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking to aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 999 or another local emergency number in the case of fire, traffic accident or medical emergencies (wherever wireless phone service is available).
- **Use your mobile device to help others in emergencies.** If you see a road accident, crime in progress or other serious emergency where lives are in danger, call 999 or another local emergency number (wherever wireless phone service is available), as you would want others to do for you.
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or another special non-emergency wireless number (wherever wireless phone service is available).

Privacy & data security

Motorola understands that privacy and data security are important to everyone. Given that some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device's keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device's security, install it as soon as possible.
- **Secure personal information**—Your mobile device can store personal information in various locations including your SIM card, memory card and phone memory. Be sure to remove or clear all personal information before you recycle, return or give away your device. You can also back up your personal data to transfer to a new device.

Note: For information on how to back up or wipe data from your mobile device, go to www.motorola.com/support

- **Online accounts**—Some mobile devices provide a Motorola online account (such as MOTOBUR). Go to your account for information on how to manage the account and how to use security features such as remote wipe and device location (where available).
- **Applications**—Install third party applications from trusted sources only. Applications can have access to private information such as call data, location details and network resources.
- **Location-based information**—Location-based information includes information that can be used to determine the approximate location of a mobile device. Mobile phones that are connected to a wireless network transmit location-based information. Devices enabled with GPS or AGPS technology also transmit location-based information. Additionally, if you use applications that require location-based information (e.g. driving directions), such applications transmit location-based information. This location-based information may be shared with third parties, including your wireless service provider, applications providers, Motorola and other third parties providing services.
- **Other information your device may transmit**—Your device may also transmit testing and other diagnostic (including location-based) information, and other non-personal information to Motorola or other third-party servers. This information is used to help improve products and services offered by Motorola.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at privacy@motorola.com, or contact your service provider.

Use & care

To care for your Motorola phone, please observe the following:



liquids

Don't expose your mobile device to water, rain, extreme humidity, sweat or other liquids. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



microwaves

Don't try to dry your phone in a microwave oven.



dust and dirt

Don't expose your phone to dust, dirt, sand, food or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions.



shock and vibration

Don't drop your phone.



protection

To help protect your mobile device, always make sure that the battery compartment and any connector covers are closed and secure.

Recycling

Mobile devices & accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets or batteries) with your household waste or in a fire. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola approved service centre in your region. Details of Motorola approved national recycling schemes and further

information on Motorola recycling activities can be found at:

www.motorola.com/recycling

Packaging & product guides

Product packaging and product guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

Software copyright notice

Motorola products may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in Motorola products may not be modified, reverse-engineered, distributed or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of Motorola products shall not be deemed to grant, either directly or by implication or estoppel or otherwise, any licence under the copyrights, patents or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

Content copyright

The unauthorised copying of copyrighted materials is contrary to the provisions of the copyright laws of the United States and other countries. This device is intended solely for copying non-copyrighted materials, materials in which you own the copyright or materials which you are authorised or legally permitted to copy. If you are uncertain about your right to copy any material, please contact your legal advisor.

Open source software information

For instructions on how to obtain a copy of any source code being made publicly available by Motorola related to software used in this Motorola mobile device, you

may send your request in writing to the address below. Please make sure that the request includes the model number and the software version number.

MOTOROLA MOBILITY, INC.

OSS Management
600 North US Hwy 45
Libertyville, IL 60048
USA

The Motorola website opensource.motorola.com also contains information regarding Motorola's use of open source.

Motorola has created the opensource.motorola.com website to serve as a portal for interaction with the software community-at-large.

To view additional information regarding licences, acknowledgments and required copyright notices for open source packages used in this Motorola mobile device, please press Menu  > **Settings > About phone**

> **Legal information > Open source licences**. In addition, this Motorola device may include self-contained applications that present supplemental notices for open source packages used in those applications.

WARRANTY INFORMATION

Motorola guarantees to you, the original purchaser, the Personal Communicator and accessories which you have purchased from an authorised Motorola dealer (the "Products"), to be in conformance with the applicable Motorola specifications current at the time of manufacture for a different period of time from date of purchase of the Product(s) (warranty term).

The warranty period starts at the time of the original purchase of the Product(s) by the first end-user. The Product may consist of several different parts and different parts may be covered by a different warranty period (hereinafter "Warranty Period"). The different Warranty Periods are:

- Twelve (12) months for the Personal Communicator and for accessories (whether included in the Product sales package or sold separately) other than the consumable parts and accessories listed in (b) and (c) below;
- Six (6) months for the following consumable parts and accessories: batteries, and
- Ninety (90) days for the media on which any software is provided e.g. CD-ROM, memory card.

You must inform Motorola of the lack of conformity to the applicable specifications of any of the Products within a period of two (2) months from the date on which you detect a defect in material, workmanship or lack of conformity and in any event within a term not to exceed the Warranty Term, and must immediately submit the Product for service to Motorola's Authorised Repair or Service Centre. Motorola shall not be bound by Product-related statements not directly made by Motorola nor any warranty obligations applicable to the seller.

During the Warranty term, Motorola will, at its discretion and without extra charge, as your exclusive remedy, repair or replace your Product which does not comply with this warranty; or failing this, to reimburse the price of the Product but reduced to take into account the use you have had of the Product since it was delivered. This warranty will expire at the end of the Warranty Term.

This is the complete and exclusive warranty for a Motorola Personal Communicator and accessories and in lieu of all other warranties, terms and conditions, whether express or implied.

Where you purchase the product other than as a consumer, Motorola disclaims all other warranties, terms and conditions express or implied, such as fitness for purpose and satisfactory quality.

In no event shall Motorola be liable for damages nor loss of data in excess of the purchase price nor for any incidental special or consequential damages¹ arising out of the use or inability to use the Product, to the full extent such may be disclaimed by law.

This Warranty does not affect any statutory rights that you may have if you are a consumer, such as a warranty of satisfactory quality and fit for the purpose for which products of the same type are normally used under normal use and service, nor any rights against the seller of the Products arising from your purchase and sales contract.

HOW TO GET WARRANTY SERVICE?

In most cases the authorised Motorola dealer which sold and/or installed your Motorola Personal Communicator and original accessories will honour a warranty claim and/or provide warranty service. Alternatively, for further information on how to get warranty service, please contact either the customer service department of your service provider or go to <http://www.motorola.com/support/warrantyselector>. Where, in the country of purchase, there is a statutory requirement to provide extended repair service to consumers beyond the first year of purchase (South Africa and Portugal), this warranty will be provided by Motorola Authorised Service Centres or Motorola directly appointed dealers in the country of purchase according to the terms of this warranty information document. However, please note that you will be referred back to the place of purchase, if the Motorola Dealer has purchased the product directly from Motorola, in the country of purchase or in a country where Motorola is not required to support supplementary repair service during the second year of purchase because of the statutory obligations that may apply to the seller or importer of the product, but not to the manufacturer, to provide an extended warranty to consumers beyond the first year.

¹ including without limitation loss of use, loss of time, loss of data, inconvenience, commercial loss, lost profits or savings.

CLAIMING

In order to claim the warranty service, you must return the Personal Communicator and/or accessories in question to Motorola's Authorised Repair or Service Centre in the original configuration and packaging as supplied by Motorola. Please avoid leaving any supplementary items like SIM cards. The Product should also be accompanied by a label with your name, address, and telephone number; name of operator and a description of the problem. In the case of vehicular installation, the vehicle in which the Personal Communicator is installed should be driven to the Authorised Repair or Service Centre, as analysis of any problem may require inspection of the entire vehicular installation.

In order to be eligible to receive warranty service, you must present your receipt of purchase or a comparable substitute proof of purchase bearing the date of purchase. The phone should also clearly display the original compatible electronic serial number (IMEI) and mechanic serial number [MSN]. Such information is contained with the Product.

You must ensure that any and all repairs or servicing is handled at all times by a Motorola Authorised Service Centre in accordance with the Motorola Service requirements.

In some cases, you may be requested to provide additional information concerning the maintenance of the Products by Motorola Authorised Service Centres only, therefore it is important to keep a record of any previous repairs, and make them available if questions arise concerning maintenance.

CONDITIONS

This warranty will not apply if the type or serial numbers on the Product have been altered, deleted, duplicated, removed, or made illegible. Motorola reserves the right to refuse free-of-charge warranty service if the requested documentation can not be presented or if the information is incomplete, illegible or incompatible with the factory records.

Repair, at Motorola's option, may include reflashing of software, the replacement of parts or boards with functionally equivalent, reconditioned or new parts or boards. Replaced parts, accessories, batteries, or boards are warranted for the balance of the original warranty time period. The Warranty Term will not be extended. All

original accessories, batteries, parts, and Personal Communicator equipment that have been replaced shall become the property of Motorola. Motorola does not warrant the installation, maintenance or service of the products, accessories, batteries or parts.

Motorola will not be responsible in any way for problems or damage caused by any ancillary equipment not furnished by Motorola which is attached to or used in connection with the Products, or for operation of Motorola equipment with any ancillary equipment and all such equipment is expressly excluded from this warranty.

When the Product is used in conjunction with ancillary or peripheral equipment not supplied by Motorola, Motorola does not warrant the operation of the Product/peripheral combination and Motorola will not honour any warranty claim where the Product is used in such a combination and it is determined by Motorola that there is no fault with the Product. Motorola specifically disclaims any responsibility for any damage, whether or not to Motorola equipment, caused in any way by the use of the Personal Communicator, accessories, software applications and peripherals (specific examples include, but are not limited to: batteries, chargers, adapters, and power supplies) when such accessories, software applications and peripherals are not manufactured and supplied by Motorola.

WHAT IS NOT COVERED BY THE WARRANTY

This warranty is not valid if the defects are due to damage, misuse, tampering, neglect or lack of care and in case of alterations or repair carried out by unauthorised persons.

The following are examples of defects or damage not covered by this product warranty:

- 1 Defects or damage resulting from use of the Product in other than its normal and customary manner.
- 2 Defects or damage from misuse, access to incompatible sources, accident or neglect.
- 3 Defects or damage from improper testing, operation, maintenance, installation, adjustment, unauthorised software applications or any alteration or modification of any kind.

- 4 Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- 5 Products disassembled or repaired other than by Motorola in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim.
- 6 Defects or damage due to range, coverage, availability, grade of service, or operation of the cellular system by the cellular operator.
- 7 Defects or damage due to moisture, liquid, extreme humidity, heavy perspiration or other moisture, sand, food, dirt or similar substances, caused from incorrectly securing the Product's protective elements and/or subjecting the Products to conditions exceeding any stated specification or limit.
- 8 Control unit coil cords in the Product that are stretched or have the modular tab broken.
- 9 All plastic surfaces and all other externally exposed parts that are scratched or damaged due to customer normal use.
- 10 Leather cases (which are covered under separate manufacturer's warranties).
- 11 Products rented on a temporary basis.
- 12 Periodic maintenance and repair or replacement of parts due to normal wear and tear.

Note: The talk-time, stand-by time and total life cycle of a Motorola rechargeable battery for your Personal Communicator will depend on usage conditions and network configurations. As a consumable product, the specifications indicate that you should be able to obtain optimum performance for your Motorola Personal Communicator within the first six months from date of purchase and up to (200) charges (Optimum Performance Time).

The warranty for Motorola rechargeable batteries becomes void if (i) the batteries are charged other than by Motorola approved battery chargers specified for the charging of the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, (iii) the battery is used in equipment or service other than the mobile telephone equipment for which it is specified.

Depending on operating conditions and your usage habits, wear and tear might take place of components including mechanical problems related to Product housing, paint, assembly, sub-assemblies, displays and keyboards and any

accessories which are not part of the Product's in-box configuration. The rectification of faults generated through wear and tear and the use of consumable items like batteries beyond their Optimum performance time as indicated in the product manual is considered to be your responsibility and therefore Motorola will not provide the free Warranty repair service for these items.

INSTALLED DATA

Please make and retain a note of all data you have inserted into your Product for example names, addresses, phone numbers, user and access codes, notes etc. before submitting your Product for a Warranty service as such data may be deleted or erased as part of the repair or service process.

Please note if you have downloaded material onto your Product, for example, ring tones, ring tunes, screensavers, wallpaper, games, etc. these may be deleted or erased as part of the repair process or testing process. Motorola shall not be responsible for such matters. The repair or testing process should not affect any such material that was installed by Motorola on your Product as a standard feature.

OUT OF WARRANTY REPAIRS

If you request Motorola to repair your Product any time after the Warranty term or where this warranty does not apply due to the nature of the defect or fault, then Motorola may at its discretion carry out such repairs subject to you paying Motorola its fees for such a repair or it may refer you to an authorised third party to carry out such repairs.

Copyright & trademarks

www.hellomoto.com

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation. MOTOROLA, the Stylised M Logo, MOTOBLUR and the MOTOBLUR logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. The Bluetooth trademarks are owned by their proprietor and used by Motorola Mobility, Inc. under licence. **WiFi** is a Certification Mark of the Wireless Fidelity Alliance, Inc. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Google, the Google logo, Google Maps, Google Maps Navigation, Gmail, Google Talk, YouTube, Picasa, Android and Android Market are trademarks of Google, Inc. Facebook is a registered trademark of Facebook, Inc. DLNA, the DLNA logo and DLNA CERTIFIED are trademarks, service marks or certification marks of the Digital Living Network Alliance. Microsoft, Windows, Windows Me and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries. All rights reserved. All other product or service names are the property of their respective owners.

© 2010 Motorola Mobility, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Product ID: MOTOROLA MILESTONE 2 (A953)

Manual Number: 68004128004



68004128004