 


GT-S3800W user manual

Device layout

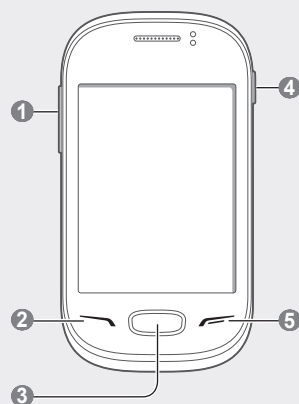

1
Volume button
From the Home screen, adjust the device's volume; Send an SOS message
See "Using the SOS message feature"

2
Dial button
Make or answer a call; From the Home screen, retrieve recently dialed, missed, or received numbers

3
Back button
In the Menu screen, cancel an input and return to the Home screen

4
Power button
Turn the device on or off (press and hold)


5
End button
End a call; In the Menu screen, cancel an input and return to the Home screen

The device displays the following status indicators at the top of the screen:

Icon	Description	Icon	Description
	No SIM card		Normal profile activated
	No signal		Silent profile activated
	Signal strength		Bluetooth feature activated
	Network searching		Wi-Fi connected
	GPRS network connected		Browsing the web
	EDGE network connected		Connected to computer
	Battery power level		Alarm activated
	Call in progress		Music playback in progress
	Call diverting activated		Music playback paused
	New text message (SMS)		FM radio on
	New multimedia message (MMS)		Roaming (outside of normal service area)
	New voicemail message		Memory card inserted
	New push message		10:00 Current time
	SOS message feature activated		


Installing the SIM card and battery

 1. Remove the back cover and insert the SIM card.

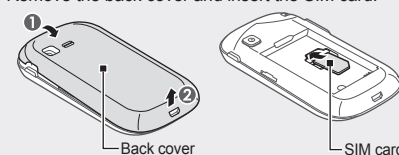

! Do not bend or twist the back cover excessively. Doing so may damage the cover.

 2. Insert the battery and replace the back cover.

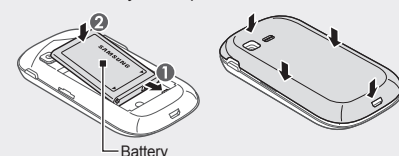


- Some content may differ from your device depending on the region or service provider.
- Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time.
- This product includes certain free/open source software. The exact terms of the licences, disclaimers, acknowledgements and notices are available on the Samsung's website opensource.samsung.com.
- Content (high quality content) that requires high CPU and RAM usage will affect the overall performance of the device. Applications related to the content may not work properly depending on the device's specifications and the environment that it is used in.

www.samsung.com

Printed in Korea
GH68-38248A
English (EU), 03/2013, Rev. 1.1



 Charging the battery

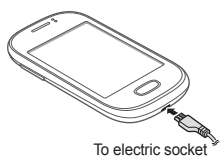


- Plug the small end of the charger into the multipurpose jack of the device, and plug the large end of the charger into an electric socket.
- After fully charging, disconnect the device from the charger. First unplug the charger from the device, and then unplug it from the electric socket.

- Use only Samsung-approved chargers, batteries, and cables. Unapproved chargers or cables can cause battery to explode or damage the device.
- Do not remove the battery before removing the charger. This may damage the device.

- To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The device should remain close to the electric socket while charging.
- If the device receives an unstable power supply while charging, the touch screen may not function. If this happens, unplug the charger from the device.

Inserting a memory card (optional)

 The device accepts memory cards with maximum capacities of 32 GB. Depending on the memory card manufacturer and type, some memory cards may not be compatible with the device.

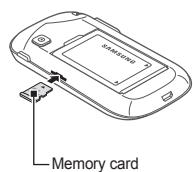

Insert the memory card as shown in the drawing.

- Formatting the memory card on a computer might cause incompatibility with your device. Format the memory card only on the device.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.
- Do not use sharp tools to remove the memory card from the device.

Turning the device on or off

Turning the device on

Press and hold the Power button, and then enter the PIN, if necessary.

Turning the device off

Press and hold the Power button.

- If the battery is fully discharged or removed from the device, the time and date will be reset.

Using the touch screen

The device's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.

- Do not use sharp tools to avoid scratching the touch screen.

Tap	Touch the screen once to select or launch a menu, option, or application.
Tap and hold	Tap an item and hold for more than 2 seconds.
Drag	Tap and hold an item, then drag it to move.

Accessing menus

To access the device's menus or options,

Drag on the touch screen	Scroll left or right to see another Menu screen.
Tap	Launch a menu or an application.
Menu	Open the Menu screen.
←	Return to the previous screen.
↶	Close the menu or application and return to the Home screen.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damage caused by illegal software.

Entering text

Changing the text input mode

Tap EN	Change the input language.
Tap T9	Switch between T9 and ABC mode. Depending on region, you might be able to access an input mode for your specific language.
Tap 123 or sym	Switch to Number or Symbol mode.

Making or answering a call

- To make a call, tap **Keypad**, enter a phone number and select **☎**.
- To end a call, press **[⏏]**.
- To call a recently dialed number, select **☎** to select a number, and select **☎** again to dial the number.
- To make a call using the phonebook, tap **Contacts**, select a contact and select **☎**.
- To answer an incoming call, press **[⏏]**.

Sending and viewing messages

Home screen → **Messages**

Sending messages

- Tap **Compose**.
- Tap **+⊞** to open the phonebook.
- Select a contact.
- Select the text input field and enter a text message.
See "Entering text".
- To attach files with the message, tap **Add media** and select files.
- Select **Send**.

Viewing messages

Select a message to read.

Managing contacts

Save data, such as names, phone numbers and personal information in the device memory, SIM card, or the memory card.

Home screen → **Contacts**

Adding new contacts

- Tap **Create contact** → a memory location (if necessary).
- Select a number type (if necessary).
- Enter contact information and tap **Save**.

Editing contacts

- Select a contact and tap **Edit**.
- Edit items and tap **Done**.
- Tap **Save**.

Deleting contacts

Select a contact and tap **Delete**.

Using the alarm

Menu → **Alarms**

Setting alarms

- Tap **Create**.
- Enter details and tap **Save**.

Stopping alarms

When an alarm rings,

- Tap and hold **Stop** to stop the alarm.
- Tap and hold **Snooze** to silence the alarm for the snooze period.

Deactivating alarms

Tap **☑** next to the alarm.

Listening to music

Menu → **Music**

Keys	Function
	Play, pause, or resume a music.
	Skip backwards (tap); Scan backwards in a file (tap and hold).
	Skip forwards (tap); Scan forwards in a file (tap and hold).

Listening to the FM radio

Menu → **FM Radio**

Activating the FM radio

- Plug a headset into the device.
- Tap **☑** to turn on the FM radio.
- Control the FM radio using the following keys:

Keys	Function
	Turn the FM radio on or off.
	Search for the next available station.

Adding radio stations to the favourites list

- Plug a headset into the device.
- Tap **★** to add the station to the favourites list.

Using the camera

Menu → **Camera**

Taking photos

- Rotate the device anti-clockwise to landscape view.
- Aim the lens at the subject and make any adjustments by tapping **☑**.
- Tap **☑** to take a photo. Photos are saved automatically.

Recording videos

- Drag the slider to switch to the camcorder.
- Rotate the device anti-clockwise to landscape view.
- Aim the lens at the subject and make any adjustments by tapping **☑**.
- Tap **☑** to start recording.
- Tap **☑** to end recording. Videos are saved automatically.

Viewing photos and videos

From the Home screen, tap **Menu** → **My Files** → **Images** or **Videos** and select an item to view.

Using Wi-Fi

Use the networking feature to connect to local wireless networks and use hotspots or access points to connect to the Internet.

Menu → **Wi-Fi**

Turning Wi-Fi feature on or off

Tap the button next to **Wi-Fi** to turn the Wi-Fi feature on or off.

Finding and connecting to a Wi-Fi network

- Tap **Refresh**.
- Select the check box next to a network.
- Enter a password for the network and tap **Connect** (if necessary).

Browsing the web

Menu → **Internet**

- When users access **Internet** for the first time, users might be prompted to create an Internet profile.

Navigating webpages

Tap the address field, enter the webpage address to browse, and then tap **Open**.

Keys	Function
	Return to the previous or next page.
	Open browser options.

Bookmarking webpages

- Tap **★** → **Add**.
- Enter details and tap **Save**.

Using the Bluetooth feature

Menu → **Bluetooth**

Turning on the Bluetooth feature

- Tap **Bluetooth** to turn it on.
- Tap **Settings** and set **My phone's visibility** to allow other devices to search your device.

Finding and pairing with other Bluetooth devices

- Tap **Search** to find other Bluetooth devices.
- Select a device.
- Tap **Yes** to match the PIN between the devices.
- When the other device accepts the connection, pairing is complete.

- Users might have to enter a PIN, depending on the device.

Turning off the Bluetooth feature

Tap **Bluetooth** to turn it off.

Sending data using the Bluetooth feature

- Select items to send from one of the device's applications.
- Tap **Send via** → **Bluetooth**.

Managing calendar

Menu → **Calendar**

Creating events

- Tap **Create** and select an event type.
- Enter details of the event and tap **Save**.

Viewing events

Select a date to view. To change the calendar view, tap **Month** or **Week** or **Day**.

Using widgets

Use widgets to perform specific tasks for applications such as contacts, calendar, memo, and many more.

Launching widgets

From the Home screen, scroll left or right to see another panel and select a widget.

Organising widgets

- From the Home screen, tap **☑** at the top left corner of the screen.
- Select a widget for each panel and tap **Done**.

- Some widgets require connection to web services. Selecting a web-based widget might incur additional charges.
- Available widgets might vary, depending on the region or service provider.

