

---

# User Guide

Nokia 130

**NOKIA**

---

# User Guide

Nokia 130

## Contents

<b>For your safety</b>	<b>3</b>	<b>Access codes</b>	<b>15</b>
<b>Get started</b>	<b>4</b>	<b>Product and safety info</b>	<b>16</b>
Keys and parts	4		
Insert the SIM and memory card and battery	4		
Charge the battery	6		
Lock or unlock the keys	6		
<b>Basics</b>	<b>8</b>		
Explore your phone	8		
Change the volume	9		
Change the wallpaper	9		
Set the ringtone	9		
Write text	10		
Use predictive text	10		
<b>People &amp; messaging</b>	<b>11</b>		
Make a call	11		
Save a name and phone number	11		
Send and receive messages	11		
<b>Entertainment</b>	<b>12</b>		
Listen to music	12		
Listen to the radio	12		
Play a video	12		
<b>Office</b>	<b>13</b>		
Set an alarm	13		
Add a calendar reminder	13		
Change the time and date	13		
<b>Phone management</b>	<b>14</b>		
Share your content using Slam	14		
Copy content between your phone and computer	14		
Remove private content from your phone	14		

# For your safety

Read these simple guidelines. Not following them may be dangerous or illegal.



## **SWITCH OFF IN RESTRICTED AREAS**

Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas.



## **ROAD SAFETY COMES FIRST**

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



## **INTERFERENCE**

All wireless devices may be susceptible to interference, which could affect performance.



## **QUALIFIED SERVICE**

Only qualified personnel may install or repair this product.



## **BATTERIES, CHARGERS, AND OTHER ACCESSORIES**

Use only batteries, chargers, and other accessories approved by Microsoft Mobile for use with this device. Do not connect incompatible products.



## **KEEP YOUR DEVICE DRY**

Your device is not water-resistant. Keep it dry.



## **PROTECT YOUR HEARING**

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

 
# Get started

Get started with the basics, and have your phone up and running in no time.

## Keys and parts

Explore the keys and parts of your new phone.

- 1 Charger connector
- 2 Headset connector (3.5 mm)
- 3 Scroll key
- 4 End/Power key
- 5 Microphone
- 6 Call key
- 7 Selection keys
- 8 Earpiece
- 9 Flashlight
- 10 Loudspeaker
- 11 Antenna area

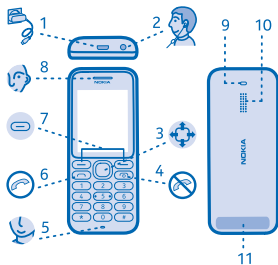

Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

**!** **Note:** You can set the phone to ask for a security code. The pre-set code is 12345, but you can change it to protect your privacy and personal data. Note, however, that when you change the code, you need to remember the new code, as Microsoft Mobile is not able to open or bypass it.

## Insert the SIM and memory card and battery

Learn how to insert the battery and SIM and memory cards.

**!** **Important:** This device is designed to be used with a standard SIM card (see figure) only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. Please consult your mobile operator for the use of a SIM card that has a mini-UICC cutout.

 


Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.




**!** **Note:** Switch the device off and disconnect the charger and any other device before removing any covers. Avoid touching electronic components while changing any covers. Always store and use the device with any covers attached.

1. Press the back cover with your thumb, carefully lift the bottom edge of the back cover with your fingers, and remove the cover.

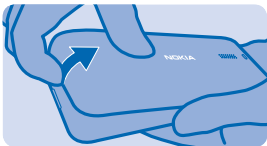

 
2. If the battery is in the phone, lift it out.

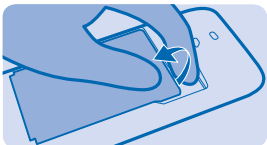


3. Slide the SIM in with the contact area face down.



 4. Push the memory card into the memory card slot.

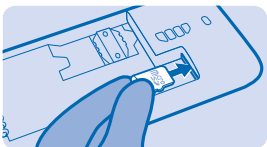

 5. Line up the battery contacts, and put the battery in.

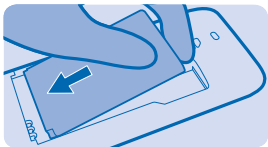

6. Replace the back cover.

#### **Remove the SIM card**

Open the back cover, remove the battery, press the release spring, and slide the SIM out.

#### **Remove the memory card**

Open the back cover, remove the battery, and pull the memory card out.

 
#### **Switch your phone on**

Press and hold the power key.

## **Charge the battery**

Your battery has been partially charged at the factory, but you may need to recharge it before you can use your phone.

1. Plug the charger into a wall outlet.
2. Connect the charger to the phone. When done, unplug the charger from the phone, then from the wall outlet.

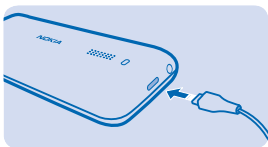

If the battery is completely discharged, it may take up to 20 minutes before the charging indicator is displayed.

- ★ **Tip:** You can use USB charging when a wall outlet is not available. Data can be transferred while charging the device. The efficiency of USB charging power varies significantly, and it may take a long time for charging to start and the device to start functioning.

Make sure your computer is switched on.

## **Lock or unlock the keys**

To avoid accidentally pressing the keys, use keypad lock.

1. Quickly press .



2. Select **Lock**.



### Unlock the keypad

Press , and select **Unlock**.

# Basics

Learn how to get the most out of your new phone.

## Explore your phone

Explore your phone with a simple key press.

 
### See the apps and features of your phone

Press **Menu**.



### Go to an app or feature

Press the scroll key up, down, left, or right.

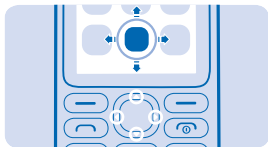


### Open an app or select a feature

Press **Select**.



### Go back to the previous view

 Press **Back**.

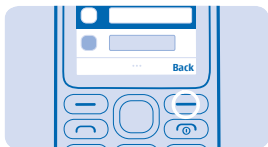




## Go back to the home screen

Press .



## Switch the flashlight on

 On the home screen, quickly press the scroll key up twice.

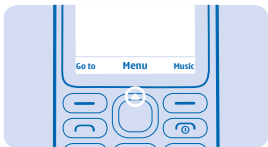

To switch the flashlight off, press up once.

Do not shine the light in anyone's eyes.

## Change the volume

Trouble hearing your phone ringing in noisy environments, or calls too loud? You can change the volume to your liking.

Scroll left or right to change the volume during a call or when listening to the radio.



## Change the wallpaper

You can change the background of your home screen to your liking.

1. Select **Menu > Settings > Display settings > Wallpaper**.
2. Select a wallpaper.

## Set the ringtone

Set a ringtone for your phone.

1. Select **Menu > Settings > Tone settings**.
2. Select **Ringtone**.

3. Pick a ringtone, and select **OK**.

## Write text

Writing with the keypad is easy and fun.

Press a key repeatedly until the letter is shown.

### Type in a space

Press **0**.

### Type in a special character or punctuation mark

Press **\***.

### Switch between character cases

Press **#** repeatedly.

### Type in a number

Press and hold a number key.

## Use predictive text

To speed up your writing, your phone can guess what you are starting to write. Predictive text is based on a built-in dictionary. This feature is not available for all languages.

1. Select **Opt.** > **Dictionary** and the language.
2. Start writing a word. When the word you want is shown, press **0**.

### Change a word

Press **\*** repeatedly until the word you want is shown.

### Add a new word to the dictionary

If the word you want isn't in the dictionary, write the word, press **\*** repeatedly to skip all unwanted words, select **Spell**, and write the word.

### Switch between predictive and traditional text

Press **#** repeatedly.

### Switch predictive text off

Select **Opt.** > **Dictionary** > **Dictionary off**.

# People & messaging

Contact your friends and family using your phone.

## Make a call

Learn how to make a call with your new phone.

1. Type in the phone number.

To type in the + character, used for international calls, press \* twice.

2. Press .

3. To end the call, press .

## Answer a call

Press .

## Save a name and phone number

Save and organise your friends' phone numbers. Or why not spice up your contacts list by assigning different tones for your contacts?

1. Select **Menu** > **Contacts** > **Add contact**.

2. Select where to save the contact.

3. Write the name, and type in the number.

 **Tip:** To save a phone number in the dialler, type in the number, and select **Opt.** > **Save**.

## Send and receive messages

Keep in touch with your friends and family through text messages.

1. Select **Menu** > **Messages**.

2. Select **Create message**.

3. Write your message.

 **Tip:** To insert special characters, such as a smiley or symbol, select **Opt.** > **Insert options**.

4. Select **Opt.** > **Send**. Type in a phone number, or select **Search** and a recipient from your contacts list.

 **Tip:** You can also press  to send the message.

You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options, take more space, and limit the number of characters that can be sent in a single message.

## Read a message

On the lock screen, select **Read**.

 **Tip:** To read the message later, select **Menu** > **Messages** > **Inbox**.

# Entertainment

Having a spare moment and in need of entertainment? Learn how to listen to music or the radio on your phone.

## Listen to music

You can listen to your MP3 music files with the music player. To play music, you need to store the music files on a memory card.

1. Select **Menu > Music > Music player**.
2. Select **Opt. > All songs**.
3. Select a song.

## Listen to the radio

Enjoy your favourite FM radio stations on the go.

To listen to the radio, you need to connect a compatible headset to the device. The headset acts as an antenna.

1. Connect a headset, and select **Menu > Radio**.
2. To go to the previous or next channel, scroll up or down.
3. To close the radio, select **Stop**.

## Play a video

Watch your favourite videos wherever you are.

1. Select **Menu > Videos**.
2. Select the video you want to play.

Not all video formats are supported.

### Pause or resume playback

Press the scroll key, and select **Pause** or **Play**.

### Rewind or fast-forward

Press and hold the scroll key up or down.

# Office

Learn how to use the alarm clock to keep yourself organised.

## Set an alarm

Use your phone as an alarm clock.

1. Select **Menu > Clock > Set alarms**.
2. Select an alarm.

 **Tip:** You can set up to 5 different alarms.

3. To set the hour, scroll up or down. To set the minutes, scroll right and then up or down.
4. Select **OK**.

## Add a calendar reminder

Need to remember an event? Add it to your calendar.

1. Select **Menu > Extras > Calendar**.
2. Select a date and **Opt. > Add reminder**.
3. Edit the reminder text, and select **OK**.
4. If you want to be reminded by an alarm, select **Alarm on**, and set the alarm time. Otherwise, select **Alarm off**.

### Delete a calendar entry

Go to the date of the entry, and select it. Then select **View today**, the reminder you want to delete, and **Opt. > Delete**.

## Change the time and date

You can set your phone clock manually.

1. Select **Menu > Settings > Time settings**.
2. To set the time, select **Clock > Set the time**, use the scroll key to set the time, and select **OK**.
3. To set the date, select **Date setting**, use the scroll key to set the date, and select **OK**.

# Phone management

Learn how to manage the personal data in your phone and share content using USB and Bluetooth.

## Share your content using Slam

Share things, such as contacts, easily with friends and family. Just move your phone close to another phone and content is transferred using Bluetooth.

1. Switch Bluetooth on in the receiving phone, and make sure the phone is visible to other phones.
2. Select, for example, a contact. Press the options key, and select **Share > Via Slam**.
3. Move your phone close to the other phone.

Slam searches for the nearest phone, and sends the item to it.

Operating the device in hidden mode is a safer way to avoid malicious software. Do not accept Bluetooth connection requests from sources you do not trust. You can also switch the Bluetooth function off when you are not using it.

## Copy content between your phone and computer

Copy photos, videos, music, and other content created by you (and stored on the memory card) between your phone and computer.

To copy content from the phone memory, you need to have a memory card inserted in your phone.

1. Connect your phone to a compatible computer with a compatible USB cable.
2. Select **Mass storage**.
3. On your computer, open a file manager, such as Windows Explorer, and browse to your phone. You can see the content stored on the memory card.
4. Drag and drop items between your phone and computer.

## Remove private content from your phone

If you buy a new phone, or otherwise want to dispose of or recycle your phone, here's how you can remove personal info and content.

When removing private content from your phone, pay attention to whether you are removing content from the phone memory or the SIM card.

1. To remove messages, select **Menu > Messages > Delete messages**.
2. Go to the folder you want to empty, and select **Delete all** or **All read**. To remove all messages from your phone, empty all the folders separately.
3. To remove contacts, select **Menu > Contacts > Delete > Delete all** and the location.
4. To remove call info, select **Menu > Call register > Delete recent call lists > All**.
5. Check that all your personal content has been removed.

Content and info stored on the memory card is not removed.

## Remove all content from your phone and restore the original settings

To reset your phone to its original settings and to remove all your data, on the home screen, type in **\*#7370#**.

## Access codes

Ever wondered what the different codes on your phone are for?

---

PIN or PIN2 code  
(4-8 digits)

These protect your SIM card against unauthorised use or are required to access some features.

You can set your phone to ask for the PIN code when you switch it on.

If you forget the codes or they aren't supplied with your card, contact your network service provider.

If you type in the code incorrectly 3 times in a row, you need to unblock the code with the PUK or PUK2 code.

---

PUK or PUK2

These are required to unblock a PIN or PIN2 code.

If not supplied with your SIM card, contact your network service provider.

---

Security code (lock code, password)

This helps you protect your phone against unauthorised use.

You can set your phone to ask for the lock code that you define. The default lock code is 12345.

Keep the code secret and in a safe place, separate from your phone.

If you forget the code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data on your phone may be deleted.

For more info, contact the nearest care point for your phone, or your phone dealer.

---

IMEI

This is used to identify phones in the network. You may also need to give the number to your care point services.

To view your IMEI number, dial **\*#06#**.

---

# Product and safety info

## Network services and costs

You can only use your device on the GSM 900, 1800 MHz networks. You need a subscription with a service provider.

You may also need to subscribe to some features.

## Emergency calls

1. Make sure the device is switched on.
2. Check for adequate signal strength.

You may also need to do the following:

- Put a SIM card in the device, if supported by your device.
  - Switch the call restrictions off in your device, such as call barring, fixed dialling, or closed user group.
  - If the device keys are locked, unlock them.
3. Press the end key repeatedly, until the home screen is shown.
  4. Type in the official emergency number for your present location. Emergency call numbers vary by location.
  5. Press the call key.
  6. Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

When you switch your device on for the first time, you are asked to create your Nokia account. To make an emergency call during the account setup, press the call key.

- !** **Important:** Activate both cellular and internet calls, if your phone supports internet calls. The phone may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless phone for essential communications like medical emergencies.

## Take care of your device

Handle your device, battery, charger and accessories with care. The following suggestions help you keep your device operational.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and let the device dry.
- Do not use or store the device in dusty or dirty areas.
- Do not store the device in high temperatures. High temperatures may damage the device or battery.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage it.
- Do not open the device other than as instructed in the user guide.
- Unauthorised modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device or the battery. Rough handling can break it.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can prevent proper operation.
- For optimal performance, switch the device off and remove the battery from time to time.
- Keep the device away from magnets or magnetic fields.
- To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important info.

### Recycle



Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. All materials of the device can be recovered as materials and energy. Check how to recycle your Nokia products at [www.nokia.com/recycle](http://www.nokia.com/recycle).



## Crossed-out wheeled-bin symbol



The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products and batteries must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste: take them for recycling. For info on your nearest recycling point, check with your local waste authority, or go to [www.nokia.com/support](http://www.nokia.com/support). For more info on the environmental attributes of your device, see [www.nokia.com/ecoprofile](http://www.nokia.com/ecoprofile).

## Battery and charger info

Use your device only with an original BL-5C rechargeable battery.

Charge your device with AC-18 charger. Charger plug type may vary.

Microsoft Mobile may make additional battery or charger models available for this device.

## Battery and charger safety

Always switch the device off and unplug the charger before removing the battery. To unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm.

## Small children

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

## Medical devices

Operation of radio transmitting equipment, including wireless phones, may interfere with inadequately shielded medical devices' function. Consult a physician or the medical device's manufacturer to determine if it is adequately shielded from external radio energy.

## Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.
- Switch the wireless device off if there is any reason to suspect that interference is taking place.

- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

## Hearing

**Warning:** When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Some wireless devices may interfere with some hearing aids.

## Protect your device from harmful content

Your device may be exposed to viruses and other harmful content. Take the following precautions:

- Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer.
- Be cautious when accepting connectivity requests, browsing the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust.
- Only install and use services and software from sources that you trust and that offer adequate security and protection.
- Install antivirus and other security software on your device and any connected computer. Only use one antivirus app at a time. Using more may affect performance and operation of the device and/or computer.
- If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. Microsoft Mobile does not endorse or assume liability for such sites.

## Vehicles

Radio signals may affect improperly installed or inadequately shielded electronic systems in vehicles. For more info, check with the manufacturer of your vehicle or its equipment.

Only qualified personnel should install the device in a vehicle. Faulty installation may be dangerous and invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable or explosive materials in the same compartment as the device, its parts, or accessories. Do not place your device or accessories in the air bag deployment area.

## Potentially explosive environments

Switch your device off in potentially explosive environments, such as near petrol pumps. Sparks may cause an explosion or fire resulting in injury or death. Note restrictions in areas with fuel; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive environment may not be clearly marked. These usually are areas where you are advised to switch your engine off, below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles. Check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) if this device can be safely used in their vicinity.

## Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves.

For information on SAR, see the printed user guide, or go to [www.nokia.com/sar](http://www.nokia.com/sar).

## Copyrights and other notices

### DECLARATION OF CONFORMITY

# CE 0168

Hereby, Microsoft Mobile Oy declares that this RM-1037 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at [www.nokia.com/global/declaration/declaration-of-conformity](http://www.nokia.com/global/declaration/declaration-of-conformity).

The availability of products, features, apps and services may vary by region. Microsoft Mobile may, in its sole discretion, change, correct or discontinue any of its services in whole or in part. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Microsoft Mobile reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall Microsoft Mobile or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of Microsoft Mobile is prohibited. Microsoft Mobile operates a policy of continuous development. Microsoft Mobile reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Microsoft Mobile does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

TM & © 2014 Microsoft Mobile. All rights reserved. Nokia is a TM of Nokia Corporation. Third party products/names may be TMs of their respective owners.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Microsoft Mobile is under license.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See [www.mpegla.com](http://www.mpegla.com).