


Welcome




Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola E550 GSM wireless phone.

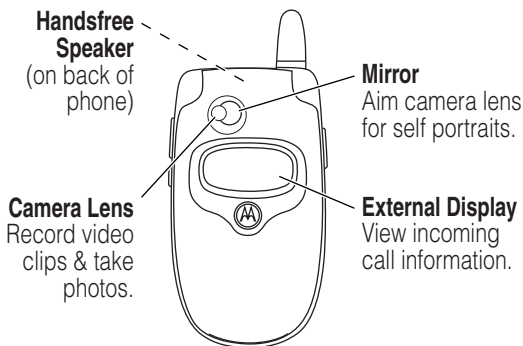

Check It Out!



Feature	Description
Record Video Clip	Record a video clip: Press > Multimedia > Videos > [New Video] , point lens at subject, press CAPTURE () to begin recording, press STOP () to stop recording.
Play Video Clip	Play a video clip: > Multimedia > Videos > <i>video clip</i>
Take Photo	Press > Multimedia > Camera , point lens at subject, press CAPTURE () to take a photo.
Send Photo	Send a photo to a phone number or email address: Take photo, then press STORE () > Send In Message .

Feature	Description
Set Photo as Picture ID	Assign a photo to a phonebook entry to allow picture caller ID: Take photo, then press STORE (👁️) > Apply as Phonebook Entry.
Send Multimedia Message	Send a multimedia message with pictures, animations, sounds, and videos: 📄 > Messages > Create Message > New Multimedia Msg 
Read Multimedia Message	Read a new multimedia message or letter that you have received: Press READ (👁️). 
Store Message Objects	Go to a multimedia message page, or highlight an object in a letter, then: 📄 > Store 
Wireless Connection	Set up a Bluetooth® wireless connection to a headset accessory, car kit, or external device: 📄 > Settings > Connection > Bluetooth Link > Setup > Power > On , press BACK (👁️), press > Handsfree > [Look For Devices]

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc. 2003, 2004.

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.

Contents

Safety and General Information	8
Getting Started	15
About This Guide	15
Installing the SIM Card	16
Battery Use	17
Installing the Battery	18
Charging the Battery	19
Turning Your Phone On	20
Turning Your Phone Off	20
Adjusting Volume	20
Making a Call	21
Answering a Call	21
Viewing Your Phone Number	22
Highlight Features	23
Recording and Playing Video Clips	23
Taking and Sending a Photo	27
Sending a Multimedia Message	29
Receiving a Multimedia Message	32
Using a Bluetooth® Wireless Connection	33
Learning to Use Your Phone	35
Using the Display	35
Using the 5-Way Navigation Key	40
Using Menus	41
Entering Text	43
Using the Smart Key	53
Using the External Display	54

Using the Handsfree Speaker	55
Changing a Code, PIN, or Password	55
Locking and Unlocking Your Phone	56
If You Forget a Code, PIN, or Password	57
Using the Phonebook	58
Setting Up Your Phone	60
Setting a Ring Style	60
Changing the Call Alert	61
Setting the Time and Date	61
Setting a Wallpaper Image	62
Setting a Screen Saver Image	63
Changing Phone Skin	64
Setting a Phone Theme	64
Setting Answer Options	65
Setting Display Brightness	66
Adjusting the Backlight	66
Setting Display Timeout	66
Storing Your Name and Phone Number	67
Calling Features	68
Turning Off a Call Alert	68
Viewing Recent Calls	68
Redialling a Number	70
Using Automatic Redial	70
Returning an Unanswered Call	71
Using the Notepad	71
Putting a Call On Hold or Mute	72
Using Call Waiting	72
Using Caller ID (Incoming Calls)	73
Calling an Emergency Number	73
Dialling International Numbers	73

Calling With 1-Touch Dial	74
Using Voicemail	74
Changing the Active Line	76
Phone Features	77
Main Menu	77
Settings Menu	78
Feature Quick Reference	79
Calling Features	79
Messages	80
Phonebook	81
Personalising Features	83
Instant Messaging	84
Chat	85
Email	85
Menu Features	86
Special Dialling Features	87
Call Monitoring	87
Handsfree Features	88
Data and Fax Calls	89
Bluetooth® Wireless Connections	90
Network Features	91
Personal Organiser Features	92
Security	93
News and Entertainment	93
Specific Absorption Rate Data	96
Index	98

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorised antennas may result in non-compliance with the local regulatory requirements in your country.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimetres) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimetres) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimetres) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimetres) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your GP may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless it is a phone type especially qualified for use in such areas and certified as “Intrinsically Safe.” Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

***Note:** The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.*






Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, bag, or other container with metal objects. Use only Motorola original batteries and chargers.

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to blinking lights, such as when watching television

or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a blinking-lights feature on your phone. (The blinking-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate blinking lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a blinking-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:


- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

European Union Directives Conformance Statement

Hereby, Motorola declares that this product is in compliance with



- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

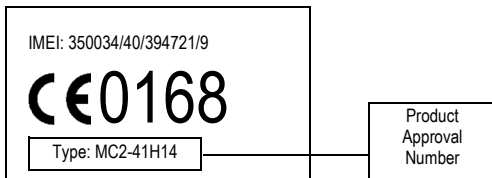

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site

Getting Started

About This Guide

This guide describes the basic features of your Motorola wireless phone.

To obtain another copy of this guide, see the Motorola Web site at:

 
<http://hellomoto.com>.


Selecting a Menu Feature

Use the menu system to access your phone's features. This guide shows you how to select a menu feature from the home screen as follows:

Find the Feature

 > **Recent Calls** > **Dialled Calls**

This example shows that, from the home screen, you must press the menu key  to open the menu, scroll to and select

 **Recent Calls**, then scroll to and select **Dialled Calls**.

Press the 5-way navigation key  to scroll and highlight a menu feature. Press **SELECT** () to select the highlighted menu feature.

Optional Features



This label identifies an optional network, SIM card, or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories




This label identifies a feature that requires an optional Motorola Original™ accessory.

Installing the SIM Card


Your *Subscriber Identity Module* (SIM) card contains your phone number, service details, and phonebook/message memory.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.


1.

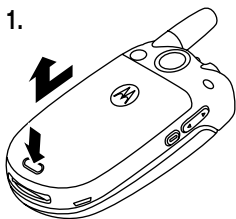


2.

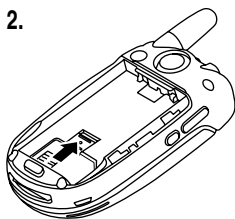

3.

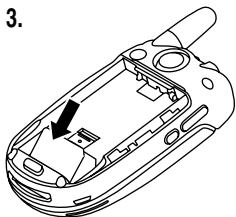

4.

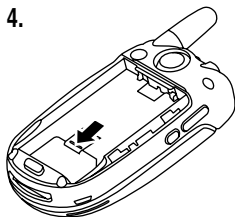

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; items attached to the phone's accessory connector port; and your voice, data, and other application usage patterns.

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximise your battery's performance:

- Always use Motorola Original batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for a long time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this phone must be disposed of properly and may need to be recycled.

Refer to your battery's label for battery type. Contact your local recycling centre for proper disposal methods.

Warning: Never dispose of batteries in a fire because they may explode.


Installing the Battery




TM Your phone is designed to use only Motorola Original batteries and accessories.

***Note:** Your phone is shipped with a protective clear plastic liner covering the battery door latch. Remove the liner to ensure that the battery door attaches and closes properly.*


1.

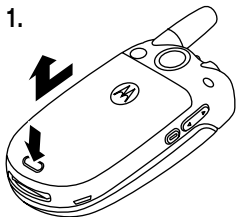

2.

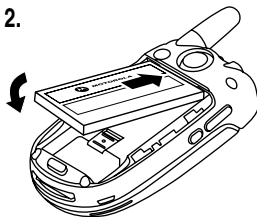

3.

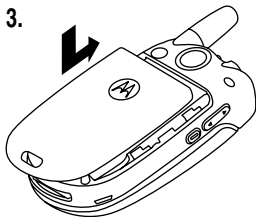


Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

Action

- 1 Insert the travel charger plug into your phone with the release tab facing up. Make sure that both of the plug's connector hooks engage to lock the plug in place.

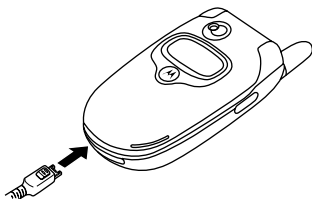

-
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.


Note: It may take up to 10 seconds for your phone to provide a visible or audible indication that the battery is charging.

-
- 3 When your phone indicates **Charge Complete**, press the release tab and remove the travel charger.
-
-


Tip: You can safely leave the travel charger connected to the phone after charging is complete. This will not damage the battery.


Turning Your Phone On

Action


- 1 Open your phone.
- 2 Press and hold the power key  for 2 seconds to turn the phone on.

Note: It may take up to 4 seconds for the display to illuminate after you turn the phone on.

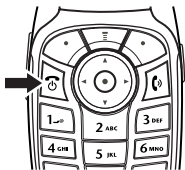


- 3 If necessary, enter your SIM card PIN code and press **OK** () to unlock the SIM card.

Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**.

- 4 If necessary, enter your 4-digit unlock code and press **OK** () to unlock the phone.

Turning Your Phone Off


Action

Press and hold the power key  for 2 seconds to turn the phone off.

Adjusting Volume

Press the up or down volume keys to:

- silence an incoming call alert
- increase or decrease earpiece volume during a call

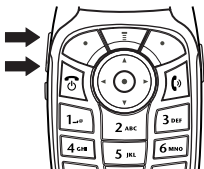



- increase or decrease the ringer volume setting when the home screen is visible (flip must be open)

Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to switch back to vibrate alert, then ring alert.

Making a Call


You must be in the home screen to dial a phone number (see page 35).

	Press	To
1	keypad keys	dial the phone number
2		make the call
3		end the call and “hang up” the phone when you are finished




Tip: You can also close the phone flip to end the call.

Answering a Call



When you receive a call, your phone rings and/or vibrates and displays an incoming call message.


When the phone flip is active, open the phone to answer the call. (To activate, press  > **Settings** > **In-Call Setup** > **Answer Options** > **Open to Answer.**)

If the phone flip is not active:

Press	To
1  or ANSWER ()	answer the call
2 	end the call and “hang up” the phone when you are finished

Viewing Your Phone Number

To view your phone number from the home screen, press  .

While you are on a call, press  > **My Tel. Numbers**.

***Note:** Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 67. If you do not know your phone number, contact your service provider.*

Highlight Features

You can do much more with your phone than make and receive calls!

Recording and Playing Video Clips

You can record a video clip with your phone, and send it to other wireless phone users in a multimedia message.


Recording a Video Clip

To activate your phone's video camera:

Find the Feature

 > **Multimedia** > **Videos** > **[New Video]**

The active viewfinder image appears on your display.

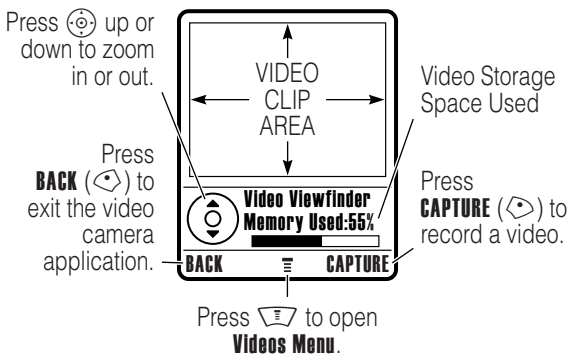

Point the camera lens at the video subject, then:

Press	To
1 CAPTURE (📷)	begin video recording
2 STOP (📷)	stop video recording
3 STORE (📷)	view storage options
	If you choose to store the video, continue to step 4.
or	
DISCARD (📷)	delete the video and return to active viewfinder
4 (🔄)	scroll to Send in Message or Store Only
5 SELECT (📷)	perform the storage option


Playing a Video Clip

To play a video clip stored on your phone:

Find the Feature

 > **Multimedia** > **Videos**
> *video clip*

The video clip displays in the video clip playback screen.

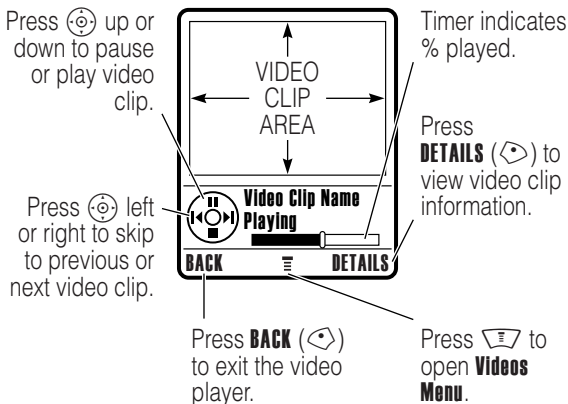

Adjusting Video Settings

Press to open the **Videos Menu** during video recording or playback.

Option	Description
Go To Videos	View video clips stored on your phone.
Videos Setup	Open the setup menu to adjust video settings.
View Free Space	View memory space available for storing video clips.

When in playback the following options are available:

Option	Description
New	Record a Video Clip.
Details	View video clip information.
Delete	Delete the selected video clip or all marked video clips.
Move	Move selected video clip or marked video clips to another device, and delete original video(s) from phone memory.
Copy	Copy selected video clip or marked video clips to another device, and leave copy of video(s) on phone.
Mark/Unmark or Mark All/Unmark All	Mark one or more video clips that you want to move, copy, send, or delete.
Assign To Category	Assign the video clip to a defined category.


Taking and Sending a Photo

To activate your phone's camera:

Find the Feature

 > **Multimedia** > **Camera**

The active viewfinder image appears on your display.

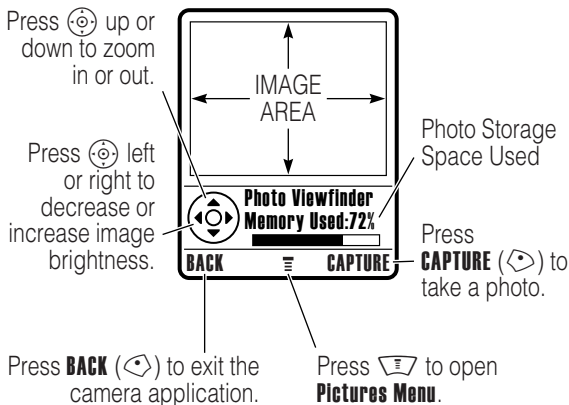

Point the camera lens at the photo subject, then:

Press
1 **CAPTURE** ()

To
take a photo

2 **STORE** ()



view storage options

If you choose to store the photo,
continue to step 3.




or

DISCARD ()

delete the photo and return to active
viewfinder

3	Press 	To scroll to Send in Message, Store Only, Apply as Wallpaper, Apply as Screen Saver, or Apply as Phonebook Entry
4	SELECT ()	perform the storage option

Using the Auto Timer

Activate the camera and then press  > **Auto-Timed Capture**. Press  left or right to set a 5 or 10 second timer delay, then press **START** (). Close the flip, and use the mirror to aim the camera lens. When you hear the camera click, open the flip to see your photo.

Adjusting Camera Settings

Press  to open the **Pictures Menu** when the camera is active. The **Pictures Menu** can include the following options:

Option	Description
Go To Pictures	View pictures and photos stored on your phone.
Auto-Timed Capture	Set a timer for the camera to take a photo.
Pictures Setup	Open the setup menu to adjust picture settings.
View Free Space	See how much memory remains for storing pictures.

Sending a Multimedia Message















A *Multimedia Messaging Service (MMS)* multimedia message contains one or more pages with text and embedded media objects (including photos, pictures, animations, sounds, voice records, and video clips). You can send a multimedia message to other wireless phone users, and to email addresses.

Tip: The layout of all pages in a multimedia message is defined by the layout of the first page. To display a media object at the top of the page, insert it in the first half of the message text. To display a media object at the bottom of the page, insert it in the second half of the message text.



Find the Feature

 > **Messages** > **Create Message**
> **New Multimedia Msg**

Press	To
1 keypad keys	enter text on the page
2 	open the MMS Menu
3 	scroll to Insert
4 SELECT ()	display a list of items you can insert
5 	scroll to Picture, Voice Record, Sound, Video, New Page, Quick Note, or Contact Info
6 SELECT ()	select the file type
7 	highlight the file you want
8 SELECT ()	insert the file
	To add another page to the message, continue to step 9.
9 	open the MMS Menu to insert a new page

Press	To
10 	scroll to Insert
11 SELECT ()	display a list of items you can insert
12 	scroll to New Page
13 SELECT ()	insert a new page after the current page Repeat steps 1 to 8 to enter contents for the new page.

When you finish composing the multimedia message:

Press	To
1 OK ()	store the message
2 	scroll to a Send To option: Highlight an existing phonebook entry. Or highlight [One Time Entry] to enter one or more phone numbers or email addresses. Or highlight [New Phonebook Entry] to enter a number/address and add it to the phonebook.

- Press
- 3 **ADD** (📞)
- To
add a phonebook entry to the list of recipients
- Repeat steps 2 and 3 to add additional phonebook entries to the list.

or

SELECT (📞) select **[One Time Entry]** or **[New Phonebook Entry]**

4 **DONE** (📞) store the numbers/addresses

5 (⦿) scroll to **Subject**



6 **CHANGE** (📞) select **Subject**

7 keypad keys enter the subject

8 **OK** (📞) store the subject

9 **CHANGE** (📞) select **Attachments** to attach a file to the message, if desired

10 (⦿) scroll to **Picture, Sounds, or Video**

11 **SELECT** (📞) select the file type


12 (⦿) highlight the file you want

13 **SELECT** (📞) attach the file

14 **BACK** (📞) return to the message editor


15 (⦿) scroll to **Receipt** to request a receipt, if desired

16 **CHANGE** (📞) select **Receipt**

Press	To
17 ADD (👁) or REMOVE (👁)	activate/deactivate the delivery report
18 DONE (👁)	return to the message editor
19 SEND (👁)	send the message
or 	view message details, save the message in the drafts folder, or cancel the message

Receiving a Multimedia Message



When you receive a multimedia message or letter, your phone displays the message indicator  and the **New Message** notification, and sounds an alert.

Press	To
READ (👁)	open the message

Multimedia messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.
- A sound file or video clip begins playing when its page is displayed. Use the volume keys to adjust the volume as the sound file or video clip plays.

***Note:** In a multimedia letter, you may have to highlight an indicator embedded in the text to play a sound file or video clip.*

Using a Bluetooth® Wireless Connection

Your phone supports Bluetooth wireless connections. You can set up a wireless link with a Bluetooth headset or handsfree car kit, or connect to a computer or hand-held device to exchange and synchronise data.

Turning Bluetooth On or Off

The preferred method for connecting your phone to a Bluetooth headset or handsfree car kit is to turn on Bluetooth on your phone, then connect your phone to the headset or car kit.

To turn Bluetooth on:

Find the Feature

 > **Settings** > **Connection**
> **Bluetooth Link** > **Setup** > **Power**
> **On**

This procedure turns Bluetooth on and leaves it on until you turn it off. When your phone's Bluetooth power is on, your handsfree accessory can automatically reconnect to the phone when you turn on the accessory or move it within range of the phone.


*Note: To extend battery life, use the above procedure and set Bluetooth power to **Off** when not in use.*

Searching for Other Devices

To connect your phone to a Bluetooth headset or handsfree device:

Find the Feature



 > **Settings** > **Connection**
> **Bluetooth Link** > **Handsfree**
> **[Look For Devices]**

If Bluetooth is turned off, your phone asks if you want to **Temporarily Power On?** Bluetooth. Press **YES** () to proceed. Alternatively, set **Power** to **On** in the **Setup** menu to turn Bluetooth on and leave it on.

Your phone scans for and displays a list of device(s) located within range of the phone.

Note: If your phone is already connected to a device, you must disconnect from it to search for other devices.

To connect to a device, highlight the device name and press **SELECT** ()

The device may request permission to bond with your phone. Select **YES** () and enter the correct PIN code to create a secure connection with the device. When the connection is made, the Bluetooth indicator  displays in the home screen.

Sending Objects to Another Device

 
You can use a Bluetooth wireless connection to send a picture, sound, video, phonebook entry, datebook event, or bookmark from your phone to another phone, computer, or hand-held device.

Sending a Picture, Sound, or Video

Highlight the object on your phone that you want to send to the other device, then press  > **Copy**.

Select a recognised device name listed in the **Object Exchange** menu, or **(Look For Devices)** to search for the device to which you want to send the object.

Sending a Phonebook Entry, Datebook Event, or Bookmark

Highlight the item on your phone that you want to send to the other device, then press  > **Send**.


Select a recognised device name listed in the **Object Exchange** menu, or **(Look For Devices)** to search for the device to which you want to send the item.



Learning to Use Your Phone



See page 1 for a basic phone diagram.

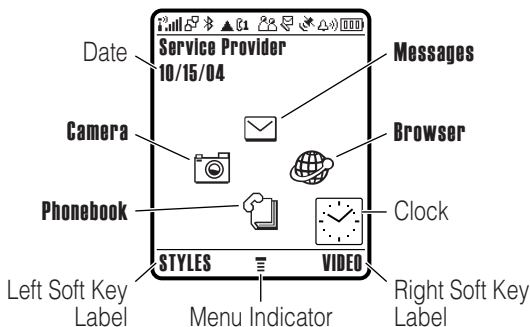

Using the Display

The *home screen* is displayed when you are not on a call or using the menu. You must be in the home screen to dial a phone number.



Press the 5-way navigation key  up, down, left, or right to select one of the menu feature icons displayed in the home screen. If you select a menu feature by mistake, press  to return to the home screen.


The menu indicator  shows that you can press the menu key  to enter the main menu.


Labels at the bottom corners of the display show the current soft key functions. Press the left soft key  or right soft key  to perform the indicated function.


Notes:


- Your home screen may appear different than shown. For example, the menu feature icons normally are hidden to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide menu icons, see page 84.*
- Your phone can display an analogue or digital clock in the home screen (see page 83).*
- Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you open the flip or press any key. To set the time that the backlight stays on, see page 66.*
- To further extend battery life, you can set the display to turn off, in addition to the backlight, after a period of inactivity. The display turns back on when you open the flip or press any key. To set the time that the display stays on, see page 66.*


The following status indicators can display:

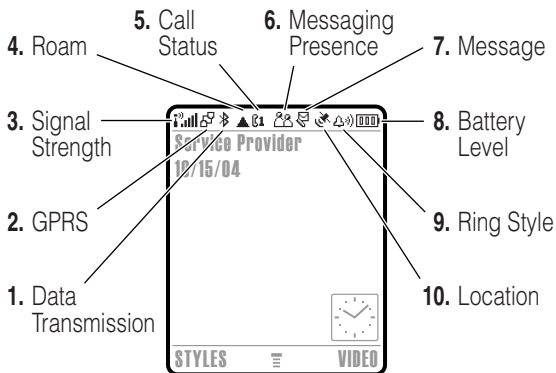



 1. Data Transmission Indicator – Shows connection and data transmission status. The Bluetooth® wireless connection indicator  shows when a Bluetooth connection is active. Other indicators can include:

 = secure packet data transfer

 = unsecure packet data transfer

 = secure application connection


 = unsecure application connection


 = secure *Circuit Switch Data* (CSD) call



 = unsecure CSD call




2. **GPRS Indicator** – Shows that your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. GPRS allows faster data transfer speeds. Other indicators can include:

 = GPRS PDP context active


 = GPRS packet data available

3. **Signal Strength Indicator** – Vertical bars show the strength of the network connection. You cannot make or receive calls when the no signal indicator  or not transmit indicator  is displayed.



4. **Roam Indicator** – The roam indicator  shows when your phone is seeking or using another network outside your home network. Other indicators can include:

 = 2.5G home

 = 2.5G roam

 
 = 2G home


 = 2G roam





5. **Call Status Indicator** – Shows the call status of your phone. For dual-line-enabled SIM cards, shows the current active phone line. Indicators can include:


 = phone in call

 = call divert on

  = line 1 active

 = line 2 active

  = line 1 active, call divert on

  = line 2 active, call divert on



6. Messaging Presence Indicator – Shows when instant messaging is active. Indicators can include:



= IM active



= available for IM



= busy




= invisible to IM



= available for phone
calls



= offline

When a Java™ application is active, the Java midlet indicator  displays in this location.



7. Message Indicator – Displays when you receive a new message. Indicators can include:



= text message



= voicemail message



= voicemail and text
message



= IM message



= active chat session

8. Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and the battery alert sounds.

9. Ring Style Indicator – Shows the ring style setting.



= loud ring



= soft ring



= vibrate



= vibrate and ring



= silent






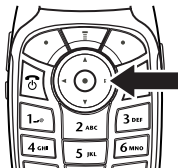
10. Location Indicator – Your phone may be able to send location information to the network during an emergency call. Indicators show when your phone is sending location information:

 = location on

 = location off

Using the 5-Way Navigation Key




Press the 5-way navigation key  up, down, left, or right to scroll through the menu system, highlight menu items, change feature settings, and play games. Press the *centre select* key  in the centre of the 5-way navigation key to select a highlighted menu item. The centre select key usually performs the same function as the right soft key .












Using Menus

From the home screen, press  to enter the main menu.




Press  to scroll to and highlight a menu feature icon in the main menu. Press **SELECT** () or  to select the highlighted menu feature.


The following icons represent features that may display in the main menu, depending on your service provider and service subscription options.


Menu Icon	Feature	Menu Icon	Feature
	Phonebook		Recent Calls
	Messages		Office Tools
	Games & Apps		Web Access
	Multimedia		IM
	Settings		

Selecting a Feature Option

Some features require you to select an option from a list:

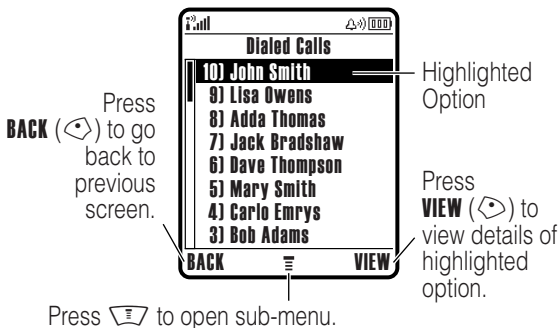


- Press  to scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight the option.


- In an alphabetised list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.
- When an option has a list of possible values, press  left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.


Entering Text

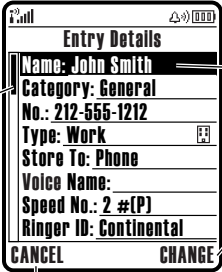

Some features require you to enter information.



Scroll down to bottom of list to view more options.


Highlighted option. Press  to scroll to other options.

Press **CHANGE** () to set or edit highlighted option.

Press **CANCEL** () to exit without making changes. **DONE** () displays when you enter or edit information.

The screenshot shows a screen titled "Entry Details" with the following fields: Name: John Smith, Category: General, No.: 212-555-1212, Type: Work, Store To: Phone, Voice Name:, Speed No.: 2 #(P), and Ringer ID: Continental. At the bottom are "CANCEL" and "CHANGE" buttons. The "Name" field is highlighted.

The message centre lets you compose text messages.

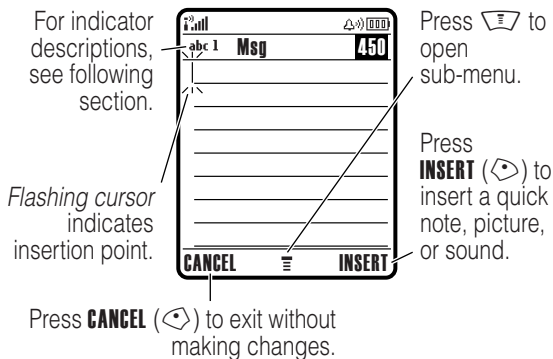

Selecting a Text Entry Mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode.


Press **☰** in any text entry screen to select one of the following entry modes:

- | | |
|------------------|---|
| Primary | The primary text entry mode (see below to set). |
| Numeric | Enter numbers only (see page 51). |
| Symbol | Enter symbols only (see page 52). |
| Secondary | The secondary text entry mode (see below to set). |

Alternatively, you can select a text entry mode in any text entry screen by pressing **☰** > **Entry Mode**.


Setting Primary and Secondary Text Entry Modes

You can set different primary and secondary text entry modes, and easily switch between modes when you enter data or compose a message.

Press  > **Entry Setup** in a text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

iTAP	iTAP® software predicts each word as you enter it, to simplify and speed up text entry.
Tap	Enter letters and numbers by pressing a key one or more times.
Tap Extended	Enter individual letters, numbers, and symbols by pressing a key one or more times.
None	Hide the Secondary setting if you prefer not to set a secondary text entry mode (only available for Secondary Setup).

 Using Capitalisation

Press  in a text entry screen to change text case. Indicators at the top of the display show the capitalisation setting:

abc = no capital letters









Abc = capitalise next letter only

ABC = all capital letters

Text Entry Mode Indicators

In **Primary** or **Secondary** text entry mode, indicators at the top of the display show the text entry setting:

Primary	Secondary	
1	2	Tap, no capital letters
1↑	2↑	Tap, capitalise next letter only

		Tap, all capital letters
		iTAP, no capital letters
		iTAP, capitalise next letter only
		iTAP, all capital letters

 
 

The following indicators identify **Numeric** or **Symbol** entry mode:


123 = numeric mode

@ = symbol mode


Using iTAP® Mode


iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words, and predicts each word as you enter it.

For example, to enter “**the**,” you would press   . The iTAP software recognises that the most common word formed by this keypress combination is “**the**,” and predicts that “**the**” is the word you are spelling. Other common words or word fragments that can be spelled by the same keypress combination are presented as alternate choices at the bottom of the display.

If necessary, press  in a text entry screen to switch to **iTAP** mode. An indicator tells you which mode is active (see page 45). If **iTAP** mode is not set as the **Primary** or **Secondary** entry mode, see page 45.

Entering Words i iTAP Mode

	Press	To
1	Keypad keys (one press per letter)	show possible letter combinations at the bottom of the display
2	 left or right	highlight the combination you want

3 Press 

or



or

SELECT ()

To accept the predicted word completion, followed by a space

enter the highlighted combination, followed by a space


select the highlighted combination, with no space

You can press keypad keys to add more letters at the end of the combination.

For example, if you press    , your phone displays:


Press  to enter **Prog** and a space.

Press **DELETE** () to delete last letter.

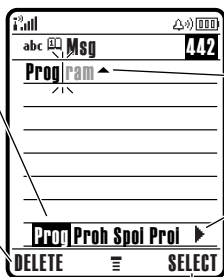

Press  up to accept **Program**.

Press  right to highlight another combination.


Press **SELECT** () to select highlighted combination with no space.


If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.


Entering Novel Words in iTAP Mode

You may enter a word that the iTAP software does not recognise. If your word is not shown as a letter combination choice at the bottom of the display:

Action

- 1 Press **DELETE** () one or more times to delete letters, until you see a letter combination at the bottom of the display that matches the start of the word you want to enter.

 - 2 Press  left or right to highlight the letter combination.


 - 3 Press **SELECT** () to select the letter combination.

 - 4 Continue to enter letters and select letter combinations to spell the word.
-
-

Your phone automatically stores the novel word and displays it as an option the next time you enter its letter combination. When the memory space for storing novel words is filled, your phone deletes the oldest words to add new words.

Entering Numbers and Punctuation in iTAP Mode


To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to revert to **iTAP** mode.

Press  to enter punctuation or other characters as shown in the “Character Chart” on page 51.





Using Tap Mode

This is the basic text entry mode on your phone.




Tap mode cycles through the letters and number of the key you press. **Tap Extended** mode also cycles through additional symbols as shown in the “Character Chart” on page 51.


If necessary, press  in a text entry screen to switch to **Tap** mode. An indicator shows which mode is active (see page 45). If **Tap** or **Tap Extended** is not set as the **Primary** or **Secondary** entry mode, see page 45.

Tap Mode Text Entry Rules


- Press a keypad key repeatedly to cycle through its characters. For example, you would press  one time to enter “a,” two times to enter “b,” three times to enter “c,” or four times to enter “2.”
- After 2 seconds, **Tap** mode accepts the character, and the cursor moves to the next position.
- The first character of every sentence is capitalised. If necessary, press  down to change the character to lowercase before the cursor moves to the next position.
- Press  to move the flashing cursor to enter or edit message text.
- If you do not want to save your text or text edits, press  to exit without saving.

Entering Words in Tap Mode

Press	To
1 a keypad key one or more times	select a letter, number, or symbol
2 keypad keys	enter remaining characters
	Tip: Press  right to accept a word completion, or  to insert a space.
3 OK 	store the text


In a text entry screen, you can press  to switch entry modes. An indicator shows which mode is active (see page 45). If **Tap** or **Tap Extended** is not set as the **Primary** or **Secondary** entry mode, see page 45.


For example, if you press  one time, your phone displays:

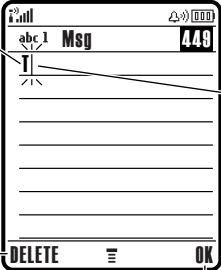

Character displays at insertion point.

After 2 seconds, character is accepted and cursor moves to next position.

Press **DELETE** () to delete last character entered.

Press **OK** () to accept and store text.

When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter “**prog**” your phone might display:





 

 

 





Press  right to accept **program**. Press  to reject it and enter a space after **prog**.

To enter a different word (such as **progress**), press keys to enter remaining characters.


Character Chart

 
Use this chart as a guide for entering characters with **Tap Extended** mode.

	. 1 ? ! , @ _ & ~ : ; " - () ' ¿ ¡ % £ \$ ¥ ¤ € + x * / \ [] = > < # §
	a b c 2 ä å á à â ã α β ç
	d e f 3 δ ë é è ê φ
	g h i 4 ï í î γ
	j k l 5 λ
	m n o 6 ñ ö ø ó ò ô õ ω
	p q r s 7 π β σ
	t u v 8 θ ü ú û û
	w x y z 9 ξ ψ
	change text case, for capital letters
	enter a space (hold to enter a return)
	change text entry mode (hold for default)


Note: This chart may not reflect the exact character set available on your phone. In an email or Web address editor,  first shows common characters for that editor.




Using Numeric Mode

In a text entry screen, press  to switch entry modes until the numeric indicator **123** displays.

Press the number keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry mode.




 
 



Using Symbol Mode


 


In a text entry screen, press  to switch entry modes until the symbol indicator @ displays.

Press	To
1 keypad keys (one press per symbol)	show possible symbol combinations at the bottom of the display
2  left or right	highlight the combination you want
3 SELECT ()	select the highlighted combination You can press keypad keys to add more symbols to the end of the combination.
or 	enter the highlighted combination

Symbol Chart

Use this chart as a guide for entering characters with symbol mode.



	. ? ! , @ _ & ~ : ; " - () ' ¿ ¡ % £ \$ ¥ ¤ €
	@ _ \
	/ : ;
	" & '
	() [] { }
	¿ ¡ ~
	< > =
	\$ £ ¥ ¤ €

	# % *
	+ - x * / = > < # §
	enter a space (hold to enter a return)
	change text entry mode (hold for default)


Note: This chart may not reflect the exact character set available on your phone. In an email or Web address editor,  first shows common characters for that editor.


Deleting Letters and Words

Place the cursor to the right of the text you want to delete, and then:

Action
Press DELETE () to delete one letter at a time.
Hold DELETE () to delete the entire message.

Using the Smart Key

The *smart key* gives you another way to perform many basic phone functions. It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it. You can use the smart key to make and end calls, turn features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key .

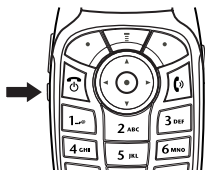

Using the External Display

When the flip is closed, the external display shows time and phone status information. It also displays messages to notify you of incoming calls and other events. You can perform the following functions in the external display.

Setting Phone Ring Style

	Press	To
1	volume keys	scroll to Style
2	smart key	select a ring style
3	volume keys	return to the home screen

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls and displays **X Missed Calls** in the external display.

Action

- 1 Press the smart key to display the received calls list.

or

Press the volume keys to dismiss the **Missed Calls** message.

- 2 If necessary, press the volume keys to scroll through the list and highlight an unanswered call.
- 3 If a headset is connected to your phone, press and hold the smart key to call the number.


or


Press the smart key to exit without calling.

Note: Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other handsfree device with this feature.

Using the Handsfree Speaker

When you activate your phone's integrated handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press **SPEAKER** () to turn the handsfree speaker on or off during a call.

When you turn the handsfree speaker on, your phone displays **Spkrphone On** in the home screen. The handsfree speaker remains on until you press **SPEAKER** () again or end the call.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock code must contain 4 digits, and the security code must contain 6 digits.

You can also reset your SIM card PIN code, PIN2 code, and/or call barring password if necessary.

To change a code or password:

Find the Feature

 > **Settings** > **Security**
> **New Passwords**

Locking and Unlocking Your Phone

You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, but you must unlock it to answer.

You can make emergency calls on your phone even when it is locked (see page 73).

Locking Your Phone Manually

Find the Feature

 > **Settings** > **Security** > **Phone Lock**
> **Lock Now**

Press

To

1 keypad keys

enter your unlock code

2 **OK** ()

lock the phone

Unlocking Your Phone

Tip: Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:

Press

To

1 keypad keys

enter your unlock code

2 **OK** ()


unlock your phone

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Find the Feature



 > **Settings** > **Security** > **Phone Lock**
> **Automatic Lock** > **On**

Press	To
1 keypad keys	enter your unlock code
2 OK ()	activate automatic lock

If You Forget a Code, PIN, or Password

Note: Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, do the following at the **Enter Unlock Code** prompt:

Press	To
1 	display the unlock code bypass screen
2 keypad keys	enter your security code
3 OK ()	submit your security code

If you forget your security code, SIM card PIN code, PIN2 code, or call barring password, contact your service provider.

Using the Phonebook

This section describes basic phonebook operations. For more information about using the phonebook, see page 81 and the *More Here* guide (described on page 15).

Storing a Phone Number

Enter a phone number in the home screen, then press **STORE** (ⓧ) to create a phonebook entry with that number. Press **DONE** (ⓧ) to store the number by itself, or fill in the other fields as necessary to complete the entry.



If you assign a **Name** to the phonebook entry, you can select **MORE** to store another number (for example, a work number) for the same **Name**.

Recording a Voice Name

When creating a phonebook entry, scroll to **Voice Name** and press **RECORD** (ⓧ). Press and release the voice key and say the entry's name (within 2 seconds). When prompted, press and release the voice key and repeat the name.

Note: This option is not available for entries stored on the SIM card.

Dialling a Number



Press  > **Phonebook**, highlight the phonebook entry, press  to call.

Shortcut: In the phonebook, press a keypad key one or more times to jump to entries that begin with the key's letters.



Voice Dialling a Number

Press and release the voice key, and say the entry's name (within 2 seconds).

Sorting Phonebook Entries

Press  > **Phonebook**, press  > **Setup** > **Sort by**, then select whether you want to sort the phonebook list by **Name**, **Speed No.**, **Voice Name**, or **Email**.

When sorting by name, you can view **All** numbers or just the **Primary** number for each name. To set the primary number for a name, see page 82.



Tip: In **Primary** number view mode, highlight a name and press  or  to view other numbers associated with the name.

Setting a Picture ID for a Phonebook Entry



Press  > **Phonebook** > *entry*, press  > **Edit** > **Picture** > *picture name*.

Also see pages 3 and 27.

Setting Picture ID View

Press  > **Phonebook**, press  > **Setup** > **View by** > **Picture**.

Viewing Entries By Category

Press  > **Phonebook**, press  > **Categories**, then select whether you want to view **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you created.

To set the category for a phonebook entry, see page 82.

Setting Up Your Phone

Setting a Ring Style

You can set the following ring styles on your phone:

- **Loud**
- **Soft**
- **Vibrate**
- **Vibe & Ring**
- **Silent**

Each ring style is a profile that uses a different set of ring tone alerts or vibration alerts to notify you of incoming calls, text messages, and other events. The **Silent** setting silences your phone until you set another ring style.

To set a ring style:

Find the Feature

 > **Settings** > **Ring Styles** > **Style**
> *style name*

The ring style indicator shows the current ring style setting (see page 39).






Changing the Call Alert

You can change the alert that a ring style uses to notify you of incoming calls or other events. Any changes you make are saved to the ring style profile.

Find the Feature

 > **Settings** > **Ring Styles**
> **Style Detail**

*Note: Style represents the current ring style. You cannot set an alert for the **Silent** ring style setting.*

Press	To
1 	scroll to Calls (scroll to Line 1 or Line 2 for dual-line phones)
2 CHANGE 	select the event
3 	scroll to the alert you want
4 SELECT 	select the alert
5 BACK 	save the alert setting

The ring style profile contains additional settings for other events, and settings for ringer ID, ringer and keypad volume. You can change ring style profile settings as desired to personalise the ring style.

Setting the Time and Date

You must set the time and date to use the datebook.

Find the Feature









 
 > **Settings** > **Initial Setup**
> **Time and Date**

Setting a Wallpaper Image

Set a photo, picture, or animation as a wallpaper (background) image in your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

Find the Feature

 > **Settings** > **Personalise**
> **Wallpaper**

Press	To
1 	scroll to Picture
2 CHANGE ()	open the picture viewer
3  up or down	scroll to a picture/animation Scroll to (None) to turn off the wallpaper image.
4 SELECT ()	select the image
5 	scroll to Layout
6 CHANGE ()	adjust the image layout
7 	scroll to Centre , Tile , or Fit-to-screen Centre places the image in the centre of the display. Tile fills the display with adjacent copies of the image. Fit-to-screen resizes the image, if necessary, to fit the display.
8 SELECT ()	confirm the layout setting
9 BACK ()	save wallpaper settings









 
Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image. The screen saver image displays when the flip is open and no activity is detected for a period of time. If necessary, the image shrinks to fill the display. An animation repeats for 1 minute, then the first frame of the animation displays.

Tip: Turn off the screen saver to extend battery life.

Find the Feature

 > **Settings** > **Personalise**
> **Screen Saver**

Press	To
1 	scroll to Picture
2 CHANGE ()	open the picture viewer
3  up or down	scroll to a picture/animation Scroll to (None) to turn off the screen saver image.
4 SELECT ()	select the image
5 	scroll to Delay
6 CHANGE ()	set the delay interval
7 	scroll to the inactivity interval that triggers the screen saver
8 SELECT ()	confirm the delay setting
9 BACK ()	save screen saver settings

Changing Phone Skin

Change the look and feel of your phone's user interface by selecting a different skin setting.

Find the Feature

 > **Settings** > **Personalise** > **Skin**
> *skin*

Your phone displays the new skin.

Setting a Phone Theme

A *phone theme* consists of a bundled set of image and sound files with a specific theme (such as a special event or cartoon character) that you can apply collectively to your phone. Phone themes typically include a wallpaper image, screen saver image, and ring tone. Your phone includes several preloaded themes. You can download and install additional themes on your phone.

Downloading a Theme

To download a theme from a Web page with the micro-browser, see page 94. When you install the theme, you can instantly apply its screen saver, wallpaper, and ring tone when your phone prompts you to **Apply Theme Now?**

Selecting a Theme

You can apply any of the themes installed on your phone.

Note: If one of a theme's components is not available, then a default setting is applied.

Find the Feature

 > **Multimedia** > **Themes** > *theme*

Deleting a Theme



You cannot delete the preloaded themes on your phone. To delete one or all of the themes that you have downloaded and installed:

Find the Feature

 > **Multimedia** > **Themes** > *theme*

Press

To

1 

open the **Theme** menu

2 

scroll to **Delete** or **Delete All**

3 **SELECT** ()

select the option

Setting Answer Options

You can use additional, alternative methods to answer an incoming call.

Multi-Key

answer by pressing any key

Open to Answer

answer by opening the flip

To activate or deactivate an answer option:

Find the Feature

 > **Settings** > **In-Call Setup**
> **Answer Options**

Press

To

1 

scroll to **Multi-Key** or **Open to Answer**

2 **CHANGE** ()

select the option

3 

scroll to **On** or **Off**

4 **SELECT** ()

confirm the setting

Setting Display Brightness

Find the Feature

 > **Settings** > **Initial Setup**
> **Brightness**

Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on.

Find the Feature

 > **Settings** > **Initial Setup**
> **Backlight**

***Note:** Your phone's display normally is visible only when the display backlight is on, or when the display is viewed in direct sunlight. To extend battery life, the backlight turns off automatically when no activity is detected for a period of time. The backlight turns back on when you open the flip or press any key.*

Setting Display Timeout

To further extend battery life, you can set the display to turn off (in addition to the backlight) when no activity is detected for a period of time.

Find the Feature

 > **Settings** > **Initial Setup**
> **Display Timeout**

You can set the display to stay on for 1 or 2 minutes, or set **Off** to disable display timeout.

***Note:** The display turns back on when you open the flip or press any key.*



Storing Your Name and Phone Number



To store or edit your name and phone number information on your SIM card:

Find the Feature

 > **Settings > Phone Status**
> **My Tel. Numbers**

Shortcut: Press   from the home screen to view and edit your name and phone number(s).

If you do not know your phone number, contact your service provider.

Calling Features

For basic instructions on how to make and answer calls, see page 21.

Turning Off a Call Alert


You can turn off your phone's incoming call alert before answering the call.

Action

- 1 Press the volume keys to turn off the alert.
 - 2 Open the flip (or press the button on a handsfree headset) to answer the call.
-
-

Viewing Recent Calls

Your phone keeps lists of incoming and outgoing calls, even for calls that did not connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.



Shortcut: Press  from the home screen to view the dialled calls list.





Find the Feature

 > **Recent Calls**

Press


To

- | | | |
|---|---|---|
| 1 |  | scroll to Received Calls or Dialled Calls |
| 2 | SELECT () | select the list |
-




- 3 Press  To scroll to an entry
Note: ✓ means the call connected.
-
- 4  call the entry's number
- or
- VIEW** () view entry details (such as time and date of call)
- or
-  open the **Last Calls Menu** to perform other procedures
-
-

The **Last Calls Menu** can include the following options:

Option	Description
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.

Option	Description
Send Tones	Send the number to the network as DTMF tones. <i>Note: This option displays only during a call.</i>
Talk then Fax	Talk and then send a fax in the same call (see page 90). 

Redialling a Number

Press	To
1 	view the dialled calls list
2 	scroll to the entry you want to call
3 	redial the number

Using Automatic Redial




When you receive a busy signal, your phone displays **Call Failed, Number Busy**.




Press	To
 or RETRY ()	redial the number

When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and connects the call.

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the missed call indicator 
- **X Missed Calls**, where **X** is the number of missed calls

Press	To
1 VIEW ()	display the received calls list
2 	select a call to return
3 	make the call

Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's *notepad* memory. This can be a phone number that you called, or a number that you jot down during a call, for later use. To retrieve the number stored in the notepad:

Find the Feature

 > **Recent Calls** > **Notepad**

Press

To



call the number

or

STORE ()

create a phonebook entry with the number in the **No.** field


or




open the **Dialing Menu** to attach a number or insert a special character

Putting a Call On Hold or Mute

Press

 > **Hold**

or

 > **Mute**

To

put all active calls on hold

mute all active calls

Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press

1 

To

answer the new call

2 **SWITCH** ()

switch between calls

or

LINK ()

connect the 2 calls

or

 > **End Call On Hold**

end the call on hold

If necessary, you must turn on call waiting to use the feature. To turn call waiting on or off:

Find the Feature

 > **Settings** > **In-Call Setup**
> **Call Waiting**

Using Caller ID (Incoming Calls)



Calling line identification (caller ID) displays the phone number for incoming calls in your phone's external and internal displays.


The phone displays the caller's name (and picture ID, if available) when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

You can also set your phone to play a distinctive ringer ID for specific entries stored in your phonebook. For more information, see page 81.

Calling an Emergency Number


Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number

 Dialling International Numbers



If your phone service includes international dialling, press and hold  to insert the local international access code (+) for the country from which you are calling.

(Inserting + enables your phone to make an international call.) Then press the keypad keys as usual to dial the country code and phone number.

Calling With 1-Touch Dial

To call phonebook entries 1 to 9, press and hold the single-digit speed dial number for one second.

You can set 1-touch dial to call the entries in your phone memory phonebook or the SIM card phonebook:

Find the Feature

 > **Settings** > **Initial Setup**
> **1-Touch Dial**

Press

To

1 

scroll to the location you want

2 **SELECT** ()

select the location

Using Voicemail



Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.

Note: Your service provider may include additional information about using this feature.


Listening to Voicemail Messages

Find the Feature

 > **Messages** > **VoiceMail**

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Receiving a Voicemail Message


When you receive a voicemail message, your phone displays the voicemail message indicator  and the **New VoiceMail** notification.


Press	To
CALL 	listen to the message

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Storing Your Voicemail Number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually, your service provider has already done this for you.

Find the Feature	 > Messages
	 > VoiceMail Setup

Press	To
1 keypad keys	enter your voicemail number
2 OK 	store the number

Note: You cannot store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail. For more information about these characters, see the *More Here* guide.

Changing the Active Line



Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line-enabled SIM cards.

Find the Feature


 > **Settings** > **Phone Status**
> **Active Line**

The active line indicator in the display shows the current active phone line (see page 38).

Phone Features

Main Menu

This is the standard main menu layout. Menu organisation and feature names may vary on your phone. Not all features may be available on your phone.

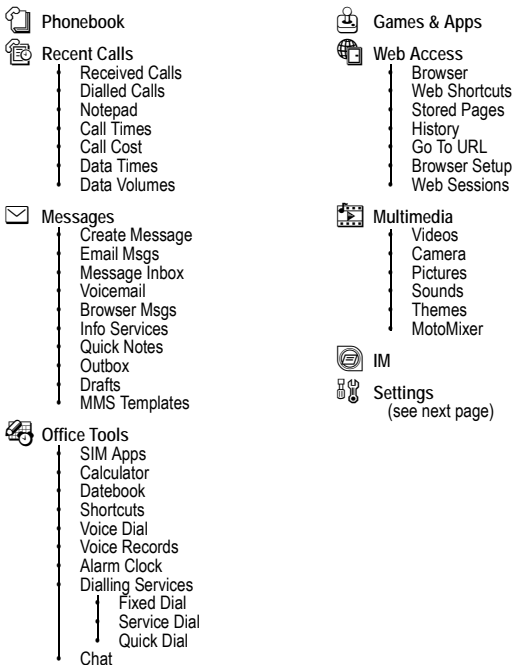

Settings Menu



Personalise

- Home Screen
- Main Menu
- Skin
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



Ring Styles

- Style
- Style Detail



Connection

- Bluetooth Link Sync



Call Divert

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Divert Status



In-Call Setup

- In-Call Timer
- Call Cost Setup
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- Scroll
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available
- Active Line
- Battery Meter
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Application
- Fixed Dial
- Call Barring
- SIM PIN
- New Passwords
- Certificate Mgmt



 





 








Java Settings



- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority
- App Backlight
- Set Standby App
- DNS IP

Feature Quick Reference





 

 






This section helps you locate and use additional phone features that are not described in this guide. For more detailed information, see the *More Here* guide (described on page 15).



Calling Features

Feature	Description	
Conference Call	During a call: Dial next number, press  , press LINK ()	
Transferring a Call	During a call:  > Transfer , dial transfer number, press  .	
Caller ID (Outgoing)	Hide or show your caller ID phone number for the next outgoing call:  > Settings > In-Call Setup > My Caller ID . > Next Call Only > Hide ID or Show ID	
Attaching a Number	Dial an area code or prefix for a phonebook number, then:  > Attach Number	
Speed Dial	Speed dial and call a phonebook entry: Enter speed dial number, press  , press  .	
Call Diverting	Set up or cancel call diverting:  > Settings > Call Divert	









Feature	Description
Call Barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring 















Messages



Feature	Description
Send Text Message	Send a text message:  > Messages > Create Message > New Short Message 
Send Multimedia Message	Send a multimedia message:  > Messages > Create Message > New Multimedia Msg 
Send Letter	Send a multimedia letter:  > Messages > Create Message > New Letter 
Use MMS Template	Open an MMS template with preloaded media:  > Messages > MMS Templates 
Read New Message	Read a new text or multimedia message that you have received: Press READ () when the New Message notification is displayed. 
Received Messages	Read received messages:  > Messages > Message Inbox Tip: Press  to perform various operations on the message. 

Feature	Description
Store Message Objects	Go to a multimedia message page, or highlight an object in a letter, then:  > Store 



  




Phonebook



 

Feature	Description
Add New Entry	Add a new entry to the phonebook:  > Phonebook  > New > Phone Number or Email Address
Dial Number	Call a number stored in the phonebook:  > Phonebook , highlight the phonebook entry, press  to call
Voice Dial Number	Voice dial a number stored in the phonebook: Press and release the voice key, and say the entry's name (within 2 seconds).
Set Ringer ID for Entry	Assign a distinctive ringer alert to a phonebook entry:  > Phonebook > <i>entry</i>  > Edit > Ringer ID > <i>ringer name</i> <i>Note: The Ringer ID option is not available for entries stored on the SIM card.</i>
Set Picture ID for Entry	Assign a photo or picture to a phonebook entry:  > Phonebook > <i>entry</i>  > Edit > Picture > <i>picture name</i> <i>Note: The Picture option is not available for entries stored on the SIM card.</i>

Feature	Description
Set Picture ID View	View phonebook entries as text list, or with picture caller ID photos:  > Phonebook  > Setup > View by > view name
Set Category for Entry	Set the category for a phonebook entry:  > Phonebook > entry  > Edit > Category > category name <i>Note: The Category option is not available for entries stored on the SIM card.</i>
Set Category View	Set a phonebook category view:  > Phonebook  > Categories > category view
Sort Phonebook List	Set the order in which phonebook entries are listed:  > Phonebook  > Setup > Sort by > sort order
Set Primary Number	Set the primary number for a phonebook entry with multiple numbers:  > Phonebook , highlight the entry, press  > Set Primary > phone number.
Copy Phonebook Entry	Copy a phonebook entry between the phone and SIM card:  > Phonebook , highlight the entry, press  > Copy > Entries > To
Send Phonebook Entry to Another Device	Send a phonebook entry to another phone, computer, or device:  > Phonebook , highlight the entry, press  > Send






Feature	Description
Create Group Mailing List	Create a group mailing list as a phonebook entry:  > Phonebook  > New > Mailing List




Personalising Features

Feature	Description
Ringer IDs	Activate distinctive ring alerts assigned to phonebook entries:  > Settings > Ring Styles > <i>Style Detail</i> > Ringer IDs
Ring Volume	Set ringer volume:  > Settings > Ring Styles > <i>Style Detail</i> > Ring Volume
Keypad Volume	Set keypad keypress volume:  > Settings > Ring Styles > <i>Style Detail</i> > Key Volume
Reminders	Set reminder alerts for messages that you receive:  > Settings > Ring Styles > <i>Style Detail</i> > Reminders
Clock View	Display an analogue clock or digital time readout in the home screen:  > Settings > Personalise > Home Screen > Clock
Menu View	Display the main menu as graphic icons or as a text-based list:  > Settings > Personalise > Main Menu > View
Main Menu	Reorder your phone's main menu:  > Settings > Personalise > Main Menu > Reorder



 





Feature	Description
Show or Hide Menu Icons	Show or hide menu feature icons in the home screen:  > Settings > Personalise > Home Screen > Home Keys > Icons
Change Soft Keys & Menu Icons	Change soft key labels and menu feature icons in the home screen  > Settings > Personalise > Home Screen > Home Keys
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold  . Select a shortcut:  > Office Tools > Shortcuts > <i>shortcut name</i>

Instant Messaging



Feature	Description
Log In	Log in to instant messaging:  > IM > Log In 
Find Others Online	After you sign on: Select Contact List to see a list of other users. 
Start Conversation	Start a conversation: From your Contact List , highlight a name in Online Contacts , press SEND IM ().
Open Active Conversation	Open a conversation in progress: From your Contact List , highlight a name in Conversations , press VIEW ().


Feature	Description	
End Conversation	From the conversation display:  > End Conversation	
Log Out	Log out of instant messaging: Select Log Out from the IM Online menu.	

Chat




Feature	Description	
Start Chat	Start a new chat session:  > Chat  > New Chat	
Receive Chat Request	When you receive a chat request: Press ACCEPT () or IGNORE ()	
End Chat	During a chat session:  > End Chat	

Email







Feature	Description	
Send Email Message	Send an email message:  > Messages > Create Message > New Email	

Feature	Description
Read Email Message	Read a new email message that you have received: Press READ (◀▶). 


Menu Features

Feature	Description
Language	Set menu language:  > Settings > Initial Setup > Language
Master Reset	Reset all options <i>except</i> unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Reset
Master Clear	Clear all user settings and entries <i>except</i> SIM card information, erase all downloaded pictures and sound files, reset all options <i>except</i> unlock code, security code, and lifetime timer:  > Settings > Initial Setup > Master Clear Caution: Master clear erases all user-entered information (including phonebook and datebook entries) and user-downloaded content (including photos and sounds) stored in your phone's memory. After you erase the information, you cannot recover it.







Special Dialling Features

Feature	Description
Fixed Dial	Turn fixed dialling on or off:  > Settings > Security > Fixed Dial Use the fixed dial list:  > Office Tools > Dialling Services > Fixed Dial
Service Dial	Dial service phone numbers:  > Office Tools > Dialling Services > Service Dial
Quick Dial	Dial preprogrammed phone numbers:  > Office Tools > Dialling Services > Quick Dial
DTMF Tones	Activate DTMF tones:  > Settings > Initial Setup > DTMF Send DTMF tones during a call: Press number keys. Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent calls lists, then press  > Send Tones .

 Call Monitoring


 

 

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.









The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.

Feature	Description
Call Times	View call timers:  > Recent Calls > Call Times 
In-Call Timer	Display time or cost information during a call:  > Settings > In-Call Setup > In-Call Timer 
Call Cost	View call cost trackers:  > Recent Calls > Call Cost 



Handsfree Features




Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Feature	Description
Speaker- phone	Activate a connected external speakerphone during a call: Press SPEAKER () (if available) or  > Spkrphone On . 
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > Settings > Car Settings or Headset > Auto Answer 











Feature	Description
Voice Dial (headset)	Enable voice dial with headset send/end key:  > Settings > Headset > Voice Dial 
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected:  > Settings > Car Settings > Auto Handsfree 
Power-Off Delay (car kit)	Set the phone to stay on for a period of time after the ignition is switched off:  > Settings > Car Settings > Power-Off Delay 
Charger Time (car kit)	Charge the phone for a period of time after the ignition is switched off:  > Settings > Car Settings > Charger Time 









Data and Fax Calls

Feature	Description
Send Data or Fax	Connect your phone to the device, then place the call through the device application. 
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application. 



Feature	Description
Talk Then Fax	<p>Connect your phone to the device, enter the number, press  > Dialling Menu > Talk Then Fax, then press  to make the call.</p> 

Bluetooth® Wireless Connections





 

 








Feature	Description
Make Phone Visible to Other Device	<p>Allow a Bluetooth device to discover your phone:  > Settings > Connection > Bluetooth Link > Setup > Find Me</p> 
Connect to Recognised Device	<p>Connect to a recognised handsfree device:  > Settings > Connection > Bluetooth Link > Handsfree > <i>device name</i></p> 
Disconnect From Device	<p>Disconnect from a device: Highlight the device name and press DROP ()</p> 
Switch to Device During Call	<p>Switch to a headset or car kit during a call:  > Use Bluetooth</p> 
Send Multimedia Object to Device	<p>Send a multimedia object to another device: Highlight the object, press  > Copy, select the device name.</p> 







Feature	Description	
Move Multimedia Object to Device	<p>Move a multimedia object to another device: Highlight the object, press  > Move, select the device name.</p> <p>Caution: Moving an object deletes the original object from your phone.</p>	
Send Data to Another Device	<p>Copy a phonebook entry, datebook event, or bookmark to another device: Highlight the item, press  > Send.</p>	
Edit Device Properties	<p>Edit the properties of a recognised device: Highlight the device name and press  > Edit.</p>	
Set Bluetooth Options	<p>Set your phone's Bluetooth options:  > Settings > Connection > Bluetooth Link > Setup</p>	

Network Features




Feature	Description	
Network Settings	<p>View network information and adjust network settings:  > Settings > Network</p>	

Personal Organiser Features

Feature	Description
Set Alarm	Set an alarm:  > Office Tools > Alarm Clock
Turn Off Alarm	Turn off alarm: Press DISABLE () or  Set 8-minute delay: Press SNOOZE ()
Add New Datebook Event	Add a new event to the datebook:  > Office Tools > Datebook , highlight the day, press  , press  > New
View Datebook Event	View or edit event details:  > Office Tools > Datebook , highlight the day, press  , press VIEW ()
Event Reminder	View an event reminder: VIEW () Dismiss an event reminder: EXIT ()
Copy Datebook Event to Another Device	Send a datebook event to another phone, computer, or device:  > Office Tools > Datebook , highlight the day, press  , highlight the event, press  > Send
Create Voice Record	Create a voice record: Press and hold voice key, speak into the phone, release voice key. <i>Note: Recording phone calls is subject to varying laws regarding privacy and recording of conversations.</i>
















Feature	Description
Play Voice Record	Play back a voice record:  > Office Tools > Voice Records > <i>voice record</i>
Calculator	Calculate numbers:  > Office Tools > Calculator
Currency Converter	Convert currency:  > Office Tools > Calculator  > Exchange Rate Enter exchange rate, press OK () , enter amount, press  > Convert Currency .





Security

Feature	Description
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked .
Lock Application	Lock phone applications:  > Settings > Security > Lock Application
Certificate Management	Enable or disable security certificates stored on your phone:  > Settings > Security > Certificate Mgmt

News and Entertainment

Feature	Description
Manage Video Clips	Manage video clips:  > Multimedia > Videos

Feature	Description
Manage Pictures	Manage pictures and animations:  > Multimedia > Pictures 
Manage Sounds	Manage ring tones and music that you have downloaded or composed:  > Multimedia > Sounds
Edit Sounds With MotoMixer	Edit MIDI-based sound files that you can use with your phone:  > Multimedia > MotoMixer > [New Mix] or <i>mix file name</i>
Launch Micro-Browser	Start a micro-browser session:  > Web Access > Browser 
Download Objects from Web Page	Download a picture, sound, or phone theme from a Web page: Highlight the file, press SELECT () , press STORE ().
Web Sessions	Select or create a Web session:  > Web Access > Web Sessions 
Download Game or Application (Micro-Browser)	Download a Java™ game or application with the micro-browser:  > Web Access > Browser , highlight the application, press SELECT () , press DOWNLOAD ().
Download Game or Application (Computer)	Download a Java game or application from a computer: Press  > Settings > Java Settings > Java App Loader , connect your phone to the computer when prompted. 

Feature	Description
Launch Game or Application	Launch a Java game or application:  > Games & Apps , highlight the application, press SELECT (). 
Create Ring Tones	Create ring tones that you can use with your phone:  > Multimedia > Sounds > [New iMelody]

Specific Absorption Rate Data

This model phone meets international standards for exposure to radio waves

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.¹ Tests for SAR are conducted in accordance with CENELEC² testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is: 0.9 W/kg.³

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

- 1 The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
- 2 CENELEC is a European Union standards body.
- 3 Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Index

A

- accessories 16, 54
- active line, changing 76
- alarm clock 92
- alert
 - creating 95
 - defined 60
 - downloading 3
 - setting 21, 54, 60, 61
 - turning off 20, 68
- animation
 - downloading 3, 81, 94
 - screen saver 63
 - viewing 94
 - wallpaper 62
- answering a call 21, 65
- application, locking and
 - unlocking 93
- automatic redial 70

B

- backlight 66
- barring calls 80
- battery
 - charging 19

- extending battery life 17, 33,
36, 63, 66
- installing 18
- level indicator 39
- Bluetooth 3, 33, 82, 90, 91, 92
- brightness, setting 66
- browser. *See* micro-browser

C

- calculator 93
- call
 - adding digits after phone
number 69
 - alert, setting 61
 - alert, turning off 20, 68
 - answer options 65
 - answering 21
 - barring 80
 - barring password, changing
55
 - call waiting 72
 - costs 88
 - deleting 68
 - dialled calls list 68
 - dialling 21
 - diverting 79
 - emergency number 73

- ending 21, 22
 - handsfree speaker 55
 - hold 72
 - international access code 73
 - making 21
 - received calls list 68
 - receiving 21
 - recent calls 68
 - ring style 21, 54, 60
 - speakerphone 88
 - storing 68
 - talk then fax 70
 - timers 88
 - transferring 79
 - unanswered call 54, 71
 - Call Failed, Number Busy
 - message 70
 - call status indicator 38
 - call waiting 72
 - caller ID 3, 28, 59, 69, 73, 79, 81, 82
 - calling line identification. *See* caller ID
 - camera
 - self portrait 28
 - taking a photo 2, 27
 - car kit 88
 - centre select key 40
 - certificate management 93
 - character chart 51
 - chat 85
 - clock
 - illustration 35
 - selecting analogue or digital 83
 - setting 61
 - codes
 - changing 55
 - default 55, 56, 57
 - forgetting 57
 - conference call 79
 - cursor 44
 - customising the menu 83
- D**
- data call 89
 - date, setting 61
 - datebook 92
 - deleting a call 68
 - dialled calls list 68
 - dialling a number 21, 87
 - display
 - backlight 66
 - brightness 66
 - description 35
 - home screen 35
 - language 86
 - personalising 84
 - skin 64
 - timeout 66

- distinctive ringer alert 83
- diverting calls 79
- drafts folder 32
- DTMF tones
 - activating 87
 - sending 70, 87

E

- earpiece volume 20
- email 83, 85
- emergency number 73
- end key 21, 22
- ending a call 21, 22
- Enter Unlock Code message
 - 56, 57
- event alert 61
- external display 54

F

- fax call 70, 89, 90
- 5-way navigation key 40
- fixed dial 87
- flashing cursor 44
- flip
 - external display 54
 - open to answer 21, 65
 - screen saver 63

G

- games 94

- GPRS indicator 38
- groove tunes 94

H

- handsfree speaker 55
- handsfree use 88
- headset
 - accessory, using 88
 - using with external display 54
- Hide ID feature 69
- hold a call 72
- home keys, personalising 84
- home screen
 - defined 35
 - selecting clock view 83

I

- IM 84
- incoming call
 - answering 21
 - diverting 79
- Incoming Call message 73
- indicators
 - battery level 39
 - call status 38
 - GPRS 38
 - Java midlet 39
 - location 40
 - loud ring style 39

- message 39
- message waiting 32
- messaging presence 39
- missed call 71
- ring style 39
- roam 38
- signal strength 38
- silent alert 39
- soft ring style 39
- text case 45, 46
- text entry mode 39, 45, 46
- transmission 37
- vibrate alert 39
- vibrate and ring style 39
- voicemail message 39, 75

instant messaging. *See* IM

international access code 73

iTAP software 46

J

- Java applications 94
- Java midlet indicator 39

K

key

- centre select 40
- end 21, 22
- 5-way navigation 40
- left soft key 35, 84
- menu 15

- power 20
- right soft key 35, 84
- send 21, 22, 68
- smart 53, 54
- volume control 20

keypad

- answering calls 65
- volume, setting 83

L

- language, setting 86
- left soft key
 - functions 35
 - personalising 84
- line, changing 76
- location indicator 40
- lock
 - application 93
 - phone 56
 - SIM card 93
- Low Battery message 39

M

- making a call 21
- master clear 86
- master reset 86
- menu
 - entering text 43
 - icons, changing in home screen 84

- icons, converting to text 83
 - icons, described 35
 - icons, showing or hiding 84
 - language, setting 86
 - lists 42
 - navigating 41
 - personalising 83
 - rearranging features 83
 - using features 42
 - view, changing 83
- menu key 15
- message
- chat 85
 - draft 32
 - menu feature icon 35
 - MMS template 80
 - MMS, defined 29
 - multimedia letter 80
 - multimedia message 80
 - reading 80
 - reminders, turning on/off 83
 - text 80
- message indicator 39
- message waiting indicator 32
- messages menu feature icon 35
- messaging presence indicator 39
- micro-browser
- browser setup 94
 - Java applications 94
 - menu feature icon 35
 - using 94
 - Web sessions 94
- missed call indicator 71
- Missed Calls message 54, 71
- MMS template 80
- MMS. *See* message
- MotoMixer 94
- multimedia letter, sending 80
- multimedia message
- reading 80
 - receiving 3, 32
 - sending 3, 29, 80
- multimedia messaging service.
See message
- music
- downloading 81, 94
 - managing 94
- my telephone number 22, 67
- ## N
- network settings 91
- notepad 71
- number
- storing your number 67
 - viewing your number 22
- numbers, entering 51

O

- object exchange 34
- 1-touch dial 74
- open to answer 65
- optional accessory, defined 16
- optional feature, defined 15

P

passwords. *See* codes

phone

- active line, changing 76
- alert, setting 61
- alert, turning off 20, 68
- answer options 65
- call status indicator 38
- clear stored information 86
- codes 55
- date, setting 61
- flip 21
- keypad, answering calls 65
- language, setting 86
- locking 56
- network settings 91
- reset all options 86
- ring style 21, 54, 60
- security code 55
- skin 64
- time, setting 61
- turning on/off 20
- unlock code 55

unlocking 20, 56, 57

phone number

- active line, changing 76
- adding digits after 69
- attaching 2 numbers 69
- attaching to prefix 79
- call status indicator 38
- international access code 73
- redialling 70
- storing in phonebook 81
- storing your number 67
- viewing your number 22

phone theme 64

phonebook

- adding an entry 81
- attaching 2 numbers 69
- attaching a number 79
- category views 59, 82
- copying entries 82
- dialling a number 81
- entry category 82
- group mailing list 83
- 1-touch dial 74
- picture ID 3, 28, 59, 73, 81, 82
- primary number, setting 82
- ringer ID 81, 83
- sending entries 82
- sorting entries 59, 82
- speed dial number 79

- voice dialling 81
- photo
 - downloading 3, 81, 94
 - picture ID 3, 28, 59, 73, 81, 82
 - self portrait 28
 - sending 2, 27
 - taking 2, 27
- picture
 - downloading 3, 81, 94
 - screen saver 63
 - viewing 94
 - wallpaper 62
- picture ID 3, 28, 59, 73, 81, 82
- PIN code
 - changing 55
 - entering 93
- PIN2 code, changing 55
- power key 20
- predictive text entry 46
- primary text entry mode 44

Q

- quick dial 87

R

- received calls list 68
- recent calls 68
- redial
 - automatic redial 70

- busy number 70
- reminders
 - turning on/off 83
- right soft key
 - functions 35
 - personalising 84
- ring style indicators 39
- ring style, setting 21, 54, 60
- ring tone
 - creating 95
 - downloading 3, 81, 94
 - editing with MotoMixer 94
 - managing 94
- ringer ID
 - setting 81
 - turning on/off 83
- ringer volume, setting 21, 83
- roam indicator 38

S

- screen saver 63
- secondary text entry mode 44
- security code
 - changing 55
 - default 55
 - forgetting 57
- send key 21, 22, 68
- service dial 87
- shortcuts 84
- Show ID feature 69

- signal strength indicator 38
 - silent alert indicator 39
 - silent alert, setting 21, 54, 60, 61
 - SIM Blocked message 20, 93
 - SIM card
 - defined 16
 - installing 16
 - locking 93
 - PIN code entry 20
 - PIN code, changing 55
 - PIN2 code, changing 55
 - precautions 16
 - SIM Blocked message 20, 93
 - SIM PIN code
 - changing 55
 - entering 93
 - SIM PIN2 code, changing 55
 - skin 64
 - smart key 53, 54
 - soft keys
 - functions 35
 - personalising 84
 - song
 - downloading 81, 94
 - managing 94
 - sound
 - creating 95
 - downloading 3, 81, 94
 - managing 94
 - Speaker On message 55
 - speakerphone
 - activating 88
 - automatic answer 88
 - speed dial 79
 - standby time, increasing 63, 66
 - storing a call 68
 - symbol chart 52
 - symbols, entering 52
- ## T
- talk then fax call 70
 - tap mode text entry 48
 - telephone number
 - storing your number 67
 - viewing your number 22
 - text
 - capitalisation, changing 45
 - character chart 51
 - entering 43
 - entry mode, selecting 44
 - entry mode, setup 45
 - flashing cursor 44
 - iTAP software predictive text
 - entry 46
 - numeric mode 51
 - symbol chart 52
 - symbol mode 52

- tap mode 48
- text case indicator 45, 46
- text entry mode
 - selecting 44
 - setup 45
- text entry mode indicator 39, 45, 46
- theme 64
- time, setting 61
- timers 88
- transfer a call 79
- transmission indicator 37
- travel charger 19

U

- unlock
 - application 93
 - phone 56
- unlock code
 - bypassing 57
 - changing 55
 - default 55, 56, 57
 - entering 20, 56, 57
 - forgetting 57

V

- vibrate alert
 - setting 21, 54, 60
 - turning off 20, 68
- video clip

- downloading 3, 81, 94
- managing 93
- playing 2, 24
- recording 2, 23
- voice dial 81, 89
- voice key
 - dialling a number 81
- voice record 92
- voicemail 74
- voicemail message indicator 39, 75
- volume
 - earpiece 20
 - keypad 83
 - ringer 21, 83
- volume keys 20

W

- wallpaper 62
- Web pages 94
- Web sessions 94

6803534C08