



HipZip™

Digital Audio Player




Quick Start Guide

Table of Contents

| | |
|--|----|
| Installing Audio Management Software | 3 |
| Installing IomegaWare™ Software | 4 |
| Connecting the HipZip™ Player to Your Computer | 5 |
| Inserting/Ejecting PocketZip™ Disks | 7 |
| HipZip™ Player Overview | |
| Controls and Connections | 8 |
| Menu Controls | 9 |
| Menu Screens | 10 |
| Icons | 11 |
| Messages | 12 |
| MusicMatch Jukebox™ Plus Software | 13 |
| Troubleshooting | 15 |

1

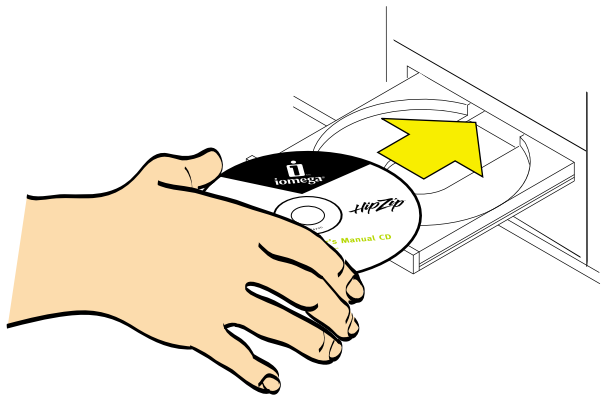


Insert the Application and User's Manual CD to install the audio management software provided for the HipZip™ player.

CAUTION! IomegaWare™ software must be installed before you can transfer files to your HipZip™ player.

Windows® 95 users should read the “USB Guidelines” section on the User's Manual CD before installing the IomegaWare™ software.

NOTE: Illustrations on cover may not match actual contents.

2

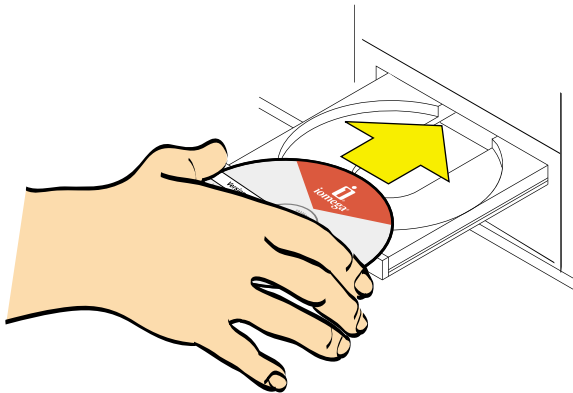


Insert the lomegaWare™ software CD. Follow the instructions on screen to install the software.

Mac® Users: If the setup program does not start up automatically, start it manually by double clicking on the lomegaWare™ software CD icon on your Mac desktop and double click on the lomegaWare install icon.

Windows® PC Users: If the setup program does not start up automatically, start it manually by double clicking on the lomegaWare™ software CD icon in My Computer.

3


Connect the HipZip™ mini USB cable to the USB port* on your computer.

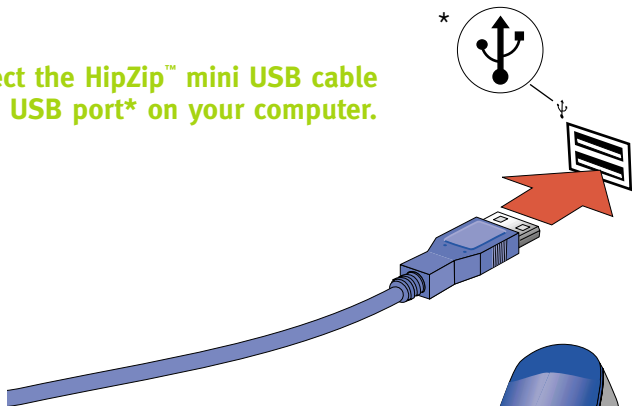


4

Connect the other end of the HipZip™ mini USB cable to the HipZip player.


CAUTION! Do not use USB extension cables with your HipZip™ player. Data loss may result.

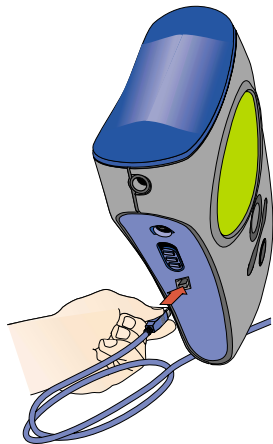

5

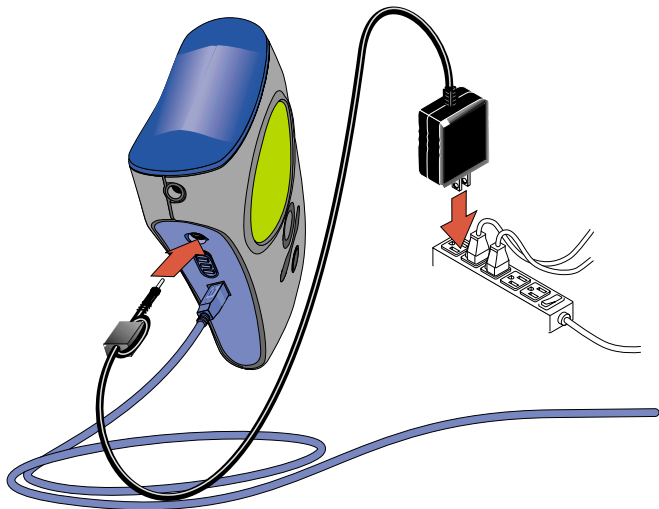


Connect the power supply into your HipZip™ player and an electrical outlet.

You **must** charge the battery until the “Battery Full” icon () appears (approximately 2 hours).

NOTE: You must connect the power supply to use the player without initially charging the battery.

6


Insert a PocketZip™ disk, and the HipZip™ player is now ready to use.

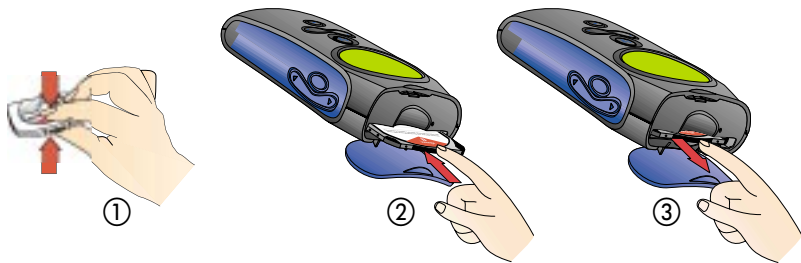


- ① Open a PocketZip™* disk case by squeezing the top and bottom of the case together.
- ② Open the door on the top of the HipZip™ player and insert a PocketZip™ disk (label side up) until it clicks in place.
- ③ Eject a PocketZip™ disk by opening the door on the top of the HipZip™ player and gently pressing in on the disk until it clicks. The disk will pop out and you can remove it.

*You can also use Iomega 40MB Click!™ disks with your HipZip™ Player

Controls and Connections

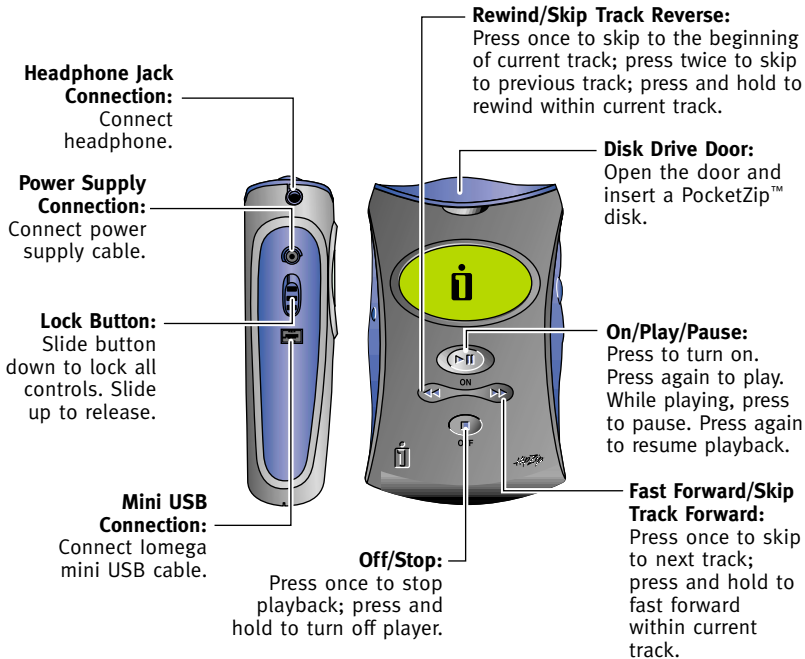


Menu Controls

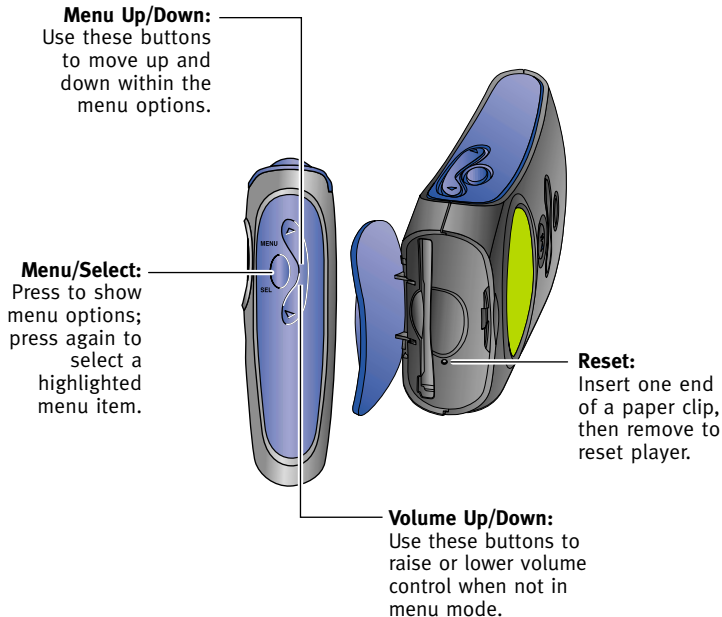


Menu Screens

Play Mode:
Select mode: normal, random, scan, repeat all, repeat random, or repeat track.

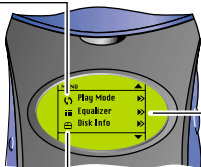


Equalizer: Choose standard, rock, classical, jazz, or a custom mode.

Play List Manager:
Create and select play lists.

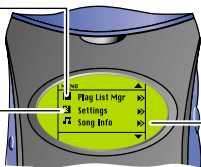

Disk Info: View megabytes free, total play time, and number of tracks on the disk.

Settings:
Turn the backlight on and off.

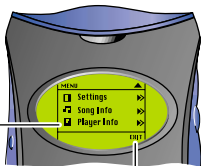


Song Info: View all available information about a song—file name, size, location, and more.

Player Info:
View player information.

Exit: Exit menu.

NOTE: Press any button on the front of the player to exit from any menu.

Icons

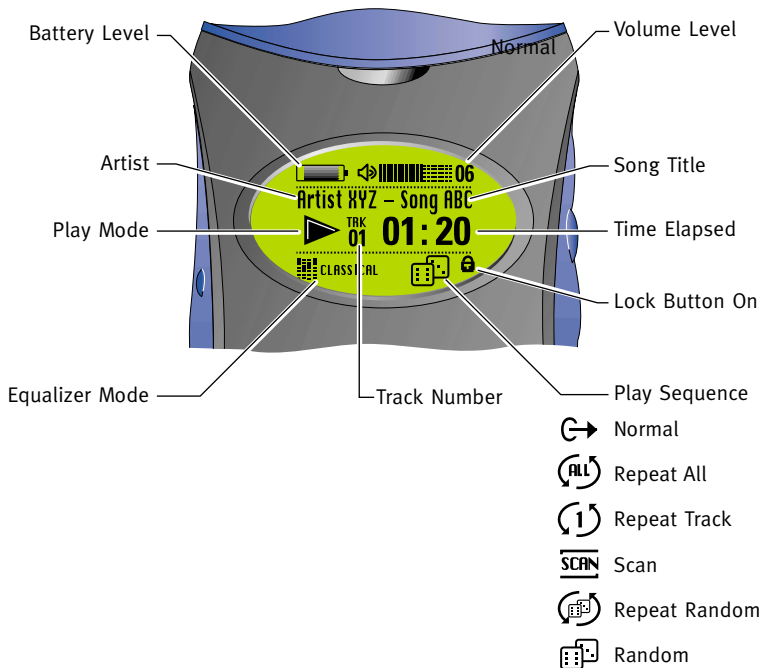

Messages



Connected...

Connected—displays when the player is properly connected to your computer and while downloading files.



Charging

Charging—displays while the battery is charging



Battery Full

Battery Full—displays when the battery is fully charged.



Insert Disk

Insert a Disk—displays when you need to insert a disk.



Bad Connection

Bad Connection—displays when the player is not properly connected to your computer. Check your USB cable connections.



Bad Disk

Bad Disk—displays when the current disk is not readable; insert a different disk. (You may be able to reformat the disk using IomegaWare™ software. See the User's Manual CD for more information on formatting.)



Check Disk

Check Disk—displays for three seconds when the current track contains too many errors to play; the player then skips to the next track. You may want to delete the damaged track and recopy it to the disk.

Transferring Audio Files to the HipZip™ Player

lomega has provided audio management software, MusicMatch Jukebox™ Plus, that will help you create digital audio files from your existing CD collection, download audio files from the internet, organize the files into playlists, transfer the playlists to your HipZip™ player, and more.

For simple instructions on using MusicMatch Jukebox™, start MusicMatch and read the “Welcome Tips” located under the Help menu.

To transfer audio files from the computer to the HipZip™ player, follow the operating-system specific instructions on the following page:

NOTE: Audio files must be located on the root directory only (not in folders or subdirectories) of the HipZip™ player. The HipZip player will not play audio files inside folders.

Windows® PC Users:


1. Connect the player to your computer and insert a mini PocketZip™ disk into the player.
2. Start MusicMatch Jukebox™ (Click on **Start, Programs, MusicMatch Jukebox.**)
3. Select a playlist.
4. Click on **Options** in the main menu.
5. Select **Send to Device.**
6. Select **Download Playlist to the HipZip™ Player.**

Mac® OS Users:

1. Connect the player to your computer and insert a PocketZip™ disk into the player.
2. Using **Finder**, locate the audio file(s) (e.g., SongABC.mp3) you want to transfer. (If you used MusicMatch Jukebox™ to create the file, look in the MusicMatch Jukebox\Music\ folder.)
3. Drag and drop the file(s) (not folders) to the HipZip™ player icon on the desktop.

See the User's Manual CD for details on the following subjects:

- Getting Started
- Installing IomegaWare™
- Connecting the HipZip™ Player
- USB Guidelines
- Using Your HipZip™ Player
- HipZip™ Tips
- Using PocketZip™ Disks
- Troubleshooting
- How to Get Help

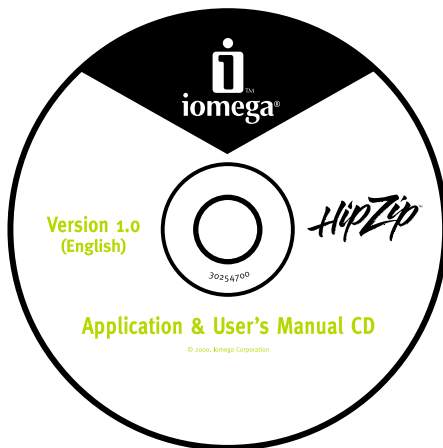

To view the User's Manual on the CD you must have Microsoft® Internet Explorer® 4.0 or higher or Netscape Navigator™ 4.5 or higher installed on your system.

Act now—Register online

We have made it easier and faster to register your Iomega product. Simply enter the following web address **http://www.iomegareg.com** to register online.

See the User's Manual CD for more technical support numbers!

The User's Manual includes a complete list of worldwide support options.

Iomega Web Site

<http://www.iomega.com>

Iomega Web Support Site

<http://www.iomega.com/support>

Customer Support (U.S. and Canada)

1-888-4-IOMEGA (1-888-446-6342)

North America

In North America, this product is intended to be supplied only with an Iomega-approved, UL-Listed and Canadian-certified Class 2 direct plug-in power unit, with a rated output of 5.2 Vdc, 1.0 A.

CE (European Community)

Product Name: Iomega HipZip™ Digital Audio Player

Model Number: DAP-40

The HipZip™ Digital Audio player conforms to the following European Directive(s) and Standard(s): Application of Council Directives: 73/23/EEC, 89/336/EEC. Standards to which Conformity is declared: EN60950, EN55022, EN50082-1. Importer's Name: Iomega Netherlands branch of Iomega International, S.A. Type of Equipment: Internal disk drive.

Manufacturer/Responsible Party

Iomega Corporation

1821 West Iomega Way

Roy, UT 84067 U.S.A.

801-332-1000

Copyright © 2000 Iomega Corporation. Iomega, the stylized "I" logo, Click!, PocketZip, HipZip and IomegaWare are either registered trademarks or trademarks of Iomega Corporation in the United States and/or other countries. Dadio is a trademark of Interactive Objects, Inc. in the United States and/or other countries. MusicMatch and MusicMatch Jukebox are either registered trademarks or trademarks of MusicMatch, Inc. in the United States and/or other countries. Microsoft, Windows, and Windows NT are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Macintosh, Mac, and iMac are either registered trademarks or trademarks of Apple Computer, Inc. in the United States and/or other countries. Certain other product names, brand names and company names may be trademarks or designations of their respective owners.