

MOTOROLA WILDER™

LIFE.  POWERED.



This product meets the applicable limit for exposure to radio waves (known as SAR) of 2.0 W/kg (ICNIRP). The limits and guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the legal and safety information packaged with your product.

Note: When using the product while worn on your body, either use an approved accessory such as a holster or maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with SAR requirements. Note that the product may be transmitting even if you are not making a phone call.

68004150003

WELCOME

Whether you're a talker, a texter or just love listening to music on the move, EX130 does it all.

Your phone is splash and dust resistant, because life happens fast, be ready for whatever it throws at you.

Note: Always make sure that the battery door cover and connector cover are closed and secure. Damage caused by failing to properly secure the phone's splash resistant covers is not covered by the warranty.

If you'd like even more information about how to use your new EX130 visit www.motorola.com/support.

So, let's go.


Note: Certain apps and features may not be available in all countries.

Caution: Before assembling, charging or using your phone for the first time, please read the important safety, regulatory and legal information in this guide.

YOUR PHONE




LET'S GO

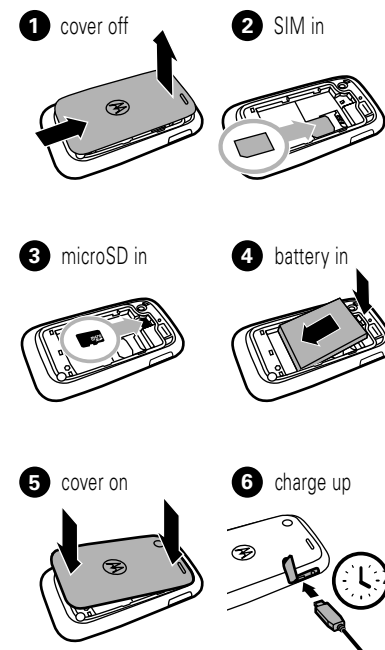

BASICS

Turn it on & off


Press and hold  (on top of the phone) for a few seconds to turn the phone on/off.

Touch tips

- **Touch:** To choose an icon or option.
- **Touch & hold:** To open special options.
- **Drag/flick:** Scroll/move slowly (drag) or quickly (flick).

Menu navigation

Touch  to open the main menu.

Press Home  to close any menu or app and return to the home screen.

Touch Back  to go back.

PERSONALISE



Profiles

Your phone has different profiles. You can customise ringtones, alerts and volumes for each profile.



Touch  >  > **Profiles**, then select from these profiles:

- **General:** Standard profile default setting.
- **Silent:** Ringtone is off, vibrate is off.
- **Meeting:** Vibrate is on, ringtone is off.
- **Outdoor:** Ringtone and key tone volume set to maximum.
- **Flight:** Turn off all wireless connections.

Display settings



To set display settings such as wallpaper, and screen saver, touch  >  > **Settings** > **Display**.

Date & time


Set date, time, time zone and formats: touch  >  > **Settings** > **Date and time**.


MESSAGES

Send an SMS or MMS

- 1 Touch  > **Messaging** > **New message**.
- 2 Enter your message.
- 3 Add pictures, videos and more using options at the bottom of the screen.
- 4 Touch  > **Add recipient** > *select a contact*.
- 5 Touch **Send**.


Read messages

When you receive a message, your phone plays an alert and shows the new message indicator  at the top of the screen.

To read the new message, touch **View**. To read messages stored in your inbox, touch  > **Messaging** > **Inbox**.

CALLS

Make calls

From the home screen, touch  then enter a number and touch **Call**.

Answer calls

When your phone rings or vibrates, touch **Answer**.



End a call

Touch **End call**.

In-call options

During a call, touch **Loudspeaker, Keypad, Mute, New call, Contacts** or **Hold**.

Redial number

- 1 Touch  >  > **Call log**.
- 2 Touch and hold the contact you want to call, then touch **Call**.



Emergency calls

To call an emergency number, enter the emergency number and touch **Call**.


Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

TIPS & TRICKS



Recent calls

To see your **Missed, Received** and **Dialled** calls, touch  >  > **Call log**.

Voicemail



From the home screen, touch  then touch and hold **1**. If your voicemail number is preset, you will connect.

Backlight time

To set how long your backlight stays on, touch  >  > **Display** > **Backlight time-out**.

Battery tips

Want to extend your battery life? Try these:

- Turn off Bluetooth™ power: Touch  > **Bluetooth** > **Off**.
- Turn off the screen saver: Touch  > **Display** > **Screen saver** > **Off**.





MUSIC



To use the music player, insert a microSD memory card (optional). The music player supports MP3, MIDI, AAC, AMR and WAV music formats.

Play music


Touch  >  > **Music player**

controls

function	
play/pause	Touch  / 
next/previous song	Touch  / 
volume	Press the side volume keys up or down .


Tip: To access music stored on your microSD memory card, touch  >  > **Gallery** > **Memory card**. To transfer music to/from your memory card, plug your USB cable into your phone & computer, then drag & drop files to the 'Music' folder.

MENU MAP

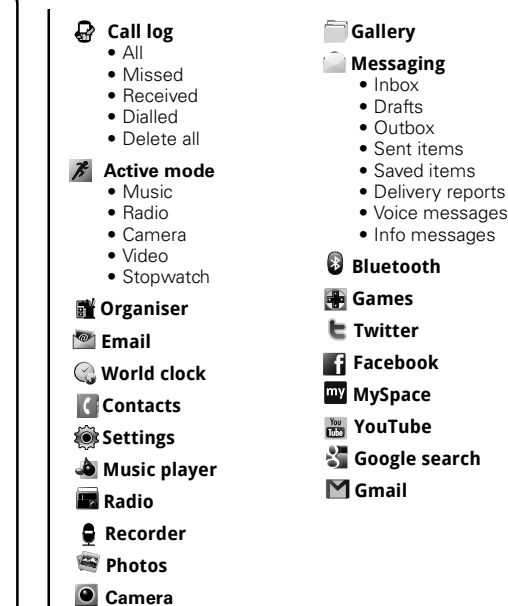

This is the standard main menu layout. Your phone's menu may be a little different.

SOCIAL NETWORKS

Use your phone to access your favourite social network sites, touch  > **Applications**.

Note: If you don't have a social network account, you can visit the website to set it up.

Update your status

After you set up an account, you can sign in, update and see your current status and see and respond to friends' updates.

CONTACTS


Create contacts

Touch  > **Contacts** >  , enter the contact name and details, then touch **Save**.

Tip: Touch > **More** > **Memory in use** to choose where to save your contacts (**Phone memory, SIM card** or **Phone and SIM card**).

Call contacts


Touch and hold a contact, then touch **Call**.

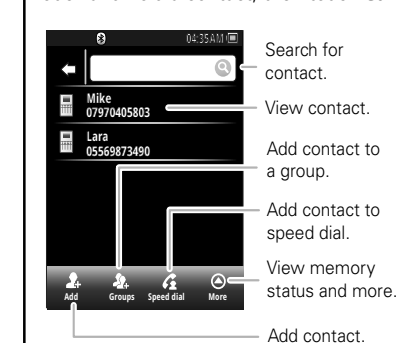

BLUETOOTH™


Turn on or off

Touch  > **Bluetooth** > **On** or **Off**

When Bluetooth power is on, the Bluetooth indicator  appears on the home screen.

Connect new devices


To connect with a new device, you need to pair with it. You only need to do this once for each device.

- 1 Make sure the device you are pairing with is in discoverable mode (see device instructions).
- 2 Touch  > **Bluetooth** > **Paired devices** > **New**.
- 3 Your phone lists the devices it finds within range. Select a device to connect.
- 4 If necessary, enter the device passkey (like **0000**) to connect to the device.



MEDIA

Photos & videos

- Photos: Touch  >  > **Camera**. To take the photo, press .
- Videos: Touch  >  > **Camera**, then drag  down. Press  to start/stop.


After you've taken the photo, touch , then:

- To **send** in a message, email or via Bluetooth, touch **Send**.
- To **delete** the photo or video and return to the viewfinder, touch **Delete**.
- To assign to a contact, touch **Attach to contact**.

To see the photos and videos you've taken, touch  >  > **Gallery** > **Images** or **Video clips**.

WEB


Use your phone's browser to surf your favourite websites, upload videos and download apps. Log onto your Internet-based email account to check your email.


Touch  > *browser name*

- To go to a webpage, touch **Enter URL**.
- To bookmark a webpage, touch **More** > **Bookmarks** > **Add bookmark**.
- To change displays settings like **Font size** and **View mode**, touch **More** > **Settings**.
- To go to a link on a webpage, touch it.

Note: If you can't connect, contact your service provider.

HOME SCREEN

The home screen is what you see when you turn on the phone or touch Home  from a menu. It's basically like this:

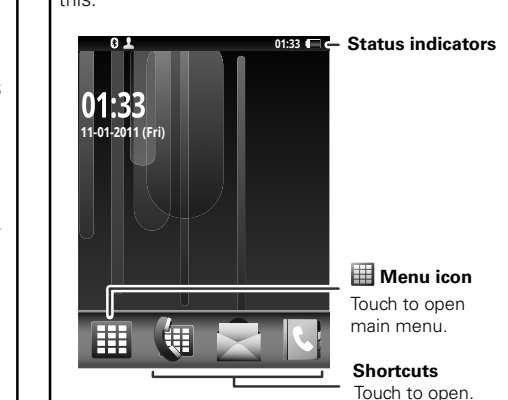

Note: Your home screen might look a little different.

