


CLIÉ Operating Instructions

PEG-T425/PEG-T625C

CLIÉ

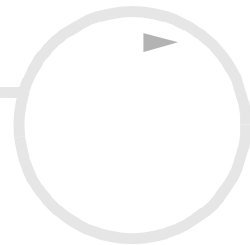

Read this first

Notice

This product contains software owned by Sony and licensed by third parties. Use of such software is subject to the terms and conditions of license agreements enclosed with this product. Software specifications are subject to change without notice and may not necessarily be identical to current retail versions.

© 2001 Sony Corporation. All rights reserved.

Reproduction in whole or in part without permission is prohibited.

Copyright laws prohibit reproducing the software or the software manual in whole or in part, or renting the software without the permission of the copyright holder.

In no event will SONY be liable for any financial damage or loss of profits, including claims made by third parties, arising out of the use of the software supplied with this player.

In the event a problem occurs with this software as a result of defective manufacturing, SONY will replace it at SONY's option or issue a refund. However, SONY bears no other responsibility.

The software provided with this player cannot be used with equipment other than that which it is designated for use with.

Please note that, due to continued efforts to improve quality, the software specifications may be changed without notice.

Program © 2001 Sony Corporation, © 2001 Palm Inc. or its subsidiaries. All rights reserved.

Trademarks

Sony, Memory Stick™, the Memory Stick logo and PictureGear™ are trademarks of Sony Corporation.

Graffiti®, HotSync® and Palm OS® are registered trademarks, and the HotSync logo and Palm™ are trademarks of Palm Inc. or its subsidiaries.

IBM® and PC/AT are registered trademarks of International Business Machines Corporation.

Microsoft® Windows®, Outlook®, DirectX® and the Windows 98 logo are registered trademarks of Microsoft Corporation.

MMX™ and Pentium® are registered trademarks of Intel Corporation.

AvantGo®, AvantGo Client™ and the AvantGo logo are registered trademarks of AvantGo Inc.

Pumatech®, the Pumatech logo, Intellisync® and Intellisync Lite® are trademarks of Pumatech Inc. that may be registered in some jurisdictions.

QuickTime® and the QuickTime logo® are trademarks used under license. QuickTime is registered in the U.S. and other countries.

Adobe® and Adobe Acrobat® Reader™ are trademarks of Adobe Systems Incorporated.

Documents To Go® is a trademark of DataViz, Inc.

This product includes fonts owned by TypeBank Co., Ltd. under license.

All other trademarks are trademarks of their respective owners.

Sample movies and music: cocoro.prc (from DVD Hawaiian Breeze - KOHALA Collection (CCBN-27013))

Music: Mango Cooler (Composed by Charles Michael Brotman. Performed by KOHALA)

Copyright © 2001 cocoronetworks Inc.

Copyright © 1998, 2001 Palm Records Inc.

All rights reserved.

<http://www.cocoronet.com/en/>

Please contact your nearest Sony dealer if you have any problems with your Sony product.

Safety information

- ❑ Opening the unit, for whatever reason, could lead to damages that are not covered by the guarantee.
- ❑ To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.
- ❑ Picture distortion may occur if this equipment is positioned in close proximity to any equipment emitting electromagnetic radiation.
- ❑ To prevent fire or shock hazard, do not expose your CLIE handheld to rain or moisture.
- ❑ Use your CLIE handheld only with the supplied AC adapter. To disconnect your CLIE handheld completely from mains voltage, unplug the AC-adaptor.
- ❑ Please make sure that the socket outlet is easily accessible.

Owner's record

The product number and serial number are located on the back of the CLIE handheld. Record the serial number in the space provided below. Refer to these numbers whenever you call your Sony dealer regarding this product.

Product number: **PEG-T425/PEG-T625C**

Serial number: _____

Warnings

General

- ☐ To prevent fire or shock hazard, do not expose the unit to rain or moisture.
- ☐ To avoid electrical shocks, do not open the cabinet.
- ☐ Refer servicing to qualified personnel only.
- ☐ The socket-outlet should be installed near the equipment and should be easily accessible.

Regulatory information

This product conforms to the following European Directives:

73/23/EEC (Low Voltage Directive)

89/336/EEC, 92/31/EEC (EMC Directives)

93/68/EEC (CE Marking Directive)

This product complies with EN 55022 Class B and EN 55024. For use in the following environments: residential, commercial and light-industrial.

This product has been tested and found compliant with the limits set out in the EMC Directive for using connection cables not longer than 3 metres (9.8 feet).

Disposal of lithium-ion polymer batteries

- ❑ This product contains a rechargeable lithium-ion polymer battery that should not have to be replaced during the lifetime of the product. For changing or removing this battery, please contact CLIE Technical Support.
- ❑ Do not handle damaged or leaking lithium-ion polymer batteries. Dispose of promptly and properly.
- ❑ The battery pack used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 60°C (140°F) or incinerate. Dispose of used batteries promptly.
- ❑ Keep away from children.
- ❑ Dispose of properly at end-of-life.
- ❑ In some areas the disposal of lithium-ion polymer batteries in households or business waste may be prohibited. Please use the public collection system.

Welcome

Congratulations on your latest Sony purchase! The Personal Entertainment Organiser (hereafter referred to as 'CLIE handheld') functions as a personal digital organiser where you can record addresses, events, memos and much more. As well as these functions, the CLIE handheld also works as an information terminal with an excellent extended ability to connect to other devices such as personal computers.

Enjoy the following major features of the CLIE handheld:

- ❑ The Personal Digital Assistant applications: Date Book, Address Book, To Do List, Memo Pad and Calculator.
- ❑ Data exchange capabilities or data synchronization with your computer (HotSync®).
- ❑ Playback of still or motion pictures working with PictureGear™ Lite software on your computer.
- ❑ Data exchange with a computer or other CLIE handhelds using Memory Stick™ and Jog Dial™.
- ❑ Extended features with the installation of add-on applications for the Palm Operating System (see the **Software Guide** for more).


Getting Started

This section is designed to complement the printed **Read This First** document. Consult the printed booklet for details.

Turning your CLIE handheld on and off

To turn on your CLIE handheld, proceed as follows:

- 1 Press the power button (1) as shown in the illustration.
Your CLIE handheld is turned on.
If this is the first time you are using your handheld, you will see the **Setup** screen.

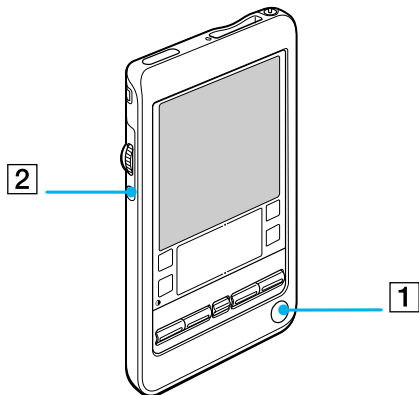

1.	Power button
2.	Back button

To turn off your CLIE handheld, proceed as follows:

Press the power button.

The power is turned off. You do not have to save data, quit an application or perform any of the other shutdown procedures that your computer requires.




Holding the POWER button down for two seconds or longer will turn the screen's backlight on or off.

Using the stylus

With your CLIE handheld, you can use the supplied stylus to enter characters or to specify an application you want to run.


The stylus is stored in the holder at the back of your CLIE handheld. As shown below, simply pull it out when needed. To avoid losing the stylus, always put it back in its holder after use.

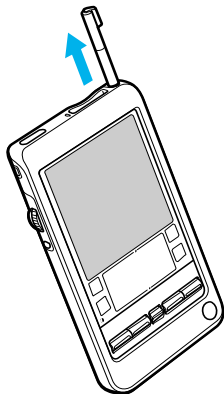

Tapping

To open an application or select an item, take the stylus and press the tip lightly on the icon or item on the screen as shown.


This action is called **tapping**.

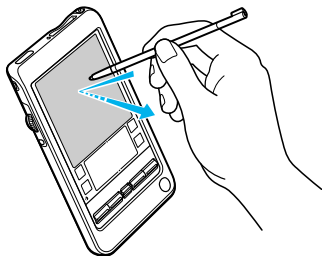

Dragging

Just as you can drag the mouse to move objects or text on your computer, you can use the stylus to drag an item on the screen of your CLIE handheld.

To drag, press the stylus lightly on the item and move it along the screen surface to its new position.

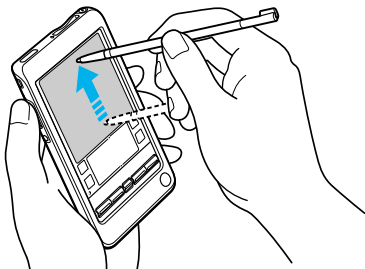


You can use the dragging action in the following scenarios:

- ❑ To display data above or below the current viewing area on the screen, use the stylus to drag the slider of any scroll bar.
- ❑ To select multiple characters or items together, drag the stylus along all the required characters or items.
- ❑ To display the onscreen Graffiti® Help, drag vertically the stylus from the bottom of the writing area to the top of the screen.
- ❑ You can assign the full-screen drag to another activity.

Using the Jog Dial™


Your CLIE handheld is equipped with a Jog Dial™, which allows you to perform all major operations without the stylus. You can operate your CLIE handheld using the Jog Dial™ with just one hand.

The icon of any application that supports Jog Dial™ operations is marked with the Jog Dial™ symbol .

For other applications, you can also use the Jog Assist function to enable Jog Dial™ operations. For details, see Changing the Jog Dial™ preferences ([page 121](#)).


Rotating the Jog Dial™

Rotate the Jog Dial™ to select various items in succession or to select an application to start. The operations you can perform by rotating the Jog Dial™ differ depending on the application you are using. For details, refer to the instructions for each application.

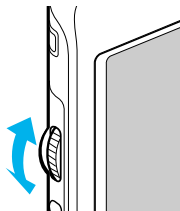

Pressing the Jog Dial™

Press the Jog Dial™ to highlight the item or to run the application you selected by rotating the Jog Dial™. The operations you can carry out by pressing the Jog Dial™ differ depending on the application you are using. For details, refer to the instructions for each application.

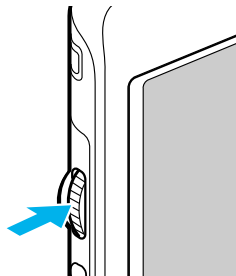

Pressing while rotating the Jog Dial™



Some applications support operations executed by rotating and pressing the Jog Dial™. For details, refer to the instructions for each application.

Adjusting the backlight

You can turn the backlight on the screen on or off, or adjust the contrast (PEG-T425) and/or brightness (PEG-T625C only) according to the lighting conditions or temperature of the environment in which you are using your CLIE handheld.

To turn the backlight on and off, press and hold down the power button for more than two seconds. Even with the backlight on, you may need to further adjust the brightness (PEG-T625C only) on the screen.


To adjust the brightness (PEG-T625C)/contrast level, proceed as follows:

- 1 Tap the **contrast**  (1) (PEG-T425 only)/  **brightness** icon (1) (PEG-T625C only). The adjustment control screen is displayed.



1

- 2 To change the brightness (PEG-T625C)/contrast (PEG-T425) level slightly, tap to the left or right.
- 3 To change the level considerably, drag the slider to the left or right. You can also press the scroll button to move the slider gradually.
- 4 Tap **Done**.
The brightness (PEG-T625C)/contrast (PEG-T425) level is adjusted.

 If the digitizer is not configured correctly, you may not be able to make the adjustments properly. For details, see **Turning on your CLIE Handheld for the first time** in the **Read This First** manual.

The icon on the CLIE handheld shown on the illustration is the contrast icon of the PEG-T425.

Resetting your CLIÉ handheld

Under normal circumstances, you will not have to reset your CLIÉ handheld.


On rare occasions, however, your CLIÉ handheld's buttons or screen may no longer respond due to insufficient memory or other reasons. In this case, you need to perform a reset to get your CLIÉ handheld running again.

Performing a soft reset


A soft reset tells your CLIÉ handheld to stop what it is doing and start over again. All records and entries stored on your CLIÉ handheld are retained with a soft reset.

To perform a soft reset, proceed as follows:

- 1 Take out the reset tip by unscrewing the metal barrel from the stylus quill, as shown below.

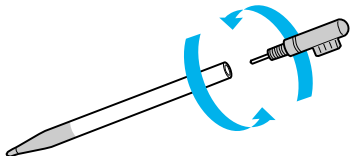

- 2 Use the reset tip to gently press the reset button inside the hole on the back panel of your CLIÉ handheld.

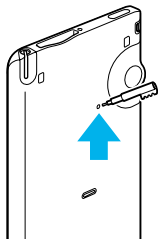

- 3 The system shuts down and then restarts.

After restarting, the system displays **Palm Powered, CLIÉ**, and **Sony**, followed by the **Preferences** screen for setting the time and date.

Performing a hard reset


Please be fully aware that following the procedure below will make you lose **all** the data you have saved on your CLIÉ handheld!

If there is a problem that a soft reset cannot resolve, you need to perform a hard reset to restart your CLIÉ handheld.

- ❑ With a hard reset, all records and entries stored on your CLIÉ handheld are erased; only the current date and time are retained. Formats, preferences, and other settings are restored to their factory default settings.
- ❑ Only perform a hard reset if a soft reset does not resolve your problem.
- ❑ If you save a backup of your CLIÉ handheld data on your computer, you can restore any data previously synchronized with your computer during the next HotSync® operation.

To perform a hard reset, proceed as follows:

- 1 Take the reset tip from the stylus (see Performing a soft reset ([page 12](#))).
- 2 While holding down the power button, use the reset tip to gently press and release the reset button. The **Palm Powered** window is displayed.
- 3 Release the power button.
You will see a message warning you that you are about to erase all the data stored on your CLIÉ handheld.
- 4 Press the upper half of the scroll button on the front panel of your CLIÉ handheld.
Your CLIÉ handheld undergoes a hard reset and everything is erased apart from the current date and time.

 If the scroll button was used just prior to hard resetting, the hard reset may not work.

Entering data

There are three ways to enter data on your CLIE handheld:

- ❑ Using Graffiti® writing
- ❑ Using the onscreen keyboard
- ❑ Using your computer keyboard

Graffiti® writing


Your CLIE handheld includes Graffiti® writing software as the primary system for entering text and numbers. With Graffiti® writing, you write simple strokes with the stylus and they are instantly recognized as letters or numbers.

Most people find they can enter text quickly and accurately with only a few minutes of practice. Graffiti writing includes any character you can type on a standard keyboard. The Graffiti® strokes closely resemble the upper case letters of the regular alphabet, which makes Graffiti® writing easy to learn.

This section explains the procedures for creating letters, numbers, punctuation, and symbols, as well as teaching you some Graffiti® tips and tricks.

Writing Graffiti® letters

The Graffiti® writing area is divided into two parts: one for writing the letters of the alphabet (1) and one for writing numbers (2). The small marks (3) at the top and bottom of the Graffiti® writing area indicate the two areas.

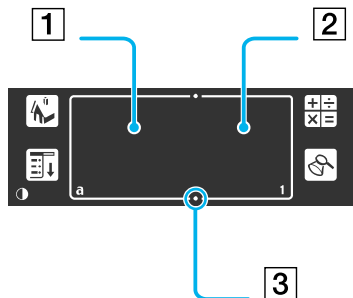

1.	Write letters here
2.	Write numbers here
3.	Division marks

There are five basic concepts for success with Graffiti® writing:

- ❑ If you draw the character shape exactly as shown below, you can achieve 100% accuracy.




- ❑ The heavy dot on each shape shows where to begin the stroke. Certain characters have similar shapes, but different beginning and end points.
- ❑ Always begin the stroke at the heavy dot (you should not create the heavy dot; it is only there to show you where to begin the stroke).
- ❑ Most characters require only a single stroke. When you lift the stylus from the Graffiti® writing area, your CLIE handheld recognizes and displays the text character immediately.
- ❑ To allow you to write an entire character with a single stroke, some Graffiti® strokes are portions of the regular alphabet equivalents.

How to write Graffiti[®] letters?

To write Graffiti[®] letters, proceed as follows:

- 1 Tap where you want your text to go.
You need to tap above the Graffiti[®] writing area, and you must see a flashing cursor before you write the text.
- 2 Use the tables on the following pages to find the stroke shape for the letter you want to create. For example, the stroke shown below creates the letter "n".
There are two different stroke shapes available for some letters. For these letters, choose the one that is easiest for you.
As you will see later, you use the same shape to create both the upper case and lower case version of a letter.
- 3 Position the stylus in the left-hand side of the Graffiti[®] writing area.
- 4 Start your stroke at the heavy dot (1) and draw the stroke shape as it appears in the tables.
- 5 Lift the stylus from the screen at the end of the stroke shape (2).
That is all there is to it. When you lift the stylus from the screen, your CLIE handheld recognizes your stroke immediately and prints the letter at the insertion point on the screen.
As soon as you lift the stylus from the screen, you can begin the stroke for the next character you want to write.

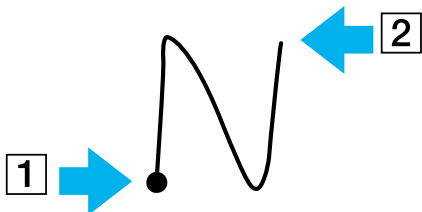

To display the Graffiti® onscreen help, proceed as follows:

Drag the stylus from the bottom of the writing area to the top of the screen. Graffiti® Help opens a series of screens that show the complete Graffiti® character set.



You must begin the character strokes in the Graffiti® writing area. If you do not make Graffiti® strokes in the Graffiti® writing area, your CLIE handheld does not recognize them as text characters.

- ★ Accuracy improves when you write large characters. You should draw strokes that nearly fill the Graffiti® writing area.
- ★ To delete characters, simply set the insertion point to the right of the character you want to delete and make the backspace stroke (a line from right to left) in the Graffiti® writing area.
- ★ Write at natural speed. Writing too slowly can generate recognition errors.
- ★ Do not write on a slant. Vertical strokes should be parallel to the sides of the Graffiti® writing area.
- ★ Press firmly.

Writing Graffiti® alphabet

Write Graffiti® letters corresponding to the letters of the alphabet, as shown below, in the left-hand side of the Graffiti® writing area.


A ^A	h ^H	o o ^O	v v ^V
B β ^B	i ^I	p p ^P	w ^W
C ^C	j ^J	q ^Q	x x ^X
d ^D	k ^K	R R ^R	y y ^Y
E ^E	L ^L	S ^S	Z ^Z
F ^F	m m ^M	t ^T	Space —
G 6 ^G	N ^N	U ^U	BackSpace —

Writing capital letters

To write capital letters, proceed as follows :











Shift to caps and then you can make capital letters with the same stroke shapes as the basic alphabet characters.

- To draw the first letter of a word as a capital letter, use the **Caps Shift** stroke ↓.
To return to the lower case, use the **Backspace** stroke —.
- To enter only capital letters (Caps Lock) Use the **Caps Lock** stroke ↓.
To return to the lower case, use the **Caps Shift** stroke ↓.

 When you create a new sentence or a new record (by tapping New or a blank line), the first letter is automatically capitalized in most applications.

Writing numbers

Write the following Graffiti numbers on the right-hand side (numbers side) of the Graffiti writing area.

0 	3 	6 	9 
1 	4 	7 	
2 	5 	8 	

Writing punctuation marks

Make a single tap on the Graffiti® writing area to activate Punctuation Shift.

The next stroke you make anywhere in the Graffiti® area (the letters or numbers side) creates a punctuation mark.

(.) Period •	(^) Circumflex ^	(() Left Paren (() Right square bracket]
(,) Comma ,	(&) Ampersand &	() Right Paren)	(~) Swung dash ~
(') Apostrophe '	(*) Asterisk *	(/) Slash /	(') Grave accent `
(?) Question ?	(<) Left angle bracket <	(\$) Dollar \$	(;) Semicolon ;
(!) Exclamation !	(>) Right angle bracket >	(\) Back slash \	(:) Colon :
(@) At @	(_) Under bar _	({) Left brace {	Tab ⏏
(#) Number #	(") Ditto "	(}) Right brace }	
(%) Percent %	(-) Dash -	([) Left square bracket [

Writing symbols and extended characters

Make a **Symbol Shift** stroke \ on the Graffiti® writing area to activate Symbol Shift. The next stroke you set, creates a symbol or extended character.

(.) Bullet •	(") Right double quotation W	= Z	ß ß
(™) Trademark ™	(§) Section §	(¢) Cent ¢	μ μ
(®) Registered ®	(°) Degree °	(¥) Yen ¥	f S
(©) Copyrighted ©	+ ∞	(£) Pound £	ø ø
(') Left single quotation '	± ±	(€) Euro €	
(') Right single quotation '	x x	ı ı	
(") Left double quotation "	÷ ÷	i i	

Writing accented characters and non-English characters



To create accented characters, proceed as follows:


Draw the stroke normally used to create the letter, followed by an accent stroke. Graffiti® writing then adds the accent to the letter.

àèìòù 	íóúý 	ãõñ 
âêîôû 	äëïöüÿ 	å 

To write non-English characters, proceed as follows:






You can write the following characters without any special punctuation or shifting:

ç 	æ 
---	---

 You must write these non-English characters on the left side of the Graffiti® writing area.

Using navigation strokes

In addition to character symbols, Graffiti writing includes special strokes that you can use to navigate within text or fields in your applications.

Move cursor right 	Go to the next field (Address Book only) 
Move cursor left 	Open Address Record (Address Book only) 
Go to the previous field (Address Book only) 	

Using Graffiti® shortcuts

Graffiti® ShortCuts, similar to the glossary or autotext features of some word processors, allow you to enter commonly used words or phrases quickly and easily. In addition to the following predefined ShortCuts, you can create your own ShortCuts for your name or the header of a memo.

Each ShortCut can represent up to 45 characters.

To use a ShortCut, draw the ShortCut ℓ stroke followed by the ShortCut characters. When you draw the ShortCut stroke, the ShortCut symbol appears at the insertion point to show that you are in ShortCut mode.

When you enter ℓ and dts (D, T, and S), you can enter date and time stamps.

Date stamp	ds
Time stamp	ts
Date/time stamps	dts
Meeting	me
Breakfast	br
Lunch	lu
Dinner	di

Keyboards


Using the onscreen keyboard

You can open the onscreen keyboard any time you need to enter text or numbers into your CLIE handheld. Note that you cannot enter Graffiti® characters while using the onscreen keyboard.

To use the onscreen keyboard, proceed as follows:

- 1 Open any application in which you want to enter text (such as Memo Pad).
- 2 Tap any record, or tap **New**.
- 3 Tap <a> to open the alphabetic keyboard, or tap <1> to open the numeric keyboard.
The selected keyboard is displayed. You can toggle between the international, alphabetic and numeric keyboards, as shown in the next sections.
- 4 On the keyboard, simply tap the characters to enter text and numbers.
You can use the online keyboard in the same way as the keyboard of your computer. For example, to enter capital letter, tap <cap> and then tap the character button. To delete a character, tap <←>.
- 5 When you have finished, tap **Done** to close the onscreen keyboard and place the text in the record.

Alphabetic keyboard

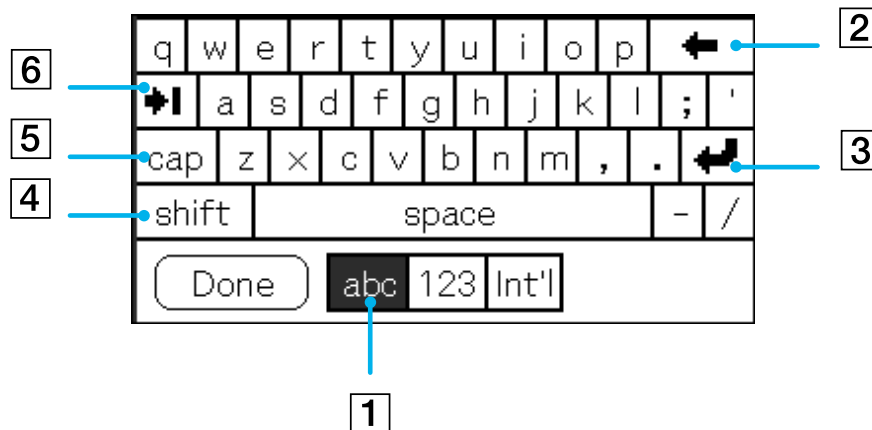


On any keyboard screen, tap **abc** to go to the alphabetic keyboard (1).

The main buttons are as follows:

- ☐ Backspace (2)
- ☐ Carriage return (3)
- ☐ Caps shift (4)
- ☐ Caps lock (5)
- ☐ Tab (6)

International keyboard


On any keyboard screen, tap **Int'l** (1) to go to the international keyboard.

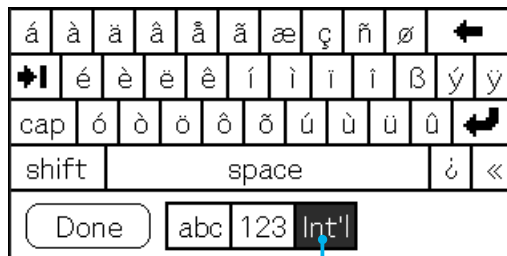

1

Numeric keyboard

From any keyboard screen, tap **123** (1) to go to the numeric keyboard, as shown below.

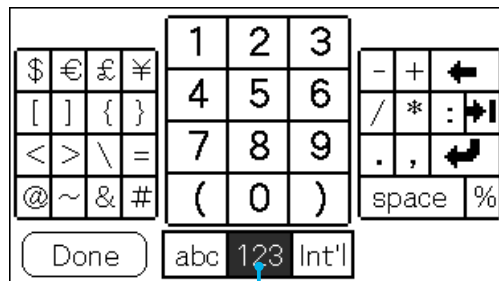

1

Using your computer keyboard

If you have a lot of data to enter, or prefer to use the computer keyboard, you can use the Palm™ Desktop for CLIE software or any other supported personal information manager (PIM), such as Microsoft® Outlook®, to enter information. You can then perform a HotSync® operation to synchronize the information on your computer with the information on your CLIE handheld.

All the main applications on your CLIE handheld are also available in the Palm™ Desktop for CLIE software and in most PIMs, so you do not need to learn different applications.

Refer to the Palm™ Desktop for CLIE software online Help for more information on entering data on your computer.

If you have data stored in computer applications such as spreadsheets, and databases, or if you want to import data from another handheld, you can transfer the data to your CLIE handheld and use it without entering data manually. Save the data in a compatible file format (.csv,.txt,.tab,.tsv,.dba,.aba,.tda,.mpa), import it into your Palm™ Desktop for CLIE software, and then perform a HotSync® operation to transfer the data to your CLIE handheld. See **Using HotSync® operations (page 82)** for details.


Performing common tasks

This section describes how to perform tasks that you can do in most or all of the basic applications.

The Application Launcher

The **Application Launcher** displays all the default applications available on the CLIE handheld. You can also display selected applications by arranging them into categories.

To start the Application Launcher, tap the **Home** icon .

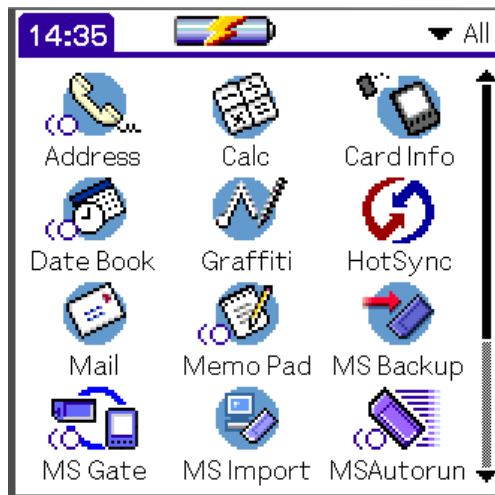

As well as being your gateway to all the applications, the **Application Launcher** screen displays the current time, battery level, and application category.

Opening applications

To open an application, proceed as follows:

Tap the icon of the application you want to open.


If you have many applications installed on the CLIE handheld, tap the scrollbar to see all the available applications.

Or

- 1 Tap the **Home** icon.
- 2 Rotate the Jog Dial™ to select the application.
- 3 Push the Jog Dial™ to launch the selected application.

Or

Press an application button (1) on the front panel to display the selected application immediately.

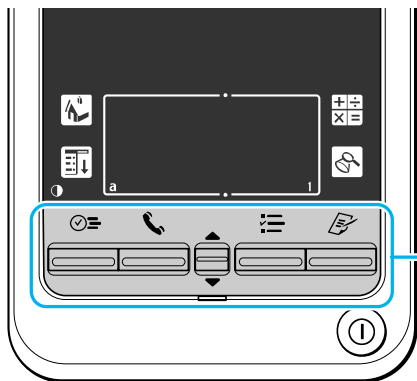




1

	Date Book
	Address Book
	To Do list
	Memo Pad

Opening applications on the Memory Stick™

To open an application stored on the /PALM/Launcher directory of the Memory Stick™, proceed as follows:

- 1 In the **Application Launcher** screen, tap the arrow ▼ in the upper-right corner and select **Card** (or a category with the **Card** icon ).
- 2 Tap the icon of the application you want to open. The **Card** icon  is displayed only when a Memory Stick™ is inserted into the CLIE handheld.



 There are some restrictions when opening an application which was copied onto the CLIE handheld from the Memory Stick™ and not installed using MS Gate.

Changing the display of the Application Launcher

By default, the Application Launcher displays applications as icons. Alternatively, you can display applications in a list format, or in a smaller icon/list.

You can also choose to view the same category of applications each time you open the Application Launcher screen.

To display applications in a list format, proceed as follows:



- 1 Tap the **Home** icon .
- 2 Tap the **Menu** icon .
- 3 Tap the **Options** menu.
- 4 Tap **Preferences**.
- 5 Tap the arrow ▼ next to **View By** and then select from **List**, **List (Small)**, or **Icon**, **Icon (Small)**.
- 6 Select **List**.
- 7 Tap **OK**.

The applications are now displayed in the selected format.



Categorizing applications

The category feature enables you to manage the number of application icons that appear on screen in the **Application Launcher**. You can assign an application to a category and then display a single category or all your applications.

To categorize an application, proceed as follows:

- 1 Tap the **Home** icon .
- 2 Tap the **Menu** icon .
- 3 From the **App** menu, select **Category**.
The **Category** screen appears.
- 4 Tap the down arrow next to the application you want to categorize.
- 5 Select the category you want.
- 6 Tap **Done**.


To create a new category for an application, proceed as follows:

- 1 Tap the **Home** icon .
- 2 Tap the **Menu** icon .
- 3 From the **App** menu, select **Category**.
The **Category** screen appears.
- 4 Tap ▼ next to the application you want to categorize.
- 5 Tap **Edit Categories**.
- 6 Tap **New**.
- 7 Enter the category name.
Write the name in the **Graffiti** text area.
- 8 Tap **OK** to add the category.
- 9 Tap **OK** again.
- 10 Tap **Done**.

Displaying applications by category

You can display the applications according to their category, like games or CLIE applications.

To display applications by category, proceed as follows:

- 1 Tap the **Home** icon .
- 2 Do one of the following:
 - ☐ Tap the **Home** icon repeatedly to go through all the categories.
 - ☐ Tap ▼ in the top right-hand corner of the screen and then tap the category you want from the drop-down categories list.
 - ☐ Push the Jog Dial™ repeatedly while no applications are selected.

Searching for records

Your CLIE handheld lets you find information by entering text in the **Find option** dialog box or searching for a phone number using the **Phone Lookup** option. These two options are available for all the basic CLIE applications. Each application offers several ways to find information:

- ☐ In the Date Book, the To Do List and the Memo Pad, you can find a telephone number with the Phone Lookup option. Then, the List screen is displayed and you can add the information that appears in this list to a record.
- ☐ In the Address Book, you can use the **Find** option to enter the first letters of a name and scroll immediately to that name.

Using the Find option

The Find option lets you search for text in any or all applications. For example, if the text appears in the Address Book and the Date Book, the Find option displays both occurrences in the **Find** dialog box.


To use Find, proceed as follows:

- 1 Tap the **Find** icon.
The **Find** dialog box appears.
 - 2 Enter the text you want to find.
You can find alphanumeric characters and symbols.
 - 3 Tap **OK**.
The search procedure starts and the find result list displays all words, which include the text you entered.
The notes attached to each record can also be found.
 - 4 Tap the data you want from the find result list.
The application in which the information had been found, is launched. Tap **Stop** to stop the search procedure at any time.
- ★ Tap **Find More** to restart **Find**.
 - ★ The **Find** option is not case sensitive; searching for 'sony' also finds 'Sony'.
 - ★ Select text in an application before tapping the **Find** icon to automatically place the text in the **Find** dialog box.

Using the Phone Lookup option

The Phone Lookup option lets you find a telephone number from the Address list and add it to an entry in another application. For example, you can add a telephone number from the Address list to an entry in the Memo Pad using the Phone Lookup option.

To use Phone Lookup, proceed as follows:

- 1 Display the record in which you want to insert a phone number.
The record can be in the Date Book, the To Do List, or the Memo Pad.
- 2 Tap the **Menu** icon .
The menu of the application appears.
- 3 Tap **Options**, then **Phone Lookup**.
The **Phone Number Lookup** screen appears.

4 Tap a phone number you want to add.

5 Tap **Add**.

The **Phone Lookup** screen closes and the name and phone number are added to the record.

★ To find a phone number quickly, enter the first letters of the name you want to find in the **Look Up** field in the lower screen.

★ You can use **Phone Lookup** by writing the shortcut for the **Phone Lookup** command in the text Graffiti® area.

★ You will find it easy to use Phone Lookup without displaying the **Phone Lookup** screen by performing the following:

Entering a new name with Phone Lookup: For example, you write John with Graffiti® to enter the name and phone number of John Smith. The name and phone number of John Smith are added, if John Smith is the only one in the records. If the records include many Johns, the Phone Number Lookup screen appears.

Phone Lookup by text: You drag and highlight text before you write with Graffiti®. The Phone Lookup starts up to exchange the selected text for the found name and phone number. If many records for the selected text are included, the **Phone Number Lookup** screen appears.

Opening the Application Launcher at the category you last opened

You can set your CLIE handheld to display the last category of applications you selected, each time you return to the Application Launcher.

To display the last-selected category of applications, proceed as follows:

1 Tap the **Home** icon .

2 Tap the **Menu** icon .

3 Tap the **Options** menu, then **Preferences**.

The **Preferences** screen is displayed.

4 Select the **Remember Last Category** check box.

5 Tap **OK**.

The setting is made.

 Only applications started from the **Application Launcher** screen will be remembered as the last-used application.

Displaying the Pop-up application menu with the Jog Dial™

To display the Pop-up application menu with the Jog Dial, proceed as follows:

In step 4 of the Opening the Application Launcher at the category you last opened (page 34) section, tap the arrow ▼ next to **Jog Select** and then tap **PopUp**.

Categorizing records

You can categorize records in Address Book, To Do List, and Memo Pad applications for easy retrieval (The Date Book does not have categories). When you create a record, it is automatically assigned to the currently displayed category. For example, if the **All** category is displayed, the record is assigned to the **Unfiled** category. A record can remain **unfiled** or it can be assigned to a category at any time.

System-defined and user-defined categories

By default, your CLIE handheld includes system-defined categories, such as **All** and **Unfiled**, and user-defined categories, such as **Business** and **Personal**.

You cannot modify the system-defined categories, but you can rename or delete the user-defined categories. In addition, you can create your own user-defined categories. You can have a maximum of 15 user-defined categories in each application.

- ★ Address Book contains the **QuickList** user-defined category, in which you can store the names, addresses, and phone numbers that you might need in emergencies (doctors, fire department, lawyers, etc.).

Moving a record into a category

To move a record into a category, proceed as follows:

- 1 Tap the record that you want to categorize.
- 2 Address Book only: Tap **Edit**.
The **Address Edit** screen appears.
- 3 Tap **Details**.

- 4 Tap the arrow ▼ next to **Category** to display the list of available categories.
- 5 Tap the appropriate category for the item.
- 6 Tap **OK**.
The record is moved to the appropriate category.

Displaying the category of records

To display the category of records, proceed as follows:

- 1 Tap the arrow ▼ at the upper right corner of the screen.
A list of available categories appears.
- 2 Tap the category you want to view.
The list screen now displays only the records assigned to that category.

Defining a new category

To define a new category, proceed as follows:

- 1 Tap the arrow ▼ at the upper right corner of the screen.
A list of available categories appears.
- 2 Tap **Edit Categories**.
The **Edit Categories** screen is displayed.
- 3 Tap **New**.
The **Edit Categories** dialog box is displayed.
- 4 Enter a new category name and then tap **OK**.
You can assign any of your entries to the new category.

Attaching notes

In all basic applications except Memo Pad, you can attach a note to a record. A note can be up to several thousand characters long. For example, for an appointment in the Date Book, you can attach a note with directions to a location.

To attach notes, proceed as follows:


- 1 Tap the record to which you want to add a note.
- 2 For the Address Book: Tap **Edit**.
The **Address Edit** screen appears.
- 3 For the other applications, tap **Details**.
- 4 Tap **Note**.
- 5 Enter your note.
- 6 Tap **Done**.
A small note icon appears at the right side of any item that has a note.

★ To display the note, tap the note icon. You can review or edit the note. To delete the note, tap **Delete** and then tap **Yes**.

Purging records

If outdated records of your Date Book or To Do List take up too much memory on your CLIE handheld, remove them by using the **Purge** option. If you think Date Book or To Do List records might still be useful later, you can save them in an archive file on your computer. Purging is not available in Address Book or Memo Pad, so delete outdated records from these applications.

To purge records, proceed as follows:

- 1 Open the application.
- 2 Tap the **Menu** icon .
- 3 Tap **Purge** from the **Record** menu.
The **Purge** screen appears.

- 4 Tap the arrow ▼ and select how old a record must be to be purged.
- 5 To save a copy of the purged records on your computer, select the **Save archive copy on PC** check box. To delete the records completely, deselect the check box.
- 6 Tap **OK**.
If you chose to save a copy of the purged records, your CLIE handheld transfers them to an archive file on your computer the next time you perform a HotSync® operation.

Switching between applications

To switch between applications, you can either:

- ❑ Tap the icon of the application you want.

Or

- ❑ Press the appropriate application button on the front panel of the CLIE handheld.
The CLIE handheld automatically saves your work in the current application and displays it when you return to that application.

Using the Edit menu

The **Edit** menu is available with any screen where you enter or edit text. In general, commands available in the **Edit** menu apply to text that you select in an application.

To select text, proceed as follows:

- 1 Tap the beginning of the text that you want to select.
- 2 Drag the stylus over the text to highlight it.

The following commands may appear in the **Edit** menu:

- ❑ **Undo:** Reverses the action of the last edit command. For example, if you used Cut to remove text, Undo restores the text you removed. Undo also reverses deletions done by using backspace.

- ❑ **Cut:** Removes the selected text and stores it temporarily in the memory of your organiser. You can paste the text you cut into another area of the current application or into a different application.
- ❑ **Copy:** Copies the selected text and stores it temporarily in the memory of your organiser. You can paste the text that you copy into another area of the current application or into a different application.
- ❑ **Paste:** Inserts the text that you cut or copied at the selected point in a record. The text you paste, replaces any selected text. If you did not previously cut or copy text, Paste does nothing.
- ❑ **Select all:** Selects all of the text in the current record or screen. This enables you to cut or copy all of the text and paste it elsewhere.
- ❑ **Keyboard:** Opens the onscreen keyboard. When you have finished with the onscreen keyboard, tap **Done**.
- ❑ **Graffiti Help:** Opens screens that show all the Graffiti® character strokes. Use this command anytime you forget a stroke for a character.




You can also double-tap to select a word, or triple-tap to select a line of text.

You can also drag across the text to select additional words, or drag down to select a group of lines.

Choosing fonts

In all basic applications as well as in most Sony applications where you can enter text, you can change the font style to make the text easier to read. You can choose a different font style for each application.

To choose the fonts, proceed as follows:

- 1 Open an application.
- 2 Tap the **Menu** icon  .
The menu is displayed.
- 3 Tap **Options**, and then tap **Font**.
- 4 Tap the font style you want to use.
You can select **small**, **bold**, or **large font**.
- 5 Tap **OK**.
The text in the application is displayed in the selected font style.

Add-on applications

Use the Application CD-ROM to install the Palm™ Desktop for CLIE software onto your computer. You can then perform a HotSync® operation to transfer the applications onto your CLIE handheld and make use of them there.

After installing the Palm™ Desktop for CLIE software onto your computer, and performed a HotSync® operation, you can enjoy the following applications:

- ☐ gMovie
- ☐ PictureGearPocket
- ☐ CLIE Paint
- ☐ PhotoStand
- ☐ World Alarm Clock
- ☐ CLIE Remote Commander
- ☐ Sound Utility
- ☐ Documents To Go

See the **Software Guide** to find out what you can do with these applications. The **Software Guide** will also provide explanations on the following pre-installed Sony applications:

- ☐ MS Import
- ☐ MS Gate
- ☐ MS Backup
- ☐ MS Autorun

Using your CLIE handheld

Using the basic Palm™ OS applications


Your CLIE handheld is pre-installed with the following Palm OS basic applications: Date Book, Address Book, To Do List, Memo Pad and Calculator. This section explains how to use them.

For the basic Sony applications and other software available for use on the CLIE handheld, please see the **Software Guide**.

Date Book

Date Book lets you quickly and easily schedule appointments or any activity associated with a date or a date and time. A record in Date Book is called an event.

To open Date Book, proceed as follows:

- 1 Press the Date Book  button on the front panel.
Date Book starts up. Today's schedule is displayed with a list of times for a standard business day.
- 2 Press the Date Book button repeatedly to go through the **Day**, **Week**, **Month**, and **Agenda** views.
The Date Book views are displayed in the bottom left-hand corner of the screen.

Scheduling events

Scheduling an event for the current date

To schedule an event for the current date, proceed as follows:


- 1 Tap the appropriate time line for the beginning of the event.
- 2 Enter a description of the event.
You can enter a description or note up to 255 characters in length.
- 3 If the event is one hour long, go to Step 6. If the event is longer or shorter than one hour, tap the time of the event to open the **Set Time** dialog box.

- 4 To set the duration of the event, either:
 - ☐ Tap the time columns on the right side of the **Set Time** dialog box to set the start time. Tap the **End Time** box, then tap the time columns to set the End Time, or;
 - ☐ Tap **All Day** to automatically insert the start and end time of the event as defined in your Date Book preferences.

5 Tap **OK**.

6 Tap a blank area of the screen to deselect the event.

7 A vertical line appears next to the time, indicating the duration of the event.

 You can also open the **Set Time** dialog box by writing a number in the Graffiti® writing area and making sure no event is selected.


To schedule an untimed event, proceed as follows:

- ☐ In step 4 of the **Scheduling an event for the current date** section, tap **No Time**.
A new untimed event is displayed in the first line in Date Book.

Scheduling an event for another date

To schedule a timed event for another date, proceed as follows:

- 1 Press the Date Book button on the front panel.
Date Book starts up.
- 2 Do one of the following to select the date you want for the event:
 - ☐ Tap the day of the week on top of the **Date Book** screen.
To move to another week, tap one of the scroll arrows of the day of the week area.
 - ☐ Tap **Go to** at the bottom of the screen.
The **Go to Date** dialog box appears. Select a date by tapping a year, month, and day in the calendar.
- 3 Follow the steps for Scheduling an event for the current date ([page 41](#)).

 You can also use the scroll button on the front panel to move forward or backward one day or one month at a time.

To schedule an untimed event, proceed as follows:

- ❑ In step 3 of the **Scheduling an event for another date** section, tap **New** and then tap **No Time**. Then follow the steps for Scheduling an event for the current date (page 41).
- ★ You can create a new untimed event by making sure no event is selected and then write letters in the Graffiti[®] writing area. When you start writing, the untimed event appears at the top of the screen.

Scheduling repeated and continuous events


The **Repeat** function lets you schedule events that recur at regular intervals or extend over a period of consecutive days.

Examples of repeated or continuous events:

- ❑ A birthday: an annual event
- ❑ A weekly guitar lesson: an event that falls on the same day of the week and at the same time of the day
- ❑ Business trip or vacation: a continuous event.

To schedule a repeated event, proceed as follows:

- 1 Tap the description of the event.
- 2 Tap **Details**.
The **Event Details** dialog box appears.
- 3 Tap **Repeat**.
The **Change Repeat** dialog box appears.
- 4 Tap **Day**, **Week**, **Month**, or **Year** to set how often the event takes place.
For a continuous event, tap **Day**.
- 5 Enter a number that corresponds to how often you want the event to repeat on the **Every** line.
 - ❑ When you tap **Week**: After **Repeat**, tap a letter representing the appropriate day of the week.
 - ❑ When you tap **Month**: After **Repeat by**, either tap a day to repeat the event on a certain day of the same week each month, or tap **Date** to repeat the event on the specified date each month.

- 6 To specify an end date for the repeated or continuous event, tap the down arrow next to **End on** to display the drop-down list and then tap **Choose Date**.
The **Ending On** screen appears.
 - 7 Tap the end date on the screen.
The **Change Repeat** screen appears again.
 - 8 Tap **OK**.
The **Event Details** screen appears again.
 - 9 Tap **OK**.
The **Date Book** screen appears.
Make sure the **Repeat** icon is displayed to the right of the event.
-  If you change the start date of a repeated event, your CLIÉ handheld calculates the number of days the event was moved by. Your CLIÉ handheld then automatically changes the end date so that the duration remains the same.
- If you change the repeat interval (e.g., daily to weekly) of a repeated event, past occurrences (prior to the day on which you change the setting) are not changed, and your CLIÉ handheld creates a new repeated event.
- If you change the date of a repeated event (e.g., from January 14 to January 15) and apply the change to all occurrences, the new date becomes the start date of the repeated event. Your CLIÉ handheld adjusts the end date to maintain the duration of the event.
- If you change other repeat settings (e.g., time, alarm, private) of a repeated event and apply the change to all occurrences, your CLIÉ handheld creates a new event. The start date of this new event is the day on which the setting is changed. Past occurrences (prior to the day of change) are not changed.
- If you apply a change to a single occurrence of a repeated event (e.g., time), that occurrence loses its repeat icon.

Displaying event views

As well as displaying the time for a specific day, you can display the current time, a whole week, a month, or an agenda.





To display the Date Book views, proceed as follows:

- 1 Tap the blank area on your screen, so that no event is selected.



- 2 Press the Jog Dial™.
Each time you press the Jog Dial™, you go through the different views: daily calendar, weekly calendar, monthly calendar and schedules for the day.
- 3 You can also select a Date Book view by tapping an icon in the **Date Book** screen.
Tap one of the following icons to see the corresponding calendar view:

Tap: *To display:*

	Day view
	Week view
	Month view
	Agenda view

Day view

You can display and check the events for a specific day.


To go to Day view, proceed as follows:

- 1 Press the **Date Book** button on the front panel.
Date Book starts.
Today's schedule is displayed.
- 2 Rotate the Jog Dial™ to display the events for yesterday or tomorrow.
You can display the schedule for a specific day and time.

Week view

Week view displays a calendar of your events for an entire week. This view lets you quickly review your appointments and available time slots. In addition, the graphical display helps you spot overlaps and conflicts in your schedule.

To go to Week view, proceed as follows:

- 1 Press the **Date Book** button on the front panel.
Date Book starts up.
 - 2 Press the Jog Dial™ or tap the **Week view** icon .
The **Week** view appears. This screen shows the untimed events or available time slots.
 - 3 Rotate the Jog Dial™ to select the day you want to review.
 - 4 Press the Jog Dial™.
The content of the selected event appears.
 - 5 An event conflict (this means that two or more events overlap each other) appears in the **Week** view as overlapping time bars.
- ★ To reschedule an event while you are in **Week** view, tap and drag the event to a different time or day.
 - ★ Tap a blank time on any day to move to that day and have the time selected for a new event.
 - ★ Tap any day or date that appears at the top of the **Week** view to move directly to that day without selecting an event.

- ★ The **Week** view displays the time span defined by the **Start Time** and **End Time** in the **Date Book Preferences** settings. If you have an event before or after this time span, a bar appears at the top or bottom of that day's column. Use the scroll arrows to scroll to the event.

Viewing the detail of an event

To view the detail of an event, proceed as follows:

Tap each time bar to view the detail of that event.


Spotting event conflicts

An event conflict (time overlap) appears in the **Week view** as overlapping time bars and in the **Day view** as overlapping brackets to the left of the conflicting times.

Month view

The **Month** view shows which days have events scheduled. Dots and lines in the **Month** view indicate events, recurring events, and untimed events.

To go to Month view, proceed as follows:



- 1 Press the **Date Book** button on the front panel.
The Date Book starts up.
- 2 Press the Jog Dial™ repeatedly or tap the Month view icon .
The **Month** view appears.
- 3 Rotate the Jog Dial™ to select the day you want to review.
To select the next day, rotate the Jog Dial.
- 4 Press the Jog Dial™.
The content of the selected event appears.
 - Tap a day in the **Month** view to display that day in the **Day** view.
 - Tap the scroll arrows ◀▶ in the top right-hand corner to move forward or backward a month.
 - Tap **Go To** to open the **Go To Date** dialog box to select a different month.

- Use the scroll buttons on the front panel of your CLIÉ handheld to move between months. Press the upper half of the scroll button to display the previous month, the lower half of the scroll button to display the next month.

Agenda view

The **Agenda** view lets you view appointments, untimed events, and To Do List items in a single screen. Although it is primarily a viewing option, you can also use the **Agenda** view to check off To Do List items.

To go to Agenda view, proceed as follows:

- 1 Press the **Date Book** button on the front panel.
The Date Book starts up.
 - 2 Press the Jog Dial™ repeatedly, or tap the **Agenda view** icon .
The **Agenda** view appears. Today's schedule and To Do List are displayed.
 - 3 Rotate the Jog Dial to select the day that you want to review.
To select the next day, rotate the Jog Dial.
-  Tap any appointment while in the **Agenda** view to display the **Day** view of the appointment.
Check off completed **To Do List** items in the **Agenda** view, or tap a description of an item to go directly to the **To Do List** application.

Changing between date and time views

To change between the date and time views, proceed as follows:

- 1 Tap and hold the date in the title bar of Date Book.
The current time appears.
- 2 When you release the stylus, the menu bar appears.
If you want to avoid displaying the menu when releasing the stylus, drag the stylus away from the date display once the current time appears.

Editing events

Changing the date and time of an event

To change the date or time of an event, proceed as follows:

- 1 In the **Date Book** screen, tap the event you want to edit.
- 2 Tap **Details**.
The **Event Details** dialog box appears.
- 3 To change the time, tap the **Time** box and select a new time.
The **Set Time** dialog box appears. Enter the set time and the end time.
- 4 To change the date, tap the **Date** box and select a new date.
The **Set Date** dialog box appears. Specify the year, month, and day in the calendar.
- 5 Tap **OK**.

Changing a timed event to untimed

To change a timed event to an untimed event, proceed as follows:

- 1 In the **Date Book** screen, tap the event you want to edit.
- 2 Tap **Details**.
- 3 Tap the **Time** box.
The **Set Time** screen appears.
- 4 Tap **No Time** and then tap **OK**.
The **Event Details** screen appears.
- 5 Tap **OK**.
The untimed event is displayed on the first line with the symbol ♦.

Deleting an event

You can delete events in the Date Book.

To delete an event, proceed as follows:

- 1 Press the **Date Book** button on the front panel.
The Date Book starts up.
- 2 Tap the event you want to delete.
- 3 Tap **Details**.
The **Event Details** dialog box appears.
- 4 Tap **Delete...**.
The **Delete Event** dialog box appears.
- 5 Tap **OK**.
The selected event is deleted. To cancel deletion, tap **Cancel**.



If you select **Save Archive Copy On PC**, the deleted data from your CLIÉ handheld is saved to the Palm™ Desktop for CLIÉ software during the next HotSync®.


If you delete the start and end times of recurring events, all the related events that are defined in conjunction with the recurring event will be deleted.

When you delete the event with the **Delete Event** command, you can specify whether a single event is to be deleted as an exception, or all of the related events are to be deleted.

Setting the alarm

The **Alarm** setting enables you to set an audible alarm to remind you about events in your Date Book. You can set an alarm to ring minutes, hours, or days before an event. The default Alarm setting is 5 minutes before the time of the event but you can change this to any number of minutes, hours, or days.

You can also set your CLIÉ handheld to vibrate, or flash its LED for an event instead of, or in addition to, an audible alarm.

When you set an alarm, an alarm  icon appears to the far right of the event with the alarm.

To set the alarm for an untimed event, proceed as follows:

- 1 In the **Date Book** screen, tap the event for which you want to set the alarm.
- 2 Tap **Details**.
The **Event Details** dialog box appears.

- 3 Select the **Alarm** check box.
The alarm is set.
- 4 Tap the down arrow to choose from minutes, hours, or days.
- 5 Tap **5** next to the **Alarm** check box and enter any number from 0 to 99 as the number of time units.
- 6 Tap **OK**.
The alarm icon appears next the event.

You can set a silent alarm for an untimed event. In this case, the alarm is set for the specified period of minutes, hours, or days before midnight (beginning) of the day of the untimed event. No audible alarm rings for an untimed event. The reminder message appears onscreen instead.

Example: When you set an alarm for an untimed event that occurs on 4th February and if the alarm is set for 5 minutes, the reminder message appears at 11:55 PM (23:55) on the night of 3rd February. The reminder remains onscreen until you turn on your handheld and tap **OK** to erase it.

★ You can also set your CLIÉ handheld to vibrate, or flash its LED for an event instead of, or in addition to, an audible alarm. For details, see the Turning the vibrate alarm and LED alarm on or off ([page 115](#)) section.

Making an event private

You can hide records that you mark as private. If you define a password for your CLIÉ handheld, you must enter it to display private records.

To make an event private, proceed as follows:

- 1 On the Date Book screen, tap the event you want to mark as private.
- 2 Tap **Details**.
The **Event Details** dialog box appears.
- 3 Tap the **Private** check box.
- 4 Tap **OK**.
The event is marked as private. For hiding or masking private events, see Private records ([page 77](#)).

Date Book menus

This section explains the menu commands specific to Date Book. The Record and Options menus differ depending on the screen displayed.

Record menus

New Event: Creates a new event.

Delete Event: Deletes the currently selected event.

Attach Note: Attaches notes to the current event.

Delete Note: Deletes notes from the current event.

Purge: You can specify a certain period based on the current date and discard any events that were formed before the specified date. Use this function to save memory space.

Beam Event: Sends the current event to another CLIÉ handheld via the infrared communications port.



A repeated event will not be deleted.

By default, the events that you purge are restored and saved in the Palm™ Desktop for CLIÉ software on your computer at the next HotSync operation. To delete the events completely, deselect the check box for **Save archive copy on PC** in the **Purge** dialog box.

Option menus

Font: You can select the fonts of the Date Book.

Under **Preferences**, you have the following options:

- ☐ **Start/End Time:** Defines the start and end times for Date Book screens. If the time slots you select do not fit on one screen, you can tap the scroll arrows to see more.
- ☐ **Alarm Preset:** Automatically sets an alarm for each new event. The silent reminder for untimed events is defined by minutes, days, or hours before midnight of the date of the event.
- ☐ **Alarm Sound:** Sets the tone of the alarm. If you import a tone of your choice to your CLIÉ handheld using the Sound Converter software, they will appear here in the menu for Alarm Sound. For details, see the Software Guide.

- ❑ **Remind Me:** Defines how many times the alarm should go off.
- ❑ **Play Every:** Defines how often the alarm sounds.

Under **Display Options**, you can change the Date Book appearance:

- ❑ **Show Time Bars:** Activates the time bars that appear in the Day View. The time bars show the duration of an event and illustrate event conflicts.
- ❑ **Compress Day View:** Controls how the time appears in the Day View. When **Compress Day View** is off, all time slots are displayed. When it is on, start and end times display for each event, but blank time slots toward the bottom of the screen disappear to minimize scrolling.
- ❑ **Month View settings:** These check boxes apply to the Month View of the Date book. You can activate any or all of these settings to show that you have Timed, Untimed, or Daily Repeated events in the Month View only.

Phone Lookup: The Phone Number Lookup screen appears. If there is an Address Book entry, you can look up the phone number of the selected item.

Security: Hides the current item unless the password is entered. You can select the view option among **Show Records**, **Mask Records**, or **Hide Records**.

About the Date Book: Shows the version information for Date Book.

Address Book

The Address Book lets you keep names, addresses, telephone numbers, and other information about your personal or business contacts.

An item in Address Book is called an **entry**.

With the Address Book, you can:

- ❑ Quickly enter, look up, or duplicate names, addresses, phone numbers, and other information.
- ❑ Enter up to five phone numbers (home, work, fax, mobile, and so on) or e-mail addresses for each name.
- ❑ Define which phone number appears in the **Address** list for each Address Book record.

- ❑ Attach a note to each Address Book record, in which you can enter additional information about the record.
- ❑ Assign Address Book records to categories so that you can organize and view them in logical groups.
- ❑ Paste images to address information using the PictureGear Pocket application.


To open the Address Book, proceed as follows:

- 1 Press the **Address Book** button on the front panel.
Address Book opens and displays the list of all your records.
- 2 Press the **Address Book** button repeatedly to go through the categories in which you have records.
- 3 Prepare an address record either by entering it directly into your CLIÉ handheld or by importing records from your computer using the Palm Desktop for CLIÉ software.

Creating Address Book entries


To create an Address Book entry, proceed as follows:

- 1 Tap **New**.
The **Address Edit** screen appears.
- 2 Enter the last name of the person you want to add.
The first letter of each field (except numeric and e-mail fields) is automatically capitalized.
- 3 Tap **First name**.
The cursor shifts to the first name field.
- 4 You can also use the Graffiti® software to move the cursor to the next field, by using a full-stroke.
- 5 Fill in the **First name** field.
- 6 Repeat the last steps to enter the other items of information that you want to include.
You can tap the scroll down arrow ▼ next to each item to display the list of choices and then tap the appropriate item in the list.

- 7 To move to the next page of information, tap the scroll down arrow ▼ in the bottom right-hand corner of the screen.
 - 8 When you have finished entering all the necessary information, tap **Done**.
 - 9 The **Address** screen is displayed again.
-  You can also use the Palm™ Desktop software to create entries on your computer and then download them to your CLIE handheld with your next HotSync® operation. See **Performing a local HotSync®** (page 83) for details.

Displaying entries

To display a specific entry, proceed as follows:



- 1 Press the Address Book  button on the front panel.
The **Address** screen is displayed, listing your current entries.
- 2 Rotate the Jog Dial™ to select the address record you want to view.
If the address record you want is not displayed, rotate the Jog Dial™ again to scroll up or down the entire list.
- 3 Press the Jog Dial™.
The **Address View** screen of the selected record is displayed.
- 4 To return to the list of address entries, press the Jog Dial™ again or press BACK.
The **Address** screen is displayed again.
 - ❑ To accelerate scrolling and display every third screen only, hold down the scroll button.
 - ❑ You can also use the stylus to tap the onscreen scroll arrows to scroll to the entry.
 - ❑ To view an image pasted to an address record, tap an image in the **Address View** screen. The image is displayed across the whole screen. To return to the **Address View** screen, tap the image again.
 - ❑ To view the next page of the **Address View** screen, rotate the Jog Dial™ in the **Address View** screen. The next or previous page of data is displayed.

- ❑ To view addresses by category, press the Jog Dial when the address list is displayed but none of the listed entries are selected.
Each time you press the Jog Dial, the display toggles through all the available categories.
- ❑ To select a category from the categories list, tap the arrow ▼ at the upper right corner of the screen to display the category list. You can select the appropriate category from the list.

Sorting the address entries in the list

You can set up the address list so that the items of the address records do not appear in the order of last and first name, but in the order of company and last name when Address Book is started. No contents are changed when you change the order of the address records.

To view addresses by company, proceed as follows:

- 1 Press the **Address Book** button  on the front panel.
The **Address Book** screen appears and shows a list of addresses that have been recorded.
 - 2 Tap the **Menu** icon.
 - 3 Tap **Options**, then **Preferences**.
The **Address Book Preferences** dialog box appears.
 - 4 Tap the appropriate order of the address entries in the **List By** field.
Select the appropriate order in which the address entries are to be listed when Address Book starts.
 - 5 Tap **OK**.
The address entries are sorted in the selected order.
-  When you tap **Last Name, First Name**, the address entries are sorted in alphabetical order of an individual's last name and then first name.
- When you tap **Company, Last Name**, the address entries are sorted in alphabetical order of the company name, and then an individual's last name.

Searching for entries

You can quickly search through your Address Book.

To search for address records, proceed as follows:

- 1 Enter the first character of the record you want to search for.
The list scrolls to the first entry that begins with that letter. If you write another letter, the list scrolls to the first entry that starts with those two letters. For example, writing an **s** scrolls to **Sands**, and writing **sm** scrolls further to **Smith**. If you have sorted the list by company name, the **Look Up** feature scrolls to the first letter of the company name.
- 2 Tap the record you want to view.
The record you selected is shown.

Editing entries

To modify part of an address record, proceed as follows:


- 1 In the **Address Book list** screen, tap the entry you want to modify.
The **Address View** screen of the selected record appears.
- 2 Tap **Edit**.
The **Address Edit** screen appears.
- 3 Tap the field that you want to edit, and make the changes.
- 4 When you have finished, tap **Done**.
You return to the **Address** screen, where you can see the modified entry.

Adding an image

You can paste an image to the address information. Paste a photograph of a person or restaurant, for example, to remind you of an address record.

To paste an image, you need to install the PictureGear Pocket software onto your CLIE handheld. For installation, consult the Software Guide.

After installation, proceed as follows:

- 1 In the address list, tap the address record for which you want to paste an image. The **Address View** screen of the selected address record appears.
 - 2 Tap **Edit**.
The **Address Edit** screen appears.
 - 3 Tap **No Image** in the upper right of the screen.
The **PG Pocket** screen appears.
 - 4 Tap **No Image**.
 - 5 Select the image you want to paste.
The image you selected is pasted to the address information.
 - 6 Tap **Done**.
The **Address** screen is displayed again.
A camera icon is attached to the record that has the pasted image.
 - 7 To change the image, tap the pasted image in the **Address Edit** screen. The **Select image(s)** screen appears. Tap to select another image.
 - 8 To remove the image, tap the pasted image in the **Address Edit** screen. The **Select image(s)** screen appears. Tap **No images**.
-  If you use the Palm™ Desktop for CLIE software to change the category of the address record that has a pasted image, the image will no longer be associated with the address record after the next HotSync® operation. To edit an address entry with a pasted image, use the Address Book application.

Modifying an address entry

To modify an address entry, proceed as follows:

- 1 On the **Address Book list** screen, tap the entry you want to modify.
The **Address View** screen of the selected entry appears.
- 2 Tap **Edit**.
The **Address Edit** screen appears.

- 3 Tap the field that you want to edit.
You can edit the tapped field.
- 4 Edit the entry.
- 5 When modification is complete, tap **Done**.
The **Address screen** is displayed again.

Selecting types of phone numbers

You can select the types of phone numbers or e-mail addresses that you associate with an Address Book entry. Any changes you make apply only to the current entry. To select other types of phone numbers in an entry, tap the arrow ▼ and select the label from the drop-down list.

Duplicating entries

If you want to use part of an existing record in a new one, you can copy address entries.

To copy an existing entry, proceed as follows:

- 1 In the **Address Book list** screen, tap the entry you want to copy.
The **Address View** screen of the selected record appears.
- 2 Tap the **Address View** title bar.
The **Address Book** menu is displayed.
- 3 Tap **Duplicate Address** from the **Record** menu.
The entry you selected in Step 1 is copied.
The word **Copy** is added to the end of the name field of the copied information.
- 4 Tap **Done**.
The **Address** screen is displayed again.



Images are not duplicated.

Deleting entries

You can delete records you entered.

To delete address records, proceed as follows:

- 1 Tap the record you want to delete.
The **Address** view appears.
- 2 Tap **Edit**.
The **Address Edit** screen appears.
- 3 Tap **Details**.
The **Address Entry Details** dialog box appears.
- 4 Tap **Delete**.
The **Delete Address** dialog box appears.
- 5 Tap **OK**.
The record you selected is deleted.



If you select **Save archive copy on PC**, the deleted data from your CLIÉ handheld is saved to the Palm™ Desktop for CLIÉ software during the next HotSync®.

Changing the address entry details

You can change the type of information that appears in the address list screen, categorize an entry, and hide an entry for security reasons. You can also delete entries.

- 1 On the **Address Book list** screen, tap the entry you want to change.
The **Address View** appears.
- 2 Tap **Edit**.
The **Address Edit** screen appears.
- 3 Tap **Details**.
The **Address Entry Details** dialog box appears.
- 4 Change the settings:
 - ☐ **Show in List:** Select which type of entries or other information appears in the **Address list** screen. Tap the arrow ▼ and select from **Work**, **Home**, **Fax**, **Other**, or **E-mail**.

- ❑ **Category:** Assign the entry to a category.
 - ❑ **Private:** Select the Private check box to hide the current entry when Security is turned on. For details on Security, see the **Using the security features** section.
- 5 Tap **OK**.
The address entry details are saved.

Address Book menus

This section explains the menu commands specific to Address Book. The **Record** and **Options** menus differ depending on the screen displayed.

Record menus

Duplicate Address: Makes a copy of the current record and displays the copy in **Address Edit** so you can make changes to the copied record. The copy has the same category and attached notes as the original record.

Beam Address: Sends only the selected address to another CLIÉ handheld via the infrared communications port.

Beam Category: Sends all the Address Book entries in the currently selected category to another CLIÉ handheld via the infrared communications port.

Beam Business Card: Sends the current business card to another CLIÉ handheld via the infrared communications port. You can also send a business card via the infrared communications port by pressing and holding down the **Address Book** button for longer than 2 seconds. This menu item lets you easily exchange business cards with other CLIÉ handhelds.

Delete Address: Deletes the current address record.

Attach Note: Adds comments to the current address record.

Delete Note: Deletes comments from the current address entry. Choosing this menu opens up the **Delete Note** dialog box. Tap **Yes** to delete comments and **No** to cancel the delete function.

Select Business Card: Defines the current address record on a business card.

Option menus

Font: You can select the fonts of the Address Book.

Preferences: Remembers the last category.

- ☐ **Remember last category:** Determines how Address Book appears when you return to it from another application. If you select this check box, Address Book shows the last category you selected. If you deselect it, Address Book displays the **All** category.
- ☐ **List by:** Determines how you wish the names to appear.

Rename Custom Fields: These custom fields appear at the end of the **Address Edit** screen. Rename them to identify the kind of information you enter in them. The names you give the custom fields appear in all entries.

Security: You can choose to show, hide or mask the currently selected address.

About Address Book: Shows the version information of the Address Book.


To Do List

The To Do List is a convenient place to create reminders and prioritize the things that you have to do. A To Do List item is a reminder of a task you have to complete.

Use the To Do List to:

- ☐ Make a quick and convenient list of things to do.
- ☐ Assign a priority level to each task.
- ☐ Assign a due date for any or all of your To Do List items.
- ☐ Assign To Do List items to categories so that you can organize and view them in logical groups.
- ☐ Sort your To Do List items either by due date, priority level, or category.
- ☐ Attach notes to individual To Do List items for a description or clarification of the task.


To open the To Do List, proceed as follows:

- 1 Press the To Do List  button on the front panel.
To Do List opens and displays the category of items you last viewed.
- 2 Press the To Do List application button repeatedly to go through the categories containing items.

Creating To Do List items


To create a To Do List item, proceed as follows:

- 1 Press the To Do List button on the front panel.
The **To Do** screen appears.
- 2 Tap **New**.
A new To Do item is added to the To Do List.
- 3 Enter the text of the To Do item.
The text can be longer than one line.
- 4 Tap anywhere onscreen to deselect the To Do List item.
The item is deselected and the new item is recorded in the To Do List.

 If no To Do List item is currently selected, writing in the Graffiti[®] writing area automatically creates a new item.
To display text that does not fit on the screen, tap the text line.

Displaying items

To check the items you recorded in To Do List, proceed as follows:

- 1 Press the To Do List  button on the front panel.
The **To Do** screen appears.
- 2 Rotate the Jog Dial[™] to select the To Do List item you want to view.
- 3 Press the Jog Dial[™].
The notes of the selected item are displayed. If the item does not fit on the screen, rotate the Jog Dial[™] to scroll up or down.

- 4 Press the Jog Dial™.
The **To Do List** box reappears.

To view To Do List items by category, press the Jog Dial™ when To Do List is displayed but no To Do item is selected. Each time you press the Jog Dial, the display toggles through all the available categories.

To select a category from the categories list, tap the down arrow in the top right-hand corner of the screen. You can select the category you want from the list.

Viewing due and completed items

To view completed and due items in the To Do List, proceed as follows:

- 1 Tap **Show** in the **To Do List** screen.
The **To Do Preferences** appears.
- 2 Change the view.
You can choose from the following settings:
 - ❑ **Show Completed Item:** Displays your completed items in the To Do List. If you turn this setting off, your To Do items disappear from the list when you complete (check) them. Items that no longer appear in the list because you turn off this setting have not been deleted. They are still in the memory of your CLIÉ handheld. Purge completed items to remove them from the memory.
 - ❑ **Show Only Due Items:** Shows only the items that are currently due, overdue, or have no due date specified. When this setting is active, items that are not yet due do not appear in the list until their due date.
 - ❑ **Record Completion Date:** Replaces the due date with the actual date when you complete (check) the item. If you do not assign a due date to an item, the completion date still records when you complete the item.
 - ❑ **Show Due Dates:** Displays the due dates associated with items in the To Do List and displays an exclamation mark next to items that remain incomplete after the due date.
 - ❑ **Show Priorities:** Shows the priority setting for each item.
 - ❑ **Show Categories:** Shows the category for each item.



3 Tap **OK**.

Checking off a To Do List item

You can check off a To Do List item to remind you that you have completed it.

You can set To Do List to record the date that you completed the To Do item, and you can choose to show or hide completed items.

To check off a To Do List item, proceed as follows:


- 1 Press the **To Do List**  button on the front panel.
The **To Do** screen appears.
- 2 Tap to select the check box on the left side of the item.
The check box changes to .

Editing items and lists

Setting the priority of an item

The priority setting for items lets you arrange the tasks in your To Do List according to their importance or urgency. The default setting for To Do List is to arrange items by priority and due date, with priority 1 items at the top. If you have a number of items in your list, changing an item's priority setting may move its position in the list.

In the To Do List screen, tap the priority number on the left side of the item and then select the preferred priority number. You can select the priority numbers 1 to 5, with 1 being the most important.

 You can also set the priority in the To Do List **Details** dialog box.

Setting a due date

You can assign a due date to any To Do List item. You can also sort the items that appear in the list based on their due date.

To set a due date, proceed as follows:

- 1 In the To Do List screen, tap the text of the item for which you want to set a due date.

- 2 Tap **Details**.
 - 3 Tap the down arrow next to **Due Date** and then make a selection from the drop-down list. You can select one of the following options:
 - ☐ **Today:** Assigns the current date.
 - ☐ **Tomorrow:** Assigns the next day's date.
 - ☐ **One week later:** Assigns the date exactly one week from the current date.
 - ☐ **No Date:** Assigns no due date.
 - ☐ **Choose Date:** Opens the Due Date screen, where you can choose any date from the calendar.
 - 4 Tap **OK**.
- ★ If you turn on the Show Due Dates option in the To Do List **Options** dialog box, you can tap directly on the due date in To Do List to select a due date.

Deleting an item

To delete items from To Do List, proceed as follows:

- 1 On the **To Do List** screen, tap the item you want to delete.
- 2 Tap **Details**.
The **To Do Item Details** dialog box appears.
- 3 Tap **Delete**.
The **Delete To Do** dialog box appears.
- 4 Tap **OK** to delete the item.
The selected event is deleted. To cancel deletion, tap **Cancel**.

★ If you select the **Save archive copy on PC** check box, the deleted item will be saved on the Palm Desktop for CLIÉ software on your computer during the next HotSync® operation.

Changing the appearance of To Do List

The **To Do Preferences** dialog box enables you to change the appearance of the To Do List application.

To change the appearance of the To Do List application, proceed as follows:

- 1 On **the To Do List** screen, tap **Show**.
The **To Do Preferences** dialog box appears.
- 2 Change the **To Do Preferences settings**.
You can choose any of the following settings:
 - ☐ **Show Completed Items:** Displays your completed items in To Do List. If you turn off this setting, your To Do items disappear from the list when you complete (check) them.
 - ☐ **Show Only Due Items:** Shows only the items that are currently due, past due, or have no due date specified. When this setting is active, items that are not yet due, do not appear in the list until their due date.
 - ☐ **Record Completion Date:** Replaces the due date with the actual date when you complete (check) the item. If you do not assign a due date to an item, the completion date still records when you complete the item.
 - ☐ **Show Due Dates:** Displays the due dates associated with items in To Do List and displays an exclamation mark next to items that remain incomplete after the due date passes.
 - ☐ **Show Priorities:** Shows the priority setting for each item.
 - ☐ **Show Categories:** Shows the category for each item.
- 3 Tap **OK**.

To Do List menus

This section explains the menu commands specific to To Do List. The **Record** and **Options** menus differ depending on the screen displayed.

Record menu

Delete Item: Deletes the current To Do item.

Attach Note: Adds comments to the current To Do item.

Delete Note: Deletes comments from the current To Do item.

Purge: Allows you to delete any completed items from To Do List. Choose this command to save memory if you have too many recorded To Do items on your CLIÉ handheld.

By default, the items that you purge will be saved on the Palm Desktop for CLIÉ software on your computer during the next HotSync® operation. To delete the items completely, deselect the check box for **Save archive copy on PC** in the **Purge** dialog box.

Beam Item: Sends the current To Do List item to another CLIÉ handheld via the infrared communications port.

Beam Category: Sends all the To Do items in the currently selected category to another CLIÉ handheld via the infrared communications port.

Option menus

Font: You can select the fonts of the To Do List.

Phone Lookup: If there is an Address Book entry, you can look up the phone number of the selected item.

Security: Hides the current item unless the password is entered.

About To Do List: Shows the version information of the To Do List.



Memo Pad

You can use the Memo Pad to make brief memos and show TXT or CSV (Comma Separated Value) document files, which are created on a computer.

The Memo Pad allows you to:


- ❑ Make memos and note down various types of information.
- ❑ Copy memos you wrote with other applications.
- ❑ Read TXT or CSV document files from a computer through HotSync® for display on your CLIÉ handheld.
- ❑ Categorize the memos into business, private, and other categories.

To open the Memo Pad, proceed as follows:

- 1 Press the **Memo Pad** button  on the front panel.
The Memo Pad opens to display the last Memo Pad screen that you viewed.
 - 2 Press the Memo Pad button repeatedly to go through the categories in which you have memos.
-  A memo can contain up to 4,000 characters. The number of memos you can store is limited only by the memory available on your CLIÉ handheld.

Creating memos

To create memos, proceed as follows:

- 1 Tap **New**.
A new memo is created.
 - 2 Enter the memo text.
To start a new line, either use the **<Enter>** key on the keyboard or use Graffiti® writing.
 - 3 Tap **Done** or use the BACK button when you have finished.
The Memo List displays the first line of a memo. This makes it easy to locate and review your memos.
- ★ You can also create a new memo by beginning to write in the Graffiti® writing area in the **Memo** screen. The first letter is automatically capitalized.
-  While entering text, the text may overlap the **Done** or **Details** buttons. When you finish entering the text, the overlap disappears.

Displaying memos

To review a memo, proceed as follows:

- 1 Rotate the Jog Dial™ to select the memo you want to display.
If the required memo is not displayed, rotate the Jog Dial™ further to scroll up or down the memo list.
- 2 Press the Jog Dial™.
The content of the selected memo is displayed. If the memo text does not fit on the screen, rotate the Jog Dial™ up or down.
- 3 Press the Jog Dial™.
The Memo list is displayed again.

If you want to display your memos by category, press the Jog Dial™ when the memo list is displayed but no memo selected.

Each time you press the Jog Dial™, the display toggles through all the available categories.

Editing memos and lists

Assigning a category

To categorize your memos, proceed as follows:

- 1 In the **Memo Pad** screen, tap the memo you want to change.
The content of the memo you tapped appears.
- 2 Tap **Details**.
The **Memo Details** dialog box appears.
- 3 Tap the down arrow next to **Category** to display the list of available categories.
- 4 Select the category you want to assign to the memo.

Defining a memo as private

You can hide a memo that you label as private. If you define a password for your CLIÉ handheld, you must enter it to display private records.

To define a memo as private, proceed as follows:

- 1 Tap the memo you want to define as private.
The content of the memo you tapped appears.
- 2 Tap **Details**.
The **Memo Details** dialog box appears.
- 3 Select the **Private** check box.
- 4 Tap **OK**.
The memo is now treated as private.

Sorting memos

To change the order in which Memo Pad shows your memos, proceed as follows:

- 1 Tap the **Menu** icon.
A menu of commands appears.
- 2 Tap **Options**, and then **Preferences**.
The **Memo Preferences** dialog box appears.
- 3 Select the preferred order of memos in the **Sort by** field, choosing from manual or automatic.
- 4 Tap **OK**.
- 5 To sort the memos manually, tap the memo you want to move in the **Memo** screen and drag it to the preferred position.
The memo is placed where you release the stylus and the memos are renumbered accordingly.

Deleting memos

To delete an unneeded memo from Memo Pad, proceed as follows:

- 1 In the **Memo Pad** screen, tap the memo you want to delete. The content of the memo you tapped appears.

2 Tap **Details**.
The **Memo Details** dialog box appears.

3 Tap **Delete**.
The **Delete Memo** dialog box appears.

4 Tap **OK** to delete the memo.
The selected record is deleted. To cancel deletion, tap **Cancel**.

 By default, the memos that you delete are restored and saved in Palm™ Desktop for CLIÉ software on your computer at the next HotSync® operation. To delete the memos completely, deselect the check box next to **Save archive copy on PC** in the **Delete Memo** dialog box.

Memo Pad menus

This section explains the menu commands specific to Memo Pad. The **Record** and **Options** menus differ depending on the screen displayed.

Record menus

Beam Category: Sends all the memos in the currently selected category to another CLIÉ handheld via the infrared communications port.

New Memo: Creates a new memo.

Delete Memo: Deletes the current memo.

By default, the memos that you delete will be saved on the Palm Desktop for CLIÉ software on your computer during the next HotSync® operation. To delete the memos completely, deselect the check box for **Save archive copy on PC** in the **Delete Memo** dialog box.

Beam Memo: Sends the current memo to another CLIÉ handheld via the infrared communications port.

Option menus

Font: You can select the fonts of the Memo Pad.

Phone Lookup: If there is an Address Book entry, you can look up the phone number of the selected memo.

Preferences: Used to specify the way in which memos are displayed.

Security: You can set to show or hide the currently selected memo.



About Memo Pad: Shows the version information of the Memo Pad.


Calculator

The Calculator lets you perform general mathematical functions, such as addition, subtraction, multiplication, and division.

To start the Calculator, proceed as follows:

1 Either:

- ❑ Tap the **Calculator**  button, or
 - ❑ Rotate the Jog Dial™ to select **Calc** and then press the Jog Dial™, or
 - ❑ Tap the **Calc**  icon on the **Application Launcher** screen.
- The **Calculator** screen appears.

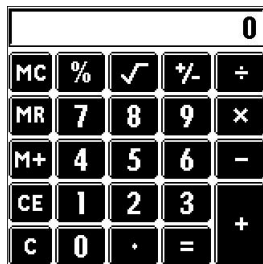

2 Perform calculations by tapping the numbers and symbol icons on the screen with the stylus.

Calculator buttons

The calculator's buttons follow the standard functions of regular calculators.

- ❑ **CE:** Clears the last number you entered. Use this button if you make a mistake while entering a number in the middle of a calculation. This button enables you to re-enter the number without starting the calculation over.
- ❑ **C:** Clears the entire calculation and enables you to start a new calculation.
- ❑ **+/-:** Toggles the current number between a negative and positive value. If you want to enter a negative number, enter the number first and then press the **+/-** button.
- ❑ **M+:** Places the current number in the Calculator memory. Each new number you enter with the **M+** button is added to the total stored in memory. The number that you add can be either a calculated value or any number you enter by pressing the number buttons. Pressing this button has no effect on the current calculation (or series of calculations); it merely places the value into memory until it is recalled.
- ❑ **MR:** Recalls the stored value from memory and inserts it into the current calculation.
- ❑ **MC:** Clears any value stored in the Calculator memory.
- ❑ **$\sqrt{}$:** Calculates the square root of the entered number. Tap the button after entering the number.

Calculator menus

Copy, Paste: Copies a number from Calculator and pastes it into another application. Similarly, you can also paste numeric values you copied from another application into Calculator.

Recent Calculations: Displays the last series of calculations.

About Calculator: Shows the version information for Calculator.

Using the security features

Your CLIÉ handheld includes a Security application that allows you to protect your data from unauthorized users.

Security allows you to do the following:

- ☐ Lock and turn off your CLIÉ handheld so that it does not operate until you enter the correct password.
- ☐ Set the CLIÉ handheld to automatically lock at/after a preset time, or whenever you turn it off.
- ☐ Mask all records that you mark as private so the information appears grayed out.
- ☐ Hide all records that you mark as private so they do not appear on any screen.
- ☐ Hide private records with or without a password. Without a password, private records are hidden or masked until you set the Security application to show them. With a password set, you must enter the password to view the private records.

Assigning a password

You can assign a password to protect your private records and to lock your CLIÉ handheld.

To enter a password, proceed as follows:

- 1 Rotate the Jog Dial™ to select **Security** and then press the Jog Dial™.
Alternatively, tap the **Security** icon in the **Application Launcher** screen.
The **Security** screen appears.
- 2 Tap **Unassigned**.
The **Password** dialog box appears.
- 3 Enter a password and then tap **OK**.
The dialog box for verifying the password appears.
- 4 Enter the same password again to verify it and then tap **OK**.
Your password is now assigned.

Changing or deleting a password

You can change or delete the password you assigned. You have to enter the current password before you can change or delete it.

To change or delete your password, proceed as follows:

- 1 Rotate the Jog Dial™ to select **Security** and press the Jog Dial™.
Alternatively, tap the **Security** icon in the **Application Launcher** screen.
The **Security** screen appears.
- 2 Tap **Assigned**.
The **Password** dialog box appears.
- 3 Enter the current password and then tap **OK**.
The dialog box used to enter a new password appears.
- 4 To change the password, enter a new password and then tap **OK**.
To delete the password, tap **Delete**.

If you forget your password

If you forget your password, you have no option but to delete it. Note, however, that deleting a forgotten password also deletes all entries and records marked as **Private**. Avoid this by synchronizing with your computer before deleting a forgotten password. This restores your private records at the next HotSync® operation.

To delete your password, proceed as follows:

- 1 Tap **Lost Password** in step 3 above.
The **Delete Password** dialog box appears.
- 2 Tap **Yes**.
Your password and private records are deleted.

Private records

In all basic applications, you can make individual records private. Private records remain visible and accessible until you select the Security setting to hide all private records.

You can mask or hide your private records. To view the masked or hidden records again, you need to enter the password.

To mask or hide private records, proceed as follows:

- 1 Rotate the Jog Dial™ to select **Security**.
Alternatively, tap the **Security** icon in the **Application Launcher** screen.
The **Security** screen appears.
- 2 Tap the down arrow next to **Current Privacy** to choose one of the following:
Mask Records: Masked records appear as gray placeholders with a lock symbol.
Hide Records: Hidden records disappear completely from the screen.
- 3 Tap **OK**.

To display private records, proceed as follows:

- 1 In step 2 above, select **Show Records**.
If you have a password, the **Show Records** screen appears.
- 2 Enter the password and then tap **OK**.


Locking your CLIÉ handheld

You can lock your CLIÉ handheld with a password to protect information.

To lock your CLIÉ handheld, proceed as follows:

- 1 Back up the data on your CLIÉ handheld using a HotSync® transfer (see the Using HotSync® operations (page 82) section).
- 2 Assign a password as described in Private records (page 77).

- 3 Tap the **Home** icon.
- 4 Select **System** from the drop-down list in the top right-hand corner.
The **System** screen appears.
- 5 Tap the **Security** icon.
The **Security** dialog box appears.
- 6 Tap **Lock & Turn Off**.
The **System Lockout** dialog box appears.
- 7 Tap **Off & Lock**.
Your device is turned off and locked.

 To access your CLIÉ handheld again, you must enter your password.

Setting your CLIÉ handheld to lock automatically

You can set your CLIÉ handheld to lock whenever you turn it off.

To lock your handheld automatically, proceed as follows:

- 1 Back up your data and assign a password as described in Assigning a password ([page 75](#)).
- 2 Tap **Never**.
The **Password** screen appears.
- 3 Enter your password, and then tap **OK**.
The **Lock Handheld** screen appears.
- 4 Tap your choice from the list, as follows:
 - ☐ **Never:** Your CLIÉ handheld will not lock automatically. To lock it manually, you must tap **Lock & Turn Off** in the **Security** screen.
 - ☐ **On power off:** Your CLIÉ handheld will lock when it is turned off.
 - ☐ **At a preset time:** The **Set Time** dialog box appears. Set a time so your CLIÉ handheld will lock at that preset time.

- ❑ **After a preset delay:** Set your CLIÉ handheld to lock if inactive for a preset time. Enter the time, and tap the down arrow next to it to select minute(s) or hour(s).

5 Tap **OK**.


Entering owner information

You can enter a name, company name, or phone number of the CLIÉ handheld owner. If you have used the Security application to turn off and lock your CLIÉ handheld with a password, the information that you enter in **Preferences** appears the next time you turn on your CLIÉ handheld.

To enter owner information, proceed as follows:

- 1 Tap the **Home** icon.
The Application Launcher starts up.
- 2 From the drop-down list in the top right-hand corner, select **System**.
The **System** screen appears.
- 3 Tap the **Prefs** icon.
The **Preferences** screen appears.
- 4 From the drop-down list in the top right-hand corner, select **Owner**.
- 5 Enter the owner information.

If you enter more text than can fit on one screen, a scroll bar appears at the right side of the screen ▼.

-  If you use the security application to assign a password, to enter/edit the owner information, you have to unlock the **Owner Preferences** screen to change the information.

To unlock the Owner Preferences screen, proceed as follows:

- 1 Tap the **Home** icon.
The Application Launcher starts up.
- 2 Select **System** from the drop-down list in the top right-hand corner.
The **System** screen appears.


- 3 Tap the **Prefs** icon.
The **Preferences** screen appears.
- 4 From the drop-down list, select **Owner**.
- 5 Tap **Unlock**.
The **Unlock Message** dialog box appears.
- 6 Enter your current password (the one you entered in the Security application).
- 7 Tap **OK**.

Using the Palm Desktop for CLIÉ software

The Palm™ Desktop for CLIÉ software is delivered on the CD-ROM which accompanies your CLIÉ handheld. For instructions on how to install it onto your computer, see the printed **Read This First** guide.

The Palm™ Desktop for CLIÉ software duplicates Date Book, Address Book, To Do List and Memo Pad applications on your CLIÉ handheld, so you can view, enter, and modify data stored on your CLIÉ handheld. You can also import data from Windows® applications onto your CLIÉ handheld and transfer the add-on applications (as described in the **Software Guide**).


To start the Palm™ Desktop for CLIÉ software, double-click the **Palm Desktop for CLIÉ software** icon on the **Windows**® desktop or click **Start**, select **Programs (All Programs in Windows® XP)**, **Sony Handheld**, and then click **Palm Desktop for CLIÉ**. The Palm Desktop for CLIÉ software starts.

To quit the Palm Desktop for CLIÉ software, click the close  button in the top right of the screen or click **File**, and then **Exit**.

Main features of the Palm Desktop for CLIÉ software

The basic operations for each application are the same as those of the corresponding CLIÉ application. For details, see the **Palm™ Desktop online help** (click **Help** and then **Palm Desktop Help**.)

Here is an overview of the Palm™ Desktop for CLIÉ features:

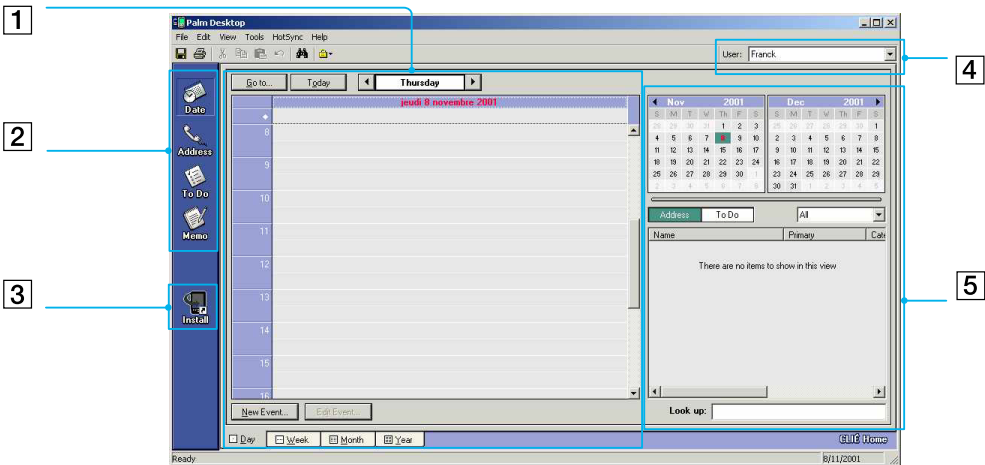


1	<i>List pane</i>	Displays the records in the current Desktop application.
2	<i>Application Launch bar</i>	Provides one-click access to each Desktop application. Click an icon to open its associated application.
3	<i>Install Tool icon</i>	Displays the Install Tool dialog box to select the application you want to install on your CLIÉ handheld the next time you perform a HotSync® operation.

4	<i>User name display</i>	Displays the user name of the owner of the information being displayed.
5	<i>Record pane</i>	Displays full details of the record that is selected in the List pane. The information displayed here is the same as the one displayed on your CLIÉ handheld's Details screen.

Using HotSync® operations

What is a HotSync® operation?

A HotSync® operation is a one-step operation that allows you to synchronize data between your CLIÉ handheld and your computer. With just one press on the HotSync button, you can synchronize your CLIÉ handheld application data with the Palm™ Desktop for CLIÉ software data on your computer, back up the data of your CLIÉ handheld on your computer, or install add-on applications.

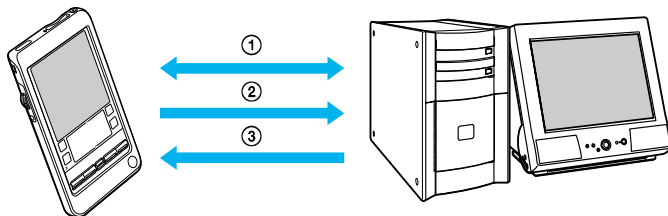


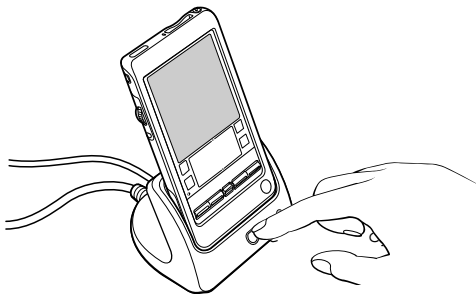
1.	Synchronize the Date Book, Address Book, To Do List, and Memo Pad data on your CLIÉ handheld and your computer. The Palm Desktop for CLIÉ software can manage the data of multiple CLIÉ handhelds independently with a different user name for each one.
2.	Back up the data stored on your CLIÉ handheld on your computer. Synchronization ensures that your data is always safe and up-to-date. In case you need to perform a hard reset, a HotSync® operation allows you to restore the data.
3.	Import the data on your computer or install add-on applications on your CLIÉ handheld.

Performing a local HotSync®

This section describes how to perform a HotSync® operation using the cradle (local HotSync®), assuming that you have done all the necessary preparations and installations for your CLIÉ handheld and your computer. For the required preparations and software installation, and for information on performing a HotSync® for the first HotSync® operation, please see the **Read This First** manual.




To perform a local HotSync® operation, proceed as follows:

- 1 Place your CLIÉ handheld in the cradle.
- 2 Press the HotSync®  button on the front panel of the cradle.
The HotSync® operation starts.




When the HotSync® operation is complete, a message is displayed on your CLIÉ handheld. Do not remove your CLIÉ handheld from the cradle until the HotSync® operation is complete. Otherwise the Palm™ Desktop for CLIÉ software may not quit normally and you may have to perform a soft reset.


If the HotSync® operation does not start

Make sure that the HotSync®  icon is displayed in the Windows task tray on your computer screen and **Local USB** is selected from the shortcut menu. If the HotSync®  icon is not shown in the task tray, click **Start**, point to **Programs (All Programs in Windows® XP)**, **Sony Handheld**, and then click **HotSync Manager**. Click the HotSync®  button on the cradle to start the HotSync® operation.

If a message is displayed stating that the selected COM port is not available, uninstall the Palm™ Desktop for CLIÉ software and then re-install it.

Proceed as follows:

- 1 Click the HotSync®  icon in the **Windows** task tray (bottom-right corner of the taskbar).
A shortcut menu is displayed.
- 2 Make sure that **Local USB** is selected.
If it is not selected, click **Local USB** to select it.

 Do not remove your CLIÉ handheld from the cradle during a HotSync® operation. Otherwise, the Palm Desktop for CLIÉ software may not quit normally.

Do not push the HotSync button during a HotSync® operation. It might cause errors and force termination of the operation.

Do not enter power saving mode during a HotSync® operation. If your computer enters power saving mode during a HotSync® operation, the HotSync Manager will be forced to terminate.

To change the user name, proceed as follows:


- 1 In the **Palm Desktop for CLIÉ** window, click **Users** from the **Tools** menu.
The **Users** dialog box is displayed.
- 2 Click the user name you want to change in the list box and then click **Rename**.
The **Rename User** dialog box is displayed.
- 3 Enter a new user name and then click **OK**.
Your CLIÉ handheld user name is changed at the next HotSync® operation.

Advanced HotSync® options

Setting the HotSync® setup options

You can change the local HotSync® settings on how to start the HotSync® Manager, for example.

To change the HotSync® setup options, proceed as follows:

- 1 Click the **HotSync**  icon in the Windows® task tray (bottom-right of the taskbar) and then select **Setup** from the shortcut menu.
The **Setup** dialog box appears.
- 2 Click the **General** tab to select one of the following options:
If you are not sure which option to use, keep the default setting (**Always available**).
 - ☐ **Always available:** Adds the HotSync Manager to the Startup folder and starts the HotSync Manager to monitor the USB port as soon as Windows® is started. This allows you to perform a HotSync® operation even when the Palm™ Desktop for CLIÉ software is not running.
 - ☐ **Available only when the Palm Desktop is running:** Starts the HotSync Manager when you launch the Palm™ Desktop for CLIÉ software.
 - ☐ **Manual:** Starts the HotSync Manager only when you select it from the Windows® **Start** menu.
- 3 If you are connected to a network, click the **Network** tab to display the network settings and then adjust the options as needed.
See Conducting a HotSync® operation via a network ([page 89](#)) for more information.
- 4 Click **OK**.


Customizing HotSync® application settings (Conduit)

What is a **Conduit**?

For each application, you can define a set of options that determines how records are handled during synchronization. Each set of these options is called a conduit. By default, a HotSync® operation synchronizes all files between your CLIÉ handheld and the Palm™ Desktop for CLIÉ software.

In general, you should leave the settings as they are to synchronize all files. The only reason you might want to change these settings is to overwrite data on either your CLIÉ handheld or the Palm™ Desktop for CLIÉ software, or to avoid synchronizing a particular type of file because you do not use it. In addition to the conduits for Date Book, Address Book, To Do List and Memo Pad, the Palm Desktop for CLIÉ software offers System, Install, Install to Card and Install service templates conduits. The System conduit backs up the system information stored on your CLIÉ handheld. The Install conduit installs add-on applications on your CLIÉ handheld.

To customize HotSync® application settings, proceed as follows:

- 1 Click the HotSync  icon in the Windows® task tray (bottom-right of the taskbar) and then select **Custom** from the **HotSync Manager** menu.
Alternatively, select **Custom** from the **HotSync** menu of the Palm Desktop for CLIÉ software. The **Custom** dialog box appears.
- 2 Select the user name you are using on your CLIÉ handheld from the drop-down list.
- 3 Select an application from the Conduit list.
- 4 Click **Change**.
The **Change HotSync Action** dialog box appears.
- 5 Click the direction in which you want to write data, or click **Do nothing**.
- 6 Click **OK**.
- 7 Repeat steps 2 to 6 to change conduit settings for other applications (or users).
- 8 Click **Done**.



Any change in the HotSync® setting from the default affects only the next HotSync® operation. Thereafter, the HotSync® actions revert to their default settings. To use a new setting on an ongoing basis, select the **Set as default** box.

To restore the default settings, click **Default** in the **Custom** dialog box.

Conducting an infrared HotSync® operation

You can use the IrDA (infrared) port of your CLIÉ handheld to perform an IrDA HotSync operation with a computer equipped with an IrDA (Infrared Data Association) port. An IrDA HotSync operation allows you to perform a HotSync operation without using the cradle.



Before you start performing an IR HotSync operation

Check the following:

- ❑ Your computer is equipped with an infrared port supporting the IrDA standards.
- ❑ The infrared port of your computer is enabled for Windows® use. To enable the IrDA port with Windows®, see the manual of the computer you are using or the Windows® online help.
- ❑ Which port number is allocated to the infrared port. Check the infrared port number in the Infrared Monitor in the **Control Panel**. For information on the Infrared Monitor, see the manual of the computer you are using or the Windows® online help.


Preparing your computer

To perform an IrDA HotSync® operation, you have to allocate a virtual port to an IrDA HotSync® operation. To allocate a virtual port to an IR HotSync® operation, proceed as follows:

- 1 Click the HotSync  icon in the Windows® system tray (bottom-right of the taskbar) and then select **Local Serial** from the **shortcut** menu.
- 2 Click the HotSync  icon in the Windows® system tray again and then select **Setup** from the **Shortcut** menu.
The **Setup** dialog box is displayed.
- 3 Click the **Local** tab to change the setting for an IrDA HotSync operation as needed.
 - ❑ **Serial Port** specifies a virtual port for an infrared port. If you are not sure of the connection port, see the Infrared Monitor in the Windows® **Control Panel**.
 - ❑ **Speed** determines the speed at which data is transferred. Try the **As Fast As Possible** rate first, and then adjust downward if you experience problems.

4 Tap OK.



Your computer is ready to perform an IrDA HotSync operation.

-  When performing a local HotSync® operation with the cradle after you make the HotSync® Setup settings for an IrDA HotSync® operation, you should restore the local HotSync® settings. For details, see Restoring the local HotSync® settings ([page 88](#)).

Performing an IrDA HotSync® operation

When you have prepared your computer and your CLIÉ handheld, as well as selected your **Conduit Setup** options; you are ready to perform an IrDA HotSync® operation.



To perform a HotSync® operation proceed as follows:

- 1 Rotate the Jog Dial™ to select HotSync® and then press the Jog Dial™. Or tap the HotSync  icon on the **Application Launcher** screen.
The **HotSync** dialog box appears.
- 2 Tap **Local**.
- 3 Tap the arrow ▼ beneath the HotSync® icon and then select **IR to a PC/Handheld** from the drop-down list.
- 4 Point the IrDA port of your CLIÉ handheld directly at the IrDA port of the receiving computer.
For best results, your computer and your CLIÉ handheld should be 4 to 8 inches (approximately 10 to 20 centimeters) apart, and the path between your CLIÉ handheld and the computer must be clear of obstacles.
- 5 Tap the  icon.
The HotSync® operation starts. Wait for the message showing that the HotSync® operation is complete.

Restoring the local HotSync® settings

To restore the local HotSync® settings, proceed as follows:

- 1 Connect the cradle to your computer.
- 2 Make sure that **Local USB** is still selected.

- 3 Click the **HotSync**  icon in the Windows® system tray and deselect the check mark of **Local Serial** from the shortcut menu.
- 4 Click the HotSync  icon in the Windows® system tray again and then select **Setup** from the **Shortcut** menu.
The **Setup** dialog box is displayed.
- 5 Click the **Local** tab to display the setting for a local HotSync® operation as needed.
- 6 Click **OK**.
Your computer is now ready to perform a local HotSync® operation.

Conducting a HotSync® operation via a network

When you use the Network HotSync application, you can take advantage of the LAN and WAN connectivity available in many office environments. The Network HotSync application enables you to perform a HotSync® operation by dialing in to a network or by using a cradle that is connected to any computer on your LAN or WAN (LAN Sync) (provided that the computer connected to the cradle also has the Network HotSync application installed, your computer is on, and the HotSync Manager is running).



Connecting to your company's dial-in server

The Network HotSync application requires the following:

- ☐ Your computer has TCP/IP support installed.
- ☐ Both your company's network system and its remote access server support TCP/IP.
- ☐ You have a remote access account.
- ☐ Everything you need to connect to your company's dial-in server (network modem) is included in the Palm™ Desktop for CLIÉ software and your CLIÉ handheld. You need to activate certain features, however, on both the Palm™ Desktop for CLIÉ software and your CLIÉ handheld.

Preparing your computer

To prepare your computer, proceed as follows:



- 1 Click the HotSync  icon in the **Windows**® system tray and then select **Network** from the **Shortcut** menu.
- 2 Click the HotSync  icon in the **Windows**® system tray again and then select **Setup** from the **Shortcut** menu.
The **Setup** dialog box is displayed.
- 3 Click the **Network** tab and make sure your user name has a check mark selected next to it. If the check mark is not there, select the check box next to your user name.
- 4 Click **OK**.
- 5 Place your CLIÉ handheld in the cradle and perform a HotSync® operation.
The HotSync® operation records network information about your computer on your CLIÉ handheld. With this information, your CLIÉ handheld can locate your computer when you perform a HotSync® operation via the network.

To check if your computer's network information (Primary PC name and Primary PC address) is entered on your CLIÉ handheld, proceed as follows:

- 1 Rotate the Jog Dial™ to select **HotSync** and then press the Jog Dial™. Or tap the **HotSync** icon on the **Application Launcher** screen.
The HotSync screen appears.
- 2 Tap the **Menu** icon.
- 3 Tap **Primary PC Setup** from the **Options** menu.
The **Primary PC Setup** screen is displayed.
- 4 On your computer, click the **HotSync** icon in the **Windows** task tray and then select **Setup** from the shortcut menu.
- 5 Click the **Network** tab, then click **TCP/IP Settings** to open the **TCP/IP Settings** screen.

- 6 Confirm that the Primary PC name and Primary PC address on both screens displayed in step 3 and 5 match. If they do not, change the Primary PC name and Primary PC address entered in your CLIÉ handheld, then tap **OK**.
- 7 On your computer, tap **OK** to close the **TCP/IP Settings** screen and the **Setup** screen.

To prepare your CLIÉ handheld, proceed as follows:

- 1 Rotate the Jog Dial™ to select HotSync® and then press the Jog Dial™. Or tap the HotSync  icon on the **Application Launcher** screen.
The **HotSync** screen appears.
- 2 Tap the **Menu**  icon.
- 3 Tap **Options**, and then tap **Modem Sync Prefs**.
The **Modem Sync Preferences** screen is displayed.
- 4 Tap **Network**.
- 5 Tap **OK**.
The **HotSync** screen appears again.
- 6 Tap **Modem** and then select **Service**.
The **Preferences** screen is displayed.
- 7 Tap the arrow ▼ next to **Service** and then select a service from the drop-down list.
- 8 Tap **Done**.
- 9 Tap the Menu icon.
- 10 Tap **Options**, and then tap **Conduit Setup**.

When connecting to a network computer with a cable

To connect to the network computer via a cable, proceed as follows:

- 1 Rotate the Jog Dial™ to select **HotSync** and then press the Jog Dial™.
Or tap the **HotSync** icon on the **Application Launcher** screen.
The **HotSync** screen appears.

- 2 Tap the **Menu** icon.
- 3 Tap **LAN Sync Prefs** from the **Options** menu.
The **LANSync Preferences** screen is displayed.
- 4 Tap **LANSync**.
- 5 Tap **OK**.
The **HotSync** screen appears again.
- 6 Tap the **Menu** icon.
- 7 Tap **Conduit Setup** from the **Options** menu.
- 8 Perform a local HotSync operation.
Follow the instructions in **Performing a local HotSync® (page 83)**.

Importing data from a Windows® application

If you have data stored in Windows® computer applications such as spreadsheets and databases, you can transfer that data to your CLIÉ handheld.

Importable file formats

Save data in one of the file formats listed below, import it into the Palm™ Desktop for CLIÉ software, and then perform a HotSync® operation to transfer the data to your CLIÉ handheld.

The Palm™ Desktop for CLIÉ software can import data in the following file formats:

- ☐ Comma delimited (*.csv,*.txt): Address Book and Memo Pad only
- ☐ Tab delimited (*.tab,*.tsv,*.txt): Address Book and Memo Pad only
- ☐ vCard File (*.vcf): Address Book only
- ☐ CSV (Lotus Organiser 2.x/97 Mapping): Address Book only
- ☐ Text (*.txt): Memo Pad only
- ☐ Date Book archive (*.dba)
- ☐ vCal File (*.vcs): Date Book only

- ☐ Address Book archive (*.aba)
- ☐ To Do archive (*.tda)
- ☐ Memo Pad archive (*.mpa)

Archive formats can be used with the Palm™ Desktop for CLIÉ software. Use the archive file formats to share information with other people who use a Palm OS® platform handheld or to create a copy of your important Palm™ Desktop for CLIÉ software information.

To import data, proceed as follows:

- 1 Start the **Palm Desktop for CLIÉ software**.
- 2 Click the application into which you want to import data.
- 3 If you are importing records that contain a field with category names, select **All in** the **Category** box. Make sure that the same categories that appear in the imported file also exist in the application. If the categories do not exist, create them now; otherwise the records will be imported into the **Unfiled** category.
- 4 Click **Import** from the **File** menu.
The **Import** dialog box is displayed.
- 5 Select the file you want to import.
- 6 Click **Open**.
- 7 To import data into the correct Palm™ Desktop for CLIÉ fields, drag the fields in the left-hand column so that they are opposite to the corresponding imported fields on the right.
- 8 Deselect the check box for the field that you do not want to import.
- 9 Click **OK**.
The imported data is highlighted in the application.

To add the imported data to your CLIÉ handheld, perform a HotSync® operation.

See the **Palm™ Desktop for CLIÉ online Help** for more information on importing and exporting data.

Synchronizing with external data (File Link)

The File Link feature allows you to import Address Book and Memo Pad information on your CLIÉ handheld from a separate external file such as a company phone list. HotSync Manager stores the data in a separate category on your Palm™ Desktop for CLIÉ software and your CLIÉ handheld. You can set the File Link feature to check for changes to the external file when you perform a HotSync® operation.

With File Link, you can import data stored in any of the following file formats:

- ☐ Comma-delimited (*.csv)
- ☐ Palm Desktop for CLIÉ software's Memo Pad archive (*.mpa)
- ☐ Palm Desktop for CLIÉ software's Address Book archive (*.aba)
- ☐ Text (*.txt)


For information on how to set up File Link, see the **Palm Desktop for CLIÉ online help**.

Communicating using your CLIE handheld with other handheld devices

This part describes how to communicate with another Palm OS® PDA via the infrared communications port or the Memory Stick™. It also explains how to handle the Memory Stick™ and how to use the MS Gate application software for managing the data in the Memory Stick™.



Beaming between your CLIE Handheld and another Palm OS® handheld

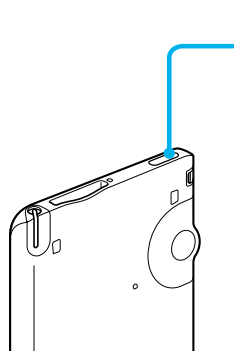Your CLIE handheld is equipped with an IrDA (infrared) port that you can use to beam information to another Palm OS® PDA device that is close by and also has an IrDA port. The IrDA port (1) is located at the top of your CLIE handheld, behind the small dark shield.



1 You can beam the following information between your CLIE handheld and another Palm OS® PDA:


- ☐ The record currently displayed in Address Book, Date Book, To Do List, or Memo Pad.
- ☐ All records of the category currently displayed in Address Book, Date Book, To Do List, or Memo Pad.
- ☐ A special Address Book record that you designate as your business card.
- ☐ An application with corresponding data installed on the RAM memory.


 Some applications are protected and cannot be beamed, as indicated by a lock  icon to the side of applications.

Beaming information

You can beam a record, business card, or category of records between your CLIÉ handheld and another Palm OS® PDA.

To beam data from your CLIÉ handheld to another Palm OS® PDA, proceed as follows:



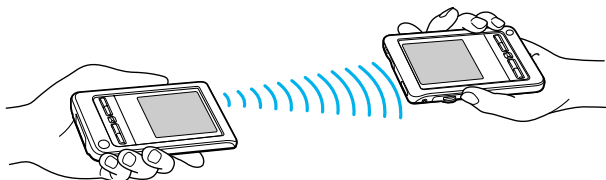

- 1 Locate the record, business card, or category you want to beam.
- 2 Tap the **Menu**  icon.
- 3 Tap one of the following from the **Record** menu depending of the screen currently displayed:
 - ☐ The **Beam** command for an individual record
 - ☐ In Address Book only: **Beam Business Card**
 - ☐ **Beam Category.**
- 4 When the **Beam** dialog box appears, point the IrDA port directly at the IrDA port of the receiving handheld.



- 5 Wait for the **Beam** dialog box to indicate that the transfer is complete before you continue working on your CLIÉ handheld.
- ★ For best results, your CLIÉ handheld and another Palm OS PDA should be 4 to 8 inches (approximately 10 to 20 centimeters) apart, and the path between the two handhelds must be clear of obstacles and shielded from fluorescent lighting. Beaming distance to other Palm OS PDA handhelds may be different.

Receiving beamed information

To receive beamed information, proceed as follows:

- 1 Turn on your CLIE handheld.
 - 2 Point the IrDA port directly at the IrDA port of the other Palm OS® PDA handheld transmitting the data. The **Beam** dialog box is displayed. Beaming data starts. You can select the category in which you save the data in a dialog box.
 - 3 Tap **Yes**.
The data is saved to the **unfiled** category.
- ★ Incoming data or application should be placed in the **Unfiled** category.
 - ★ You can press the **Address Book**  button for about two seconds to beam your business card.
 - ★ You can use Graffiti to beam the current entry (/ then , or / and then tap ).
-  If **Beam Receive** in the **Preferences** menu is set to **Off**, you cannot receive data using the beaming feature. Before beaming data, make sure you set **Beam Receive** to **On**.

Using the Memory Stick™

Introduction

Your CLIE handheld is designed to support the Memory Stick™. The Memory Stick™ is a compact, portable, and versatile device especially designed for exchanging and sharing digital data with compatible products. Because it is removable, it can be used for external data storage.

Use the flash memory technology to download anything that can be converted into digital data, such as pictures, music, words, sounds, movies and photographs.


Foreseen as the universal data storage device of the future, the Memory Stick™ can already be used with an ever-increasing range of compatible products, including:

- ❑ Audio systems
- ❑ Visual devices
- ❑ VAIO products
- ❑ CLIE handhelds
- ❑ Mobile phones.

There are currently two different types of Memory Stick™:

- ❑ The generic Memory Stick™, coloured blue.
- ❑ The MagicGate Memory Stick™, coloured white.

You can purchase Memory Sticks™ from the Sony Style website (<http://www.sonystyle-europe.com>), or from your local Sony dealer.

 The MagicGate Memory Stick™ is not supported by the CLIE handhelds' PEG-T series.

Why Memory Stick™?

Sony's vision is to expand the world of communication, promoting the portability of digital data. The Memory Stick™ is the resulting medium, through which digital devices can be instantly connected. With it, you can download data from any compatible device, and then transfer it to another in a single and instant transfer.

The main advantages of the Memory Stick™ are its:

- ❑ **Compactness:** with dimensions of just 21.5 mm (W) x 2.8 mm (H) x 50 mm (D), compatible products can also be small, lightweight and attractive in their design.
- ❑ **Capacity:** Its data capacity far exceeds that of a floppy disk.
- ❑ **Security:** its lock option means you can protect your data from accidental erasure.
- ❑ **Versatility:** memory capacity ranges from 4MB up to 128MB (the equivalent capacity of 88 floppy disks).
- ❑ **Reliability:** by way of protecting the hardware and its contents, the number of terminals is reduced to only 10 pins. This, and the overall robust structure of the stick, gives it a longer lifespan than other storage devices.
- ❑ **Durability:** the same Memory Stick™ can be used tens of thousands of times.
- ❑ **Forward compatibility:** the Memory Stick's™ current format is designed to be compatible with future products and higher capacity Memory Sticks™.

The future of Memory Stick™

Memory Stick's™ potential is virtually unlimited, with the number of compatible products increasing rapidly in both personal and professional spheres.

The introduction of the 256 MB and 512 MB Memory Stick™ is anticipated in 2002, and a 1 gigabyte capacity Memory Stick™ is expected in 2003. Additionally, the native **transfer speed** of the Memory Stick™ will be increased to accommodate the increasing **capacity**. By the end of 2002, Memory Stick's™ transfer speed will be increased by eight times to a maximum of 20 MB/sec.

Generic Memory Stick™

The original Memory Stick™, blue in colour, can be used to record image data taken with digital still cameras, etc. or data from the PC. With it, you can record, play back and transfer various kinds of data at any given time.



Because it is easy to remove and transport safely, you can use Memory Stick™ anywhere by inserting it into any compatible device to transfer and share the information you have saved.

For you, this means you can expand the capabilities of your CLIE handheld in the following scenarios:

- ☐ With your still digital camera, share your holiday pictures instantly by e-mail.
- ☐ Carry pictures on you by copying image files from the Internet to your VAIO to your CLIE handheld.
- ☐ With your voice recorder, add your voice to e-mails so your tone is never misunderstood.

The blue Memory Stick™ is currently available with a 4MB, 8MB, 16MB, 32MB, 64MB or a 128MB memory (the equivalent capacity of 88 floppy disks).

MagicGate Memory Stick™


The MagicGate Memory Stick™, white in colour, records PC and image data just like its blue counterpart; the difference is it uses the MagicGate copyright protection technology.




With this type of Memory Stick™, also called the MG Memory Stick™, you can enjoy the following features:

- ☐ 32MB, 64MB and 128MB capacity versions.
- ☐ Storage of up to 120 minutes of audio data.
- ☐ Download and save:
 - ☐ digital music
 - ☐ pictures
 - ☐ movies, and more.
- ☐ Combine data files to add music to your home movies, for example.
- ☐ Transfer and share data between several digital products.
- ☐ MagicGate Copyright Protection Technology.
- ☐ SDMI (Secure Digital Music Initiative) Compliance.
- ☐ OpenMG Jukebox software.

So that you further distinguish a MagicGate Memory Stick™ from a generic one, look for:

- ☐ the  logo printed on it
- ☐ a protruding dot located on the back.



MagicGate is a copyright protection technology that complies with the standards set by SDMI (Secure Digital Music Initiative, an organization working to draw up industry standard specifications in order to protect copyrights of digital music). The logo  indicates the copyright protection system devised by Sony. It is not meant to guarantee compatibility with other media.

The MagicGate Memory Stick™ is not supported by the CLIE handhelds' PEG-T series.

MagicGate

MagicGate refers to the copyright protection technology used by the MagicGate Memory Stick™ and other MagicGate Memory Stick™ compatible devices.

The Memory Stick™ Walkman and MagicGate Memory Stick™ work together to check the data and ensure it complies with copyright protection.

If no problems are detected, the data is exchanged in encrypted form; if authentication is not passed, data cannot be exchanged or played back.

Copyright protection

People who create literary works such as music are entitled to a "copyright", meaning that they have exclusive rights to dictate how their work is used. When they are created, literary works are automatically protected by a copyright without having to submit notification or registration, and may not be used without the permission of the person who created the work.

In the music world, however, illegal acts of distributing music without the permission of the artist, particularly on the Internet, have recently been on the increase. That is why the Recording Industry Association of America (RIAA) took the initiative to organize a forum called Secure Music Digital Initiative (SDMI) to study technology for protecting copyrights during the electronic distribution of music.

Sony offers the MagicGate Memory Stick™ and Memory Stick™ Walkman with a copyright protection function that complies with SDMI standards, thereby providing an environment where individuals can record and enjoy third-party music data without worrying about copyright infringement.



Literary works that are recorded by individuals are permitted for private usage only.

Compatible devices

There are nearly 80 Memory Stick™-enabled products on the market or announced for introduction worldwide, ranging from camcorders and portable music players to voice recorders and many other electronic devices.

You can currently use Memory Sticks™ with the following Sony products:

Visual:

- ☐ Cybershot digital camera
- ☐ Mavica digital camera
- ☐ PC, TRV and VX series digital video cameras
- ☐ LC data projector

Audio:

- ☐ MS Walkman
- ☐ MS Hi-fi system
- ☐ Network Walkmans
- ☐ Voice recorders


Other:

- ☐ VAIO notebooks
- ☐ VAIO desktops
- ☐ CLIE Handheld Entertainment Organiser (PEG-N series)
- ☐ Sony mobile phones

Inserting and removing a Memory Stick™

Inserting a Memory Stick™

Insert the Memory Stick™ into the Memory Stick™ slot (1) with the arrow facing up and toward the slot.

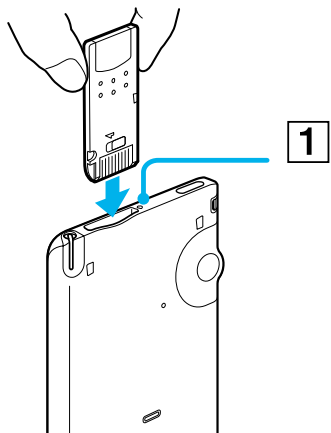


Insert the Memory Stick™ in the right direction. If the Memory Stick™ is forced in the wrong way, it may be damaged.

Removing a Memory Stick™


Before removing a Memory Stick™, make sure that data is not being written to or from the Memory Stick™.

To remove a Memory Stick™, proceed as follows:

- 1 Gently push the Memory Stick™ into the slot.
The Memory Stick™ pops out a little from the CLIÉ handheld.

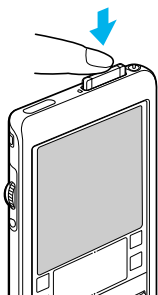

- 2 Pull the Memory Stick™ out carefully.

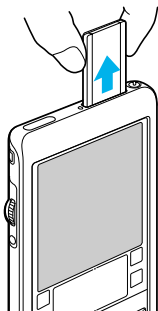

Notes on using the Memory Stick™

When you use a Memory Stick™, follow these precautions:

- ❑ Avoid touching the terminal of the Memory Stick™ or contacting it with a metal object.
- ❑ Do not drop, bend, or submit the Memory Stick™ to external shock.
- ❑ Do not disassemble or modify the Memory Stick™.
- ❑ Avoid getting liquids on the Memory Stick™.
- ❑ Avoid using or storing the Memory Stick™ in a location subject to:
 - ❑ extremely high temperature such as in a car parked in the sun, the outdoors exposed to direct sunlight, or near a heater.
 - ❑ direct sunlight
 - ❑ high humidity
 - ❑ corrosive substances
 - ❑ excessive dust
 - ❑ magnetic fields
- ❑ When storing and carrying the Memory Stick™, keep it in its original case to ensure protection of important data.
- ❑ Save a backup for important data.
- ❑ Avoid removing the Memory Stick™ from the insertion slot while data is being written or read.
- ❑ To avoid damaging or erasing data, do not:
 - ❑ release the Memory Stick™ or unplug the AC power adapter while formatting, or reading or writing data.
 - ❑ use the Memory Stick™ in a location subject to static electricity or electric noise.

- ❑ If the battery of your CLIE handheld is running out of power, an error message is displayed and you cannot exchange data with the Memory Stick™. If this occurs, connect the AC power adapter or fully charge your CLIE handheld.
- ❑ Use the MS Gate application to format the Memory Stick™ you use in your CLIE handheld. If you format it using another application, further operation with your CLIE handheld is not guaranteed.
- ❑ If you insert the Memory Stick™ that has been formatted by another application (such as Windows® Explorer, a message prompting you to format it, is displayed. To use the Memory Stick™ in your CLIE handheld, follow the instructions to format it. Note, however, that all stored data will be erased.


Enabling write-protection

You can write-protect your Memory Stick™, so that important data will not be deleted by mistake.

At the back of your Memory Stick™, you will find the write-protect tab. With this tab you can enable or disable write-protection.

To disable write-protection, proceed as follows:

- ❑ Slide the tab to the left (1).
You can now read and write data.

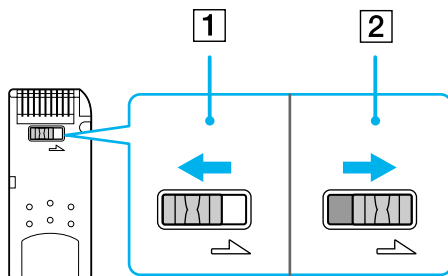


To enable write-protection, proceed as follows:

- Slide the tab to the right (2).

You can now read but not write data. Use the write-protect mode when you do not want to write or delete data on the inserted Memory Stick™.

Starting an application on the Memory Stick™

To open an application on the \PALM\Launcher directory of the Memory Stick™ from the **Application Launcher** screen, tap the arrow ▼ in the top right-hand corner of the **Application Launcher** screen and select **Card** (or a category with the **Card** icon). Then tap the icon of the application you want to open.

 If the application you are about to open had been installed on the Memory Stick™ through a HotSync® operation, some applications may not start.


Starting an application automatically when a Memory Stick™ is inserted

The Memory Stick™ Autorun application (MS Autorun) allows you to start a specified application automatically when a Memory Stick™ is inserted into your CLIE handheld. You can select your favorite application as the auto-run application. For example, if you like watching still images, set PictureGear™ Pocket to start automatically. See the supplied Software Guide for details.

Viewing information of the inserted Memory Stick™ (Card Info)

The Card Info gives you the outline (such as the remaining memory space) of the Memory Stick™ inserted into your CLIE handheld. You can also give a name to each Memory Stick™, which comes in handy when you have more than one Memory Stick™.


To display the card info screen, proceed as follows:

Rotate the Jog Dial™ to select Card Info and press the Jog Dial. Or tap the **Card Info**  icon on the Application Launcher screen.

The **Card Info** screen appears.




To attach a name to a Memory Stick™, proceed as follows:


- 1 Rotate the Jog Dial™ to select Card Info and press the Jog Dial. Alternatively, tap the **Card Info** icon on the **Application Launcher** screen.
The **Card Info** screen appears.
- 2 Tap the **Menu**  icon.
- 3 Tap **Rename Card**.
The **Rename Card** dialog box appears.
- 4 Enter a new name for the inserted Memory Stick™.
- 5 Tap **Rename**.


Formatting a Memory Stick™

Formatting defines the recording format for the Memory Stick™ so that you can access data with your CLIE handheld. Commercially available Memory Sticks™ are already formatted, so you can use them immediately. However, you may have to reformat your Memory Stick™ at some point.

To format a Memory Stick™, proceed as follows:

- 1 Insert the Memory Stick™.
- 2 Tap the **Home** icon .
The **Application Launcher** appears.
- 3 Rotate the Jog Dial™ to select **MS Gate**.
- 4 Press the Jog Dial™.
MS Gate starts up.
- 5 Tap the **Menu** icon.
- 6 Tap **Option, then Format**.
The confirmation message appears.
- 7 Tap **OK**.

- ❑ To cancel formatting, tap **Cancel** in step 6.
- ❑ To format a Memory Stick™ in the **Card Info** screen, you can also format a Memory Stick™ by tapping the **Menu**  icon on the **Card Info** screen, and selecting **Format Card** from the **Card** menu.

 When you format a Memory Stick™ on which data is already stored, all data will be deleted. Be careful that you do not delete important data by mistake.

Make sure you use your CLIE handheld to format a Memory Stick™ if you intend to use it with your CLIE handheld. If you use the computer to format a Memory Stick™ for use with a CLIE handheld, some data may not be accessed correctly.

If you failed to initialise the Memory Stick™ as a result of pulling it out during initialisation, the Memory Stick™ is not recognized by your computer. In this case, remove the Memory Stick™ and reinstall it.

What is formatting?

Formatting defines the recording format for your Memory Stick™ so that you can access data with your CLIE handheld.

Exchanging data with the Memory Stick™

The Memory Stick™ allows you to exchange data between your CLIE handheld and your computer or a digital camera that supports Memory Stick™. To exchange data with the Memory Stick™, your CLIE uses the pre-delivered Memory Stick™ Gate (MS Gate) software.

For more details, consult the **Software Guide**.

Backing up data with the Memory Stick™

With the Memory Stick™, you can save a back-up copy of the data on your CLIE handheld. To do this, you can use the applications MS Backup or MS Gate.

For more information, consult the **Software Guide**.

Customizing your CLIÉ handheld

Changing preferences

You can customize your CLIÉ handheld's operation settings and default settings by changing the **Preferences**.

- ❑ **General:** Set the auto shut-off interval, the **Stay on in cradle** feature, the **Beam Receive** feature, and the system, alarm, and game sounds.
- ❑ **Formats:** Set the region default and the formats for dates, times, calendar, and numbers.
- ❑ **Connection:** Configure serial, modem, and infrared communication settings.
- ❑ **Owner:** Assign your name, phone number, and other owner information to your CLIÉ handheld.
- ❑ **Buttons:** Assign different applications to the buttons on the front panel of your CLIÉ handheld and the HotSync® button on the cradle, and reassign the full-screen pen stroke command.
- ❑ **ShortCuts:** Define a list of Graffiti® abbreviations.
- ❑ **Jog:** Enable or disable the **JogAssist** feature and configure the options.
- ❑ **Network:** Configure your CLIÉ handheld for use on a network.
- ❑ **Digitizer:** Calibrate the screen on your organiser.
- ❑ **Date & Time:** Set the current date and time, the time zone of the area you are in, and turn on/off the daylight saving.
- ❑ **Digitizer:** Calibrate the screen on your CLIÉ handheld. The same digitizer calibration screen is displayed when you start your CLIÉ handheld for the first time. You can recalibrate your screen after a hard reset or if you find that **tapping** does not work as expected.
- ❑ **HiRes:** Set the **High Resolution Assist** feature.

Setting the display format of time, date and numbers (Formats)

The **Formats Preferences** screen enables you to set the region default, and the display format of dates, times, and numbers on your CLIÉ handheld.

Selecting the time, date, and numbers formats

You can select the formats for the time, date, week start day, and numbers. The selected formats apply to all your CLIÉ applications.

To select the time, date, and numbers formats, proceed as follows:

- 1 On the **Formats Preferences** screen, tap the arrow ▼ next to **Time** and then select the format from the drop-down list.
- 2 Tap the arrow ▼ next to **Date** and then select the format from the drop-down list.
- 3 Tap the arrow ▼ next to **Week starts** and then select whether you want the first day of the week to be Sunday or Monday.
This setting controls the Day, Week, Month, and Agenda views in Date Book and all other aspects of your CLIÉ handheld that display a calendar.
- 4 Tap the arrow ▼ next to **Numbers** and then select formats for the decimal point and thousands separator.

Setting the time

To set the time, proceed as follows:

- 1 From the drop-down list in the corner of the **Preferences** screen, tap **Date & Time**.
- 2 Tap **Set Time**.
The **Set Time** screen appears.
- 3 Tap the ▲ or ▼ arrows to set the hour.
- 4 Tap the **Minute** box and tap ▲ or ▼ arrows to set the minute.

- 5 Tap **AM** or **PM** to specify the morning or afternoon.
You can also display time based on the 24-hour clock by using the **Formats** preferences.

Setting the date

To set the date, proceed as follows:

- 1 From the drop-down list in the **Preferences** screen, tap **Date & Time**.
- 2 Tap **Set Date**.
The **Set Date** screen appears.
- 3 Tap the left and right arrows next to the year at the top of the screen to select the year.
- 4 Select the current month in the same way.
- 5 Select the current date in the same way.

Setting the time zone and daylight saving time

To set the time zone, proceed as follows:

- 1 Tap **Date & Time** from the drop-down list on the **Preferences** screen.
The **Date & Time Preferences** screen is displayed.
- 2 Tap the **Set Time Zone** field.
The **Set Time Zone** screen appears.
- 3 Select the time zone that corresponds to where you are.
- 4 Tap **OK**.

To set the daylight saving time, proceed as follows:

- 1 Tap **Date & Time** from the drop-down list on the **Preferences** screen.
The **Date & Time Preferences** screen is displayed.
- 2 Tap the down arrow next to **Daylight saving**.
- 3 Tap and select **On** or **Off**.

General preferences

The **General Preferences** screen enables you to set the auto shut-off interval, alarm options and sounds for your CLIÉ handheld.

Choosing font settings

In all basic applications, you can change the font style to make the text easier to read. You can choose a different font style for each application.

To change the font style, proceed as follows:

- 1 Open an application.
- 2 Tap the drop-down icon ▼.
- 3 Tap **Options**.
- 4 Tap **Font** and tap the font style you want to use.
- 5 Tap **OK**.

Setting the automatic shut-off time

Your CLIÉ handheld has an automatic shut-off feature that turns off the power after a period of inactivity. This feature helps conserve battery power in case you forget to turn off your CLIÉ handheld. If you find that your CLIÉ handheld shuts itself off too early or too late, you can increase or decrease the time setting for the automatic shut-off feature.

By default, your CLIÉ handheld will turn off after two minutes of inactivity and will be on as long as it is connected to the cradle when the cradle is connected to the AC power.

To select the automatic shut-off time, proceed as follows:

- 1 Tap **General** from the drop-down list on the **Preferences** screen.
The **General Preferences** screen is displayed.

- 2 Tap the arrow ▼ next to **Auto-off After** and then select the time setting for the automatic shut-off feature.
- 3 You can select **30 seconds**, **1 minute**, **2 minutes**, or **3 minutes**.
- 4 If you want to leave your CLIÉ handheld turned on while it is connected to the cradle, make sure that the check box next to **Stay on in Cradle** check box is selected. To turn it off automatically, deselect the check box.

Setting sounds

Your CLIÉ handheld uses a variety of sounds. The System, Alarm, and Game Sound settings enable you to turn the sounds on or off, and to adjust the volume level.

To set the sounds, proceed as follows:

- 1 Tap **General** from the drop-down list on the **Preferences** screen.
The **General Preferences** screen is displayed.
- 2 Tap the arrow ▼ next to **System Sound** and then select the sound level or **Off** from the drop-down list. When you turn the System Sound off, you also turn off the **chime** tones associated with the HotSync® operation.
- 3 Tap the arrow ▼ next to **Alarm Sound** and then select the sound level from the drop-down list.
- 4 Tap the arrow ▼ next to **Game Sound** and then select the sound level or **Off** from the drop-down list. The **Game Sound** setting works only with the games that are programmed to respond to this setting.

Turning the vibrate alarm and LED alarm on or off

You can set the CLIÉ handheld to vibrate or flash its LED at the set time. If you turn the **Alarm Sound** off and turn on the **Alarm Vibrate** or **Alarm LED**, you can make use of the CLIÉ handheld's alarm feature without disturbing other people around you.

To turn the vibrate alarm and LED alarm on or off, proceed as follows:

- 1 Tap **General** from the drop-down list on the **Preferences** screen.
The **General Preferences** screen is displayed.
- 2 Tap the arrow ▼ next to **Alarm Vibrate**, then select **On** or **Off** from the drop-down list.
 - ☐ **On**: Enables the Alarm Vibrate feature
 - ☐ **Off**: Disables the Alarm Vibrate feature
- 3 Tap the arrow ▼ next to **Alarm LED** and then select **On** or **Off** from the drop-down list.
 - ☐ **On**: Enables the Alarm LED feature
 - ☐ **Off**: Disables the Alarm LED feature

Turning the Beam Receive feature on or off

The **Beam Receive** is set to **On**, by default. You can turn off the **Beam Receive** feature to prohibit anyone from beaming information to your CLIÉ handheld, and to slightly save in battery power.

To turn the Beam Receive feature on or off, proceed as follows:

- 1 Tap **General** from the drop-down list on the **Preferences** screen.
The **General Preferences** screen is displayed.
- 2 Tap the arrow ▼ next to **Beam Receive** and then select **On** or **Off** from the drop-down list.
 - ☐ **On**: Enables the **Beam Receive** feature.
 - ☐ **Off**: Disables the **Beam Receive** feature.

Choosing different formats

You can select the preferred formats of the time, date, week starting, and numbers. These formats appear in all applications.

To choose time, date and number formats, proceed as follows:

- 1 Tap the **Time** drop-down list in **Format Preferences**, and select a format.
- 2 Tap the **Date** drop-down list in the **Format Preferences**, and select a format.
- 3 Tap the **Week starts** drop-down list in **Format Preferences**, and select **Sunday or Monday**. This setting controls the Day, Week, Month, and Agenda views in Date Book and all other aspects of your CLIÉ handheld that displays a calendar.
- 4 Tap the **Numbers** drop-down list and select a format.

Selecting a region default

When you select the region where you use your CLIÉ handheld, the time, date, the week starting day, and number formats are adjusted. For example, in Germany, time is often expressed using the 24-hour clock; in England, time is expressed using the 12-hour clock with an AM or PM suffix.

A region default appears in all applications on your CLIÉ handheld.

However, you can customize your own settings such as the format setting for the time of day.

To choose your region, proceed as follows:

- 1 In the **Preferences** screen, select **Formats** from the drop-down list in the top right-hand corner.
- 2 From the drop-down list of **Preset to**, choose a region name for the standard setting.
- 3 Tap **OK**.


Viewing preferences

To view your Preferences, proceed as follows:


- 1 Tap the **Home** icon.
The Application Launcher starts up.
- 2 Rotate the Jog Dial™ to select **Prefs** and press the Jog Dial™.
The **Preferences** screen appears.
- 3 Tap the arrow ▼ in the upper right corner of the screen and then select the **Preferences** screen you want to view from the drop-down list.

Assigning applications to buttons

Button preferences let you assign different applications to the buttons (1) on the front of the CLIÉ handheld. For example, you can assign the To Do List button to start the Date Book application.

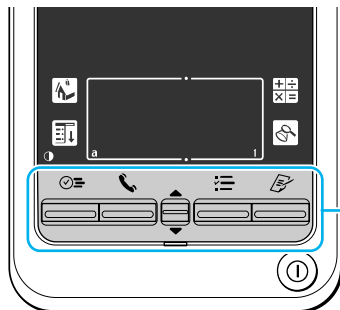

To assign applications to buttons, proceed as follows:

- 1 In the **Preferences** screen, select **Buttons** from the drop-down list ▼ in the top right-hand corner.
 - 2 Tap the application you want to assign to the button.
 When you have assigned another application to the button, you can launch the original application with the Application Launcher.
- If you want to reset the application button, tap **Default** in the step 2. All application buttons are reset to the default setting.

Creating Graffiti® ShortCuts

The **ShortCuts Preferences** screen enables you to define abbreviations (ShortCuts) for entering text with Graffiti® strokes. You can create a ShortCut for words, letters, or numbers. All ShortCuts you create appear on the list in the **ShortCut Preferences** screen. All the ShortCuts are available in any of your CLIÉ applications and are backed up on your computer when you perform a HotSync® operation. See Using Graffiti® shortcuts (page 23) section for more information on the use of ShortCuts.

To create a Graffiti shortcut, proceed as follows:


- 1 Tap **ShortCut** from the drop-down list on the **Preferences** screen.
The **ShortCut Preferences** screen is displayed.
- 2 Tap **New**.
The **ShortCut Entry** screen is displayed.
- 3 On the **ShortCut Name** line, enter the letters you want to use to activate the ShortCut.
- 4 Tap the **ShortCut Text** area and then enter the text that you want to appear when you write the ShortCut characters.
- 5 Tap **OK**.

To edit a ShortCut, proceed as follows:

- 1 Tap the ShortCut you want to edit in the ShortCuts list and then tap **Edit**.
- 2 Make the changes you want and then tap **OK**.
If you no longer need a ShortCut, you can delete it from the list of ShortCuts.


To delete a ShortCut, proceed as follows:

- 1 Tap the ShortCut you want to delete in the ShortCuts list and then tap **Delete**.
The **confirmation** dialog box is displayed.
- 2 Tap **Yes**.

 Graffiti shortcuts are not case-sensitive.

Assigning preferences to the full-screen stroke

You can choose whether the full-screen pen stroke should activate the Graffiti® Help application or one of your Application Launcher controls.

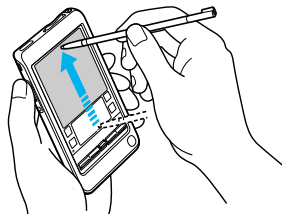

To assign activities to a full-screen pen stroke, proceed as follows:

- 1 In the **Preferences** screen, select **Buttons** from the drop-down list ▼ in the top right-hand corner.
- 2 Tap **Pen**.
The **Pen** dialog box appears.
- 3 From the drop-down list, tap the function you want to start when you make the full-screen pen stroke.
Backlight : Turns on the backlight of your CLIÉ handheld. This way, you can turn the backlight on and off without using the power button.
Brightness (PEG-T625C only): Opens the brightness adjustment screen.
Keyboard: opens the onscreen keyboard for entering text characters.
Graffiti Help: Opens a series of screens that show the complete Graffiti® character set (only in applications that support text entry).
Turn Off & Lock: Turns off and locks your CLIÉ handheld. You must assign your password to lock the CLIÉ handheld. When locked, you need to enter the password to use your CLIÉ handheld.
Beam Data: Beams the current record to another Palm OS PDA.
- 4 Tap **OK**.
You go back to the **Buttons Preferences** dialog box.



The full-screen pen stroke must be done vertically.

Assigning applications to the HotSync® button

Button preferences let you assign different applications to the HotSync® button on the cradle.

To assign applications to HotSync® buttons, proceed as follows:

- 1 In the **Preferences** screen, select **Buttons** from the drop-down list ▼ in the top right-hand corner.
- 2 Tap **HotSync**.
The **HotSync® Buttons** dialog box appears.
- 3 Select the application you want to change from the drop-down list.
The allocation for the application button is changed.
- 4 Tap **OK**.
You return to the **Buttons Preferences** dialog box.
Any changes that you make in the HotSync® Buttons screen become effective immediately. You can activate the selected application by pressing the HotSync® button of the cradle or the HotSync® icon of the HotSync application.

Changing the Jog Dial™ preferences

The **Jog Preferences** screen enables you to change the Jog Dial™ and BACK button functions. With the **JogAssist** feature, you can use the Jog Dial™ to operate a third-party application that is not designed to use Jog Dial™ operations.





You can use the Jog Dial™ and the BACK button to:

- ☐ Scroll the screen with the Jog Dial™.
- ☐ Select an item from a pop-up list with the Jog Dial™.
- ☐ Move back and forth between screens with the BACK button.

You can also change the **BACK** button function so that you can turn your CLIÉ handheld on or off by keeping it pressed or navigate between buttons.


- ❑ The functions activated by the JogAssist feature differ depending on the application you use.
- ❑ In some applications with the Jog Dial™ symbol, part of the functions may change when the **JogAssist** feature is enabled.
- ❑ Menu operations are supported after an extended push of the back button when the **display cursor/menu** option is on.

To change the Jog Dial™ settings, proceed as follows:

- 1 Tap **Jog** from the drop-down list on the **Preferences** screen.
The **Jog Preferences** screen is displayed.
 - 2 To enable the **JogAssist** function, select **Use JogAssist**.
 - 3 In order to set to turn on the power by pressing the BACK button, select **Power On with BACK button**.
You need to keep the BACK button pressed for a several seconds to turn on the power.
 - 4 To be able to turn off the power by keeping the BACK button pressed, select **Power Off**.
The Jog Dial™ and BACK button settings are made.
-  **Display Cursor / Menu** is selected by default (). You can display the **cursor** or **menu** by keeping the BACK button pressed.
By default, **Use JogAssist** is selected () and **Power On with BACK button** is not selected ().

Network preferences

To use your CLIÉ handheld with a network (such as using the Web Clipping application or performing a network HotSync operation), you must set the Network Preferences settings.

-  The Network settings preferences provides the ability to connect to your ISP (Internet Service Provider) or dial-in (remote access) server with applications (for example, Web Clipping) that allow you to view the transmitted data.

Selecting an Internet Service Provider

Use the **Service** setting to select the service template for your Internet Service Provider or a dial-in server. Service templates are a set of ISP and dial-in server configuration settings that you can create, save, and reuse.

To select an Internet Service, proceed as follows:


- 1 Tap **Network** from the drop-down list on the **Preferences** screen.
The **Network Preferences** screen is displayed.
- 2 Tap the down arrow next to **Service** and then select the predefined service template you want to use.

Entering a user name

The **User Name** setting identifies the name you use when you log into your Internet Service Provider or your dial-in server.

To enter a name, proceed as follows:

- 1 In the **Network Preferences** screen, tap the **User Name** field.
- 2 Enter your user name.

 Although this field can contain multiple lines of text, only two lines appear onscreen.
Most dial-in servers do not accept spaces in the user name.

Entering a password

The **Password** box identifies the password you use to log into your server or ISP. Your entry in this field determines whether your CLIÉ handheld prompts you to enter a password each time you log into your network:

- ❑ If you do not enter a password, your CLIÉ handheld displays the word **Prompt** in this field and asks you to enter a password during the login procedure.

- ❑ If you enter a password, your CLIÉ handheld displays the word **Assigned** in this field and does not prompt you to enter a password during the login procedure.
- ❑ If you are concerned about security, select the **Prompt** option and do not enter a password.

To assign a password, proceed as follows:

- 1 In the **Network Preferences** screen, tap the **Password** field.
- 2 Enter the password you use to log into your server.
- 3 Tap **OK**.
The **Password** field changes to display the word **Assigned**.

Selecting a connection

Use the **Connection** setting to select the method you want to use to connect to your Internet Service Provider or a dial-in server.

To select a connection, proceed as follows:

- ❑ In the **Network Preferences** screen, tap the down arrow next to **Connection** and then select the connection you want to use.

Creating additional service templates

You can create additional service templates from scratch or by duplicating existing templates and editing information. After you create a new or duplicate template, you can add and edit settings.

To add a new service template, proceed as follows:

- 1 In the **Network Preferences** screen, tap the **Menu** icon.
- 2 Tap **New** from the **Service** menu.
An untitled service template is added to the drop-down list for the **Service** field.

To duplicate an existing service template, proceed as follows:

- 1 In the **Network Preferences** screen, tap the down arrow next to **Service** and then select the predefined service template you want to duplicate.
- 2 Tap the **Menu** icon.
- 3 Tap **Duplicate** from the **Service** menu.
A copy of the service template is added to the drop-down list for the **Service** field.

To delete a service template, proceed as follows:


- 1 In the **Network Preferences** screen, tap the down arrow next to **Service** and then select the predefined service template you want to delete.
- 2 Tap the **Menu** icon.
- 3 Tap **Delete** from the **Service** menu.
The **Delete Service** dialog box is displayed.
- 4 Tap **OK**.
The selected service template is deleted.

Adding detailed information to a service template

If you are using one of the predefined service templates, you probably only need to enter your user name and telephone number. If you are creating a new service template, you may need to provide additional information to your ISP or dial-in server. Use the **Details** dialog box to add additional information to a selected service template.

To select a connection type, proceed as follows:

- 1 In the **Network Preferences** screen, tap the service field.
- 2 Tap **Details**.
The **Details** screen is displayed.
- 3 Tap the down arrow next to **Connection type** and select one of the following connection types:

- ☐ PPP: Point-to-Point protocol
 - ☐ SLIP: Serial Line Internet Protocol
 - ☐ CSLIP: Compressed Serial Line Internet Protocol
- 4 Tap the down arrow next to **Idle timeout** and select one of the following options:
 - ☐ **1 minute**: Waits one minute for you to open another application before it drops the connection.
 - ☐ **2 minutes**: Waits two minutes.
 - ☐ **3 minutes**: Waits three minutes.
 - ☐ **Never**: Keeps your PPP or SLIP connection until you turn off your CLIÉ handheld (or until it times out). Note that this option will be more costly than others.
 - 5 Tap the **Query DNS** check box to deselect it.
 - 6 Enter the IP address for the Primary and Secondary DNS (Domain Naming System). Ask your Internet Service Provider or System Administrator for the correct Primary or Secondary DNS IP numbers.
 - 7 If you need to enter the CLIÉ handheld's IP Address, tap the **IP Address** check box to deselect it and display a permanent IP address field below the check box. Normally, you do not have to enter this. If you are not sure, select **Automatic** and go to step 9.
 - 8 Enter the CLIÉ handheld's IP Address.
 - 9 Tap **OK**.
-  If you are not sure which connection type to choose, try PPP; if that doesn't work, ask your Internet Service Provider or your System Administrator for the correct connection type.

Creating a log in script

A log in script is a series of commands that automates logging in to a network server, for example, your corporate network or your Internet Service Provider (ISP). It is something that you are likely to receive from your IS System Administrator, if your company has a system in which you log in to the corporate servers from your CLIÉ handheld using a modem or network connection.

You can also use non-ASCII and literal characters in your log in script. For more information, see further on.
To create a log in script, proceed as follows:

- 1 In the **Network Preferences** screen, tap the **Service** field.
- 2 Tap **Details**.
The **Details** screen is displayed.
- 3 Tap **Script**.
The **Log in Script** screen is displayed.
- 4 Tap the down arrow next to **End** and select one of the following commands. If the command requires additional information, a field appears to the right of it for you to enter the information.
 - ❑ **Wait For:** Tells your CLIÉ handheld to wait for specific characters from the TCP/IP server before executing the next command.
 - ❑ **Wait For Prompt:** Detects a challenge-response prompt coming from the server and then displays the dynamically generated challenge value. You then enter the challenge value into your token card, which in turn generates a response value for you to enter on your CLIÉ handheld. This command takes two arguments, separated by a vertical bar (|) on the input line.
 - ❑ **Send:** Transmits specific characters to the TCP/IP server to which you are connecting.
 - ❑ **Send CR:** Transmits a carriage return or LF character to the TCP/IP server to which you are connecting.
 - ❑ **Send User ID:** Transmits the User ID information entered in the User ID field of the Network Preferences screen.
 - ❑ **Send Password:** Transmits the password entered in the Password field of the Network Preferences screen. If you did not enter a password, this command prompts you to enter one. The Password command is usually followed by a Send CR command.
 - ❑ **Delay:** Tells your CLIÉ handheld to wait a specific number of seconds before executing the next command in the log in script.
 - ❑ **Get IP:** Reads an IP address and uses it as the IP address for your CLIÉ handheld. This command is used with SLIP connections.

- ❑ **Prompt:** Opens a dialog box and prompts you to enter text of some kind (for example, a password or a security code).
- ❑ **End:** Identifies the last line in the log in script.
- 5 Repeat step 4 until the log in script is complete.
- 6 Tap **OK**.
- 7 Tap **OK again**.
- ❑ **Non-ASCII Characters for Log in Scripts:**
The following information enables you to create custom log in scripts that require non-ASCII characters. It is provided for advanced users who understand the use and requirements of such characters in a custom log in script.
- ❑ **Use of ^ char:**
You may use the caret (^) to transmit ASCII command characters. If you send ^char, and the ASCII value of char is between @ and _ , then the character is automatically translated to a single-byte value between 0 and 31. For example, ^M is converted to a carriage return. If char is a value between a and z, then the character sequence is translated to a single-byte value between 1 and 26. If char is any other value, then the character sequence is not subject to any special processing. For example, the string "Joe^M" transmits Joe, followed by a carriage return.
- ❑ **Carriage return and line feed:**
You may include carriage return and line feed commands as part of the login script, when entered in the following format.
 - ❑ <cr> : Sends or receives a carriage return
 - ❑ <lf> : Sends or receives a line feedFor example, the string "waitfor Joe<cr><lf>" waits to receive Joe followed by a carriage return and line feed from the remote computer before executing the next command in the script.

- ❑ **Literal characters:**

The backslash (\) character defines that the next character is transmitted as a literal character, and is not subject to any special processing ordinarily associated with that character. Examples:

- ❑ \^ : Includes a caret as part of the string
- ❑ \< : Includes a < as part of the string
- ❑ \\ : Includes a backslash as part of the string.

Using the network preferences menus

This section explains the menu commands specific to network preferences.

For the **Edit** menu, see Using the Edit menu ([page 38](#)).

Service menus

New: Creates a new service template.

Delete: Deletes the current service template. The **Delete Service** dialog box appears.

Duplicate: Duplicates the current service template.


Option menus

View Log: Displays the Network Log. The Network Log lists all of the communication that occurs between your modem and your dial-in server during the log in procedure. The information in the Network Log can help your ISP or your System Administrator pinpoint where the log in procedure communication fails and why.

Setting the High Resolution Assist function


The High Resolution Assist function enables the high resolution display of an application that does not support the high resolution mode.

To set this function, proceed as follows:

- 1 Tap **HiRes** from the drop-down list in the **Preferences** screen.
The **HiRes Preferences** screen is displayed.
- 2 To enable the High Resolution Assist function, select **Enable High Resolution Assist**.
The confirmation dialog box is displayed.
- 3 Tap **OK**.
- 4 Select the application(s) that you do not want to display in high resolution mode in the list box.
 In step 4, check an application when the following occurs in the high resolution mode:
 - Performances are largely deteriorated (e.g. game).
 - Display is divided into two, characters are distorted, or other operational irregularities occur.

Using data of another Sony CLIÉ Handheld

If you already own a Sony CLIÉ Handheld, you can use data of your old CLIÉ handheld with your new CLIÉ handheld. You can transfer data from your old CLIÉ handheld to your new CLIÉ handheld with either of the following methods:

- ❑ **Using Palm™ Desktop for CLIÉ to copy data:** You can transfer data of the Palm OS® basic applications easily.
 - ❑ **Using a Memory Stick® to copy data:** You can transfer all the necessary data and settings information more securely than using the Palm Desktop for CLIÉ software.
-  Install add-on applications using the same procedures as the previous CLIÉ handheld.
Some third-party applications may operate only on your old CLIÉ handheld.

Using the Palm™ Desktop for CLIÉ software to transfer data

For the Palm OS® basic applications data such as Address Book, Memo Pad, To Do List, Date Book, you can use the Palm Desktop for CLIÉ software to transfer data from your old CLIÉ handheld to your new CLIÉ handheld by exporting and importing data.

Before you start, perform a HotSync® operation to the Palm Desktop for CLIÉ software using your new CLIÉ handheld with a different user name from that you have used with the old CLIÉ handheld.

To transfer data from your old CLIÉ handheld to your new CLIÉ handheld, proceed as follows:

- 1 Start the Palm Desktop for CLIÉ software.
- 2 Click the user name of your previous CLIÉ handheld from the **User name** list in the upper right of the screen.
- 3 Click the icon of the application whose data you want to copy in the left panel of the screen.
- 4 Click **Export** from the **File** menu.
- 5 Enter the file names and click **Export**.
The data of your old CLIÉ handheld is exported. Change the destination folder if necessary.

- 6 Repeat steps 3 through 5 to export data of other applications.
- 7 Click the user name of your new CLIÉ handheld from the **User name** list in the upper right of the screen. If you have never performed a HotSync operation with your new CLIÉ handheld, select **Users** from the **Tools** menu. Click **New** in the **Users** screen and enter a new user name. Then select that new user name.
- 8 Click **Import** from the **File** menu.
- 9 Select the files you have exported in steps 3 through 6 and then click **Open**.
- 10 Place your new CLIÉ handheld on the cradle and perform a HotSync operation.
The data exported from your old CLIÉ handheld is copied on your new CLIÉ handheld.


Notes on a HotSync® operation




- ❑ Do not attempt to transfer data from your old CLIÉ handheld to your new CLIÉ handheld by performing HotSync® operations with the identical user name. Doing so may cause a malfunction.
- ❑ When you perform a HotSync® operation with your new CLIÉ handheld and the **New User** dialog box is displayed, enter a different user name from that of your old CLIÉ handheld. If you enter the identical user name, the Palm Desktop for CLIÉ software may not be able to recognize the difference between your CLIÉ handhelds and the data of both handhelds may be mixed up or deleted.
- ❑ If you copy **UnsavedPreference**, the user name is also copied. This prevents you from managing the two CLIÉ handhelds with different user names.

Using a Memory Stick™ to transfer data

You can use a Memory Stick™ to transfer data of your old CLIÉ handheld to your new CLIÉ handheld.

To transfer data from your old CLIÉ handheld to your new CLIÉ handheld with a Memory Stick™, proceed as follows:

- 1 Insert the Memory Stick™ into your other CLIÉ handheld.
- 2 Rotate the Jog Dial™ to select MS Gate and then press the Jog Dial. Or tap the **MS Gate**  icon in the Application Launcher screen.
The MS Gate application starts up. The data in your CLIÉ handheld is listed.
- 3 Tap to select the data of the application whose settings and information you want to use with your new CLIÉ handheld.
You can select multiple files:
 - ☐ Address Book: AddressDB
 - ☐ Date Book: DatebookDB
 - ☐ Memo Pad: MemoDB
 - ☐ Mail: MailDB
 - ☐ To Do List: ToDoDB
 - ☐ Network setup information: NetworkDB
- 4 Tap **Copy**.
The **File Overwrite confirmation** message is displayed.
- 5 Tap **OK**.
The data selected in step 3 is copied on the Memory Stick™.
- 6 Remove the Memory Stick™ from your other CLIÉ handheld and insert it into your new CLIÉ handheld.

- 7 Rotate the Jog Dial to select MS Gate and then press the Jog Dial. Or tap the MS Gate  icon in the Application Launcher screen.
The MS Gate application starts. The data in your CLIÉ handheld is listed.
 - 8 Press the Jog Dial to select MS.
You can also tap the arrow ▼ in the upper right corner to select MS from the drop-down list.
 - 9 Tap to select the applications and data you have previously copied from the older device.
 - 10 Tap **Copy**.
The **File Overwrite confirmation** message is displayed.
 - 11 Tap **OK**.
 - 12 If the file overwrite confirmation message is displayed, tap **Yes to All**.
The data of your old CLIÉ handheld is copied on your new CLIÉ handheld.
-  If a file-locked, access, or delete error message is displayed while copying files, tap **OK** to proceed to the next step in copying. Those files, however, will not be copied.
- Use Memory Stick™ that has sufficient free memory space.
- Make sure that the write protect tab on the Memory Stick™ is not set to **LOCK**.
- You cannot copy data marked with the lock  icon.
- You cannot copy Graffiti® ShortCuts, Net Prefs, and sonyres (the database for accessing the files in Memory Stick™).
- Do not select **UnSavedPreference**. Your computer may not be able to distinguish your new CLIÉ handheld from your old CLIÉ handheld.

Performing a HotSync® operation between your old CLIÉ handheld and the new Palm Desktop for CLIÉ software

If you already own a CLIÉ handheld older than this model (PEG-T425 and PEG-T625C), you can perform a HotSync operation between that CLIÉ handheld (PEG-S300/E, PEG-N770C/U, PEG-N770C/E) and the Palm Desktop for CLIÉ software supplied with this model.

After you have set up your CLIÉ handheld as indicated in the Read This First manual, perform the HotSync® operation.

If you have any trouble with the HotSync® operation, perform the following.

- ❑ Check the Windows® task tray to make sure that **Local Serial (Local USB** for PEG-N770C/U, PEG-N770C/E) is selected.
- ❑ Check the Windows® task tray to make sure that the **USB Switcher** is running (PEG-S300/E).
- ❑ If you are using a PEG-S300/E CLIÉ handheld, you must uninstall **TrueSync** and then uninstall your old PalmDesktop for CLIÉ software, then reinstall the last version of PalmDesktop for CLIÉ software from the applications CD-ROM and install it in C:\Program Files\Sony Handheld.

 The Palm Desktop for CLIÉ software supplied to this CLIÉ handheld (PEG-T425 and PEG-T625C) does not support the Expense application.


Getting help

Sony provides several support options for your CLIE handheld. If you have any questions about your CLIE handheld and its related software, check these options for answers:

- ❑ This guide explains how to use your CLIE handheld.
- ❑ The CLIE handheld support website (<http://www.sony-europe.com/clieplaza/support>) provides the latest information on your CLIE handheld. On this website, you will find:
 - ❑ Frequently Asked Questions (FAQs)
 - ❑ An electronic version of the Operating Instructions
 - ❑ Installation information
 - ❑ Software updates
 - ❑ On-line knowledge base.

Troubleshooting

This section describes how to solve common problems you may encounter when using your CLIE handheld. Many problems have simple solutions, so try these suggestions before you call Sony Customer Information Services Center.

-  Thousands of third-party add-on applications have been written for the Palm OS platform. Sony does not support such a large number of third-party applications. If you have any problems with a third-party application, please contact the developer or publisher of that software.

Operating problems

I do not see anything on the screen

Try each of these in turn:

- ☐ Tap the contrast adjustment icon and adjust the contrast.
- ☐ Recharge the unit.
If your CLIE handheld still does not operate, try a soft reset.

My CLIE handheld has frozen

Perform a soft reset.

My CLIE handheld keeps turning itself off


Your CLIE handheld is designed to turn itself off after a period of inactivity. This period can be set at one, two, or three minutes.

My CLIE handheld is not making any sound

Check the System Sound setting.

I get a warning message telling me there is not enough memory

- ☐ Purge records from Date Book and To Do List. This deletes To Do List items and past Date Book events from the memory of your CLIE handheld.
- ☐ Delete unused memos and records. If necessary, you can save these records. See explanations for each application.

 If you have installed additional applications on your CLIE handheld, remove them to recover memory.

I cannot use the Jog Dial

Check that the **JogAssist** feature is activated. See Changing the Jog Dial™ preferences ([page 121](#)) section.

An error message is displayed repeatedly

Follow the instructions of the message.

Tapping and writing problems

I cannot get the handheld to recognise my handwriting

- ❑ For your CLIE handheld to recognize handwriting input with the stylus, you need to Graffiti® writing.
- ❑ Make the Graffiti® character strokes in the Graffiti® writing area, not on the display part of the screen.
- ❑ Write Graffiti® strokes for letters in the left-hand side, and the strokes for numbers in the right-hand side of the Graffiti® writing area.
- ❑ Make sure that Graffiti® is not shifted into extended or punctuation modes.

When I tap the Menu icon, nothing happens

Not all applications or screens have menus. Try changing to a different application.

When I tap the buttons or screen icons, my CLIE handheld activates the wrong feature

Calibrate the screen.

Application problems

The records I created do not appear in the application

- ❑ Check the categories drop-down list (top right-hand corner). Choose **All** to display all the records for the application.
- ❑ Check **Security** and confirm that **Private Records** is set to **Show private records**.
- ❑ In To Do List, tap **Show** and see if **Show Only Due Items** is selected.

I created an event in Date Book, but it does not appear in the Week View

In the **Week View**, you cannot select overlapping events that have the same start time. If you have two or more events with the same start time, choose the **Day View** to see the overlapping events.

I can't list memos the way I want

- ❑ If you cannot manually arrange the order of the memos in the list screen, check the **Memo Preference** setting. Make sure that **Sort by** is set to **Manual**.
- ❑ If you choose to view your memos alphabetically in the Palm Desktop for CLIE software and then perform a HotSync® operation, the memos on your CLIE handheld still appear in the order defined in the **Memo Preferences** setting. In other words, the sort settings you use with the Palm Desktop for CLIE software are not transferred to your CLIE handheld.

The Today button does not show the correct date

- ❑ Your CLIE handheld is not set to the current date. Make sure the **Set Date** box in the **General Preferences** screen display the current date.
- ❑ Your CLIE handheld is not set to the correct time zone or the correct daylight saving setting. Make sure the **Set Time Zone** box and the **Daylight Saving** box in the **Date & Time Preferences** screen displays the correct setting. See Setting the time zone and daylight saving time ([page 113](#)) section.

I cannot find an image pasted in an Address Book entry

If you use the Palm Desktop for CLIE software to change the category of the Address Book entry, you may not be able to locate the pasted image on your CLIE handheld. Change the category on your CLIE handheld.

I cannot start applications installed on the Memory Stick™

- ❑ In order to open such applications from the **Application Launcher** screen, a memory space exceeding the application size must be kept free on your CLIE handheld.

- ❑ Check if the application files or data files (such as image files) essential to starting the applications are stored under the **/PALM/ Launcher/** directory of the Memory Stick™. If so, the CLIE handheld may not be able to access the data files or application files.
Copy or move the file data to the CLIE handheld using the MS Gate application.
- ❑ Verify that you installed application or data from your computer to the CLIE handheld with a HotSync® operation, and selected the Memory Stick™ as their destination. If you did, copy or move the data to your CLIE handheld.

HotSync® problems

I cannot perform a HotSync® operation


- ❑ Check the Windows system tray to make sure the HotSync Manager is running.
If it is not, open the HotSync Manager from the **Start** menu.
- ❑ Make sure the cradle is connected securely.
- ❑ Check that the operating system of your computer is Windows® 98/98 Second Edition/Millennium/2000 Professional/XP Home Edition/XP Professional.

After a HotSync® operation, one of my applications did not synchronize

Click the HotSync Manager and choose Custom. Check that the correct conduit is active.

I am using Outlook® as my PIM, but cannot perform a HotSync® operation

- ❑ Click the HotSync Manager and choose **Custom**. Check that the correct conduit is active.
- ❑ Check that the correct conduit is installed. Reinstall the HotSync Manager and make sure the correct conduit is selected.
- ❑ To synchronise Memos, To Do List items, Dates and Outlook contacts, you need to install Intellisync®. This will not work if you only have the Palm Desktop for CLIE software installed.

 With Outlook®, conduits are managed by Intellisync®.

My computer appears to freeze during the first HotSync®

If you have not set up your default mail client when installing the Palm Desktop for CLIE and if you try to synchronize, your computer may freeze.

Setting up a default mail client will solve the problem.

To set up a default mail client, proceed as follows:

- 1 In the Windows® taskbar, click the **Start** button.
- 2 Click **Programs (All programs)** with Windows® XP).
- 3 Select **Sony Handheld**, then **Mail Setup**.
Follows the onscreen instructions to set up a default mail client.

I cannot launch the HotSync® Manager

- ❑ Make sure you are not running another program, such as network and facsimile software, that uses the serial port you selected in the Setup dialog box.
- ❑ Back up the Palm Desktop for CLIE software, uninstall it, and then reinstall it.
- ❑ Make sure that **Local USB** is selected.

My CLIE handheld appears to freeze when I place it near my computer

- ❑ Move your CLIE handheld away from the computer's infrared port.
- ❑ Make sure that you turn the **Beam Receive** function off.

A local HotSync® operation did not complete successfully

Try each of these in turn:

- ❑ Make sure HotSync Manager is running. If it is, exit, and then restart it.
- ❑ Make sure you selected **Local USB** from the HotSync Manager menu or the Palm Desktop for CLIE software menu.

- ❑ Check the cable connection between the cradle and the USB connector on your computer.
- ❑ Try a lower baud rate setting on the **Local** tab in the Setup dialog.
- ❑ Read the HotSync Log for the user account for which you are performing a HotSync operation.
- ❑ Make sure your CLIE handheld is seated in the cradle correctly.
- ❑ Make sure the gold-plated connectors on the cradle and your CLIE handheld are clean. Use a pencil eraser to clean them.

I cannot perform an IrDA HotSync® operation

- ❑ Make sure the HotSync Manager is running and the Serial Port for local operations is set to the simulated port for infrared communication.
- ❑ On your CLIE handheld, make sure the HotSync application is set to **Local**, with the option **IR to a PC/Handheld**.
- ❑ Make sure the IrDA port of your CLIE handheld is aligned directly opposite to, and within a few inches of, the infrared device of your computer.
- ❑ IrDA HotSync operations do not work if you receive a low battery warning. Check the battery power of your CLIE handheld. Recharge the internal battery.
- ❑ If you have problems using a specific speed, select **Prefs, Connection, IR to a PC/Handheld, Edit**, and then **Details**. Then select a lower speed in the **Details** dialog box.

When I tap the HotSync® button on the cradle, nothing happens in the Palm Desktop for CLIE software and my CLIE handheld times out

- ❑ Check the Palm Desktop for CLIE software **HotSync Setup** options to confirm that you have made the correct settings for local HotSync operations.
- ❑ If you are experiencing intermittent success, try a lower speed setting on the **Local** tab in the Setup dialog box in the HotSync Manager.
- ❑ Close and restart the HotSync Manager on your computer.

- ❑ Make a copy of your **CLIE Handheld** folder. Uninstall, and then reinstall the Palm Desktop software.
- ❑ Turn on your CLIE handheld and tap the icon. Tap the HotSync icon, and then tap **Local**.

When I perform a HotSync® operation, the information does not transfer to the Palm Desktop for CLIE software

- ❑ If you have performed a HotSync operation successfully, but cannot find the data from your CLIE handheld in the Palm Desktop for CLIE software, check to see you have the correct user name selected for viewing data.
- ❑ Click the HotSync Manager and choose **Custom**. Check that all conduits are set to synchronize files.

My CLIE handheld displays the message 'Waiting for sender' when it is near my computer's infrared port

Your computer's infrared port may be set to search automatically for the presence of other infrared devices.

To turn off this option, proceed as follows:

- 1 In the Windows® taskbar, click **Start**.
 - 2 Choose **Settings**.
 - 3 Choose **Control Panel**.
 - 4 Double-click **Infrared**.
 - 5 Click the **Options** tab.
 - 6 Deselect the option **Search for and provide status for devices in range**.
 - 7 Click **Apply** and **OK**.
- ❑ Move your CLIE handheld away from the computer's infrared port.
 - ❑ Make sure that you turn the **Beam Receive** function off.

I want to synchronize my computer with more than one CLIE handheld

- ❑ If the computer running the Palm Desktop for CLIE software synchronizes with more than one CLIE handheld, each handheld must have a unique name. Assign a user name to your CLIE handheld the first time you perform a HotSync® operation.
- ❑ Please be aware that synchronizing more than one CLIE handheld with the same user name causes unpredictable results and, potentially, loss of your personal information.

I cannot cancel a HotSync® operation midway


You may not be able to cancel a job a few second after you start a HotSync® operation via a USB connection. Wait for a few seconds and try again.

I cannot backup some data at a HotSync® operation

Some data is designed not to be backed up with a HotSync® operation.

Connection problems

I have trouble establishing a network connection to my ISP or dial-in server

- ❑ Check the **Expanded Service Connection Progress** messages to identify the point where the connection fails in the log in procedure.
Press the scroll button downwards at any point during log in to display these messages.
- ❑ Check the information in the Network Log so your ISP or your System Administrator can pinpoint where the log in procedure communication fails and why.
To view the **Network Log**, open the **Network Preferences** screen and tap the **Menu**  icon. Tap **Options**, then **View Log**. Tap the up and down arrows of the scroll bar to see the entire Network Log.

Beaming problems

I cannot beam data to another Palm OS PDA

- ❑ Confirm that your CLIE handheld and the other Palm OS PDA are between ten centimeters (approximately 4") and twenty centimeters (approximately 8") apart, and that the path between the two handhelds is clear of obstacles. Beaming distance to other Palm OS PDAs may be different.
- ❑ Move your CLIE handheld closer to the receiving handheld.
- ❑ Make sure that the **Beam Receive** function of the other Palm OS PDA is turned on.

During beaming, I get a message telling me the handheld is out of memory

- ❑ Your CLIE handheld requires at least twice the amount of memory available as the data you are receiving. For example, if you are receiving a 30K application, you must have at least 60K free.
- ❑ Perform a soft reset.

I cannot beam the Address Book data

You cannot beam images to any other Palm OS[®] PDA than a CLIE handheld.

Recharging problems

When I place my CLIE handheld in the cradle, it does not recharge

- ❑ Make sure that your CLIE handheld is well seated in the cradle (the LED lights green).
- ❑ Make sure that your recharger is plugged into an AC outlet that has power.
- ❑ Make sure that you are using the cradle and AC adapter that came with the device.
- ❑ Make sure your CLIE handheld is turned off or it will not fully charge.

Password problems

I forgot the password: My CLIE handheld is not locked

- ❑ You can use **Security** to delete the password, but your CLIE handheld deletes all entries marked as private. However, if you perform a HotSync operation before you delete the password: the HotSync process backs up all entries, whether or not they are marked private. Then, you can follow these steps to restore your private entries:
- ❑ Use the Palm Desktop for CLIE software and the cradle or infrared communication to synchronize your data.
- ❑ Tap **Forgotten Password** in Security to remove the password and delete all private records.
- ❑ Perform a HotSync operation to synchronize your data and restore the private records by transferring them from your computer to your CLIE handheld.

I forgot the password: My CLIE handheld is locked

If you assign a password and lock your CLIE handheld, you must perform a hard reset to continue using your handheld. This means you will lose all the data you saved on your CLIE handheld.

Memory Stick™ problems

I cannot copy or move Memory Stick data to my CLIE handheld

Your CLIE handheld requires at least twice the amount of memory available as the data you are copying/moving. For example, if you are copying/moving a 30K application, you must have at least 60K free.

After inserting the Memory Stick, the message 'Please insert Memory Stick' appears

The Memory Stick™ is not recognized by your CLIE handheld. Try removing it and inserting it again.

If you still cannot perform a HotSync® operation

If you have reviewed items in the troubleshooting list and the HotSync® operation problem persists, review the following:

You cannot perform a HotSync® operation before you install the Palm Desktop for CLIE software on your computer

If you perform a HotSync® operation before you install the CLIE drivers, other drivers may be installed. Make sure you installed the Palm Desktop for CLIE software first and then performed a HotSync® operation.

Do not use a USB hub

If you connect the cradle to your computer via a USB hub, you may not be able to perform a HotSync® operation properly. Make sure to connect the cradle directly to a USB connector on your computer. Some computers have the hub function built into their internal circuitry. Contact your computer manufacturer if the USB connector of your computer is connected to an internal USB hub.

Check the USB driver being used

If you are using or have used a communication device that uses a virtual COM port, its driver may conflict with the driver for your CLIE handheld, preventing a HotSync® operation. Remove the relevant driver or reinstall the driver for your CLIE handheld. Or reinstall all softwares on your computer.

Precautions

This chapter provides information on how to correctly use and charge your CLIE handheld.

Notes on use

Your CLIE handheld is well designed to provide years of reliable use. To make the most of its durability, follow these precautions.

- ❑ Do not scratch or damage your CLIE handheld screen or the Graffiti writing area. Always use the tip of the supplied stylus or a plastic tipped pointer, for example, for tapping on the screen. Do not use a pen, pencil, or any other sharp object on the screen.
- ❑ Your CLIE handheld is not waterproof. Do not expose it to rain or moisture. Make sure that water does not get inside through the crevice around the front button. Treat your CLIE handheld like any other portable electronic equipment.
- ❑ The CLIE handheld screen is made of glass. Do not drop it or subject it to shock. Do not carry your CLIE handheld in your back pocket. If you sit down with your CLIE handheld in the back pocket, it may break the glass of the screen.
- ❑ Avoid using or storing your CLIE handheld in locations subject to:
 - ❑ extremely high temperature, such as inside a car left exposed to the sun, or near a heater.
 - ❑ direct sunlight
 - ❑ high humidity
 - ❑ excessive dust
- ❑ The rubber feet of the cradle may lose their adhesion as they become dirty. If this occurs, wipe the feet with a moistened soft cloth to restore their adhesion.
- ❑ Clean your CLIE handheld with a soft dry cloth.

Notes on charging

Please note the following when charging your CLIE handheld:

- ❑ It takes about four hours to charge for the first time. You can usually use the CLIE handheld for about 15 days (PEG-T425) or 12 days (PEG-T625C), at 30 minutes a day, with a full charge. If you charge your CLIE handheld everyday, it will only take a few minutes. You can save battery power by not using the backlight function and by shortening the auto-shutoff time (the CLIE handheld automatically turns off if you do not use your computer for a certain length of time).
- ❑ When the battery runs down through normal usage, a caution message appears. When this caution is displayed, back up all data with a HotSync® transfer before you charge the CLIE handheld to prevent accidental loss of data.
- ❑ You can operate your CLIE handheld while charging.
- ❑ Even if the battery gradually runs out and your CLIE handheld cannot be turned on, the system safely keeps data for approximately one week. In this case, the system maintains sufficient battery power to keep data. Start charging as soon as you notice you cannot turn it on despite pressing the battery button.
- ❑ If the battery remainder status remains at zero for too long, data may be lost. Make sure you charge the battery as soon as possible.
- ❑ Battery life varies depending on the conditions and environment where you use your CLIE handheld.
- ❑ If the battery in your CLIE handheld is fully discharged, all data stored on the SDRAM (memory) is lost. In such a case, performing a HotSync® operation once the battery is recharged can restore information saved on your computer (from the last HotSync® operation) to your CLIE handheld.
- ❑ When the battery is empty, you do not have to change it. You should charge the battery with the cradle as soon as possible. Do not disassemble your CLIE handheld or take out the battery.

Tips on conserving the battery

- ❑ Turn off the backlight under good lighting conditions. In order to turn off the backlight, see **Adjusting the backlight** section.

- ❑ Change the automatic shut-off time setting so that your CLIE handheld will automatically turn off after a short period of inactivity. For details, see **Setting the automatic shut-off time** section.

When your battery runs out

- ❑ When the battery runs out, a caution message appears on the screen. If this occurs, perform a HotSync® operation to back-up all the data of your CLIE handheld to your computer. Then charge your CLIE handheld using the cradle. This helps prevent accidental data loss.
- ❑ If your CLIE handheld does not turn on when you press the POWER button, charge your CLIE handheld immediately.
- ❑ The remaining battery indicator does not always reflect the actual battery amount. The battery is designed to provide years of service under normal use. To prolong the battery's life, charge it frequently even when it is not fully discharged.

When the remaining battery indicator reads 0.

- ❑ If your battery drains and you leave your CLIE handheld in an uncharged state for an extended period of time, all of the stored data will be erased.
Sony suggests you charge your CLIE handheld frequently.

Specifications


Product

PEG-T425

PEG-T625C

<i>Operating system</i>	Palm OS 4.1	Palm OS 4.1
<i>CPU</i>	Motorola DragonBall VZ 33Mhz	Motorola DragonBall VZ 33Mhz
<i>Power requirements</i>	<ul style="list-style-type: none"> - supplied AC power adapter - DC5.2V (dedicated connector) - built-in and non-removable lithium ion Polymer battery 	<ul style="list-style-type: none"> - supplied AC power adapter - DC5.2V (dedicated connector) - built-in and non-removable lithium ion Polymer battery
<i>Battery life</i>	15 days (based on an average of 30 minutes use per day)	12 days (based on an average of 30 minutes use per day)
<i>Memory</i>	<ul style="list-style-type: none"> - 8MB (SDRAM) - 4MB (FLASH) - User memory range: approx. 7 MB 	<ul style="list-style-type: none"> - 16MB (SDRAM) - 4MB (FLASH) - User memory range: approx. 15 MB
<i>interface</i>	<ul style="list-style-type: none"> - USB cradle - infrared port 	<ul style="list-style-type: none"> - USB cradle - infrared port
<i>Display mode</i>	<ul style="list-style-type: none"> - Monochrome LCD with backlight - 320x 320 pixels (monochrome (16 levels)) 	<ul style="list-style-type: none"> - TFT color LCD with backlight - 320x 320 pixels (colour (65,536 colours))
<i>External input/output</i>	<ul style="list-style-type: none"> - interface connector - IrDA (1.2) - IrDA port for AV Control - Memory Stick slot 	<ul style="list-style-type: none"> - interface connector - IrDA (1.2) - IrDA port for AV Control - Memory Stick slot

Product	PEG-T425	PEG-T625C
Dimensions	width: 71.8 x 118x9.9mm	width: 71.8 x 118x12.5mm
Mass	122g (including the supplied stylus)	138g (including the supplied stylus)
Operating temperature	5°C - 35°C	5°C - 35°C
Other functions	<div>- FM sound synthesizer - ADPCM Sound - Monaural Speaker - Vibration function</div>	<div>- FM sound synthesizer - ADPCM Sound - Monaural Speaker - Vibration function</div>

 The battery life span varies depending on the temperature and conditions of use.
Design and specifications are subject to change without notice.