

SAMSUNG

GT-S8600
user manual



Using this manual

Thank you for purchasing this Samsung mobile device. This device will provide you with high quality mobile communication and entertainment based on Samsung's exceptional technology and high standards.

This user manual has been specially designed to guide you through the functions and features of your device.

Read me first

- Please read all safety precautions and this manual carefully before using your device to ensure safe and proper use.
- The descriptions in this manual are based on the default settings of your device.
- Images and screenshots used in this user manual may differ in appearance from the actual product.
- Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice. Refer to www.samsung.com for the latest version of the user manual.
- Available features and additional services may vary by device, software, or service provider.
- Formatting and delivery of this user manual is based on Bada operating systems and may vary depending on the user's operating system.
- Applications and their functions may vary by country, region, or hardware specifications. Samsung is not liable for performance issues caused by third-party applications.
- Samsung is not liable for performance issues or incompatibilities caused by user editing of registry settings.
- You may upgrade your mobile device's software by accessing www.samsung.com.

- Software, sound sources, wallpapers, images, and other contents provided in this device are licenced for limited use between Samsung and their respective owners. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Samsung is not liable for such copyright infringement by the user.
- Please keep this manual for future reference.

Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:



Warning—situations that could cause injury to yourself or others



Caution—situations that could cause damage to your device or other equipment



Note—notes, usage tips, or additional information




Refer to—pages with related information; for example: ► p. 12 (represents “see page 12”)



Followed by—the order of options or menus you must select to perform a step; for example: In Menu mode, select **Settings** → **Wi-Fi** (represents **Settings**, followed by **Wi-Fi**)



Square brackets—device keys; for example: [] (represents the End key)



Copyright

Copyright © 2011 Samsung Electronics

This user manual is protected under international copyright laws.

No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.

Trademarks

- SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics.
-  and  are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under licence from SRS Labs, Inc.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.
- Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

- DivX[®], DivX Certified[®], and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under licence.

DivX[™]
HD

- All other trademarks and copyrights are the property of their respective owners.



CE 0168 

ABOUT DIVX VIDEO

DivX[®] is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified[®] device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX videos.

DivX Certified[®] to play DivX[®] video up to HD 720p, including premium content

ABOUT DIVX VIDEO-ON-DEMAND

This DivX Certified[®] device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

Contents

Assembling	10
Unpack	10
Install the SIM or USIM card and battery	11
Charge the battery	13
Insert a memory card (optional)	15
Getting started	18
Turn your device on and off	18
Get to know your device	19
Use the touch screen	23
Lock or unlock the touch screen and keys	25
Access menus	26
Launch and manage applications	28
Use widgets	29
Customise your device	30
Enter text	34
Communication	39
Calling	39
Logs	45
Messages	45
Email	50
ChatON	54
IM	54
Social Hub	55

Entertainment	56
Camera	56
Videos	65
Gallery	66
Music	68
Music Hub	72
FM radio	73
Java	76
Personal information	77
Contacts	77
Calendar	80
Task	82
Memo	83
Voice recorder	83
Web	86
Internet	86
Navigation	89
Samsung Apps	90
Synchronise	91
YouTube	92
Google	92
Connectivity	93
Bluetooth	93
Wi-Fi	95
AllShare	98
Mobile network sharing	100
GPS	101

PC connections	103
VPN connections	105
Tools	107
Calculator	107
Caster	107
Clock	108
Desk clock	110
My files	110
Polaris Office	113
Voice cmd	114
Settings	115
Access the Settings menu	115
Flight mode	115
Wi-Fi	115
Network	115
Bluetooth	116
Location	116
Connectivity	116
Sound	117
Display	117
General	118
Accounts	123
Notification	123
Call	123
Messages	124
Email	125
Contacts	127

Calendar	127
Task	128
Memo	128
Internet	128
Gallery	129
Samsung Apps	129
AllShare	129
Communities' upload	129
Search	130
Desk clock	130
Troubleshooting	131
Safety precautions	137
Index	148

Assembling

Unpack

Check your product box for the following items:

- Mobile device
- Battery
- Quick start guide



Use only Samsung-approved software. Pirated or illegal software may cause damage or malfunctions that are not covered by your manufacturer's warranty.




- The items supplied with your device and available accessories may vary depending on your region or service provider.
- You can purchase additional accessories from your local Samsung dealer.
- The supplied accessories perform best for your device.
- Accessories other than the supplied ones may not be compatible with your device.

Install the SIM or USIM card and battery


When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services. To use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card. To install the SIM or USIM card and battery,


- 1 If the device is on, press and hold the Power key and select **Yes** to turn it off.
- 2 Press the button at the bottom of the back cover and slide the back cover until it stops.

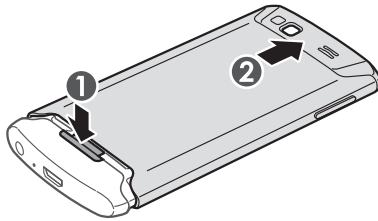


- ⚠ Do not slide the back cover too hard. Doing this may separate the back cover from the device and cause damage to the device.
- Be careful not to damage your fingers when you slide the back cover.

- 3 Insert the SIM or USIM card with the gold-coloured contacts facing down.

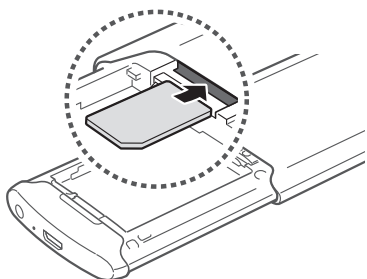


 If you do not insert a SIM or USIM card, you can only use your device's non-network services and some menus.

- 4 Insert the battery.

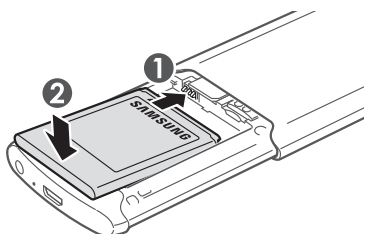

- 5 Slide the back cover to close.

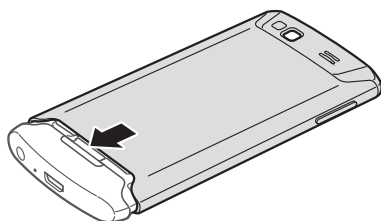

Charge the battery


Before using the device for the first time, you must charge the battery.

You can charge the device with a travel adapter or by connecting the device to a PC with a USB cable.




Use only Samsung-approved chargers and cables. Unauthorised chargers or cables can cause batteries to explode or damage your device.




- When your battery is low, the device will emit a warning tone and display a low battery message. The battery icon  will also be empty. If the battery level becomes too low, the device will automatically power off. Recharge your battery to continue using your device.
- If the battery is completely discharged, you cannot turn on the device, even with the travel adapter connected. Allow a depleted battery to charge for a few minutes before you try to turn on the device.

› Charge with a travel adapter

- 1 Plug the small end of the travel adapter into the multifunction jack.

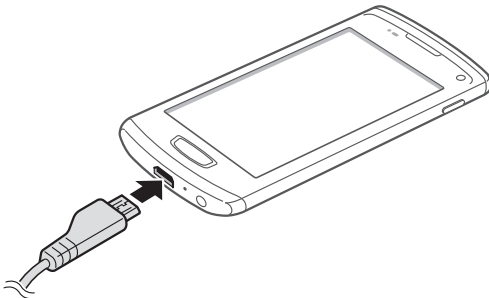

 Connecting the travel adapter improperly may cause serious damage to the device. Any damage caused by misuse is not covered by the warranty.

2 Plug the large end of the travel adapter into a power outlet.



- You can use the device while it is charging, but it may take longer to fully charge the battery.
- While the device is charging, the touch screen may not function due to an unstable power supply. If this happens, unplug the travel adapter from the device.
- While charging, the device may heat up. This is normal and should not affect your device's lifespan or performance.
- If your device is not charging properly, bring your device and the charger to a Samsung Service Centre.

3 When the battery is fully charged, first unplug the travel adapter from the device and then from the power outlet.



Do not remove the battery before removing the travel adapter. Doing this may cause damage to the device.



To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet when not in use to avoid wasting power. The travel adapter should remain close to the socket when in use.

› Charge with a USB cable

Before charging, ensure that your PC is turned on.

- 1 Plug one end (micro-USB) of the USB cable into the multifunction jack.
- 2 Plug the other end of the USB cable into a USB port on a PC.



Depending on the type of USB cable you are using, it may take some time before charging begins.

- 3 When the battery is fully charged, first unplug the USB cable from the device and then from the PC.

Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your device accepts microSD™ or microSDHC™ memory cards with maximum capacities of 32 GB (depending on memory card manufacturer and type).




Samsung uses approved industry standards for memory cards, but some brands may not be fully compatible with your device. Using an incompatible memory card may damage your device or the memory card and can corrupt data stored on the card.



- Your device supports only the FAT file structure for memory cards. If you insert a card formatted with a different file structure, your device will ask you to reformat the memory card.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

- 1 Press the button at the bottom of the back cover and slide the back cover until it stops.
- 2 Remove the battery.
- 3 Insert a memory card with the gold-coloured contacts facing down.

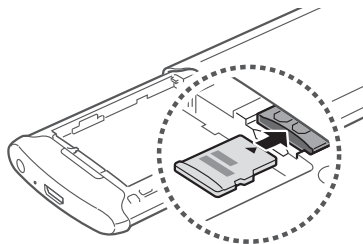

- 4 Insert the battery.
- 5 Slide the back cover to close.

➤ Remove the memory card

- 1 Press and hold the Power key and select **Yes** to turn it off.
- 2 Press the button at the bottom of the back cover and slide the back cover until it stops.
- 3 Remove the battery.
- 4 Push the memory card gently until it disengages from the device.
- 5 Remove the memory card.
- 6 Insert the battery.
- 7 Slide the back cover to close.

› Format the memory card

Formatting your memory card on a PC may cause incompatibilities with your device. Format the memory card only on the device.

In Menu mode, select **Settings** → **General** → **Memory** → **Format memory card** → **Yes**.



Before formatting the memory card, remember to make backup copies of all important data stored on your device. The manufacturer's warranty does not cover loss of data resulting from user actions.

Getting started

Turn your device on and off

To turn on your device, press and hold the Power key. If you turn on your device for the first time, follow the on-screen instructions to set up your device.


To turn off your device, press and hold the Power key and select **Yes**.








- Follow all posted warnings and directions from authorised personnel in areas where the use of wireless devices is restricted, such as aeroplanes and hospitals.
- To use your device's non-network services only, switch to Flight mode. In Menu mode, select **Settings** and drag the slider next to **Flight mode**.

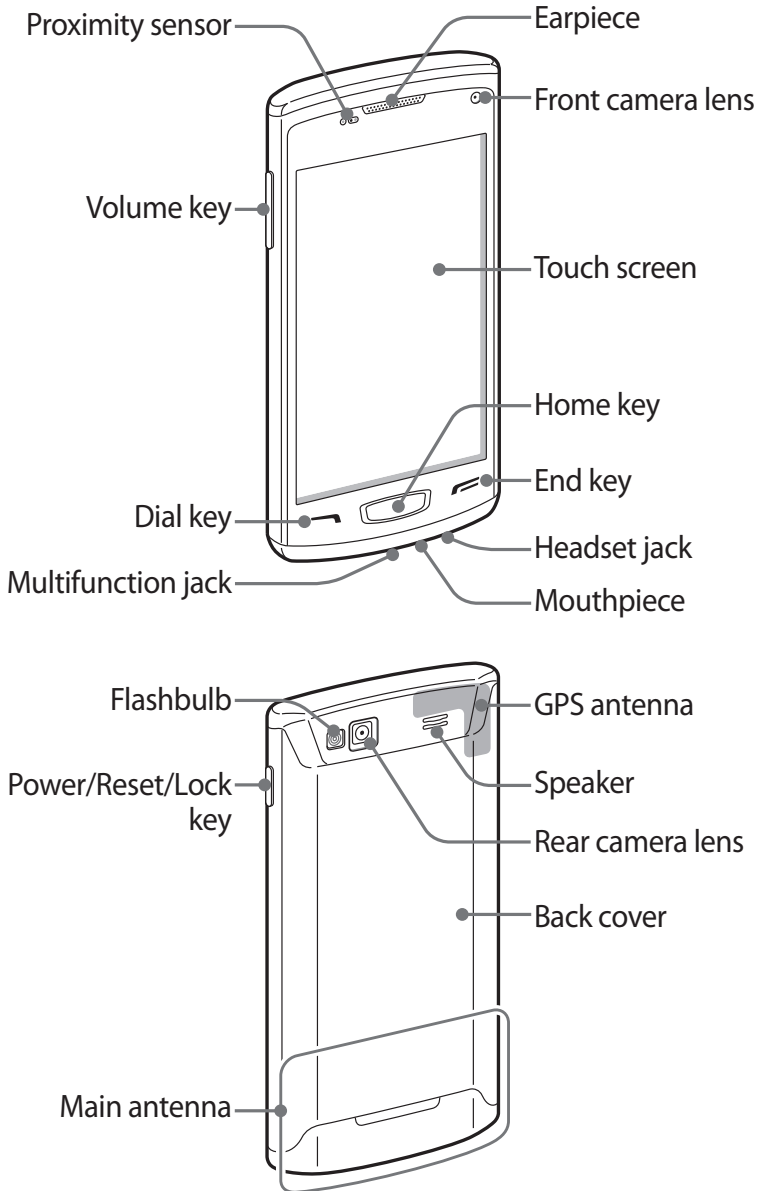Get to know your device

> Device layout



› Keys

Key	Function
 Power/ Reset ¹ / Lock	Turn the device on (press and hold); Reset the device (press and hold for 8-10 seconds and release); Lock the touch screen.
 Dial	Make or answer a call; In Idle mode, retrieve logs of your calls.
 Home	In Idle mode, switch between the widget panel and the idle screen; Return to the idle screen; Launch the task manager to view all active applications (press and hold); Launch the voice command application (press twice).
 End	End a call; While using an application, return to the idle screen or the main menu.
 Volume	Adjust the device's volume.

1. If your device has fatal errors or hang-ups, or freezes, you may need to reset the device to regain functionality.


› Idle screen











When the device is in Idle mode, you will see the idle screen. From the idle screen, you can view your device's status and access applications.

















The idle screen has multiple panels, and you can add new panels to the idle screen. ► p. 30









Scroll left or right to a panel of the idle screen. You can also select a dot on the top of the screen to move directly to the corresponding screen.

› Indicator icons

 Icons shown on the display may vary depending on your region or service provider.

Icon	Definition
	No signal
	Signal strength
	Flight mode activated
	Network searching
	GPRS network connected
	EDGE network connected
	UMTS network connected
	HSDPA network connected
	Wi-Fi connected
	WLAN Direct connected

Icon	Definition
	Call missed
	Synchronised with a web server
	Bluetooth activated
	Bluetooth hands-free car kit or headset connected
	Virtual Private Network (VPN) connected
	Voice call in progress
	Video call in progress
	SOS message feature activated
	Call diverting activated
	Synchronising with PC
	Wi-Fi tethering activated
	Memory card inserted
	New text or multimedia message
	New email message
	New voice mail message
	Alarm activated

Icon	Definition
	Roaming (outside of normal service area)
	Music playback in progress
	Music playback paused
	Silent & vibration mode activated
	Silent mode activated
	Vibration mode activated
	Current time
	Battery power level

› Notifications panel

In Idle mode or while using an application, tap the indicator icons area at the top of the screen and drag your finger down to open the notifications panel.

Select icons to activate or deactivate the WLAN and Bluetooth features. You can also turn on or off the device's volume and check new messages and alerts.

Use the touch screen

Your device's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.




- To avoid scratching the touch screen, do not use sharp tools.
- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
- Do not allow the touch screen to come into contact with water. The touch screen may malfunction in humid conditions or when exposed to water.



- For optimal use of the touch screen, remove the screen protection film before using your device.
- Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches of sharp tools, such as a stylus or pen.

Control your touch screen with the following actions:


- Tap: Tap once with your finger to select or launch a menu, option, or application.
- Tap and hold: Tap an item and hold it for more than 2 seconds to open a pop-up option list.
- Drag: Tap and drag your finger up, down, left, or right to move to items on lists.
- Double-tap: Tap twice quickly with your finger to zoom in or out while viewing photos or web pages.
- Drag and drop: Tap and hold your finger on an item, and then drag your finger to move the item.

- **Flick:** Flick the screen quickly to activate an application.
 - **Area zoom:** Place two fingers on the screen and pull them apart to zoom in or squeeze them together to zoom out.
-  • Your device turns off the touch screen when you do not use the device for a specified period. To turn on the screen, press the Power key or the Home key.
- You can also adjust the backlight time. In Menu mode, select **Settings** → **Display** → **Backlight time**.
 - Some lists have an index along the right side. Tap a letter to jump to items starting with that letter. Drag your finger along the index to quickly scroll through the list.

Lock or unlock the touch screen and keys



You can lock the touch screen and keys to prevent any unwanted device operations.

To lock, press the Power key. To unlock, press the Power key or the Home key and flick the window with your finger.

-  You can activate the device lock feature to prevent others from using or accessing your personal data and information saved in your device. ► p. 32

Access menus

To access your device's menus,

- 1 In Idle mode, select **Menu** to access Menu mode.
 - 2 When the help screen for adding shortcuts to the idle screen appears, select **OK**.
If you do not want to see the screen again, select the check box next to **Do not show again**.
 - 3 Scroll left or right to a screen.
You can also select a dot on the top of the screen to move directly to the corresponding screen.
 - 4 Select a menu or application.
 - 5 Select  to return to the previous screen (if available); press the Home key to return to idle screen.
When you return to the first idle screen, the help screen for editing the idle screen panels appears. If you do not want to see the screen again, select the check box next to **Do not show again**.
-  • Your device has a built-in motion sensor that detects its orientation. If you rotate the device while using some features, the interface will automatically switch to landscape view. To set the interface to keep the orientation when you rotate the device, open the notifications panel and select **Auto rotation**.
 - While using the device, you can capture an image of a screen by pressing the Home key and the Power key simultaneously. The image will be saved in **My files** → **Images** → **Screen capture**.

› Organise applications

You can reorganise the applications by changing their order or grouping them into categories to suit your preferences and needs.


To add a shortcut to the idle screen,



- 1 In Menu mode, tap and hold an application.
- 2 Drag the application icon to an idle screen panel at the bottom of the screen.

To change the order of applications,

- 1 In Menu mode, tap and hold an application.
- 2 Drag an application icon to the location you want.
You can move an application icon to another screen.

To add a folder,

- 1 In Menu mode, tap and hold the screen.
- 2 Select  at the top left of the screen.
- 3 Drag an application icon to the folder.
Repeat this step to add more applications.
- 4 Select the new folder.
- 5 Select the name field, enter a name for the folder, and select **Save**.

 Before you delete a folder, you need to move the applications in the folder to the screen. Then, select .

To change the order of the screens,

- 1 In Menu mode, place your two fingers on the screen and pinch.
- 2 Tap and hold the thumbnail of a screen and drag it to the location you want.

› Add new screens

- 1 In Menu mode, tap and hold an application.
- 2 Tap and hold an application icon.
- 3 Drag the application icon to an empty screen.
The new screen is added.

Launch and manage applications

› Launch multiple applications


Your device allows you to multi-task by running multiple applications at the same time.

To launch multiple applications, press the Home key while using an application to return to Idle mode, and then select an application to launch.

› Use the task manager

You can manage multiple applications with the task manager. To launch the task manager,

- 1 Press and hold the Home key. The icons of active applications appear.

- 2 Control active applications as follows:
 - To switch between applications, select one from the icons of active applications.
 - To close an application, select .
 - To close all active applications, select **End all applications** → **Yes**.

Use widgets

Widgets are small applications that provide convenient functions and information.



- Some of your widgets connect to web services. Using a web-based widget may incur additional charges.
- Available widgets may vary depending on your region or service provider.

› Open the widget panel

To open the widget toolbar and access widgets,

- 1 In Idle mode, press the Home key to open the widget panel.
- 2 When the help screen for customising the widget panel, select **OK**.
If you do not want to see the screen again, select the check box next to **Do not show again**.
- 3 Scroll up or down on the widget panel to find the widget you want to use.
- 4 Select the widget to launch.

› Organise the widget panel

You can reorganise the widgets by changing their order and activating or deactivating them.


- 1 In Idle mode, press the Home key to open the widget panel and tap and hold the screen.
- 2 To activate or deactivate a widget, drag the slider next to the widget.
To change the order of the widgets, tap and hold a widget and drag it the location you want.

Customise your device

Get more from your device by customising it to match your preferences.

› Add new panels to the idle screen

You can add new panels to the idle screen to organise widgets according to your preferences and needs.

- 1 In Idle mode, place your two fingers on the screen and pinch.
- 2 Select  to add new panels to the idle screen.



Select  to remove a panel from the idle screen.

› Set the current time and date

- 1 In Menu mode, select **Settings** → **General** → **Date and time**.
- 2 Drag the slider next to **Automatic update** to deactivate auto time updates.

- 3 Select **Time zone** → your time zone.
- 4 Enter the current time and date, and set the time and date format.

› Adjust the volume of the ringtones

Press the Volume key to adjust the ringtone volume.

› Change your ringtone

- 1 In Menu mode, select **Settings** → **Sound** → **Ringtone**.
- 2 Select a ringtone from the list.

› Switch to Silent mode

To mute or unmute your device, do one of the following:

- In Menu mode, select **Keypad**, and then tap and hold #.
- Open the notifications panel from the top of the screen and select **Sound & vibration**.
- In Menu mode, select **Settings** → **Sound** and drag the slider next to **Sound**.

› Select a wallpaper for the idle screen

- 1 In Menu mode, select **Settings** → **Display** → **Wallpaper**.
- 2 Select an image folder → an image.
- 3 Select **Set**.



Samsung is not responsible for any use of default images or wallpapers provided on your device.

› Adjust the brightness of the display


- 1 In Menu mode, select **Settings** → **Display**.
- 2 Drag the slider next to **Auto Brightness**.
- 3 Drag the slider to adjust the level of brightness.

 The brightness level of the display will affect how quickly the device consumes battery power.


› Lock your device

You can lock your device by activating the device password.

- 1 In Menu mode, select **Settings** → **General** → **Security**.
- 2 Drag the slider next to **Phone lock**.
- 3 Enter a new 4- to 8-digit password and select **OK**.
- 4 Enter the new password again and select **OK**.

 The first time you access a menu that requires a password, you will be prompted to create and confirm a password.

Once the device lock is enabled, you must enter the password each time you turn on the device or unlock the touch screen and keys.

-  • If you forget your password, bring your device to a Samsung Service Centre to reset it.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

› Lock your SIM or USIM card

You can lock your device by activating the PIN supplied with your SIM or USIM card.

- 1 In Menu mode, select **Settings** → **General** → **Security**.
- 2 Drag the slider next to **PIN lock**.
- 3 Enter the PIN of your SIM or USIM card and select **OK**.

Once the PIN lock is enabled, you must enter the PIN each time you turn on the device.



- If you enter an incorrect PIN too many times, your SIM or USIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM or USIM card.
- If you block your SIM or USIM card by entering an incorrect PUK, bring the card to your service provider to unblock it.

› Activate the Find my mobile feature

When someone inserts a new SIM or USIM card in your device, the Find my mobile feature will automatically send the contact number to specified recipients to help you locate and recover your device.

You need a Samsung account to track and control the device remotely from the web.

- 1 In Menu mode, select **Settings** → **General** → **Security**.
- 2 Select **Find my mobile**.
- 3 Enter your email address and password for your Samsung account and select **Sign in**.
To create a Samsung account, select **Sign up**.


- 4 Drag the slider next to **SIM change alert**.
- 5 Select **Add recipients** to open the recipient list.
- 6 Enter a phone number including a country code (with +).
- 7 When you are finished setting the recipients, select **Done**.
- 8 To add more recipients, repeat steps 5-7.
- 9 When you are finished, select **Save**.
- 10 Select **Sender** and enter a sender's name.
- 11 Select **Done**.





Enter text


You can enter text by selecting characters on the virtual keypad or by inputting handwriting on the screen.

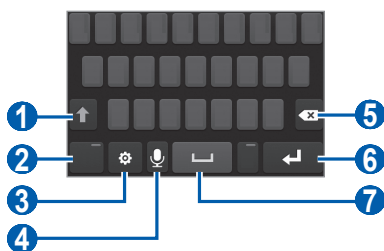› Change the text input method

When you tap the text input field, the input panel with the QWERTY keyboard appears by default.



Number	Function
1	Change case.
2	Switch between Number/Symbol mode and ABC mode.
3	Access the keyboard settings. If you set two or more input languages, this icon will change to  . Select  to change the input language. Tap and hold  to access the keyboard settings.
4	Enter text by voice.  This feature may be unavailable depending on the selected input language.
5	Clear your input.
6	Start a new line.
7	Insert a space.

To change the text input method, select  and select **Keyboard type** → a text input method.




Option	Function
Qwerty keyboard	Select characters on the QWERTY keyboard.
3 X 4 keypad	Select characters on the traditional 3x4 keypad.
Handwriting	Write in the input box.
Handwriting full screen	Write anywhere on the screen.

› Enter text using input methods




- 1 Change the text input method.
- 2 Change the text input mode.
- 3 Select the appropriate virtual keys or write on the screen to enter your text.




When entering text, rotate the device to display the QWERTY keyboard on the wider screen. Select the virtual keys as necessary to enter your text.


When entering English text, select  and drag a slider next to **Predictive text**. Enter the first two letters of a word and then the alternate word list appears. Select  or  and an alternate word from the list that appears.

When entering text with the 3x4 keypad, you can use the following modes:


Mode	Function
ABC	Select an appropriate virtual key until the character you want appears on the display.
T9 (Predictive text)	<ol style="list-style-type: none">1. In ABC mode, select T9 (The green dot appears).2. Select the appropriate virtual keys to enter an entire word.3. When the word displays correctly, select  to insert a space. If the correct word does not display, select  or  and an alternative word from the list that appears. <p>Adding words to the T9 dictionary If you cannot find a word in the alternative word list, you can add the word to the T9 dictionary. Select Add word at the right end of the alternative word list.</p>

Mode	Function
Number	<ol style="list-style-type: none"> 1. Select 123 to switch to Number mode. 2. Select an appropriate virtual key to enter a number or a symbol.  You can enter numbers by tapping and holding a virtual key in ABC or T9 mode.
Symbol	<ol style="list-style-type: none"> 1. Select ?#+ to switch to Symbol mode. 2. Select ◀ or ▶ to scroll to a symbol set you want. 3. Select an appropriate virtual key to enter a symbol.

When Predictive text mode is activated, you can use Continuous input mode.




- 1 Select  and drag the slider next to **Continuous input**.
- 2 Select the first character of a word and drag your finger to the second character without releasing the finger from the screen.
- 3 Continue until you have finished the word.



- 4 Release the finger on the last character.
- 5 When the word displays correctly, select  to insert a space. If the correct word does not display, select an alternative word from the list that appears.
- 6 Repeat steps 2-5 to complete your text.

› Copy and paste text

While you are entering text, you can use the copy and paste feature to use text in other applications.

- 1 Tap and hold the text input field until  appears.
- 2 Select **Select** from the option list.
- 3 Drag  or  to select the text you want.
- 4 Select **Copy** or **Cut** to copy and paste, or cut and paste the text onto the clipboard.
- 5 In another application, tap and hold the text input field.
- 6 Select **Paste** to insert the text from the clipboard into the text input field.

Communication

Calling

Learn to use calling functions, such as making and answering calls, using options available during a call or customising and using call-related features.





› Make or answer a call

You can use the buttons or the touch screen when you make, accept, end, or reject calls.




- When you turn on the proximity sensor, your device automatically turns off and locks the touch screen to prevent accidental inputs when you hold the device near your face. ► p. 124
- Static electricity discharged from your body or clothing may interfere with the proximity sensor during a call.







Make a call

- 1 In Menu mode, select **Keypad** and enter an area code and a phone number.
- 2 Select  or press [] to dial the number.
For a video call, select .
- 3 To end the call, press [].




- Use the phonebook to save numbers you dial frequently. ► p. 78
- To quickly access the call log to redial numbers you dialled recently, press [].
- Use the voice command feature to dial by voice.
► p. 114

Answer a call



- 1 When a call comes in, press [] or drag  right.
 When the device is ringing, press the Volume key to mute the ringtone.
- 2 For a video call, press []. The front camera lens is activated to show your image.
 You can set whether to show your live image or preset image. To change the setting, in Menu mode, select **Settings** → **Call** → **Own video in received call**.
- 3 To end the call, press [].

Reject a call

When a call comes in, press [] or drag  left. The caller will hear a busy tone.

-  • You can set up a list of numbers to reject incoming calls automatically. ► p. 43
- You can send a message when you reject incoming calls. To set messages, in Menu mode, select **Settings** → **Call** → **Reject call with message**.

Call an international number

- 1 In Menu mode, select **Keypad** and tap and hold **0** to insert the + character.
- 2 Enter the complete number you want to dial (country code, area code and phone number), and then press [] or select  to dial the number.



› Use a headset

By plugging a headset into the device, you can answer and control calls hands-free:

- To answer a call, press the headset button.
- To reject a call, press and hold the headset button.
- To place a call on hold or retrieve a held call during a call, press and hold the headset button.
- To end a call, press the headset button.

› Use options during a voice call

You can use the following options while a voice call is in progress:

- To adjust the voice volume, press the Volume key up or down.
- To place a call on hold, select . To retrieve a held call, select .
- To activate the speakerphone feature, select **Speaker**.









In noisy environments, you may have difficulty hearing some calls while using the speakerphone feature. For better audio performance, use the normal device mode.

- To turn off the microphone so that the other party cannot hear you, select **Mute**.
- To listen and talk to the other party via a headset, first plug a headset into the device and select **Audio source**.
- To dial a second call, place the first call on hold and then dial a new number.


- To answer a second call, select **Accept + Hold Active call** or **Accept + End Active call**.
- To switch between the two calls, select **Swap**.
- To end the call on hold, select **Swap** → **End call**.
- To make a multiparty call (conference call), make or answer a second call and select **Join** when connected to the second party. Repeat to add more parties. You must subscribe to the multiparty call service to use this feature.


› Use options during a video call

You can use the following options while a video call is in progress:

- To hide your image from the other party, select .
- To turn off the microphone so that the other party cannot hear you, select .
- To capture the other party's image, select  → **Capture**.
- To record a video call, select  → **Record video**.
- To listen and talk to the other party via a headset, first plug a headset into the device and select  → **Switch to headset**.
- To switch between the front and rear camera lens, select .

› View and dial missed calls

Your device will display the missed call icon () when you have missed calls.

Open the notifications panel and select a missed call. Select the call from the call log and press [] to dial.

› Use additional features

You can use various other call-related features, such as auto rejection, Fixed Dialling Number (FDN) mode, call diverting or waiting.

Set auto rejection

Use auto rejection to reject calls from certain numbers automatically. To activate auto rejection and set up the reject list,

- 1 In Menu mode, select **Settings** → **Call** → **Auto reject**.
- 2 Select **Add**.
- 3 Select **Criteria** → an option.
- 4 Select the number input field, enter a number to reject, and select **Save**.
- 5 To add more numbers, repeat steps 2-4.

Use Fixed Dialling Number (FDN) mode

In FDN mode, your device will restrict outgoing calls, except for the numbers stored in the SIM or USIM card. To activate FDN mode,

- 1 In Menu mode, select **Settings** → **General** → **Security**.
- 2 Drag the slider next to **Fixed dialling mode**.
- 3 Enter the PIN2 supplied with your SIM or USIM card and select **OK**.

Set call diverting

Call diverting is a network feature to send incoming calls to another number that you specify. You can set this feature separately for several conditions when you are not able to answer calls, such as when you are already on the phone or when you are outside of the service area.

- 1 In Menu mode, select **Settings** → **Call** → **Call forwarding**.
- 2 Drag the slider next to a forwarding type you want.
- 3 Enter a number to which calls will be forwarded and select **Save**.
Your setting will be sent to the network.

Set call waiting

Call waiting is a network feature to alert you of an incoming call while you are on a previous call. This feature is available only for voice calls.

- 1 In Menu mode, select **Settings** → **Call** → **Call waiting**.
- 2 Drag the slider next to **Call waiting**.
Your setting will be sent to the network.

Logs

Learn to view and manage logs of calls you have dialled, received, or missed.

› View call logs

You can view logs of your calls filtered by their types.

1 In Menu mode, select **Logs**.

2 Select **All** or **Missed**.



From the call logs, you can make a call or send a message directly to a contact. Flick the contact to the right or left and select an option.

3 Select a log to view its details.



From the detail view, you can dial the number, send a message to the number, or add the number to the phonebook or reject list.


Messages

Learn to create and send text (SMS) or multimedia (MMS) messages, and view or manage messages you have sent or received.



You may incur additional charges for sending or receiving messages while outside your home service area. For details, contact your service provider.

› Send a text message

- 1 In Menu mode, select **Messages** → .
- 2 Add recipients for your message.
 - Enter phone numbers manually. Separate multiple numbers by inserting a semicolon or comma or by selecting Enter.
 - Select phone numbers from the lists by selecting the options under the recipient input field.
- 3 Select the text input field and enter your message text.
- 4 Select **Send** to send the message.

› Set up an MMS profile

To send and receive multimedia messages, you must activate a connection profile for connecting to the MMS server. In addition to profiles that are preset by your service provider, you can add your own connection profile.


- 1 In Menu mode, select **Settings** → **Network** → **Connections** → **Yes**.
- 2 Select **New**.
- 3 Customise the parameters for the connection profile.

Option	Function
Set name	Enter the name for the profile.
Access name	Enter the access point name.
Auth type	Select an authentication type.
User ID	Enter your user name.
Password	Enter your password.

Option	Function
Protocol	Select a network protocol.
Home URL	Enter the MMS server address.
Proxy address	Enter the address of the proxy server.
Linger time (sec)	Enter how long the device will wait for responses from the network.
Advanced settings	Customise IP and DNS addresses and traffic class.


- 4 When you are finished, select **Save**.
- 5 In Menu mode, select **Settings** → **Network** → **Application profiles** → **Multimedia messages**.
- 6 Select a connection profile.

► Send a multimedia message

- 1 In Menu mode, select **Messages** → .
- 2 Add recipients for your message.
 - Enter phone numbers or email addresses manually. Separate multiple numbers or addresses by inserting a semicolon or comma or by selecting Enter.
 - Select phone numbers or email addresses from the lists by selecting the options under the recipient input field.



When you enter an email address, the device will convert the message as a multimedia message.

- 3 Select the text input field and enter your message text.
- 4 Select  and attach a file. You can select a file from the file list or capture a photo or video.
- 5 Select **Send** to send the message.

› View a text or multimedia message

- 1 In Menu mode, select **Messages**.
Your messages are grouped into message threads by contact, like a messenger.
- 2 Select a contact.
- 3 For a multimedia message, select a message to view the details.

› Listen to voice mail messages

If you have set missed calls to be diverted to the voice mail server, callers may leave voice messages when you do not answer incoming calls. To access your voice mail inbox and listen to voice mail messages,

- 1 In Menu mode, select **Keypad**, and then tap and hold **1**.
- 2 Follow the instructions from the voice mail server.



You must save the voice mail server number before accessing the server. Your service provider can give you the number.

› Create a folder to manage messages

Learn to create folders to manage your messages according to your preferences and needs.

- 1 In Menu mode, select **Messages**.
- 2 Select **Advanced** → **Add folder**.
- 3 Enter a new folder name and select **Save**.

You can now move your important messages from the inbox or sentbox to a custom folder for easier management or to protect them from accidental deletion.

› Send an SOS message

In case of an emergency, you can ask for help by sending an SOS message to specified recipients.



This feature may be unavailable depending on your region or service provider.

- 1 In Menu mode, select **Settings** → **Messages** → **SOS messages**.
- 2 Drag the slider next to **Activation** to activate the SOS messaging feature.
- 3 Select **Recipients** to open the recipient list.
- 4 Select **Add recipients** and add recipients for your message and select **Done**.
 - Enter phone numbers manually.
 - Select phone numbers from the lists by selecting the options under the recipient input field.
- 5 When you are finished setting the recipients, select **Save** → **Yes**.
- 6 Select **Repeat** and select the number of times to repeat the SOS message.

To send an SOS message, the touch screen and keys must be locked. Press the Volume key 4 times.



Once you send an SOS message, all device functions will be suspended until you unlock the touch screen by pressing and holding the Power key .

Email

Learn to create and send email messages, and view or manage messages you have sent or received.

› Set up an email account and profile

In addition to the email account predefined by your service provider, you can add your personal email accounts. Also, you can add your own connection profile for using email services.

Set up an email account

1 In Menu mode, select **Email** → **Others**.

To set up an account for a specific email service, select the service name.

2 Customise the settings for the account by following the screens:

Option	Function
Account name	Enter a name for the account. This option is available only when setting up a new email account.
Email address	Enter your email address.
User name	Enter your user name for the account.
Password	Enter your password for the account.
SMTP server	Enter the address of the SMTP server (outgoing server).
SMTP port	Enter the port number of the SMTP server.


Option	Function
Secure connection	Select a security protocol for the SMTP server.
Incoming server type	Select the type of the incoming server (POP3 or IMAP4).
POP3 server/IMAP4 server	Enter the address of the incoming server.
POP3 port/IMAP4 port	Enter the port number of the incoming server.
Secure connection	Select a security protocol for the incoming server.

Select an email profile

- 1 In Menu mode, select **Settings** → **Network** → **Connections** → **Yes**.
- 2 Select **New**.
- 3 Customise the network settings. ► “Set up an MMS profile” (p. 46)
- 4 In Menu mode, select **Settings** → **Network** → **Application profiles** → **Email**.
- 5 Select a connection profile.

► Send an email message

- 1 In Menu mode, select **Email** → **Compose**.
You can select **Accounts** to view other accounts.

- 2 Add recipients for your message.
 - Enter email addresses manually. Separate multiple addresses by inserting a semicolon or comma or by selecting Enter.
 - Select email addresses from the lists by selecting the options under the recipient input field.
- 3 Select the Cc/Bcc field and add more recipients.
- 4 Select  and attach a file.
You can select a file from the file list.
- 5 Select the subject field and enter a subject.
- 6 Select the text input field and enter your email text.
- 7 Select **Send** to send the message.

› View an email message

- 1 In Menu mode, select **Email**.
The inbox screen appears.
- 2 Select an email message.

› Synchronise emails with the Exchange server

After configuring sync settings, you can synchronise your emails with the Exchange server. To configure the Exchange server,


- 1 In Menu mode, select **Email** → **Accounts** → **Settings** → **Email accounts** → **Add account** → **Exchange ActiveSync**.

- 2 Customise the settings for the Exchange server by following screens:

Option	Function
Email address	Enter your email address for the Exchange server.
User name	Enter your user name for the Exchange server.
Password	Enter your password for the Exchange server.
Domain	Enter the domain of your email address.
Server URL	Enter the URL of the Exchange server.
Use SSL	Set to use the SSL (Secure Sockets Layer) protocol to increase security.

- 3 Select **Login**.
- 4 After customising the server setting, select the dot next to data types to synchronise.
For synchronising emails and calendar events, you can set the sync interval.

To synchronise your emails,

- 1 In Menu mode, select **Email** → the Exchange server account.
- 2 Select .

ChatON

Learn to chat with your friends and family in ChatON. This is a global communication service based on mobile phone numbers, regardless device type or operating system. While having a conversation with your buddies, you can send various multimedia files and data, such as photos, videos, and contact numbers.

- 1 In Menu mode, select **ChatON**.
- 2 If you are launching this application for the first time, read the terms and conditions and select **Agree**.
- 3 Follow the on-screen instructions to complete the account setup.
- 4 Chat with friends and family instantly.

IM

Learn to chat with friends and family from any of the universal instant messengers.

- 1 In Menu mode, select **IM**.
- 2 Select a messenger.
- 3 Enter your user name and password to sign in.
- 4 Chat with friends and family instantly.

Social Hub

Learn to access Social Hub™, the integrated communication application for email, messages, instant messages, contacts or calendar information. Visit socialhub.samsungapps.com for more details.

- 1 In Menu mode, select **Social Hub**.
- 2 If you are launching this application for the first time, add an account or skip it for a later setup.
- 3 Select a category at the top of the screen.
- 4 Check and use contents delivered from Social Hub.

Entertainment

Camera


Learn how to capture and view photos and videos. You can take photos at resolutions up to 2560 x 1920 pixels (5 megapixels) and videos at resolutions up to 1280 x 720 pixels. Photos are saved in jpg format and videos are saved in mp4 format.




- The camera automatically turns off when you do not use it for a specified period.
- The memory capacity may differ depending on the shooting scene or shooting conditions.

› Capture a photo

- 1 In Menu mode, select **Camera**.
- 2 Aim the lens at the subject and make any necessary adjustments.

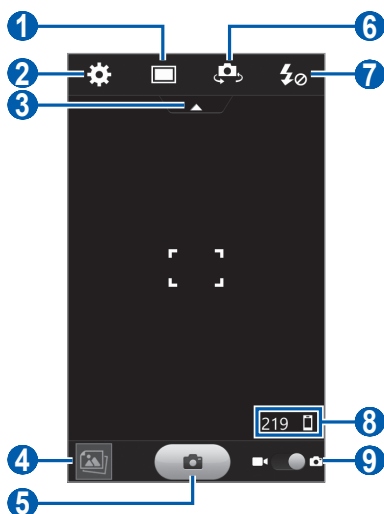


Number	Function
1	Change the shooting mode and scene mode.
2	Change the camera settings.
3	Hide or display the icons in the viewfinder.
4	View the photo or video you captured or recorded last.
5	Capture a photo.
6	Switch between the front and rear camera lenses.
7	Change the flash setting; You can manually turn the flash on or off or set the camera to automatically use the flash when needed.
8	Check the camera status and settings. <ul style="list-style-type: none"> • 219 : Number of photos you can take (according to available memory) •  : Default storage location
9	Switch to the camcorder.

3 Press the Volume key to zoom in or out.





The zoom function may be unavailable when shooting in the highest resolution.

4 Tap where you want to focus on the preview screen. The focus frame moves to the place you tap and changes to green when the subject is in focus.

5 Select  to take a photo. The photo is saved automatically.



After taking photos, select the image viewer icon to view the captured photos.

- To view more photos, scroll left or right.
- To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. You can also double-tap the screen.
- To send a photo to others, select **Share**.
- To delete a photo, select **Delete** → **Yes**.
- To set a photo as wallpaper or a caller ID image for a contact, select **Set as**.
- To start a slideshow, select . Tap the screen to stop the slideshow.
- To view a photo on other devices, select .

▶ Capture a photo by using preset options for various scenes



Your camera provides you with predefined settings for various scenes. You can simply select the proper mode for your shooting condition and subjects.

For example, when you take photos at night, select the night mode that uses an extended exposure. When you take photos of people with the light source behind them, select the against light mode, which reduces the contrast between light and dark areas.

- 1 In Menu mode, select **Camera**.
- 2 Select  → a scene under **Panorama**.
- 3 Make any necessary adjustments.
- 4 Select  to take a photo.



› Capture a photo in Self shot mode

You can take photos of yourself conveniently using the front camera lens.

- 1 In Menu mode, select **Camera**.
- 2 Select .
- 3 Make any necessary adjustments.
- 4 Select  to take a photo.


› Capture a photo in Smile shot mode



Your camera can recognise people's faces and help you take photos of their smiling faces.

- 1 In Menu mode, select **Camera**.
- 2 Select  → **Smile shot**.
- 3 Make any necessary adjustments.
- 4 Aim the camera lens at your subject and select .
Your device recognises people in an image and detects their smiles. When the subject smiles, the device automatically takes a photo.

› Capture a panoramic photo

You can take wide panoramic photos using Panorama shooting mode. This mode is convenient for photographing landscapes.


- 1 In Menu mode, select **Camera**.
- 2 Select  → **Panorama**.
- 3 Select a direction.

- 4 Make any necessary adjustments.
- 5 Select  to take the first photo.
- 6 Slowly move the device in the direction you selected and align the green frame with the viewfinder.
When you have aligned the green frame and viewfinder, the camera will automatically take the next photo.
- 7 Repeat step 6 to complete the panoramic photo.
- 8 Select  to save the panoramic photo.

► Customise camera settings


Before taking a photo, select  to access the following options:

Option	Function
Exposure value	Adjust the exposure value.
Focus mode	Take close-up photos or set the camera to focus on the subject.
Resolution	Change the resolution option.
Auto contrast	Automatically adjust contrast between your subject and background.
Timer	Select the length of the delay before the camera takes a photo.
White balance	Adjust the colour balance according to lighting conditions.
ISO	Adjust the sensitivity of the camera imaging sensor.

Option	Function
Effects	Apply a special effect, such as sepia or black and white tones.
Exposure metering	Select a type of exposure metre.
Blink detection	Set the camera to alert you when people close their eyes.
Guidelines	Display guidelines on the preview screen.
Review	Set the camera to display the captured image.
GPS	<p>Set the camera to include location information for your photos.</p> <p> To improve GPS signals, avoid shooting in locations where the signal may be obstructed, such as between buildings or in low-lying areas, or in poor weather conditions. Alternately, customise the GPS connection settings to improve GPS reception. ► p. 102</p>
Storage	Select a memory location for storing captured photos.
Reset settings	Reset menus and shooting options.

› Record a video


- 1 In Menu mode, select **Camera**.
- 2 Drag the slider to the camcorder to switch to the camcorder.
- 3 Aim the lens at the subject and make any necessary adjustments.

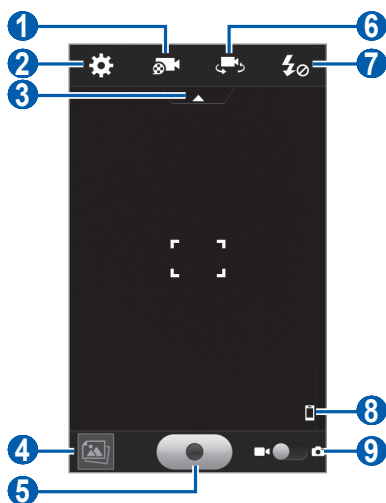

Number	Function
1	Change the recording mode.
2	Change the camcorder settings.
3	Hide or display the icons in the viewfinder.
4	View the photo or video you captured or recorded last.
5	Record a video.
6	Switch between the front and rear camera lenses.

Number	Function
7	Change the flash setting.
8	View the default storage location.
9	Switch to the camera.


4 Press the Volume key to zoom in or out.

 The zoom function may be unavailable when recording in the highest resolution.




5 Tap where you want to focus on the preview screen. The focus frame moves to the place you tap and changes to green when the subject is in focus.

6 Select  to start recording.

7 Select  to stop recording. The video is saved automatically.

 The camcorder may not be able to properly record videos to a memory card with a slow transfer speed.

After recording videos, select the image viewer to view the recorded videos.

- To view more videos, scroll left or right.
- To play a video, select .
- To send a video to others, select **Share**.
- To delete a video, select **Delete** → **Yes**.
- To start a slideshow, select . Tap the screen to stop the slideshow.
- To play a video on other devices, select .

› Customise camcorder settings

Before recording a video, select  to access the following options:


Option	Function
Exposure value	Adjust the exposure value.
Resolution	Change the resolution option.
Timer	Select the length of the delay before the camcorder starts recording a video.
White balance	Adjust the colour balance according to lighting conditions.
Effects	Apply a special effect, such as sepia or black and white tones.
Anti-shake	Reduce blur caused by the device's vibration or movement.
Guidelines	Display the guidelines on the preview screen.
Review	Set the camera to display the recorded video.
Storage	Select a memory location for storing recorded videos.
Reset settings	Reset menus and recording options.

Videos


Learn to use the video player to play various kinds of videos. The video player supports the following file formats: 3gp, mp4, avi, divx, mkv, wmv, asf.

› Play a video

- 1 In Menu mode, select **Videos**.
- 2 Select a video.
To play a video recorded on your device, select **Recorded**.
- 3 Rotate the device anti-clockwise to landscape view.
- 4 Control playback with the following keys:

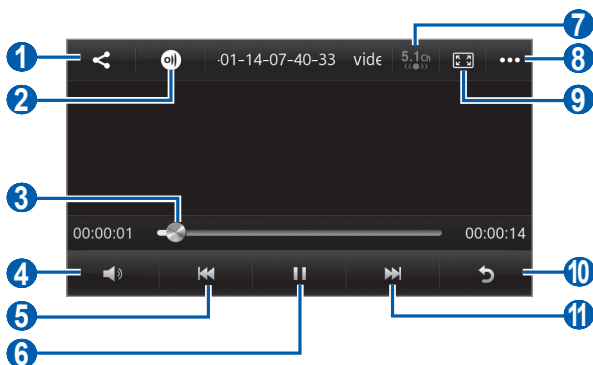

Number	Function
1	Send a video to others.
2	Play the video on other devices.
3	Move to a point of the file by dragging or tapping the bar.
4	Adjust the volume.

Number	Function
5	Restart playback; Skip backward (tap within 3 seconds); Scan backward in a file (tap and hold).
6	Pause playback; Select  to resume playback.
7	Activate the 5.1 channel surround sound system when a headset is connected.
8	View the details of the video or customise video player settings.
9	Change a ratio of the video screen.
10	Stop playback and return to the playlist.
11	Skip forward; Scan forward in a file (tap and hold).

Gallery

Learn to view photos and play videos saved in your device's memory and memory card.

› Supported file formats

Type	Format
Image	bmp, jpg, gif, png, tif, wbmp
Video	3gp, mp4, avi, divx, mkv, wmv, asf



- Avoid locking the device's screen while playing a DivX Video-On-Demand. Each time you lock the screen while playing a DivX Video-On-Demand, one of your available rental counts will be decremented.
- Some file formats are not supported depending on the software of the device.
- If the file size exceeds the available memory, an error can occur when you open files.
- Playback quality may vary by content type.
- Some files may not play properly depending on how they are encoded.



› View a photo

1 In Menu mode, select **Gallery**.



2 Select a folder → a photo (with no icon).

While viewing a photo, use the following options:


- To view more photos, scroll left or right.
- To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. You can also double-tap the screen.
- To send a photo to others, select **Share**.
- To delete a photo, select **Delete**.
- To use additional features with a photo, select **More** and use the following options:
 - **Set as**: Set a photo as wallpaper or a caller ID image for a contact.
 - **Rotate**: Rotate a photo.
 - **Crop**: Crop an image from a photo.
 - **Details**: View the details of the photo.

- To start a slideshow, select . Tap the screen to stop the slideshow.
- To view the photo on other devices, select .

› Play a video

- 1 In Menu mode, select **Gallery**.
- 2 Select a folder → a video (with the  icon) to play.
- 3 Select  to play.
- 4 Control playback with the virtual keys. ▶ p. 65

› Play a slideshow

- 1 In Menu mode, select **Gallery**.
- 2 Select .
- 3 Tap the screen to end the slideshow.

Music

Learn to listen to your favourite music while on the go with the music player. The music player supports the following file formats: mp3, aac, wma, 3ga, m4a, flac, ogg (vorbis).

› Add music files to your device

Start by transferring files to your device or memory card:

- Download from the wireless web. ▶ p. 87
- Download from a PC with Samsung Kies. ▶ p. 103
- Receive via Bluetooth. ▶ p. 95
- Copy to your memory card. ▶ p. 104



Samsung is not responsible for any use of default music files provided on your device.


▶ Play music

After transferring music files to your device or memory card,

- 1 In Menu mode, select **Music**.
- 2 Select a music category → a music file.
- 3 Control playback with the following keys:







Number	Function
1	Activate the 5.1 channel surround sound system when a headset is connected.
2	Play the music on other devices.
3	View the details of the music file.
4	Move to a point of the file by dragging or tapping the bar.
5	Adjust the volume.

Number	Function
6	Restart playback; Skip backward (tap within 3 seconds); Scan backward in a file (tap and hold).
7	Pause playback; Select  to resume playback.
8	Activate Shuffle mode.
9	Change the repeat mode (off, repeating one file, or repeating all files).
10	Open the playlist.
11	Skip forward; Scan forward in a file (tap and hold).




- You can control the music player with a headset. In Idle mode, press and hold the headset button to launch the music player. Press the headset button to start or pause playback.
- SRS CS Headphone™ delivers a 5.1 surround sound experience over standard headphones or earbuds when listening to multichannel content, such as DVD movies.
- WOW HD™ significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail.
- Playback quality may vary by content type.
- Some files may not play properly depending on how they are encoded.

› Access the disc view

- 1 During playback, rotate the device to landscape view. The display switches to disc view.
- 2 Scroll left or right to an album and select the disc image.
- 3 Select a music file from the list next to the disc image to play it.
- 4 Select  or  to pause or resume the current playback.
 - To switch to circle view, select .
 - To switch back to album view, select .

› Create a playlist

- 1 In Menu mode, select **Music**.
- 2 Select **Playlists** → .
- 3 Enter a title for your new playlist and select **Done**.
- 4 Select the files you want to include and select **Add**.

› Customise music player settings

- 1 In Menu mode, select **Music**.
- 2 Select a music category → a music file.

- 3 Select **More** → **Settings**.
- 4 Adjust the following settings to customise your music player:

Option	Function
Equaliser	Select a default equaliser type.
Effect	Select a sound effect.
Visualisation	Select an animated visualisation to display during playback.
Lyric	Set to display lyrics during playback.

Music Hub

You can access the online music store, and search for and buy your favourite songs. You can also add a music file to your wish list and play downloaded music files.



This feature may be unavailable depending on your region or service provider.

- 1 In Menu mode, select **Music Hub**.
- 2 If you are launching this application for the first time, select **Agree**.
- 3 Search for songs, and preview or buy your favourite songs.

FM radio


Learn to listen to music and news on the FM radio. To listen to the FM radio, you must connect a headset, which serves as the radio antenna.

› Listen to the FM radio


1 Plug a headset into the device.

2 In Menu mode, select **FM radio**.

The FM radio scans and saves available stations automatically.

 The first time you turn on the FM radio, it will start automatic tuning.

3 Control the FM radio with the following keys:

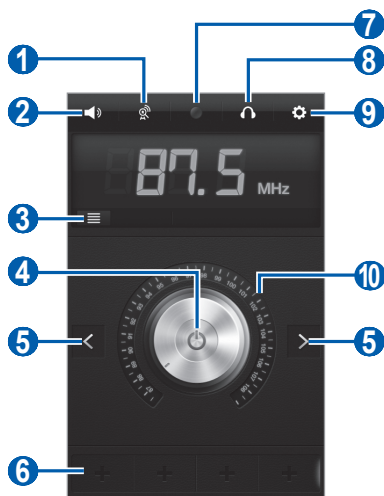


Number	Function
1	Scans and saves available stations.
2	Adjust the volume.
3	Open the available radio stations list.
4	Turn the FM radio on or off.
5	Search for an available radio station.
6	Add the current radio station to the favourites list.
7	Record a song from the FM radio.
8	Change the sound output (headset or device's speaker).
9	Customise the FM radio settings.
10	Fine-tune the frequency.



› Record a song from the FM radio


- 1 Plug a headset into the device.
- 2 In Menu mode, select **FM radio**.
- 3 Select  to turn on the FM radio.
- 4 Scroll to the radio station you want.
- 5 Select  to start recording.
- 6 When you are finished recording, select **Stop**.
The recorded file will be saved in **Recorded files** (in Menu mode, select **My files** → **Sounds** → **Recorded files**).

› Save a radio station automatically


- 1 Plug a headset into the device.
- 2 In Menu mode, select **FM radio**.
- 3 Select .
The FM radio scans and saves available stations automatically.

› Add a radio station to the favourites list

- 1 Plug a headset into the device.
- 2 In Menu mode, select **FM radio**.
- 3 Select  to turn on the FM radio.
- 4 Scroll to the radio station you want.
- 5 Select  to add to the favourites list.

 You can add a name for a radio station or remove a radio station; Tap and hold a radio station on the favourites list and select **Rename** or **Remove**.

› Customise FM radio settings


- 1 In Menu mode, select **FM radio**.
- 2 Select .
- 3 Adjust the following settings to customise your FM radio:

Option	Function
Storage	Set a memory location for storing recorded FM radio clips.
Radio text	Set whether or not to show the station ID and programme information on the FM radio screen. This information is available only from radio stations that provide it.

Option	Function
Alternative frequency	Set whether or not the FM radio attempts to retune a radio station when the signal is weak.
Auto off	Set the FM radio to automatically turn off after a specified length of time.

Java

Learn to use games and applications powered by award-winning Java technology.


 The download of Java games or applications may not be supported depending on the software of the device.

› Download games and applications

- 1 In Menu mode, select **Java** → **More Games**.
Your device connects to the website preset by your service provider.
- 2 Search for a game or application and download it to the device.

› Play games or launch applications

- 1 In Menu mode, select **Java**.
- 2 Select a game or application from the list and follow the on-screen instructions.


-  • Available games or applications may vary depending on your region or service provider.
- Controls and options of games or applications may vary.

Personal information

Contacts

Learn to create and manage a list of your personal or business contacts stored on the device's memory or a SIM or USIM card. You can save names, mobile phone numbers, home phone numbers, email addresses, birthdays and more for your contacts.

› Create a contact

- 1 In Menu mode, select **Contacts** → .
- 2 Enter contact information.
- 3 Select **Save** to add the contact to memory.

You can also create a contact from the dialling screen.

- 1 In Menu mode, select **Keypad** and enter a phone number.
- 2 Select **Add to Contacts** → **Create contact**.
- 3 Enter contact information.
- 4 Select **Save** to add the contact to memory.

› Find a contact

- 1 In Menu mode, select **Contacts**.
- 2 Select **Search** and enter the first letters of the name you want.





You can also drag your finger along the index on the right side to quickly scroll through the list.



From the contact list, you can make a call or send a message directly to a contact by quickly flicking the contact to the left or right and selecting an option.

3 Select the contact's name from the contact list.

Once you find a contact, you use the following options:

- To make a voice call, select .
- To make a video call, select .
- To send a text or multimedia message, select .
- To send an email message to the contact, select an email address.
- To set the contact as your favourites, select .
- To add a shortcut to the contact to the idle screen, select **Add to home screen**.
- To edit the contact information, select **Edit**.
- To delete the contact, select **Delete** → **Yes**.
- To send the contact to others, select **Share**.

› Set a favourite number

1 In Menu mode, select **Contacts** → **Favourites** → .

2 Select contacts and select **Add**.

The contact is saved to the favourite contact list.

› Create your namecard

1 In Menu mode, select **Settings** → **Contacts** → **My profile**.

2 Enter your own personal details.

3 Select **Save**.



You can send your namecard by attaching it to a message or email or transferring it via the Bluetooth wireless feature.



› Retrieve contacts from your community accounts

You can view the list of community website accounts and select an account to add a contact from the website to your device contacts.

To set up an account,


- 1 In Menu mode, select **Settings** → **Accounts**.
- 2 Select an account type.
- 3 Follow the on-screen instructions to complete the account setup.

To access an account,

- 1 In Menu mode, select **Settings** → **Contacts** → **Accounts**. The accounts list you added will appear.
- 2 Select one of the icons next to an account.
 - To retrieve all contacts, select .
 - To select contacts to retrieve, select .

› Create a group of contacts

By creating groups of contacts, you can manage multiple contacts and send messages to an entire group. Start by creating a group.

- 1 In Menu mode, select **Contacts** → **Groups** → .
- 2 Enter a name for the group.
- 3 Select a memory location to save the group.
- 4 Select **Save**.

› Copy contacts from or to the SIM or USIM card

- 1 In Menu mode, select **Settings** → **Contacts** → **Import contacts** or **Export contacts** → **SIM**.
- 2 Select contact files to copy and select **Import** or **Export**.

› Import or export contacts

To import contact files (in vcf format) from a memory card,

- 1 In Menu mode, select **Settings** → **Contacts** → **Import contacts** → **Memory card**.
- 2 Select contact files to import and select **Import**.

To export contact files (in vcf format) to a memory card, in Menu mode, select **Settings** → **Contacts** → **Export contacts** → **Memory card**.

Calendar

Learn to create and manage daily, weekly, or monthly events, and set alarms to remind yourself of important events.

› Create an event

- 1 In Menu mode, select **Calendar**.
- 2 Select **Create**.
- 3 Enter the details of the event as required.
- 4 Select **Save**.

› View events


To change the calendar view,

- 1 In Menu mode, select **Calendar**.
- 2 Select a view mode from the top line of the calendar.
 - **Month:** A full month in one view; In month view, days with scheduled events are indicated by a small triangle; In month view, you can switch to year view by selecting the month and year field or placing your two fingers on the screen and pinch. To return to month view, select a month you want.
 - **Week:** Hourly blocks for the days in one full week
 - **Day:** Hourly blocks for one full day
 - **List:** A list of scheduled events

To view events of a specific date,

- 1 In Menu mode, select **Calendar**.
- 2 Select a date on the calendar.
To move to today's date, select **Today**.
- 3 Select an event to view its details.
 - You can send the event to others by selecting **Share** → an option.
 - You can synchronise your calendar with an Exchange server after configuring sync settings. ► p. 52

› Stop an event alarm

If you set an alarm for a calendar event, the alarm will sound at the specified time. To stop the alarm, drag  to the left.

Task

Learn to create a virtual task list and set alarms to remind yourself of important tasks or set priority.

› Create a task

- 1 In Menu mode, select **Task**.
- 2 Select **Create**.
- 3 Enter the details of the task.
- 4 Select **Save**.

› View tasks

- 1 In Menu mode, select **Task**.
- 2 Select **Sort by** → a category to sort the tasks.
- 3 Select a task to view its details.

For completed tasks with an expired deadline, you can set their status to completed by selecting the check box next to the task.



- You can send the task to others by selecting **Share** → an option.
- You can synchronise your tasks with an Exchange server after configuring sync settings. ► p. 52


Memo

Learn to record important information to save and view at a later date.

› Create a memo

- 1 In Menu mode, select **Memo**.
- 2 Select **Create**.
- 3 Enter your memo text and select **Save**.

› View memos

- 1 In Menu mode, select **Memo**.
- 2 Select a memo to view its details.
To delete the memo, select  → **Yes**.




- You can send the memo to others by selecting **Share** → an option.
- You can change the background colour by selecting **Skin**.

Voice recorder

Learn to operate your device's voice recorder.


› Record a voice memo

- 1 In Menu mode, select **Voice recorder**.
- 2 Select **Record** to start recording.


- 3 Speak into the microphone.
- 4 When you are finished, select **Stop**.
Your memo is saved automatically.
- 5 To record more voice memos, select  and repeat steps 2-4.

› Play a voice memo

- 1 In Menu mode, select **Voice recorder**.
- 2 Select **List** to open the voice memo list.
- 3 Select a voice memo to play.
- 4 Control playback with the following keys:

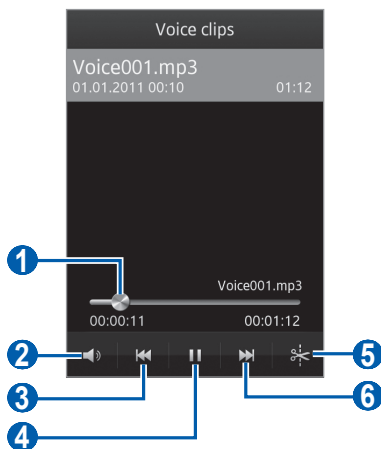

Number	Function
1	Move to a point of the file by dragging or tapping the bar.
2	Adjust the volume.

Number	Function
3	Skip backward; Scan backward in a file (tap and hold).
4	Pause playback; Select  to resume playback.
5	Crop the file.
6	Skip forward; Scan forward in a file (tap and hold)



You can send the voice memo to others by selecting **Share** → an option.

› Customise voice recorder settings

- 1 In Menu mode, select **Voice recorder**.
- 2 Select **Settings**.
- 3 Adjust the following settings to customise your voice recorder.

Option	Function
Storage	Select a memory location for saving voice memos.
Recording type	Select a recording type. To record a voice memo for attaching to a multimedia message, select Limit for MMS .

Web

Web services require a data connection. Contact your operator to choose the best data plan.

Internet

Learn to access and bookmark your favourite web pages.



- You may incur additional charges for accessing the web and downloading media files. For details, contact your service provider.
- The web browser menu may be labelled differently depending on your service provider.
- Available icons may vary depending on your region or service provider.

► Set up an internet profile

To access the network and connect to the internet, you must activate a connection profile. In addition to profiles that are preset by your service provider, you can add your own connection profile.

- 1 In Menu mode, select **Settings** → **Network** → **Connections** → **Yes**.
- 2 Select **New**.
- 3 Customise the network settings. ► “Set up an MMS profile” (p. 46)
- 4 In Menu mode, select **Settings** → **Network** → **Application profiles** → **Internet**.
- 5 Select a connection profile.

› Browse web pages

1 In Menu mode, select **Internet** to launch a specified homepage.

To access a specific web page, select the URL input field, enter the web address (URL) of the web page, and select **Go**.

2 Navigate web pages with the following keys:




The above screen may differ depending on your region or service provider.

Number	Function
1	Enter the web address of a web page to access.
2	Move backward or forward to web pages in history.
3	Open a list of saved bookmarks, recent internet history, and frequently visited pages.


Number	Function
4	Refresh the current web page; While the device is loading web pages, this icon changes to ✕.
5	Access a list of web browser options.
6	Open a web page in a new window or switch between the currently opened windows.

While browsing the web page, use the following options:


- To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. You can also double-tap the screen.
- To use additional features, select  and select one of the following options:
 - **Add bookmark:** Bookmark the current web page.
 - **Add to home screen:** Add a shortcut to the current web page to the idle screen.
 - **Send to Caster:** Send the address of the current webpage or the selected item to others or transfer it to your PC.
 - ▶ p. 108
 - **Download manager:** View the download history.
 - **Search text:** Search for text on the current web page.
 - **Brightness:** Adjust the brightness of the screen. This option is available only when you deactivate auto brightness. ▶ p. 118
 - **Word wrapping on:** Set the browser to adjust the text flow to fit the screen.
 - **Exit:** Close the web browser.

› Bookmark your favourite web pages

You can bookmark web pages you frequently visit for quick access. If you know the web address of the web page, you can manually add a bookmark. To add a bookmark,

- 1 In Menu mode, select **Internet** → .
- 2 Select **Add**.
- 3 Enter a page title and a web address (URL).
- 4 Select **Save**.

› Access the recent history or the frequently visited pages

- 1 In Menu mode, select **Internet** → .
- 2 Select **History** or **Most visited**.
- 3 Select a web page to access.

Navigation

Learn to use the GPS navigation system to find and show your destination with voice guidance.



- Navigation maps, your current location, and other navigational data may differ from actual location information. You should always pay attention to road conditions, traffic, and any other factors that may affect your driving and follow all safety warnings and regulations while driving.
- This feature may be unavailable depending on your region or service provider.

- 1 In Menu mode, select **Navigation**.
- 2 If you are launching this application for the first time, read the disclaimer and select **Accept**.
- 3 Select **Yes** to activate location services (if necessary).
▶ p. 101
- 4 Select **Yes** to update the latest the map information.
- 5 Follow the on-screen instructions to start the mobile navigator.

Samsung Apps

Samsung Apps allows you to simply and easily download an abundance of useful applications to your device. Featuring a wealth of games, news, reference, social networking, widgets, health related applications and more, Samsung Apps gives you instant access to a huge choice in mobile experience.

Your device gets smarter with fully optimised applications from Samsung Apps. Explore amazing applications and make your mobile life even better.

- 1 In Menu mode, select **Samsung Apps**.
- 2 If you are launching this application for the first time, read the terms and conditions and select **Accept**.
- 3 Search for and download applications or widgets as desired.



- You may incur additional charges for accessing the internet and downloading applications.
- For details, please visit www.samsungapps.com. Or, refer to the Samsung Apps leaflet.
- This service may be unavailable depending on your region or service provider.

Synchronise

Learn to synchronise contacts, calendar events, tasks and memos with the web server you have specified.

› Set up a synchronisation profile

- 1 In Menu mode, select **Settings** → **Connectivity** → **Synchronise**.
- 2 Select **Create sync profile** and specify the following profile options:

Option	Function
Profile name	Enter a name for the profile.
Sync server	Enter the web address of the server to be synchronised.
Sync category	Select types of data to be synchronised.
Sync type	Set how to synchronise the device and the server.
Network profile	Select a connection profile to use for synchronisation.

- 3 When you are finished, select **Save**.

› Start synchronisation

- 1 In Menu mode, select **Settings** → **Connectivity** → **Synchronise**.
- 2 Select a synchronisation profile.
- 3 Select **Start sync** to start synchronisation with the web server you have specified.

YouTube

Learn to view and share videos via YouTube.



This feature may be unavailable depending on your region or service provider.

- 1 In Menu mode, select **YouTube**.
- 2 Select a video from the list of the featured videos.
- 3 Control playback with the on-screen keys.

Google

You can search for applications and data in your device and specific data on the web. You can also use various Google services.

To search for data,

- 1 In Menu mode, select **Google** → **Search**.
- 2 Enter a letter or a word of the data to search for.
- 3 Select the item's name you want to access.

To use Google services,

- 1 In Menu mode, select **Google** → **Apps**.
- 2 Select a service.

Connectivity

Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 10 m without requiring a physical connection.

You do not need to line up the devices to beam information with Bluetooth. If the devices are within range of one another, you can exchange information between them even if they are located in different rooms.



- Samsung is not responsible for the loss, interception, or misuse of data sent or received via the Bluetooth wireless feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your device.


› Turn on the Bluetooth wireless feature

- 1 In Menu mode, select **Settings** → **Bluetooth**.
- 2 Drag the slide next to **Activation** to turn on the Bluetooth wireless feature.
- 3 To allow other devices to locate your device, select **Visible** → **Always on**.


› Find and pair with other Bluetooth-enabled devices

- 1 In Menu mode, select **Settings** → **Bluetooth** → **Search for devices**.
- 2 Select a device.
- 3 Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and select **Save**. Alternatively, select **Yes** to match the PIN between your device and the device.

When the owner of the other device enters the same PIN or accepts the connection, pairing is complete. If the pairing is successful, the device will automatically search for available services.

-  Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you must enter it.

› Send data using the Bluetooth wireless feature

- 1 Select a file or item, such as a contact, calendar event, memo, task, or media file, from an appropriate application or **My files**.
 - 2 Select an option for sending data via Bluetooth.
-  The method for selecting an option may vary by data type.
- 3 Search for and pair with a Bluetooth-enabled device.

› Receive data using the Bluetooth wireless feature

- 1 Enter the PIN for the Bluetooth wireless feature and select **OK** (if necessary).
- 2 Select **Yes** to confirm that you are willing to receive data from the device (if necessary).

Received data is saved to an appropriate application or folder according to its type. For example, a music or sound clip is saved to the sound folder and a contact to the phonebook.


Wi-Fi

Learn to use your device's wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE 802.11 b/g/n standards. You can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

-  Your device uses non-harmonised frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

› Activate the WLAN feature


In Menu mode, select **Settings** → **Wi-Fi** and drag the slider next to **Activation**.

-  An active WLAN running in the background will consume battery power. To preserve battery power, activate the WLAN only when needed.


› Find and connect to a WLAN

- 1 In Menu mode, select **Settings** → **Wi-Fi**.
The device will automatically search for available WLANs.
- 2 Select a network.
- 3 Enter a password for the network and select **Connect** (if necessary).

› Customise the connection profile

- 1 In Menu mode, select **Settings** → **Wi-Fi**.
- 2 Select  next to the discovered WLAN AP.
The current connection profile for the network appears.
- 3 Customise the connection profile of the selected WLAN:

Option	Function
Name	View the name of the profile.
MAC address	View the MAC address of the WLAN AP.
Security type	View the security type of the WLAN AP.
Use static IP	Set up static network addresses for the WLAN AP. You can manually set the IP address, gateway, subnet mask, and DNS addresses.
IP address	View your IP address of the WLAN AP.
Proxy address	Enter the address of the proxy server.
Proxy port	Enter the port number of the proxy server.

-  To delete all details of the connection profile, select **Forget** → **Yes**.

➤ Connect to a WLAN using a Wi-Fi Protected Setup (WPS)

- 1 In Menu mode, select **Settings** → **Wi-Fi**.
- 2 Select **WPS button** depending on the AP device type.
- 3 Press a WPS button on the AP device within 2 minutes.
Or, enter a PIN on the AP device and select **Start** within 2 minutes.


➤ Connect to a WLAN device directly

Learn to use the WLAN Direct feature to connect two devices via a WLAN without requiring an access point.

Connect your device to another WLAN device

- 1 In Menu mode, select **Settings** → **Wi-Fi** → **Wi-Fi Direct**.
- 2 Select **Continue** (if necessary).
- 3 Drag the slider next to **Activation**.
The device will automatically search for available devices.
- 4 Select a device.
When the owner of the other device accepts the connection, the devices are connected.

Send data via a WLAN

- 1 Select a file or item, such as a memo or media file, from an appropriate application or **My files**.
- 2 Select an option for sending data via a Wi-Fi Direct.
 The method for selecting an option may vary by data type.
- 3 Search for and select a WLAN device.

Receive data via a WLAN

When prompted, select **OK** to confirm that you are willing to receive data. Received data is saved to an appropriate application or folder according to its type.

AllShare

Learn to use the Digital Living Network Alliance (DLNA) service that enables you to share media files between DLNA-enabled devices in your home over a WLAN.



- The supported file formats may vary depending on the software of the device.
- Some files may not play on the DLNA-enabled devices depending on the devices.

› Customise DLNA settings for sharing media files


To allow other DLNA-enabled devices to access media files on your device, you must activate media sharing.

- 1 In Menu mode, select **Settings** → **AllShare**.
- 2 Adjust the following settings to customise the DLNA feature:

Option	Function
Share videos	Turn on video sharing with other DLNA-enabled devices.
Share photos	Turn on image sharing with other DLNA-enabled devices.
Share music	Turn on music sharing with other DLNA-enabled devices.

Option	Function
Download to	Select the default memory location for saving downloaded media files.
Subtitles	Set to display subtitles.

► Play your files on another DLNA-enabled device

- 1 In Menu mode, select **AllShare**.
 - 2 Select **My device**.
 - 3 Select a media category → a file.
 - 4 Select a player—the one that will play the media file. Playback begins at the selected player.
 - 5 Control playback using icons of your device.
-  Playback may be buffered, depending on the network connection and the connected server.

► Play files of one device on the other device


- 1 In Menu mode, select **AllShare**.
- 2 Select **Remote device**.
Your device automatically searches for DLNA-enabled devices.
- 3 Select a device as the media server—the one that contains media files.
- 4 Select a media category → a file.
- 5 Select a player—the one that will play the media file. Playback begins at the selected player.
- 6 Control playback using icons of your device.

Mobile network sharing

Learn to set your device as a wireless access point for PCs or other devices, and share your device's mobile network connection.

- 1 In Menu mode, select **Settings** → **Connectivity** → **Mobile AP**.
- 2 Drag the slider next to **Activation** to activate the Wi-Fi tethering feature.
- 3 Select **Yes** to confirm.
- 4 Adjust the following settings to customise the Wi-Fi tethering feature:

Option	Function
Hide my device	Block other devices from locating your device.
Tethering	Activate the tethering function to use your mobile device as a wireless modem for another device. Deactivate the tethering function to preserve battery power and allow only direct connections with other devices.
Password	View or edit the network key to prevent unauthorised access to the network.

- 5 When you are finished, select .
- 6 From another device, locate your device's name in the available connection list and connect to the network by entering the appropriate password in the WPA field.

GPS

Your device is equipped with a global positioning system (GPS) receiver. Learn to activate location services and use additional GPS functions.

To receive better GPS signals, avoid using your device in the following conditions:

- between buildings, in tunnels or underground passages, or inside buildings
- in poor weather
- around high voltage or electromagnetic fields
- in a vehicle with sun protection film



This feature may be unavailable depending on your region or service provider.

› Activate the GPS feature

1 In Menu mode, select **Settings** → **Location**.

2 Drag the slider next to **Location service**.



Do not touch the internal antenna area or cover this area with your hands or other objects while using the GPS functions.

› Enhance the GPS functionality

Learn to enhance the GPS functionality by downloading data files from the GPS web server. This improves the speed and accuracy of positioning capability.



You may incur additional charges for downloading GPS data files.

1 In Menu mode, select **Settings** → **Location**.

2 Drag the slider next to **Advanced GPS**.

› Use the mobile networks for location services

Learn to receive location information through mobile networks. This helps your device show information when there is no GPS signal or when the GPS signal is weak.



You may incur additional charges for accessing the mobile network.

1 In Menu mode, select **Settings** → **Location**.

2 Drag the slider next to **Network position**.

› View your location

Learn to determine the latitude, longitude, and altitude of your current position using the GPS.

In Menu mode, select **Settings** → **Location** → **My position**.

PC connections

Learn to connect your device to a PC with a USB cable in various USB connection modes. By connecting the device to a PC, you can transfer data to and from your device directly, use the Samsung Kies program, and use your device as a wireless modem for a PC.



To find and remove bugs to prevent future errors, in Menu mode, select **Settings** → **Connectivity** → **USB utilities** and drag the slider next to **USB debugging**.

› Connect with Samsung Kies

Ensure that Samsung Kies is installed on your PC. You can download the program from the Samsung website (www.samsung.com/kies).



Samsung Kies will work on both Windows and Macintosh computers.

- 1 Using a USB cable, connect the multifunction jack on your device to a PC.
- 2 Double-click the Samsung Kies icon on your PC to launch Samsung Kies.
- 3 Transfer or synchronise mobile data, such as contacts, calendars, music, or photos, between Samsung Kies and connected devices.
Refer to the Samsung Kies help for more information.

› Connect as a mass storage device

You can connect your device to a PC as a removable disk and access the file directory. If you insert a memory card in the device, you can access the file directory of the memory card by using the device as a memory card reader.

- 1 If you want to transfer files from or to a memory card, insert a memory card into the device.
- 2 In Menu mode, select **Settings** → **Connectivity** → **USB utilities** → **Mass storage**.
- 3 Using a USB cable, connect the multifunction jack on your device to a PC.
When connected, a pop-up window will appear on the PC.
- 4 Open the folder to view files.
- 5 Copy files from the PC to the memory card.



To disconnect the device from the PC, click the USB device icon on the Windows task bar and click the option to safely remove the mass storage device. Then remove the USB cable from the PC. Otherwise, you may lose data stored on the memory card or damage the memory card.


› Use your device as a wireless modem

You can use your device as a modem for a PC to access the internet via your mobile network service.

- 1 In Menu mode, select **Settings** → **Connectivity** → **USB utilities** → **Tethering**.
- 2 Using a USB cable, connect the multifunction jack on your device to a PC.
- 3 Follow the on-screen instructions to install the driver and networking wizard and set up the internet connection.

VPN connections

You can create virtual private networks (VPN) and connect to your private network securely through a public network, such as the internet.

 Your device should already be configured with internet access. If you have trouble accessing the internet, you need to edit connections. If you are not sure about the connection information to enter, ask your service provider.

› Set up VPN connections

- 1 In Menu mode, select **Settings** → **Connectivity** → **VPN** → **New**.
- 2 Select a VPN type.
- 3 Customise the connection information.

 Available options may vary depending on the VPN type.

Option	Function
Name	Enter a name of the VPN server.
VPN server	Enter the IP address of the VPN server.
User name	Enter your user name.
Password	Enter your password.
Auth type	Select a certificate authority (CA) certificate that the VPN server uses to identify you.
Pre-shared key	Enter a pre-shared key.

Option	Function
Group ID	Enter your group name.
Encryption	Set to encrypt the VPN server.
Enable L2TP secret	Set to use the L2TP secret password.
L2TP secret	Enter the L2TP secret password.

4 When you are finished, select **Save**.

► Connect to a private network


1 In Menu mode, select **Settings** → **Connectivity** → **VPN**.

2 Select a private network to connect.

Tools

Calculator







Learn to perform mathematical calculations directly on your device like a typical hand-held or desktop calculator.

- 1 In Menu mode, select **Calculator**.
 - 2 Use the keys that correspond to the calculator display to perform basic mathematical operations.
-  Rotate the device to landscape view to use the scientific calculator.


Caster

Learn to transfer data between the web and your device. You can also share various multimedia files and data with your friends and family. Download the latest version of Caster web extension from the SamsungApps website (www.samsungapps.com/casterdownload.html) and install it on your PC.

› Send data to your device

- 1 While browsing a website on your PC, click  and sign in to your Samsung account.
 - 2 Click .
-  You can also send the web address of the current web page, click .
- 3 Select an item and click  to send the item.
To scrap the item to send it to your device later, click .

› Send data to Caster

- 1 While browsing a website on your device, select  → **Send to Caster**.
- 2 Sign in to your Samsung account (if necessary).
Data or the web address will be sent to Caster automatically.


› View transferred data

- 1 In Menu mode, select **Caster**.
- 2 Select **My Content** → an item.

While viewing a data, use the following options:




Available options may vary depending on a file type.

- To send the data to your friends, select **Share via**. You can view your friends' list by selecting **Friends**.
- To access a web link on the web, select **Open in browser**.
- To save the photo to your device, select **Save image**.
- To delete the data, select .


Clock

Learn to set and control alarms, and world clocks. You can also use the stopwatch, count-down timer, and the world clock.

› Set a new alarm



- 1 In Menu mode, select **Clock** → **Alarm**.
- 2 Select .
- 3 Set alarm details.
- 4 When you are finished, select **Save**.




Select  → **Auto power-up** to turn on the auto power-up feature. The auto power-up feature sets the device to sound the alarm at the designated time when the device is turned off.

› Stop an alarm


When the alarm sounds,

- Drag  left to stop the alarm.
- Drag  right to silence the alarm for the snooze period.

› Delete an alarm

- 1 In Menu mode, select **Clock** → **Alarm**.
- 2 Select  → **Delete**.
- 3 Select the alarms you want to delete and select **Delete**.



› Create a world clock

- 1 In Menu mode, select **Clock** → **World clock**.
- 2 Select .
- 3 Select the text input field and enter the few letters of a city name.
- 4 Select the city name you want.
- 5 To add more world clocks, repeat steps 2-4.

› Use the stopwatch

- 1 In Menu mode, select **Clock** → **Stopwatch**.
- 2 Select **Start** to begin the stopwatch.
- 3 Select **Lap** to record times.
- 4 When you are finished, select **Stop**.
- 5 Select **Reset** to clear recorded times.

› Use the count-down timer

- 1 In Menu mode, select **Clock** → **Timer**.
- 2 Set the length of time to count down.
To change the alarm sound, select .
- 3 Select **Start** to begin the countdown.
You can now use other functions with the timer counting down in the background. Press the Home key and access another application.
- 4 When the timer expires, drag  left to stop the alert.

Desk clock

Learn to use the clock display on the idle screen.

- 1 In Menu mode, select **Desk clock**.
- 2 While using the clock display, select an application to use.
To set applications to display on the desk clock, scroll left or right and select **Add** → applications → **Add**.

My files

Learn to quickly and easily access all of your images, videos, music, sound clips, and other types of files stored on the device or a memory card.

› Supported file formats

Your device supports the following file formats:

Type	Supported format
Image	bmp, jpg, gif, png, tif, wbmp
Video	3gp, mp4, avi, divx, mkv, wmv, asf

Type	Supported format
Music	mp3, aac, 3ga, m4a, wma, flac, ogg (vorbis)
Sound	wav, mmf (ma2, ma3), xmf, imy, midi, amr
Others	vcs, ics, vnt, doc, docx, pdf, ppt, pptx, txt, xls, xlsx



- Avoid locking the device's screen while playing a DivX Video-On-Demand. Each time you lock the screen while playing a DivX Video-On-Demand, one of your available rental counts will be decremented.
- Some file formats are not supported depending on the software of the device.
- If the file size exceeds the available memory, an error can occur when you open files.
- Playback quality may vary by content type.
- Some files may not play properly depending on how they are encoded.

› View a file

1 In Menu mode, select **My files** → a memory location.

2 Select a folder → a file.

- In **Images**, you can view photos you have captured and images you have downloaded or received from other sources.
- In **Videos**, you can play videos you have recorded and videos you have downloaded or received from other sources.

- In **Sounds**, you can play all music files, and sound clips you have recorded, including voice memos and FM radio clips.
- In **Others**, you can view documents and data files including unsupported files.

In a folder, use the following options:

- To send a file to others, select **Share**.
- To use additional features using a file, such as creating a folder, moving, copying, or deleting, select **Manage**.
- To change the view mode, select **View by**.
- To sort files or folders, select **List by**.


› Set an image as your wallpaper

You can set your photos or images as a background image for the idle screen.

- 1 In Menu mode, select **My files** → **Images** → an image folder → an image.
- 2 Select **More** → **Set as** → **Wallpaper** → **Set**.

› Set a sound clip as your ringtone





You can set any music or sound clips in the sound folder as ringtones for incoming calls, messages, or alarms.

- 1 In Menu mode, select **My files** → **Sounds** → a sound clip.
- 2 During playback, select  → an option.






Polaris Office




Learn to create or view Microsoft Word, Excel, PowerPoint, and Adobe PDF files on your device.

› Create a new document



- 1 In Menu mode, select **Polaris Office**.
- 2 Select  → **New file** → a document type.
- 3 Enter contents in the document.
- 4 When you are finished, select  →  or .
- 5 Enter a name for the document and select the location to save the document.
- 6 Select **OK**.

› Open a document



- 1 In Menu mode, select **Polaris Office**.
 - 2 Select a document file.
 - 3 View the document as desired.
-  Available options may vary depending on a document type.
- To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. You can also zoom in or out by selecting  → **Zoom**, or double-tap the screen.
 - To open the toolbar to edit the document (word, presentation, or excel file), select  → **Edit Mode**.
 - To search for the text on the document, select  → **Find**.
 - To bookmark the current page, select  → **Bookclip**.

- To adjust the document to fit the screen, select  → **Reflow text on.**
- To read the document via the text-to-speech feature, select  → **Read to me.**
- To customise Polaris office settings, select  → **Settings.**

› Import files

- 1 In Menu mode, select **Polaris Office.**
- 2 Select  → **Import** → a memory location.
- 3 Select a folder → files.
- 4 Select  → a location to import → **Select.**

› Export files

- 1 In Menu mode, select **Polaris Office.**
- 2 Select  → **Export** → files.
- 3 Select  → a location to export → **Select.**

Voice cmd

Your device provides the intelligent voice command feature which turns your voice commands into action. You can dial a number, send a message, search for locations or information, or complete other tasks simply by speaking to your device.

- 1 In Menu mode, select **Voice cmd.**
- 2 If you are launching this application for the first time, read the disclaimer and select **Next** → **Agree.**
- 3 Say a command into the microphone and select **Listening...**
- 4 Select the item's name you want to access.

Settings

Access the Settings menu

- 1 In Menu mode, select **Settings**.
- 2 Select a setting category and select an option.

Flight mode

Disable all wireless functions on your device. You can use only non-network services.

Wi-Fi

- **Activation:** Turn the WLAN feature on or off. ► p. 95
- **Find hidden network:** Search for WLAN APs manually.

Network

- **Use packet data:** Set to allow packet switched data networks for network services.
- **Data roaming:** Set to use data services when you are roaming.
- **Select network:** Set the network selection method to automatic or manual.
- **Network mode:** Select a network band.

- **Connections:** Set up connection profiles to use for network features.
- **Application profiles:** Select a connection profile for each application or feature.

Bluetooth

- **Activation:** Activate the Bluetooth feature to exchange information over a distance. ► p. 93
- **Visible:** Set your device to be visible to other Bluetooth devices.
- **Search options:** Select the types of Bluetooth devices to include in your search.
- **Default memory:** Select a memory location for received files.

Location

Customise the settings related with GPS connections.

► p. 101

Connectivity

- **Mobile AP:** Activate the mobile AP feature to use your device as an AP (Access Point). ► p. 100
- **USB utilities:** Set a USB mode to be activated when you connect the device to a PC. ► p. 103
- **VPN:** Set up and connect to virtual private networks (VPNs). ► p. 105
- **Kies via Wi-Fi:** Connect your device to Samsung Kies via a WLAN.
- **Synchronise:** Set up a synchronisation profile. ► p. 91

Sound

- **Sound:** Activate Silent mode to mute all sounds except media sounds and alarm ringtones.
- **Vibrate:** Set when the device will vibrate for various events.
- **Incoming call**
 - **Ringtone:** Select a ringtone to use if you set the device to alert you to incoming calls by playing a melody.
 - Using the slider at the bottom, adjust the volume level and the vibration intensity for the call ringtone.
- **Notification**
 - **Message alert:** Select a ringtone to incoming messages.
 - **Email alert:** Select a ringtone to alert you to incoming email messages.
 - Using the slider at the bottom, adjust the volume level for the message ringtone.
- **Media volume:** Set the default volume for music and videos.
- **System volume:** Set the default volume for touch feedback sound and power-on/off sound.
- **Haptic feedback:** Adjust the vibration intensity.

Display

Access and alter the following settings to control the display and usage of the light on your device:


- **Theme:** Select a theme for the display.
- **Wallpaper:** Select a background image for the idle screen.
- **Lock screen:** Select an image to display when the screen is locked.

- **Font type:** Change the font type for the display text.
- **Font size:** Select a text size for creating or displaying items in applications.
- **Auto Brightness:** Set to adjust the brightness of the display automatically. If you deactivate auto brightness, you can adjust the brightness of the display by dragging the slider.
- **Backlight time:** Set the length of time the device waits before turning off the display's backlight.
- **Auto adjust screen power:** Activate the brightness level for Power saving mode.
- **Touch key light:** Set the length of time the device waits before turning off the touch keys' backlight.
- **Battery percentage:** Set to view the remaining battery life.
- **Auto-rotate screen:** Set whether or not to rotate the content automatically when the device is rotated.

General

Access and alter the following settings to control general settings for your device:

› Date and time

 If the battery remains fully discharged or removed from the device, the time and date will be reset.

- **Automatic update:** Automatically update the time when you move across time zones.
- **Time zone:** Set your home time zone.
- **Date:** Set the current date manually.
- **Time:** Set the current time manually.
- **Time format:** Select a time format.
- **Date format:** Select a date format.

› Language

- **Display:** Select a language to use on the device's display.
- **Keyboard:** Select a default keyboard type for text input.

› Voice input and output

- **Voice command hot key:** Set to launch the voice command application by pressing the Home key twice.
- **Voice input language:** Select a language for the voice recognition.
- **Auto-listen:** Set to automatically begin voice recognition when you launch the voice command feature.
- **Contact recognition:** Set to enhance voice searches for contacts.
- **Hide offensive words:** Hide offensive words your device recognised from voice search results.
- **Auto-capitalization:** Set the device to automatically capitalise the first letter after a final punctuation mark, such as a full-stop, question mark, or exclamation mark.
- **Voice alert:** Set to read out notifications for various events on the device.
- **Spoken language:** Select a language for the voice alert feature.
- **Help:** Access help information for using the voice command feature.
- **About:** View terms and conditions and privacy policy.

› Motions

- **Use motion:** Set to use motion recognition.
- **Shake:** Set to unlock the device by shaking.
- **Turn over:** Activate the etiquette pause feature that allows you to mute all device sounds by placing the device face down.

› Accessibility

- **Voice output:**
 - **Voice alert:** Set to read out notifications for various events on the device.
 - **Spoken language:** Select a language for the voice alert feature.
- **Font size:** Select a text size for creating or displaying items in applications.

› Installation location

Select the default memory location to install new applications.

› Memory

Check memory information of memory cards and your device, and clear the device's memory or format a memory card.

› Usage

- **Call duration:** View time data for your calls, such as the duration of the last call and the total duration of all calls.
- **Message counter:** View the number of messages you have sent or received.
- **Packet data counter:** View the amount of data you have sent or received.

› Horizontal calibration

Calibrate the accelerometer to adjust the horizontal axis of the device for better motion recognition.

› Security

- **Phone lock:** Activate or deactivate the device lock feature to require a device password before using the device.
- **Privacy lock:** Make various types of application private; To access private applications, you must enter your device password.
- **Find my mobile:** Activate or deactivate the Find my mobile feature which helps you locate your device when it is lost or stolen. ► p. 33
- **Change password:** Change the device password.
- **SIM lock:** Activate or deactivate the SIM lock feature to require the SIM password when you change the SIM or USIM card.
- **PIN lock:** Activate or deactivate the PIN lock feature to require the PIN before using the device.
- **Change PIN:** Change the PIN used to access SIM or USIM data.
- **Fixed dialling mode:** Activate or deactivate FDN mode to restrict calls to phone numbers in the FDN list.
- **Change PIN2:** Change the PIN2, which is used to protect the primary PIN.

› About phone

- **Device info:** View system information for your device, such as model number and CPU usage.
- **Storage:** View memory information for your device.
- **Open source licences:** Check the open source licences of downloaded programs.
- **DivX(R) VOD:** Check your registration and deregistration codes. To play DivX video files, you need to register your device with the code at the DivX website.
- **Certificates:** View the details of certificates.
- **Security policy:** View the status of security policy for encrypting your device and protecting data and information saved on the device.

› Software update

Your service provider or the Samsung server will send you a notification when the new firmware of your device is released. If you receive an update notification, download the new firmware on your device.

- **Update:** Check for the firmware update and download the update.
- **Auto update:** Set to check for and control the firmware update automatically.
- **Wi-Fi only:** Set to download the update only via a WLAN connection.
- **Push messages:** Set whether or not to receive messages pushed from web servers.

› Licences

Expiry reminder: Set to get a notification when a licence is expired.

› Reset

- **Reset settings:** Reset various settings to the factory default values. Select which settings to reset. You must enter your device password to reset the settings.
- **Factory reset:** Reset your settings to the factory default values and delete all your data. You must enter your device password.

Accounts

View, set up, or delete email accounts.

Notification

Activate or deactivate an alert for incoming messages, new applications in Samsung Apps, or file transfer from or to others.

Call

Customise the settings for calling features:

- **Show my caller ID:** Show your mobile phone number to recipients.
- **Video call image:** Select an image to be shown to the other party.
- **Own video in received call:** Set whether to show your live image or preset image to the other party.
- **Call forwarding:** Divert incoming calls to another number.
- **Call waiting:** Allow incoming call alerts when a call is in progress.
- **Auto reject:** Specify a list of callers to automatically reject.

- **Speed dial:** Set speed dial numbers.
- **Reject call with message:** Edit a message to be sent to a caller when you reject a call.
- **Call status tones:** Activate or deactivate call connect, minute minder, or call disconnect tones.
- **Voice mail number:** Enter the number to access the voice mail service. You can obtain this number from your service provider.
- **Proximity sensor:** Set to turn on the proximity sensor during a call.

Messages

Customise the settings for messaging features.

› Alert repetition

Set how often the phone will alert you to new messages.

› Text messages

- **Delivery report:** Set the network to inform you when your messages are delivered.
- **Service centre:** Select and enter the centre address for the text messages.
- **CB messages:** Set to receive broadcast messages from mobile networks.
- **SOS messages:** Send an SOS message. ► p. 49
- **Backup and restore:** Back up your messages by individual message or folder, or restore the messages you have backed up.

› Multimedia messages

- **Delivery report:** Set the network to inform senders when you receive their messages.
- **Request read report:** Send a request for a read report along with your messages to be informed when your messages are read.
- **Home network:** Set whether or not your device automatically retrieves new messages when you are in your home service area.
- **Foreign network:** Set whether or not your device automatically retrieves new messages when you are roaming on another network.
- **Subject field:** Set to display the subject field in the text input field.
- **Creation mode:** Select a mode for creating multimedia messages. You can select to create messages with any type of content and of any size or to receive alert messages about content type or size.

Email

Customise the settings for email features.

› Email accounts

View, set up, or delete email accounts.

› Sending options

- **From:** Enter your email address as the sender's address.
- **Priority:** Set the priority level of your messages.
- **Keep a copy:** Set whether or not to save a copy of sent messages in the server.

- **Reply with body:** Set whether or not to include an original message when you reply to a message.
- **Forward with files:** Set whether or not to include attachments when you forward a message.
- **Get read report:** Send a read-reply request along with your messages to be informed when your messages are read.
- **Get delivery report:** Send a request for a delivery report along with your messages to be informed when your messages are delivered.
- **Add my namecard:** Set whether or not to add your namecard to your outgoing messages.
- **Always Cc myself:** Set whether or not to include your email address to all your outgoing messages.
- **Add signature:** Set whether or not to add your signature to your outgoing messages.
- **Signature:** Enter your signature.

› Receiving options

- **Email size:** Select a maximum size allowed for messages.
- **Send read report:** Set the network to inform senders when you read messages.
- **Load remote images:** Set to load images included in the email body.

› Block emails

Block emails from specified addresses and subjects.

› Threaded list

Change the view mode.

Contacts

- **View contacts on:** Select a memory location for displaying contacts.
- **Order of display name:** Set how to display contact names.
- **Accounts:** Retrieve contacts from your community accounts
- **My profile:** Create your namecard.
- **Service numbers:** Call your service provider to get the information you need.
- **Import contacts:** Import contacts from the SIM or USIM card or the memory card.
- **Export contacts:** Export contacts to the SIM or USIM card or the memory card.

Calendar

Customise the settings for the calendar:

- **First day of week:** Set which day should begin the week (Sunday or Monday).
- **Import calendars:** Import events from your device's memory or memory card.
- **Export my schedules:** Export schedules to your device's memory or memory card.
- **Export my anniversaries:** Export anniversaries from the memory card to your device or vice versa.
- **Lock time zone:** Set to use the current time zone for the calendar.
- **Select time zone:** Set the calendar time zone.

Task

- **Import tasks:** Import tasks from your device or memory card.
- **Export tasks:** Export tasks to your device or memory card.

Memo

- **Import from memory card:** Import memos from the memory card.
- **Export to memory card:** Export memos to the memory card.

Internet

Customise the settings for the internet browser.

- **Homepage:** Enter the web address of the website to use as your homepage.
- **Preferences:** Change display and sound settings for the web browser.
- **Auto save ID/password:** Set to automatically save your ID and password.
- **Encoding:** Select a character encoding type.
- **RSS update:** Set the web browser to automatically update subscribed RSS feeds at regular intervals. Activating the auto update feature increases the amount of data downloaded and may incur additional charges.
- **Server certificates:** View the details of certificates.
- **About Internet:** Access version and copyright information about the web browser.
- **Auto delete data:** Set to automatically delete data stored while browsing, such as the history, cache, cookies, IDs, and passwords.

- **Clear cache:** Clear the cache; The cache is a temporary memory location that saves information from recently accessed web pages.
- **Delete cookies:** Delete cookies saved in the device.
- **Delete saved ID/password:** Delete all saved passwords.
- **Delete database:** Delete all saved web database.

Gallery

Customise the settings for a slideshow.

- **Effect:** Select a transition effect between photos.
- **Time:** Select the duration for which each photos will appear in the slideshow.
- **Random:** Set to display photos in a random order.

Samsung Apps

Update notification: Select a network connection (WLAN or packet switched data network) to get application update notification from Samsung Apps.

AllShare

Activate the DLNA service to share media files between DLNA devices. ► p. 98

Communities' upload

Update the list of community websites and sign in to a community service to upload media files.

Search

Select the types of items to include in your search.

Desk clock

- **Wallpaper:** Select a background image for the desk clock.
- **Clock/Calendar display:** Set to display the clock or calendar.
- **Weather:** Set to display the weather for your current location. You can also set the desk clock to be automatically updated with latest information and select a temperature unit.
- **Brightness:** Set the brightness of the display. This option is available only when you deactivate auto brightness.
 - ▶ p. 118
- **Dock settings:**
 - **Audio output mode:** Set to use the connected dock's speaker when your device is connected to a car or desktop dock.
 - **Reset to default:** Reset the desk clock settings to the factory default values.

Troubleshooting

When you turn on your device or while you are using the device, it prompts you to enter one of the following codes:

Code	Try this to solve the problem:
Password	When the device lock feature is enabled, you must enter the password you set for the device.
PIN	When using the device for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM or USIM card. You can disable this feature by using the PIN lock menu.
PUK	Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
PIN2	When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM or USIM card. For details, contact your service provider.

Your device displays network or service error messages

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

The touch screen responds slowly or improperly

If your device has a touch screen and the touch screen is not responding properly, try the following:

- Remove any protective covers from the touch screen. Protective covers may prevent the device from recognising your inputs and are not recommended for touch screen devices.
- Ensure that your hands are clean and dry when tapping the touch screen.
- Restart your device to clear any temporary software bugs.
- Ensure that your device software is upgraded to the latest version.
- If the touch screen is scratched or damaged, take it to your local Samsung Service Centre.

Calls are being dropped

When you are in areas with weak signals or poor reception, you may lose your connection to the network. Move to another area and try again.

Outgoing calls are not connected

- Ensure that you have pressed the Dial key.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number you are dialling.

Incoming calls are not connected

- Ensure that your device is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the incoming phone number.

Others cannot hear you speaking on a call

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

Audio quality is poor

- Ensure that you are not blocking the device's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

When dialling from contacts, the call is not connected

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.
- Ensure that you have not set call barring for the contact's phone number.

The device beeps and the battery icon flashes

Your battery is low. Recharge or replace the battery to continue using the device.

The battery does not charge properly or the device turns off

- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery (refer to your local ordinances for proper disposal instructions).

Your device is hot to the touch

When you use applications that require more power or use applications on your device for an extended period of time, your device may feel hot to the touch. This is normal and should not affect your device's lifespan or performance.

Error messages appear when launching the camera

Your Samsung mobile device must have sufficient available memory and battery power to operate the camera application. If you receive error messages when launching the camera, try the following:

- Charge the battery or replace it with a battery that is fully charged.
- Free some memory by transferring files to a PC or deleting files from your device.
- Restart the device. If you are still having trouble with the camera application after trying these tips, contact a Samsung Service Centre.

Error messages appear when launching the FM radio

The FM radio application on your Samsung mobile device uses the headset cable as an antenna. Without a headset connected, the FM radio will be unable to receive radio stations. To use the FM radio, first ensure that the headset is properly connected. Next, scan for and save the available radio stations.

If you still cannot use the FM radio after performing these steps, try accessing your desired station with another radio receiver. If you can hear the station with another receiver, your device may require service. Contact a Samsung Service Centre.

Error messages appear when opening music files

Some music files may not play on your Samsung mobile device for a variety of reasons. If you receive error messages when opening music files on your device, try the following:

- Free some memory by transferring files to a PC or deleting files from your device.
- Ensure that the music file is not Digital Rights Management (DRM)-protected. If the file is DRM-protected, ensure that you have the appropriate licence or key to play the file.
- Ensure that your device supports the file type.

Another Bluetooth device is not located

- Ensure that the Bluetooth wireless feature is activated on your device.
- Ensure that the Bluetooth wireless feature is activated on the device you wish to connect to, if necessary.
- Ensure that your device and the other Bluetooth device are within the maximum Bluetooth range (10 m).

If the tips above do not solve the problem, contact a Samsung Service Centre.

A connection is not established when you connect the device to a PC

- Ensure that the USB cable you are using is compatible with your device.
- Ensure that you have the proper drivers installed and updated on your PC.

Your device freezes or has fatal errors

If your device freezes or hangs, you may need to close programs or reset the device to regain functionality. If your device is frozen and unresponsive, press and hold the Power key for 8-10 seconds and release. The device will reboot automatically.

If this does not solve the problem, perform a factory data reset. In Menu mode, select **Settings** → **General** → **Reset** → **Factory reset** → **Yes** → **Yes**.

Safety precautions

To prevent injury to yourself and others or damage to your device, read all of the following information before using your device.

Warning: Prevent electric shock, fire, and explosion

Do not use damaged power cords or plugs, or loose electrical sockets

Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord

Do not bend or damage the power cord

Do not use your device while charging or touch your device with wet hands

Do not short-circuit the charger or the battery

Do not drop or cause an impact to the charger or the battery

Do not charge the battery with chargers that are not approved by the manufacturer

Do not use your device during a thunderstorm

Your device may malfunction and your risk of electric shock is increased.

Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery

For safe disposal of your Li-Ion batteries, contact your nearest authorised service centre.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.

- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Protect the device, batteries, and chargers from damage

- Avoid exposing your device and batteries to very cold or very hot temperatures.
- Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device and batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Caution: Follow all safety warnings and regulations when using your device in restricted areas

Turn off your device where prohibited

Comply with all regulations that restrict the use of a mobile device in a particular area.

Do not use your device near other electronic devices

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

Do not use your device near a pacemaker

- Avoid using your device within a 15 cm range of a pacemaker if possible, as your device can interfere with the pacemaker.
- If you must use your device, keep at least 15 cm away from the pacemaker.
- To minimise the possible interference with a pacemaker, use your device on the opposite side of your body from the pacemaker.

Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency

If you personally use any medical equipment, contact the manufacturer of the equipment to ensure the safety of your equipment from radio frequency.

If you are using a hearing aid, contact the manufacturer for information about radio interference

Some hearing aids may be interfered with by the radio frequency of your device. Contact the manufacturer to ensure the safety of your hearing aid.

Turn off the device in potentially explosive environments

- Turn off your device in potentially explosive environments instead of removing the battery.
- Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not use your device at refuelling points (service stations), near fuels or chemicals, and at blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Turn off your device when in an aircraft

Using your device in an aircraft is illegal. Your device may interfere with the electronic navigation instruments of the aircraft.

Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device

Electronic devices in your car may malfunction due to radio frequency of your device. Contact the manufacturer for more information.

Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, practice good common sense and remember the following tips:

- Use a hands-free device.
- Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.
- Position your device within easy reach. Be able to access your wireless device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, let your voice mail answer it for you.

- Let the person you are speaking with know you are driving. Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous.
- Do not take notes or look up phone numbers. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility of driving safely.
- Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
- Use your device to call for help. Dial a local emergency number in the case of fire, traffic accident, or medical emergencies.
- Use your device to help others in emergencies. If you see an auto accident, a crime in progress, or a serious emergency where lives are in danger, call a local emergency number.
- Call roadside assistance or a special, non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or another special, non-emergency number.

Proper care and use of your mobile device

Keep your device dry

- Humidity and all types of liquids may damage device parts or electronic circuits.
- Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service centre.
- Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer’s warranty.

Do not use or store your device in dusty, dirty areas

Dust can cause your device to malfunction.

Do not store your device on slopes

If your device falls, it can be damaged.

Do not store your device in hot or cold areas. Use your device at -20 °C to 50 °C

- Your device can explode if left inside a closed vehicle, as the inside temperature can reach up to 80 °C.
- Do not expose your device to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Store the battery at 0 °C to 40 °C.

Do not store your device with such metal objects as coins, keys and necklaces

- Your device may become deformed or malfunction.
- If the battery terminals are in contact with metal objects, it may cause a fire.

Do not store your device near magnetic fields

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.
- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.
- Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers

- The battery may leak.
- Your device may overheat and cause a fire.

Do not drop your device or cause impacts to your device

- The screen of your device may be damaged.
- If bent or deformed, your device may be damaged or parts may malfunction.

Do not use your device or applications for a while if the device is overheated

Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation.

If your device has a camera flash or light, do not use a flash close to the eyes of people or pets

Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

Use caution when exposed to flashing lights

- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
- Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop using the device immediately.

Reduce the risk of repetitive motion injuries

When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop use and see a physician.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purposes.

Use manufacturer-approved batteries, chargers, accessories and supplies

- Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction.
- Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.

Do not bite or suck on the device or the battery

- Doing so may damage the device or cause explosion.
- If children use the device, make sure that they use the device properly.

When speaking on the device:

- Hold the device upright, as you would with a traditional phone.
- Speak directly into the mouthpiece.
- Avoid contact with your device's internal antenna. Touching the antenna may reduce the call quality or cause the device to transmit more radio frequency than necessary.

Protect your hearing and ears when using a headset



- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while driving may distract your attention and cause an accident.
- Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.
- In dry environments, static electricity can build up in the headset. Avoid using headsets in dry environments or touch a metal object to discharge static electricity before connecting a headset to the device.

Use caution when using the device while walking or moving

Always be aware of your surroundings to avoid injury to yourself or others.

Do not carry your device in your back pockets or around your waist

You can be injured or damage the device if you fall.

Do not disassemble, modify, or repair your device

- Any changes or modifications to your device can void your manufacturer's warranty. For service, take your device to a Samsung Service Centre.
- Do not disassemble or puncture the battery, as this can cause explosion or fire.

Do not paint or put stickers on your device

Paint and stickers can clog moving parts and prevent proper operation. If you are allergic to paint or metal parts of the product, you may experience itching, eczema, or swelling of the skin. When this happens, stop using the product and consult your physician.

When cleaning your device:

- Wipe your device or charger with a towel or a rubber.
- Clean the terminals of the battery with a cotton ball or a towel.
- Do not use chemicals or detergents.

Do not use the device if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it repaired.

Do not use the device for anything other than its intended use

Avoid disturbing others when using the device in public

Do not allow children to use your device

Your device is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the device, or make calls that increase your charges.

Install mobile devices and equipment with caution

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Allow only qualified personnel to service your device

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

Handle SIM cards or memory cards with care

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Keep your personal and important data safe

- While using your device, be sure to back up important data. Samsung is not responsible for data loss.
- When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information.

Do not distribute copyright-protected material

Do not distribute copyright-protected material that you have recorded to others without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

Specific Absorption Rate (SAR) certification information

Your device conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 W/kg.

During testing, the maximum SAR recorded for this model was 0.834 W/kg. In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your device reduces your overall exposure to RF energy.

The Declaration of Conformity statement at the back of this manual demonstrates your device's compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung website.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the

battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

“THIRD PARTY CONTENT AND SERVICES ARE PROVIDED “AS IS.” SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.”

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device. Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

Index

- access codes 131
- alarms
 - creating 108
 - deactivating 109
 - stopping 109
- auto rejection 43
- battery
 - charging 13
 - installing 11
- Bluetooth
 - activating 93
 - finding and pairing with devices 94
 - receiving data 95
 - sending data 94
- brightness, display 32
- calculator 107
- calendar
 - creating events 80
 - viewing events 81
- call diverting 44
- calls
 - answering 40
 - diverting 44
 - international numbers 40
 - making 39
 - rejecting 40
 - using headset 41
 - using options during video 42
 - using options during voice 41
 - viewing missed 42
- call waiting 44
- camera
 - capturing photos 56
 - capturing videos 62
 - customising camcorder 64
 - customising camera 60
- Caster 107
- connections
 - Bluetooth 93
 - GPS 101
 - mobile AP 100
 - PC 103
 - WLAN 95
- contacts
 - creating 77
 - creating groups 79
 - creating your namecard 78
 - finding 77
 - retrieving contacts 79
 - setting favourite numbers 78
- device
 - customising 30
 - idle screen 21
 - indicator icons 21
 - keys 20
 - layout 19
 - locking 32
 - notifications panel 23
 - settings 115
 - turning on or off 18

- device lock 32
- downloads
 - Java games 76
- email
 - sending 51
 - setting accounts 50
 - setting profiles 51
 - viewing 52
- FDN mode 43
- file manager 110
- find my mobile 33
- fixed dialling number mode 43
- FM radio
 - listening to 73
 - recording 74
 - saving stations 75
- gallery
 - file formats 66
 - playing videos 68
 - viewing photos 67
- GPS
 - activating 101
 - updating files 102
 - viewing location 102
- instant messenger
 - ChatON 54
 - IM 54
- internet
 - see web browser
- Java games
 - downloading 76
 - playing 76
- language 119
- logs 45
- memory card
 - formatting 17
 - inserting 15
 - removing 16
- memos
 - creating 83
 - viewing 83
- menu screen
 - accessing 26
 - organising 27
- messages
 - accessing voice mail 48
 - managing 48
 - sending email 51
 - sending multimedia 47
 - sending SOS 49
 - sending text 46
 - setting email accounts 50
 - setting email profiles 51
 - setting MMS profiles 46
 - viewing email 52
 - viewing text 48
- multimedia messages
 - sending 47, 48
 - setting profiles 46
- multi-tasking 28
- music
 - playing 68
- music hub 72
- music player
 - adding files 68
 - creating playlists 71

- playing music 69
- PC connections**
 - internet sharing 104
 - mass storage 104
- photos**
 - capturing 56
 - capturing by scene 58
 - capturing in self shot mode 59
 - capturing in smile shot 59
 - capturing panoramic 59
 - setting wallpaper 112
 - viewing 67
- PIN lock** 33
- Polaris Office** 113
- Samsung Apps** 90
- settings**
 - accounts 123
 - AllShare 129
 - Bluetooth 116
 - calendar 127
 - call 123
 - communities' upload 129
 - connectivity 116
 - contacts 127
 - date and time 118
 - desk clock 130
 - display 117
 - email 125
 - flight mode 115
 - gallery 129
 - general 118
 - internet 128
 - location 116
 - memo 128
 - messages 124
 - network 115
 - notification 123
 - Samsung Apps 129
 - search 130
 - sound 117
 - task 128
 - Wi-Fi 115
- silent profile** 31
- SIM card**
 - installing 11
 - locking 33
- Social Hub** 55
- SOS messages** 49
- stopwatch** 109
- synchronisation**
 - with an Exchange server 52
 - with a web server 91
- task manager** 28
- tasks**
 - creating 82
 - viewing 82
- text input** 34
- text memos** 83
- text messages**
 - sending 46
- time and date, set** 30
- timer** 110
- touch screen**
 - locking 25
 - using 23
- unpack** 10

- USIM card
 - installing 11
 - locking 33
- video calls
 - answering 40
 - making 39
 - using options 42
- video player 65, 68
- videos
 - capturing 62
 - playing 65, 68
- voice calls
 - answering 40
 - making 39
 - using options 41
- voice mail 48
- voice memos
 - playing 84
 - recording 83
- voice recorder 83
- wallpaper 31
- web browser
 - adding bookmarks 89
 - browsing web pages 87
 - setting profiles 86
- WLAN
 - activating 95
 - finding and connecting to networks 96
 - using WPS 97
- world clock 109

Declaration of Conformity (R&TTE)

We, **Samsung Electronics**
declare under our sole responsibility that the product

GSM WCDMA Wi-Fi Mobile Phone : GT-S8600

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2006 +A11: 2009
SAR	EN 50360 : 2001 / AC 2006 EN 62209-1 : 2006
EMC	EN 301 489-01 V1.8.1 (04-2008) EN 301 489-07 V1.3.1 (11-2005) EN 301 489-17 V2.1.1 (05-2009) EN 301 489-24 V1.5.1 (10-2010)
RADIO	EN 301 511 V9.0.2 (03-2003) EN 300 328 V1.7.1 (10-2006) EN 301 908-1 V4.2.1 (03-2010) EN 301 908-2 V4.2.1 (03-2010)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House,
Churchfield Road,
Walton-on-Thames,
Surrey, KT12 2TD, UK*
Identification mark: 0168



The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*



2011.09.14

Joong-Hoon Choi / Lab Manager

(place and date of issue)

(name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.

Some of the contents in this manual may differ from your device depending on the software of the device or your service provider.

To install Kies (PC Sync) Kies

1. Download the latest version of Kies from the Samsung website (www.samsung.com/kies) and install it on your PC.
2. Using a USB cable, connect your device to your PC.
3. Double-click the Samsung Kies icon on your PC to launch Samsung Kies.
Refer to the Kies help for more information.